



CASIO | DB-50- AKA [TELEMEMO 50]

FUNCTIONS >

RELEASED | 1984

- > MODULE 262
- > WATER RESIST NONE
- > ORIGINAL PRICE N/A
- > CASING Resin
- > BRACELET NO. [Resin]
- > INFO

Casios second Databank model after the CD-40/401 [246]. Telephone Memory (50 Sets of 6 letter & 12 numeral) Daily Alarm/Time Signals 4 Independent Alarm with Message (Month, date, Day, hour, minute) Countdown Alarm/Stopwatch



**DOWNLOAD MANUAL**  
User Guide

0 out of 5 Stars - Total Votes 0

WATCHES WITH 262



Related Adverts



CLICK FOR SUPERSIZE IMAGE

**How do YOU rate this watch?**  
You will need to become a member or [LOGIN](#). Membership is FREE and also allows you to post questions in our digital watch [FORUM](#). Register as a member [CLICK HERE](#) and have your say on the site

Before you go don't forget to rate the CASIO DB-50 watch. Rate it 1 to 5 stars 5 stars being the best.

Got fond memories or like to write a review of this CASIO DB-50? Share your thoughts with the library, but please only reviews or memories. If you have a question please go to the forum and post it there we'll be happy to help any questions you may have.

Empty text box for user review or comment.

Submit

Recommend this on Google  
 Like Share Be the first of your friends to like this.

**GUARANTEE CERTIFICATE  
CERTIFICAT DE GARANTIE**

MODEL: .....  
 MODELE: .....  
 DATE OF PURCHASE: .....  
 DATE D'ACHAT: .....

OFFICIAL DEALER STAMP:  
 TIMBRE DU DETAILLANT OFFICIEL:

CASIO INC. 15 Gardner Road, Fairfield, New Jersey 07006, U.S.A.  
 CASIO COMPUTER CO., GMBH 2000 Hamburg 54, Kleine Bahnstraße 8, F. R. GERMANY  
 CASIO ELECTRONICS CO., LTD. Unit 6, 1000 North Circular Road, London, NW2 7JD, ENGLAND

Printed in Japan  
 Imprimé au Japon UG0485B

5

# CASIO

 
 
 
 
## Module No. 262

User's Guide/Warranty Certificate ..... 1/16  
 Bedienungsanleitung/Garantie-Zertifikat ..... 17/33  
 Guide de l'utilisateur/Certificat de garantie ..... 35/50  
 Guia del propietario/Certificado de garantia ..... 51/66  
 Guida per l'uso/Certificato di garanzia ..... 67/83



**Dear Customer,**  
 Congratulations on your purchase of this Casio Digital Quartz Watch. Although highly sophisticated, this watch is delightfully simple to use, and by referring to this guide you will enjoy all the features of this reliable ultra-precise timepiece.


*Notice: As this watch contains precise electronic components, it is suggested that the back cover be removed only by authorized personnel.*

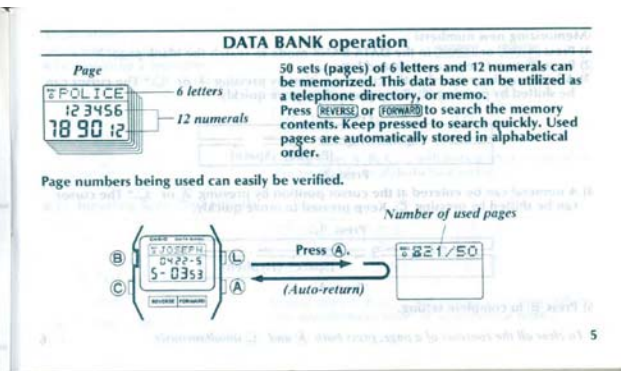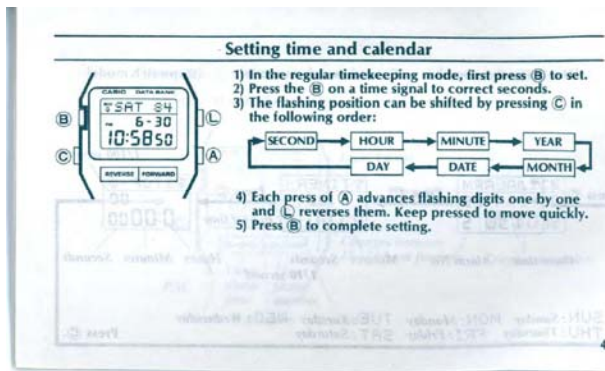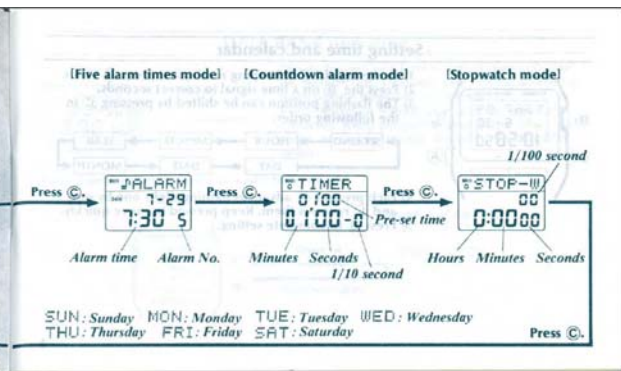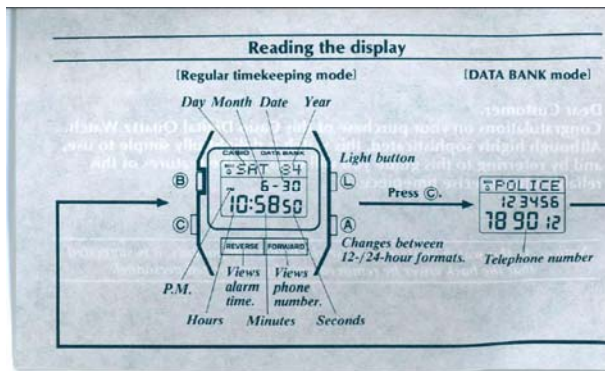



**(Memorizing new numbers)**

 - 1) Press **REVERSE** or **FORWARD** in the DATA BANK mode to search the blank page.
- 2) Press **B** to set new numerals and letters.
- 3) A letter can be entered at the cursor position by pressing **A** or **L**. \* The cursor can be shifted by pressing **C**. Keep pressed to move quickly.



- 4) A numeral can be entered at the cursor position by pressing **A** or **L**. \* The cursor can be shifted by pressing **C**. Keep pressed to move quickly.



- 5) Press **B** to complete setting.

\* To clear all the contents of a page, press both **A** and **L** simultaneously.

**Applications:**

**Using pages successively**

- Ex. Inputting a timetable

PARIS	11 10	30	58
LONDON	11 40	30	50
BERN	17 55	30	50
PARIS	18 14	36	52
MUNICH	18 25	30	53
ROME	18 40	30	50
SEUL	18 50	30	50
PARIS	19 15	30	57
DUSSELDORF	19 40	30	50



Giving titles A, B, C, ... will permit easy retrieval of the timetable in alphabetical order.

- Ex. Inputting appointment times

23 Feb

11:30 Meet with VISA

16:00 Meet with EXON

18:15 Meet with GE

 


Giving titles A, B, C, ... will permit easy retrieval of the appointment times in alphabetical order.

**Five alarm times mode**


Five alarm times can be set independently. Four these (Alarm Nos. 2, 3, 4 and 5) can be set up to a date and month and 6-letter message. Once alarm is set, the buzzer sounds for 20 seconds. To stop the buzzer, press any button. (Sound demonstration) Press and hold **A** in each alarm mode to sound the buzzer. (Presetting alarm times)

- 1) Press **REVERSE** or **FORWARD** in the alarm mode to select an Alarm No. \*

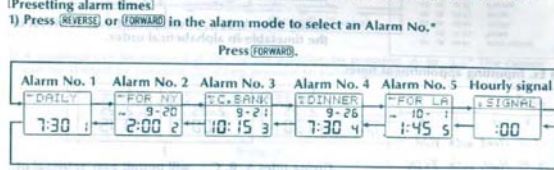

Press **REVERSE**.

 - 2) Press **B** to set new alarm time.
- 3) Each press of **A** advances flashing digits one by one and **L** reverses them. Keep pressed to move quickly.
- 4) Each press of **C** shifts the flashing digits in the following order:



- 5) Press **B** to complete setting.

\* (Setting hourly time signal) In SIGNAL mode, every time **L** is pressed, the hourly-time-signal mark (Δ) appears or disappears. When the hourly-time-signal mark (Δ) is lit, the watch chimes every hour on the hour.

**Countdown alarm operation**

The countdown can be set from one minute to 60 minutes, and times to an accuracy of 1/10th of a second. Start/stop operation is possible by pressing **FORWARD** and is confirmed by a signal. When the display reaches zero, the buzzer will sound for 10 seconds unless any button is pressed, and the pre-entered time is retrieved automatically.

 


- 1) Press **A** or **L** to set minutes.
- 2) Press **FORWARD** to start or stop.
- 3) When the display is stopped, press **REVERSE** to retrieve the pre-entered time.

**Stopwatch operation**

No function **B** Mode select button **C** No function **L** No function **A**

A signal confirms start/stop operation. (Working range) The stopwatch display is limited to 23 hours 59 minutes 59.99 seconds. Thereafter it can be reset and started again.

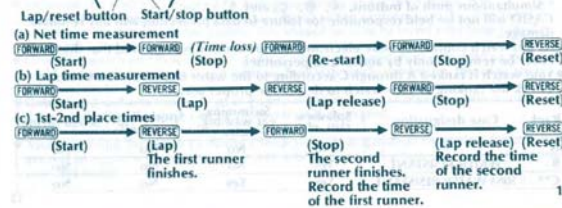

**Care of your watch**

- Battery life: 2-year battery life starts when battery is factory installed. At first sign of power fade (no light or dim display), renew battery at sales store or Casio distributor.
- Notes on data protection: All input data will be deleted in the following cases: \* Battery replacement \* Dead battery \* Breakdown and repair \* Simultaneous push of buttons, **A**, **B**, **C**, and **L**. CASIO will not be held responsible for failure in data protection and any resultant damage.
- As this watch contains precise electronic components, it is suggested that the back cover be removed only by authorized personnel.
- Your watch is ranked A through C according to the water resistance chart below: Check the ranking of your watch to determine proper use.

Rank	Case designation	Splashes, rain, etc.	Swimming, car washing, etc.	Sparkling, diving, etc.	Scuba diving
A*	WATER RESISTANT	No	No	No	No
B	WATER RESISTANT	Yes	No	No	No
C**	50M WATER RESISTANT	Yes	Yes	No	No

- \* The watch is sweat-resistant but not water-resistant. So be careful not to get it wet. The pendant type does not meet sweat-resistant levels.
- \*\* 50M WATER RESISTANT casing model does not permit underwater button operations.
- A waterproof rubber seal is used to exclude water and dust. As rubber deteriorates after long usage, the seal should be replaced periodically (every 2-3 years).
- Should water or condensation appear in the watch, immediately have it overhauled because water can corrode electronic parts inside the case.
- Avoid exposing it to extremely high and low temperatures.
- Although the watch is designed to withstand shocks under normal use, it is inadvisable to subject it to hard knocks—rough usage or drops onto hard surfaces—.
- Avoid fastening the band too tightly. You should be able to insert your finger inside the band.
- Clean the watch and bracelet with a soft cloth, dry or moistened with mild soap. To avoid surface damage, never use volatile chemicals (such as benzene, thinners, spray cleaners, etc.).
- Gold plated surfaces can be kept in good condition by regular wiping with a soft damp cloth. Discoloration can be removed with detergent. Always keep unused watches in a dry place.
- Avoid exposing the watch to strong chemicals such as gasoline, cleaning solvent, aerosol spray, adhesive agent, paints, etc. whose chemical action will destroy the seals, case and finish.

## Specifications

Accuracy at normal temperature:  $\pm 15$  seconds per month

Display capacity:

- Regular timekeeping mode
  - Hours, minutes, seconds, am/pm, year, month, date and day
  - Time system: Changeover between 12-hour and 24-hour formats
  - Calendar system: Auto-calendar pre-programmed until the year 2019
- DATA BANK mode
  - 50 sets (pages) of 6 letters and 12 numerals can be memorized.
  - Editing function of names (in alphabetical order)
  - Unused pages will not appear.
  - Page numbers being used can easily be verified.
  - Easy-to-see display of names and Tel. Nos. in pairs
- Five alarm times mode
  - Five alarm times can be set independently. Four of these (Alarm Nos. 2, 3, 4 and 5) can be set up to a date and month, and a 6-letter message.
- Hourly time signals

14

- Countdown alarm mode

Input range: From 1 minute to 60 minutes

Measuring unit: 1/10th of a second

Measuring modes: Normal time and net time

Auto-repeat function: The pre-entered time is retrieved automatically.

- Stopwatch mode

Measuring capacity: 23 hours 59 minutes 59.99 seconds

Measuring unit: 1/100th of a second

Measuring modes: Normal time, net time, lap time and 1st-2nd place times

Battery: One lithium battery (Type: CR-1616)

Approx. 2 years operation on type CR-1616 (under following conditions: light—1 second/day, buzzer—20 seconds/day)

*NOTE: THERE IS NO WAY unit components can be damaged or malfunction, due to mis-operation of buttons. If confusing information appears on the display it means entry sequence was incorrect. Please read the manual and try again.*

15