

Ex. GOOG 1010

# **User's Manual**

# **KODAK Professional Digital Camera System**

© Eastman Kodak Company, 1991, 1992.

This manual and the accompanying software are protected by United States and international copyright laws. You may make one backup copy of the enclosed software and one copy of this manual. Do not make additional copies of the software or copies of the manual or electronically transmit them in any form whatsoever, in whole or in part, without the prior written permission of Eastman Kodak Company.

## ***Important Safeguards and Precautions***

**WARNING:** to prevent fire or shock hazard, do not expose the equipment to rain or moisture without its protective carrying case.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point in an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the equipment.

- **Read Instructions** — Read all the safety and operating instructions before operating the equipment.
- **Retain Instructions and Packaging** — Retain the safety and operating instructions for future reference. Retain the packing case for use if the equipment needs to be shipped.
- **Heed Warnings** — Heed all warnings on the equipment and in the operating instructions.
- **Follow Instructions** — Follow all operating and use instructions.
- **Cleaning** — Unplug the digital storage unit and remove the battery before cleaning. Clean only the outside cabinet, the monitor, and text display using a damp cloth. Do not use liquid cleaners or aerosol cleaners on the outside of the digital storage unit. Separate directions are included in “Cleaning the Imager” for cleaning the imager in the camera back.
- **Attachments** — Do not use attachments that are not recommended. The use of unrecommended attachments may cause hazards and serious damage to the equipment. Do not use cables other than those supplied.
- **Water and Moisture** — Do not use the AC adapter near water — for example, near a sink, or in a wet room or basement, etc. You may use the digital storage unit near water and moisture, for example in the rain, if it is housed in its protective soft pack carrying case and not plugged into the AC adapter.
- **Dust** — If you operate the camera in environments with excessive dust levels, dust may accumulate on the imager in the camera back; separate directions are included in “Cleaning the Imager” for cleaning the imager.
- **Power Sources** — You should operate the unit only from the type of power source indicated on the marking label. If you are not sure of the type of power supply that will be used, consult a dealer or local power company.
- **Grounding** — The AC adapter is equipped with a three-wire grounding-type plug with a third (grounding) pin. The three-wire plug will fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace the obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- **Power-Cord Protection** — Route power-supply cords so that you are not likely to walk on them or pinch them with items placed on or against them; pay particular attention to cords at plugs, receptacles and the point where they leave the units.

- **Lightning** — For added protection for the equipment during a lightning storm, or any time when you will leave the equipment unattended and unused for long periods of time, unplug the unit from the power outlet. This will protect the equipment from damage caused by lightning or power-line surges.
- **Overloading** — Do not overload power outlets and extension cord; this can result in a risk of fire or electric shock.
- **Object or Liquid Entry** — Never push foreign objects of any kind into the equipment openings. The objects could touch dangerous voltage points or shortout parts and cause a fire or electric shock. Never spill liquid of any kind on the equipment.
- **Servicing** — Do not attempt to service the equipment yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Never open the digital storage unit. You may dismantle the camera, camera winder, and camera back; refer to “Cleaning the Imager” in this user’s manual for assistance.
- **Damage Requiring Service** — Unplug the equipment from the wall outlet and refer all servicing to the manufacturer under the following conditions:
  - When any cord or plug is damaged (send cord only).
  - If liquid has been spilled or if objects have fallen in the equipment.
  - If the equipment has been exposed to rain or water (except that the digital storage unit can be operated in the rain if housed in its protective soft pack carrying case).
  - If a unit does not operate normally according to the operating instructions. Adjust only those controls that are covered by the operating instructions.
  - If a unit has been dropped or the housing has been damaged.
  - When the equipment exhibits a distinct change in performance.
- **Accessories** — Do not place the equipment on an unstable cart, stand, bracket, or table. It can fall, causing serious injury to persons and serious damage to the equipment. Use only with a stable cart, stand, bracket, or table.
- **Battery** — Observe all cautions printed on the battery. Do not drop the battery. Do not use it for other than the specified equipment. Do not directly connect the negative and positive terminals. Do not incinerate the battery.  
 Use only the supplied battery charger, or other recommended battery charger. Use only in the specified temperature ranges. Recharge the battery immediately after use.  
 Do not ship the digital storage unit with a battery inside.

# Explore Litigation Insights

Docket Alarm provides insights to develop a more informed litigation strategy and the peace of mind of knowing you're on top of things.

## Real-Time Litigation Alerts



Keep your litigation team up-to-date with **real-time alerts** and advanced team management tools built for the enterprise, all while greatly reducing PACER spend.

Our comprehensive service means we can handle Federal, State, and Administrative courts across the country.

## Advanced Docket Research



With over 230 million records, Docket Alarm's cloud-native docket research platform finds what other services can't. Coverage includes Federal, State, plus PTAB, TTAB, ITC and NLRB decisions, all in one place.

Identify arguments that have been successful in the past with full text, pinpoint searching. Link to case law cited within any court document via Fastcase.

## Analytics At Your Fingertips



Learn what happened the last time a particular judge, opposing counsel or company faced cases similar to yours.

Advanced out-of-the-box PTAB and TTAB analytics are always at your fingertips.

## API

Docket Alarm offers a powerful API (application programming interface) to developers that want to integrate case filings into their apps.

## LAW FIRMS

Build custom dashboards for your attorneys and clients with live data direct from the court.

Automate many repetitive legal tasks like conflict checks, document management, and marketing.

## FINANCIAL INSTITUTIONS

Litigation and bankruptcy checks for companies and debtors.

## E-DISCOVERY AND LEGAL VENDORS

Sync your system to PACER to automate legal marketing.