



AT2400 AllTouch® Remote Control



Bringing the Interactive Experience Home™

About Your Remote

Your new AT2400 AllTouch® Remote Control ("remote") functions as four remotes in one to operate your TV, VCR, cable set-top device, or CD player. If you prefer, you can program the AT2400 AllTouch Remote Control to operate additional electronic devices, such as a stereo receiver, a DVD player, or a home automation device.

For information about the keys on the remote, go to the **Quick Reference** section of this guide.

Note: If you have questions or concerns about the operation of this remote, contact your cable service provider.

Batteries

The remote requires two alkaline AA batteries. When batteries are properly installed, the LED on the remote blinks each time a button is pressed.

Important Reminder: A diagram in the battery compartment of the remote indicates proper placement of the batteries.

Mode Keys and Setup Codes

Q: What are mode keys?

A: The mode keys switch the remote to operate a particular device. These four keys are located at the top of the remote.



Q: What are setup codes?

A: Setup codes are numeric codes that identify your brand of equipment so that the remote can operate that device.

Important Reminder: The AT2400 AllTouch Remote Control is not a toy. It should be kept out of the reach of children under the age of 6 years.

FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta could void the user's authority to operate this equipment.

Scientific Atlanta

United States: Scientific Atlanta, Inc.,
5030 Sugarloaf Parkway, Box 465447,
Lawrenceville, GA 30042
Europe: Scientific Atlanta Europe GmbH,
Westerbachstrasse 28-32, 61476 Kronberg, Germany
Asia Pacific: Scientific Atlanta (Singapore) Pte. Ltd.,
1 Claymore Drive, #08-111 Orchard Towers,
Singapore 229584
Latin America: Scientific Atlanta Argentina S.A.,
Carlos Pellegrini 1149, Piso 11º, Capital Federal 1011,
Buenos Aires, Argentina
© 2002 Scientific Atlanta, Inc. All rights reserved.
Printed in USA www.scientificatlanta.com
Part Number 749221 Rev B February 2002

CBL Setup Codes

About Cable Codes

Your cable service provider may have "locked" a valid cable code into your remote to keep you from unintentionally changing the cable code.

If you need to program the remote to operate a different device, use the following steps to unlock the remote.

1. Press and hold the **SELECT** key and the **CBL** key until the LED blinks twice.
2. Press **996**.
3. Press **CH-** to unlock the remote.

Result: You can now set up your CBL key with a different cable code.

Cable Codes

You must enter all 4 digits to program the CBL mode key.

Brand—Code

General Instrument—0290, 0490, 0824
Jerrold—0290, 0490, 0824
Motorola—1120
Panasonic—0121
Pioneer—0547, 0891, 1891
Scientific Atlanta—0491, 0891, 1891

AUX Setup Codes

Receiver Codes

Brand—Code	Panasonic—0053, 1532
ADC—0545	Philips—1103, 1203, 1103
Aiwa—1419, 0172,	1283
Capetronic—0545	Pioneer—0545, 1037
Carver—1103, 1203	Proscan—1268
Denon—1174, 1118	Quasar—0053
JVC—0088	RCA—1268, 0545,
Kenwood—0041,	1037
1041, 1327, 1583, 1584	Sansui—1103
MCS—0053	Sony—0172, 1172, 1072, 1272
Magnavox—1103, 0545, 1203	Sunfire—1327
Marantz—1203, 1103, 0053	Technics—0053, 1322, 1532, 1323
Onkyo—0149	Thorens—1203
Optimus—1037, 0545	Victor—0088
	Wards—0172
	Yamaha—0190, 1190

Amplifier Codes

Brand—Code	Philips—0906
GE—0092	Polk Audio—0906
Harman/Kardon— 0906	Realistic—0409
JVC—0345	Sansui—0335
Luxman—0179	Sony—0703
Marantz—0335, 0906	Soundsign—0092
Nakamichi—0335	Victor—0345
Optimus—0409	Wards—0092
	Yamaha—0368

Home Automation Codes

Brand—Code	GE—0254
One For All—0181	Radio Shack—0254
Security System—0181	Universal X10—0181
X10—0181	

Additional Audio Codes

These codes allow you to program your remote to control cable radio set-top devices.

Brand—Code	Jerrold—0473, 0534
Scientific Atlanta—0474	
Starcom—0473	

7

Setting Up Your Remote

To Set Up a Mode Key

The mode keys are programmed with most of the popular brands of electronic devices, so before you perform this procedure, test each mode key.

To test the mode key, turn on your device, press the mode key for that device, and then press POWER on the remote to verify that the power to the device turns off.

If the device does not turn off, then the mode key may not be set up. Follow these steps to set up a mode key:

1. Find the code for your brand of device in one of the setup code lists in this guide.
2. Make sure that the device is turned on.

3. Press and hold the **SELECT** key and the appropriate mode key for that device until the LED (the light at the top of the remote) blinks twice. For example, to set up the VCR key, press and hold **SELECT** and **VCR**.
4. Enter the setup code for the device.

Note: The setup codes for each mode key appear on the front and the back of this guide.

5. Point the remote toward the device.

6. Press **POWER**, **PLAY**, or **CH+** to test the device.
7. Did the device operate correctly?

- If yes, go to step 8.
- If no, repeat steps 3 through 6 using a different setup code.

Note: If all of the codes listed for your brand of device fail to operate your device properly, go to the **To Search for Codes** section of this guide for instructions.

8. Repeat steps 1 through 6 for each mode key that you want to set up.
9. Write down your codes for future reference:

AUX: _____ VCR: _____

To Search for Codes

If none of the codes listed for your device work, you can search through the code library for a valid code. The remote automatically selects the proper code.

1. Turn on the device.
2. Hold down the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice. For example, to search for a TV code, hold down **SELECT** and **TV**.

3. Using the keypad on the remote, press **991**. The LED blinks once.

4. Point the remote toward the device, and press the **POWER** key.

5. Did the device turn off?

- If no, press the up arrow key to go to the next code, and return to step 4.
- If yes, press **SELECT** to confirm the code.

Note: The LED on the remote blinks three times when you reach the end of the code library. Each of the code libraries contains fewer than 80 codes.

To Identify Programmed Codes

You can find out which code you used to program your device by using the following procedure.

1. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
2. Using the keypad on the remote, press **990**. The LED blinks twice.

3. Press **1**; then, count the LED blinks. The number of LED blinks indicates the first digit in the code. For example, 4 blinks indicates the first digit in the code is 4. If the LED does not blink, the digit is 0.

4. Press **2**; then, count the LED blinks. The number of blinks indicates the second digit in the code.

5. Press **3**; then, count the LED blinks. The number of blinks indicates the third

6. Press **4**; then, count the LED blinks. The number of blinks indicates the fourth digit in the code.

7. Write down your codes in the **To Set Up a Mode Key** section.

To Program for Volume Control

You can program your Volume and Mute keys to function in one of two ways:

- To control the volume on a single device all the time
- To control the volume on each device, depending on the mode key that you press

Note: The default setting is to control volume through your TV all the time. Follow these steps to change the way your Volume and Mute keys function.

1. Turn on the appropriate device.
2. If you have an Explorer® Digital Home Communication Terminal (DHCT), use the SETTINGS button to go to the General Settings menu on-screen, and make sure that the Audio: Volume Control setting is set to "Variable."


3. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
4. Using the keypad on the remote, press **993**. The LED blinks twice.

5. Do you want the Volume and Mute keys to operate a single device all the time?

- If yes, press the mode key for the device that you want to control the volume.
- If no, press the **VOL -** key to control the volume through various devices based on the mode key.

6. Point the remote toward the device and confirm that the

Quick Reference

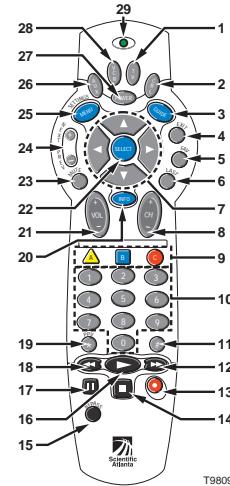

Mode

- 1 TV Mode Key
- 2 Cable Mode Key
- 26 AUX Mode Key
- 28 VCR Mode Key

Sound

- 21 Adjusts volume
- 23 Mutes sound

Device Control

- 27 POWERS on or off
- 29 LED
- 15 Functions as follows:
 - In VCR mode, switches TV/VCR input
 - In TV mode, switches TV/Video input
 - In CBL mode, controls Bypass option

Viewing and Browsing Control

- 11 Functions vary by cable service provider
- 9 Selects options in menus and IPG
- 3 Displays interactive guide
- 25 Displays cable settings or menu
- 7 Moves through selections
- 22 Selects and deselects screen item
- 20 Displays channel and program information
- 8 Selects channels, up or down
- 5 Views favorite channels
- 6 Returns to last channel viewed
- 10 Enters channel numbers (also enters your parental control PIN)
- 19 Features vary by cable service provider; some provide access to pay-per-view features. Note: Explorer DHCTs provide access through on-screen options.
- 24 Navigates through IPG or settings
- 4 Exits settings, menus, and guides

VCR/VOD Control

- Note: In VCR mode, these keys control your VCR.
- 12 Fast forwards VCR/VOD
 - 13 Records program
 - 14 Stops VCR/VOD
 - 16 Plays VCR/VOD
 - 17 Pauses VCR/VOD
 - 18 Rewinds VCR/VOD

TV Setup Codes

Enter all 4 digits to program the TV mode key.

Brand—Code	Funai—0194, 0185, 0193	Minutz—0035, 0192, 0033, 0107	Sansui—0477, Sanyo—0168, Scimitsu—0033
AOC—0033, 0044		Mitsubishi—0164,	
Admiral—0107, 0477	Futuretech—0194	0192, 0033, 0107	Scotch—0192
Aiko—0106	GE—0035, 0061,	Motorola—0107	Scott—0250, 0033,
Aiwa—0715	1361, 0065, 0192,	Multitech—0194	0192, 0193, 0194
Akai—0044	0465, 1161, 0107,	NAD—0170, 0180,	Sears—0168, 0070,
Alaron—0193	0761	0192	0170, 0061, 0068,
America Action—0194	Gibraltar—0031, 0033,	NEC—0044, 0033,	0185, 0192, 0193,
	0044	0070	0761
Ampro—0765	GoldStar—0192, 0033,	NTC—0106	Semivox—0194
Anam—0194	0044, 0070	Nikko—0192, 0044,	Semp—0170
Audiovox—0106,	Gradiente—0070,	0106	Sharp—0107, 0702
0194, 0465, 0637	0067	Onwa—0194	
Baysonic—0194	Grunpy—0193, 0194	Optimus—0264, 0180,	Shogun—0033
Belcor—0033	Hallmark—0192	0168	Signature—0030
Bell & Howell—0030,	Harley Davidson—0168	Optonica—0107	Sony—0014, 0125
	Harman/Kardon—0068	Orion—0477, 0193,	Soundesign—0192,
Bradford—0194	0250	0250	0193, 0194
Brockwood—0033	Panasonic—0065,		Squareview—0185
Broksonic—0250,	Harvard—0194	0264	Starlite—0194
	Hitachi—0159, 0070,	Penny—0061, 1361,	
0477	0030	0074, 0044, 0035,	Supreme—0014
CXC—0194	Infinity—0068	0192, 0065, 0033,	Sylvania—0068, 0044
Candle—0044, 0070	Carnivale—0044	0070, 0170, 0761	Symphonic—0185,
	Inteq—0031	0194	
Carver—0068	JBL—0068	Philco—0159, 0033,	TMK—0070, 0192
Celebrity—0014	JCB—0014	0044, 0068, 0477	TNCI—0031
	JVC—0067	Philips—0068	Tandy—0107
Crinal—0465, 0106	KEC—0194	Pilot—0033, 0044	Technics—0065, 0264
Citizen—0070, 0044,	KTV—0194, 0044	Pioneer—0180, 0693	Technol Ace—0193
0074, 0106	Kenwood—0044, 0033	Portland—0033, 0106	Techwood—0065,
Concerto—0070	Konka—0721, 0646,	Princeton—0731	0070
	0642, 0652, 0717	Prism—0065	
Contec—0194	LG—0070	Proscan—0061, 0761	Teknika—0030, 0068,
	LXI—0168, 0061,	Proton—0192	0193, 0194, 0033,
Crosley—0068	0068, 0170, 0192,	Pulsar—0031, 0033	0106, 0070, 0074,
Crown—0194	Curtis Matthes—0074,	Quasar—0065, 0264	0164
	0044, 0030, 0061,	Logik—0030	Telefunken—0070
	0065, 0068, 0070,	Luxman—0070	RCA—0061, 1361,
	0107, 0159, 0168,	MGA—0164, 0033,	Toshiba—0170, 0074,
	0180, 0465, 0761,	0044, 0192	0168, 1270
	1161, 1361	1461	
Daewoo—0106, 0637,	MTC—0074, 0044,	Radio Shack—0194,	Victor—0067
0033, 0638, 0465	0033, 0070	Vidikon—0068	
		0044, 0192, 0168,	
Daytron—0033	Magnavox—0068,	Vidtech—0033, 0192	
	0044, 0193, 1268	0033, 0061, 0070,	Wards—0068, 0192,
Denon—0159	Dumont—0031, 0033	0761	0030, 0125, 0033,
	Majestic—0030	Marantz—0068, 0044	0035, 0044, 0070,
Dwin—0788	Electroband—0014	0044, 0192, 0033,	0193
	Emerson—0250,	Megatron—0159,	White Westinghouse—
0194, 0192, 0193,	0194, 0638, 0637,	0070	0638, 0637, 0477
0477, 0638, 0637,	Memorex—0193,	Runcio—0617, 0031,	Yamaha—0033, 0044
0033, 0168	0477, 0192, 0030,	SSS—0033, 0194	Zenith—0031, 0638,
Envision—0044	0070, 0164, 0168,	Sampo—0044	0030, 0106, 0477
	0264	Samsung—0074, 0033,	
Fisher—0168	Fujitsu—0193	Midland—0031, 0061,	0192, 0044, 0070
		0065, 0761	Sansei—0465

4

VCR Setup Codes (for VCRs, DVDs, and CD players)

Use the VCR mode key to program your VCR, DVD, or CD player.

Enter all 4 digits to program the VCR mode key.

VCR Codes

Brand—Code	Funai—0014	Memorex—0118,	Pulsar—0053	Sylvania—0049, 0095,
	GE—0049, 0074,	0061, 0493, 0014,	Quasar—0049, 0176,	0014, 0057
	0062, 0254, 0774	0051, 0062, 0049,	1176	
				Symphonic—0014
				TMK—0254
				Tatung—0055
				Teac—0014, 0055
				Technics—0049, 0176
				Teknika—0014, 0049,
				0051
				Thomas—0014
				Tivo—0632, 0650
				Toshiba—0059, 0057
				Totevision—0051,
				0254
				Unitech—0254
				Vector—0059
				Video Concepts—0059
				Videonics—0254
				Wards—0049, 0074,
				0014, 0061, 0254,
				0056, 0062, 0086,
				0095, 0774
				0239, 0630, 1076
				0254
				0259, 0630, 1076
				0276, 0630, 1076
				0293, 0630, 1076
				0329, 0630, 1076
				0359, 0630, 1076
				0389, 0630, 1076
				0419, 0630, 1076
				0449, 0630, 1076
				0479, 0630, 1076
				0509, 0630, 1076
				0539, 0630, 1076
				0569, 0630, 1076
				0599, 0630, 1076
				0629, 0630, 1076
				0659, 0630, 1076
				0689, 0630, 1076
				0719, 0630, 1076
				0749, 0630, 1076
				0779, 0630, 1076
				0809, 0630, 1076
				0839, 0630, 1076
				0869, 0630, 1076
				0899, 0630, 1076
				0929, 0630, 1076
				0959, 0630, 1076
				0989, 0630, 1076
				1019, 0630, 1076
				1049, 0630, 1076
				1079, 0630, 1076
				1109, 0630, 1076
				1139, 0630, 1076
				1169, 0630, 1076
				1199, 0630, 1076
				1229, 0630, 1076
				1259, 0630, 1076
				1289, 0630, 1076
				1319, 0630, 1076
				1349, 0630, 1076
				1379, 0630, 1076
				1409, 0630, 1076
				1439, 0630, 1076
				1469, 0630, 1076
				1499, 0630, 1076
				1529, 0630, 1076
				1559, 0630, 1076
				1589, 0630, 1076
				1619, 0630, 1076
				1649, 0630, 1076
				1679, 0630, 1076
				1709, 0630, 1076
				1739, 0630, 1076
				1769, 0630, 1076
				1799, 0630, 1076
				1829, 0630, 1076
				1859, 0630, 1076
				1889, 0630, 1076
				1919, 0630, 1076
				1949, 0630, 1076
				1979, 0630, 1076
				2009, 0630, 1076
				2039, 0630, 1076
				2069, 0630, 1076
				2099, 0630, 1076
				2129, 0630, 1076
				2159, 0630, 1076
				2189, 0630, 1076
				2219, 0630, 1076
				2249, 0630, 1076
				2279, 0630, 1076
				2309, 0630, 1076
				2339, 0630, 1076
				2369, 0630, 1076
				2399, 0630, 1076
				2429, 0630, 1076
				2459, 0630, 1076
				2489, 0630, 1076
				2519, 0630, 1076
				2549, 0630, 1076
				2579, 0630, 1076
				2609, 0630, 1076
				2639, 0630, 1076
				2669, 0630, 1076
				2699, 0630, 1076
				2729, 0630, 1076
				2759, 0630, 1076
				2789, 0630, 1076
				2819, 0630, 1076
				2849, 0630, 1076
				2879, 0630, 1076
				2909, 0630, 1076

DVD Codes

Brand—Code	Apex—0686	Aiwa—0171	Panasonic—0443
	Denon—0504	California Audio	Philips—0171, 0640
	Fisher—0684	Labs—0043	Pioneer—0046, 1076,
	GE—0536	Carver—0171, 0193	1077
	Gradiente—0665	DKK—0014	Poly Audio—0171
	Hitachi—0587, 0678	Denon—0887	Vidtech—0033, 0192
	Hiteker—0686	QED—0171	Wards—0068, 0192,
	JVC—0637, 0752	Fisher—0193	0193, 0194, 0043
	Kensington—0042,	Genexxa—0046	Quasar—0043
	Onkyo—0517	RCA—0046, 1076,	Realistic—0193
	Optimus—0585	Radio Shack—0194,	Victor—0067
	Oritron—0665	Vidikon—0068	Vidtech—0033, 0192
	Panasonic—0504,	Rotel—0171	Wards—0171
	MCS—0043	SAE—0171	Yamaha—0033, 0044
	Philips—0553, 0517	Kenwood—0042,	Zenith—0031, 0638,
	Pioneer—0585, 0539,	Onkyo—0517, 0640,	0106, 0106, 0477
	0646	Sanyo—0193	Sharp—0051, 0875
	Proscan—0536	Sharp—0193	Sherwood—1081
	RCA—0536, 0585	Linn—0171	Sonic Frontiers—0171
	Samsung—0587	Kenwood—0042,	0180, 0181, 0187
	Sharp—0644		