



## AT2400 AllTouch® Remote Control



Bringing the Interactive Experience Home™

## FCC Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note**  
This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Any changes or modifications not expressly approved by Scientific-Atlanta could void the user's authority to operate this equipment.



**United States:** Scientific-Atlanta, Inc.,  
5030 Sugarloaf Parkway, Box 465447,  
Lawrenceville, GA 30042  
**Europe:** Scientific-Atlanta Europe GmbH,  
Westerbachstrasse 28-32, 61476 Kronberg, Germany  
**Asia-Pacific:** Scientific-Atlanta (Singapore) Pte. Ltd.,  
1 Claymore Drive, #08-11 Orchard Towers,  
Singapore 229594  
**Latin America:** Scientific-Atlanta Argentina S.A.,  
Carlos Pelligrini 1149, Piso 11º, Capital Federal 1011,  
Buenos Aires, Argentina  
© 2002 Scientific-Atlanta, Inc. All rights reserved.  
Printed in USA www.scientificatlanta.com  
Part Number 749221 Rev B February 2002

## CBL Setup Codes

### About Cable Codes

Your cable service provider may have "locked" a valid cable code into your remote to keep you from unintentionally changing the cable code.

If you need to program the remote to operate a different device, use the following steps to unlock the remote.

1. Press and hold the **SELECT** key and the **CBL** key until the LED blinks twice.
2. Press **996**.
3. Press **CH-** to unlock the remote.

**Result:** You can now set up your CBL key with a different cable code.

### Cable Codes

You must enter all 4 digits to program the CBL mode key.

**Brand—Code**  
General Instrument—0290, 0490, 0824  
Jerrold—0290, 0490, 0824  
Motorola—1120  
Panasonic—0121  
Pioneer—0547, 0891, 1891  
Scientific Atlanta—0491, 0891, 1891

## The Explorer eClub

The Explorer eClub is an online club that provides news about the Explorer DHCT and offers you a chance to win prizes and other premium items.

To join the Explorer eClub, you must enter the serial number of your DHCT. The number is located on a label on the bottom of your DHCT, and begins with S/N. Also, your cable service provider may need this number if your DHCT requires service. Write the serial number here:

S/N \_\_\_\_\_

You can access the Explorer eClub on the Internet at  
[www.scientificatlanta.com/explorercub](http://www.scientificatlanta.com/explorercub)

## AUX Setup Codes

### Receiver Codes

**Brand—Code**  
Panasonic—0053,  
ADC—0545 1532  
Aiwa—1419, 0172, Philips—1103, 1203,  
1103 1283  
Capetronic—0545 Pioneer—0545, 1037  
Carver—1103, 1203 Proscan—1268  
Denon—1174, 1118 Quasar—0053  
JVC—0088 RCA—1268, 0545,  
Kenwood—0041, 1037  
1041, 1327, Sansui—1103  
1583, 1584 Sony—0172, 1172,  
MCS—0053 1072, 1272  
Magnavox—1103, Sunfire—1327  
0545, 1203 Technics—0053,  
Marantz—1203, 1103, 1322, 1532, 1323  
0053 Thorens—1203  
Onkyo—0149 Victor—0088  
Optimus—1037, 0545 Wards—0172  
Yamaha—0190, 1190

### Amplifier Codes

**Brand—Code**  
Philips—0906  
GE—0092 Polk Audio—0906  
Harman/Kardon— Realistic—0409  
0906 Sansui—0335  
JVC—0345 Sony—0703  
Luxman—0179 Soundesign—0092  
Marantz—0335, 0906 Victor—0345  
Nakamichi—0335 Wards—0092  
Optimus—0409 Yamaha—0368

### Home Automation Codes

**Brand—Code**  
GE—0254  
One For All—0181  
Radio Shack—0254  
Security System—0181  
Universal X10—0181  
X10—0181

### Additional Audio Codes

These codes allow you to program your remote to control cable radio set-top devices.

**Brand—Code**  
Jerrold—0473, 0534  
Scientific Atlanta—0474  
Starcom—0473

7

## About Your Remote

Your new AT2400 AllTouch® Remote Control ("remote") functions as four remotes in one to operate your TV, VCR, cable set-top device, or CD player. If you prefer, you can program the AT2400 AllTouch Remote Control to operate additional electronic devices, such as a stereo receiver, a DVD player, or a home automation device.

For information about the keys on the remote, go to the **Quick Reference** section of this guide.

**Note:** If you have questions or concerns about the operation of this remote, contact your cable service provider.

### Batteries

The remote requires two alkaline AA batteries. When batteries are properly installed, the LED on the remote blinks each time a button is pressed.

**Important Reminder:** A diagram in the battery compartment of the remote indicates proper placement of the batteries.

### Mode Keys and Setup Codes

**Q:** What are mode keys?

**A:** The mode keys switch the remote to operate a particular device. These four keys are located at the top of the remote.



**Q:** What are setup codes?

**A:** Setup codes are numeric codes that identify your brand of equipment so that the remote can operate that device.

**Important Reminder:** The AT2400 AllTouch Remote Control is not a toy. It should be kept out of the reach of children under the age of 6 years.

## Setting Up Your Remote

### To Set Up a Mode Key

The mode keys are programmed with most of the popular brands of electronic devices, so before you perform this procedure, test each mode key.

To test the mode key, turn on your device, press the mode key for that device, and then press **POWER** on the remote to verify that the power to the device turns off.

If the device does not turn off, then the mode key may not be set up. Follow these steps to set up a mode key:

1. Find the code for your brand of device in one of the setup code lists in this guide.
2. Make sure that the device is turned on.
3. Press and hold the **SELECT** key and the appropriate mode key for that device until the LED (the light at the top of the remote) blinks twice. For example, to set up the VCR key, press and hold **SELECT** and **VCR**.
4. Enter the setup code for the device.  
**Note:** The setup codes for each mode key appear on the front and the back of this guide.
5. Point the remote toward the device.
6. Press **POWER**, **PLAY**, or **CH+** to test the device.
7. Did the device operate correctly?  
• If **yes**, go to step 8.  
• If **no**, repeat steps 3 through 6 using a different setup code.  
**Note:** If all of the codes listed for your brand of device fail to operate your device properly, go to the **To Search for Codes** section of this guide for instructions.
8. Repeat steps 1 through 6 for each mode key that you want to set up.
9. Write down your codes for future reference:

AUX: \_\_\_\_\_ VCR: \_\_\_\_\_

### To Search for Codes

If none of the codes listed for your device work, you can search through the code library for a valid code. The remote automatically selects the proper code.

1. Turn on the device.
2. Hold down the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice. For example, to search for a TV code, hold down **SELECT** and **TV**.
3. Using the keypad on the remote, press **991**. The LED blinks once.
4. Point the remote toward the device, and press the **POWER** key.
5. Did the device turn off?  
• If **no**, press the up arrow key to go to the next code, and return to step 4.  
• If **yes**, press **SELECT** to confirm the code.

**Note:** The LED on the remote blinks three times when you reach the end of the code library. Each of the code libraries contains fewer than 80 codes.

### To Identify Programmed Codes

You can find out which code you used to program your device by using the following procedure.

1. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
2. Using the keypad on the remote, press **990**. The LED blinks twice.
3. Press **1**; then, count the LED blinks. The number of LED blinks indicates the first digit in the code. For example, 4 blinks indicates the first digit in the code is 4. If the LED does not blink, the digit is 0.
4. Press **2**; then, count the LED blinks. The number of blinks indicates the second digit in the code.
5. Press **3**; then, count the LED blinks. The number of blinks indicates the third digit in the code.

6. Press **4**; then, count the LED blinks. The number of blinks indicates the fourth digit in the code.
7. Write down your codes in the **To Set Up a Mode Key** section.

### To Program for Volume Control


You can program your Volume and Mute keys to function in one of two ways:

- To control the volume on a single device all the time
- To control the volume on each device, depending on the mode key that you press

**Note:** The default setting is to control volume through your TV all the time. Follow these steps to change the way your Volume and Mute keys function.

1. Turn on the appropriate device.
2. If you have an Explorer® Digital Home Communication Terminal (DHCT), use the **SETTINGS** button to go to the General Settings menu on-screen, and make sure that the Audio: Volume Control setting is set to "Variable."
3. Hold the **SELECT** key and the appropriate mode key (AUX, VCR, TV, or CBL) until the LED blinks twice.
4. Using the keypad on the remote, press **993**. The LED blinks twice.
5. Do you want the Volume and Mute keys to operate a single device all the time?  
• If **yes**, press the mode key for the device that you want to control the volume.  
• If **no**, press the **VOL-** key to control the volume through various devices based on the mode key.
6. Point the remote toward the device and confirm that the

## Quick Reference

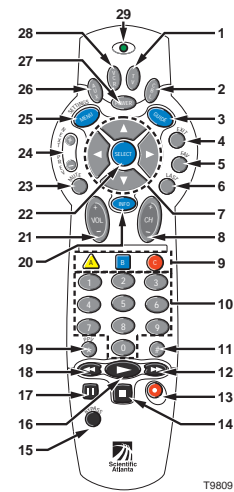

### Mode

- 1 TV Mode Key
- 2 Cable Mode Key
- 26 AUX Mode Key
- 28 VCR Mode Key

### Sound

- 21 Adjusts volume
- 23 Mutes sound

### Device Control

- 27 **POWER** POWERS on or off
- 29 **LED**
- 15 **PARA** Functions as follows:
  - In VCR mode, switches TV/VCR input
  - In TV mode, switches TV/Video input
  - In CBL mode, controls Bypass option

### Viewing and Browsing Control

- 11 **#** Functions vary by cable service provider
- 9 **▲▶▶** Selects options in menus and IPG
- 3 **GUIDE** Displays interactive guide
- 25 **SETTINGS/MENU** Displays cable settings or menu
- 7 **◀▶▶** Moves through selections
- 22 **HELP** Selects and deselects screen item
- 20 **INFO** Displays channel and program information
- 8 **CH** Selects channels, up or down
- 5 **FAV** Views favorite channels
- 6 **LAST** Returns to last channel viewed

- 10 **0-9** Enters channel numbers (also enters your parental control PIN)
- 19 **PPV** Features vary by cable service provider; some provide access to pay-per-view features. **Note:** Explorer DHCTS provide access through on-screen options.
- 24 **IPG** Navigates through IPG or settings
- 4 **EXIT** Exits settings, menus, and guides

### VCR/VOD Control

- Note:** In VCR mode, these keys control your VCR.
- 12 **▶▶▶** Fast forwards VCR/VOD
  - 13 **●** Records program
  - 14 **■** Stops VCR/VOD
  - 16 **▶▶** Plays VCR/VOD
  - 17 **⏸** Pauses VCR/VOD
  - 18 **◀◀◀** Rewinds VCR/VOD

## TV Setup Codes

Enter all 4 digits to program the TV mode key.

Brand-Code	Brand-Code	Brand-Code	Brand-Code
AOC-0033, 0044	Funai-0194, 0185, 0193	Minutz-0035	Sansui-0477
Admiral-0107, 0477	Futuretech-0194	Mitsubishi-0164	Sanyo-0168
Aiko-0106	GE-0035, 0061,	Motorola-0107	Scimitsu-0033
Aiwa-0715	1361, 0065, 0192,	Multitech-0194	Scott-0250, 0033,
Akai-0044	0465, 1161, 0107,	NAD-0170, 0180,	0192, 0193, 0194
Alaron-0193	0761	0192	Sears-0168, 0070,
America Action-0194	Gibraltar-0031, 0033,	NEC-0044, 0033,	0170, 0061, 0068,
Ampro-0765	0044	0070	0185, 0192, 0193,
Anam-0194	GoldStar-0192, 0033,	NTC-0106	0761
Audiovox-0106,	0044, 0070		Semivox-0194
0194, 0465, 0637	Gradiente-0070,	0106	Semp-0170
Baysonic-0194	0067		Sharp-0107, 0702
Belcor-0033	Grunpy-0193, 0194		Shogun-0033
Bell & Howell-0030,	Hallmark-0192		Signature-0030
0168	Harley Davidson-0193		Sony-0014, 0125
Bradford-0194	Harman/Kardon-0068		Soundesign-0192,
Brockwood-0033	Harvard-0194		0193, 0194
Broksonic-0250,	Hitachi-0159, 0070,	Panasonic-0065,	Squareview-0185
0477	0030	0264	Starlite-0194
CXC-0194	Infinity-0068	Penney-0061, 1361,	Supreme-0014
Candle-0044, 0070	Inteq-0031	0074, 0044, 0035,	Sylvania-0068, 0044
Carnivale-0044	JBL-0068	0192, 0065, 0033,	Symphonic-0185,
Carver-0068	JCB-0014	0070, 0170, 0761	0194
Celebrity-0014	JVC-0067	Philco-0159, 0033,	TMK-0070, 0192
Cineral-0465, 0106	KEC-0194	0044, 0068, 0477	TNCi-0031
Citizen-0070, 0044,	KTV-0194, 0044	Philips-0068	Tandy-0107
0074, 0106	Kenwood-0044, 0033	Pilot-0033, 0044	Technics-0065, 0264
Concerto-0070	Konka-0721, 0646,	Pioneer-0180, 0693	Technol Ace-0193
Contec-0194	0642, 0652, 0717	Portland-0033, 0106	Techwood-0065,
Craig-0194	LG-0070	Princeton-0731	0070
Crosley-0068	LXI-0168, 0061,	Prism-0065	Teknika-0030, 0068,
Crown-0194	0068, 0170, 0192,	Proscan-0061, 0761	0193, 0194, 0033,
Curtis Mathes-0074,	0761	Proton-0192	0106, 0070, 0074,
0044, 0030, 0061,	Logik-0030	Pulsar-0031, 0033	0164
0065, 0068, 0070,	Luxman-0070	Quasar-0065, 0264	Telefunken-0070
0107, 0159, 0168,	MGA-0164, 0033,	RCA-0061, 1361,	Toshiba-0170, 0074,
0180, 0465, 0761,	0044, 0192	1161, 0693, 1261,	0168, 1270
1161, 1361	MTC-0074, 0044,	0033, 0065, 0104,	Vector Research-
Daewoo-0106, 0637,	0033, 0638, 0465	0107, 0761, 1061,	0044
Daytron-0033	Magnavox-0068,	1461	Victor-0067
Denon-0159	0044, 0193, 1268	Radio Shack-0194,	Vidikron-0068
Dumont-0031, 0033	Majestic-0030	0044, 0192, 0168,	Vidtech-0033, 0192
Dwin-0788	Marantz-0068, 0044	0033, 0061, 0070,	Wards-0068, 0192,
Electroband-0014	Matsushita-0264	0761	0030, 0125, 0033,
Emerson-0250,	Megatron-0159,	Realistic-0194, 0168,	0035, 0044, 0070,
0194, 0192, 0193,	0192	0044, 0192, 0033,	0193
0477, 0638, 0637,	Memorex-0193,	Runco-0617, 0031,	White Westinghouse-
0033, 0168	0477, 0192, 0030,	0044	0638, 0637, 0477
Envision-0044	0070, 0164, 0168,	SSS-0033, 0194	Yamaha-0033, 0044
Fisher-0168	0264	Sampo-0044	Zenith-0031, 0638,
Fujitsu-0193	Midland-0031, 0061,	Samsung-0074, 0033,	0030, 0106, 0477
	0065, 0761	0192, 0044, 0070	
		Sansai-0465	

## VCR Setup Codes (for VCRs, DVDs, and CD players)

Use the VCR mode key to program your VCR, DVD, or CD player. Enter all 4 digits to program the VCR mode key.

VCR Codes	VCR Codes	VCR Codes	VCR Codes
Funai-0014	Memorex-0118,	Pulsar-0053	Sylvania-0049, 0095,
GE-0049, 0074,	0061, 0493, 0014,	0014, 0057	0014, 0057
0062, 0254, 0774	0051, 0062, 0049,	Symphonic-0014	
Admiral-0062, 0223	1176	TMK-0254	
Garrard-0014	RCA-0074, 0056,	Tatung-0055	
Adventura-0014	0254, 1051, 0053,	Teac-0014, 0055	
Aiwa-0014, 0051	0176, 0223, 1176,	Technics-0049, 0176	
Akai-0055	1276	Teknika-0014, 0049,	
American High-0049	Minolta-0056	0051	
Asha-0254	Radio Shack-0014,	0051	
Audiovox-0051	0101	Radix-0051	
Beaumarck-0254	Mitsubishi-0057,	Randex-0051	
Harwood-0086	0062, 0081	Realistic-0014, 0118,	
Bell & Howell-0118	0062, 0081	0061, 0062, 0051,	
Broksonic-0135,	0055	0049	
0198, 0223, 0493	Hughes Network	ReplayTV-0628,	
CCE-0086	Systems-0056	0630	
Calix-0051	JVC-0081, 0055	Runco-0053	
Canon-0049	Jensen-0055	STS-0056	
Carver-0095	KEC-0051	Samsung-0059, 0254	
Citizen-0051	KLH-0086	Sanky-0053, 0062	
Colt-0086	Kenwood-0055, 0081	Sansui-0055, 0493,	
Craig-0051, 0086,	Kodak-0049, 0051	0014, 0081, 0223	
0061, 0254	LXI-0051	Sanyo-0061, 0118,	
Curtis Mathes-0049,	Lloyd's-0014	0176, 1176, 1276,	
0055, 0074, 0176,	Logik-0086	0239, 0630, 1076	
0774	MEI-0049	Scott-0198, 0135,	
Cybernex-0254	MGA-0057, 0254	0057, 0059	
Daewoo-0059	MGN Technology-	Sears-0051, 0056,	
Denon-0056	0254	0014, 0049, 0061,	
Dynatech-0014	MTC-0014, 0254	0118	
Electrohome-0051	Magnavox-0049,	Semp-0059	
Electrohome-0051	0095, 0014, 0053	Sharp-0062	
Emerex-0046	Magnin-0254	Shintom-0086	
Emerson-0198,	Marantz-0095, 0049	Shogun-0254	
0223, 0135, 0493,	Marta-0051	Singer-0086	
0014, 0051, 0057	Matsushita-0049,	Sony-0047, 0046,	
		0014, 0049, 0650,	
		1046	

### DVD Codes

- Apex-0686
- Denon-0504
- Fisher-0684
- GE-0536
- Gradiente-0665
- Hitachi-0587, 0678
- Hiteker-0686
- JVC-0637, 0572
- Kenwood-0548
- Magnavox-0517,
- 0689
- Marantz-0553
- Mitsubishi-0535
- Onkyo-0517
- Optimus-0585
- Oritron-0665
- Panasonic-0504,
- 0646
- Philips-0553, 0517
- Pioneer-0585, 0539,
- 0646
- Proscan-0536
- RCA-0536, 0585
- Samsung-0587
- Sharp-0644
- Sony-0547
- Technics-0504
- Theta Digital-0585
- Toshiba-0517
- Yamaha-0504, 0559
- Zenith-0605, 0517

### CD Codes

- Aiwa-0171
- California Audio
- Labs-0043
- Carver-0171, 0193
- DKK-0014
- Denon-0887
- Fisher-0193
- Genexxa-0046
- Harman/Kardon-
- 0171, 0187
- Hitachi-0046
- JVC-0086
- Kenwood-0042,
- 0840, 0051, 0640,
- 0695
- Krell-0171
- Linn-0171
- MCS-0043
- Magnavox-0171
- Marantz-0171, 0640,
- 0043
- Mission-0171
- NSM-0171
- Onkyo-0882
- Optimus-0046, 0193,
- 1077, 0014, 0051
- Panasonic-0043
- Philips-0171, 0640
- Pioneer-0046, 1076,
- 1077
- Polk Audio-0171
- Proton-0171
- QED-0171
- Quasar-0043
- RCA-0046, 1076,
- 0193
- Realistic-0193
- Rotel-0171
- JVC-0086
- SAE-0171
- Sansui-0171
- Sanyo-0193
- Sharp-0051, 0875
- Sherwood-1081
- Sonic Frontiers-0171
- Sony-0014, 0504
- Technics-0043
- Victor-0086
- Wards-0171
- Yamaha-0902

Setup codes for the AUX and CBL mode keys are located on page 7 of this guide.