

# Hargrave's Communications Dictionary

Frank Hargrave

IEEE Press  
445 Hoes Lane, P.O. Box 1331  
Piscataway, NJ 08855-1331

**IEEE Press Editorial Board**  
Robert J. Herrick, *Editor in Chief*

M. Akay	M. Eden	M. S. Newman
J. B. Anderson	M. E. El-Hawary	M. Padgett
P. M. Anderson	R. F. Hoyt	W. D. Reeve
J. E. Brewer	S. V. Kartalopoulos	G. Zobrist
	D. Kirk	

Kenneth Moore, *Director of IEEE Press*  
Catherine Faduska, *Senior Acquisitions Editor*  
Linda Matarazzo, *Associate Acquisitions Editor*  
Marilyn G. Catis, *Marketing Manager*  
Anthony VenGraitis, *Project Editor*

Cover design: Laura Ierardi, *LCI Design*

**Technical Reviewers**

Dr. Salah Aidarous, *NEC America, Irving, TX*  
Prof. John B. Anderson, *University of Lund, Sweden*  
Prof. Marcello Rodrigues de Campos, *Universidade Federal do Rio de Janeiro, Brazil*  
Dr. Bhumip Khasnabish, *GTE Labs, Inc., Waltham, MA*  
Prof. Thomas Robertazzi, *State University of New York at Stony Brook*  
Dr. Curtis Siller, *Lucent Technologies, Bell Laboratories, North Andover, MA*

**Books of Related Interest from IEEE Press**

*The Mobile Communications Handbook*, Second Edition

Jerry D. Gibson, Editor in Chief

A CRC Handbook published in cooperation with IEEE Press

1999 Hardcover 726 pp IEEE Order No. PC5772 ISBN 0-7803-4726-9

*Technically Speaking: A Guide for Communicating Complex Information*

Jan D'Arcy

A Batelle Publishers book published in cooperation with IEEE Press

1999 Softcover 280 pp IEEE Order No. PP5401 ISBN 0-7803-5367-6

*Procedure Writing: Principles and Practices*, Second Edition

Douglas Wieringa, Christopher Moore, and Valerie Barnes

A Batelle Publishers book published in cooperation with IEEE Press

1999 Softcover 256 pp IEEE Order No. PP5402 ISBN 0-7803-5368-4

*The Electrical Engineering Handbook*, Second Edition

Richard C. Dorf, Editor in Chief

# HARGRAVE'S COMMUNICATIONS DICTIONARY

Frank Hargrave



IEEE  
PRESS

3

This book and other books may be purchased at a discount from the publisher when ordered in bulk quantities. Contact:

IEEE Press Marketing  
Attn: Special Sales  
445 Hoes Lane  
P.O. Box 1331  
Piscataway, NJ 08855-1331  
Fax: +1 732 981 9334

For more information about IEEE Press products, visit the IEEE Online Store & Catalog: <http://www.ieee.org/store>.

© 2001 by the Institute of Electrical and Electronics Engineers, Inc.  
3 Park Avenue, 17th Floor, New York, NY 10016-5997.

*All rights reserved. No part of this book may be reproduced in any form, nor may it be stored in a retrieval system or transmitted in any form, without written permission from the publisher.*

Printed in the United States of America.

10 9 8 7 6 5 4 3 2 1

**ISBN 0-7803-6020-6**  
**IEEE Order No. PC5869**

#### **Library of Congress Cataloging-in-Publication Data**

Hargrave, Frank.

Hargrave's communications dictionary.

/ Frank Hargrave.

p. cm.

Includes index.

ISBN 0-7803-6020-6

1. Telecommunication—Dictionaries. I. Title.

**power detection** That form of detection in which the power output of the detecting device is used to supply a substantial amount of power to the subsequent devices.


**power density** In optics, a deprecated synonym for *irradiance*.

**power dissipation** The amount of energy converted to heat in a device. Mathematically, it is the square of the current through the device times its resistance ( $P = I^2 R$ ).

**power disturbance** Any of several forms of mains waveform distortions and deviations from the nominal value—e.g., blackout, brownout, spike, surge, frequency stability, waveform purity, and noise. See also *mains*.

**power factor** (1) The ratio of active power (watts) to apparent power (voltamps).

In ac power transmission and distribution, the cosine of the phase angle between the voltage and current. When the load is inductive (e.g., an induction motor), the current lags the applied voltage, and the power factor is said to be a lagging power factor. When the load is capacitive (e.g., a synchronous motor or a capacitive network), the current leads the applied voltage, and the power factor is said to be a leading power factor. *Power factors* other than unity have deleterious effects on power transmission systems—i.e., excessive transmission losses and reduced system capacity. See also *power (P)*. (2) In switchmode power supplies, the existence of significant distortion in the current waveform due to both the high-input capacitance of the converter and the effect of charging the capacitor only at the peak input voltage. This leads to a current waveform such as is shown in the drawing along with high associated harmonic content. By regulation,

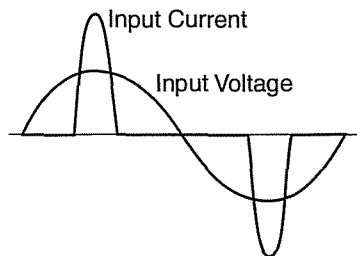

these harmonics must be reduced to levels below those illustrated in the table.

MAXIMUM PERMISSIBLE HARMONIC CURRENT

Harmonic Order (n)	EN60555	IEC 1000-3-2	
	Maximum Harmonic Current (A)	Maximum Harmonic Current (mA/W)	Maximum Harmonic Current (A)
2	1.08		
3	2.30	3.4	2.30
4	0.43		
5	1.14	1.9	1.14
6	0.30		
7	0.77	1.0	0.77
9	0.40	0.5	0.40
11	0.33	0.35	0.33
13	0.21	0.30	0.21
$8 \leq n_{EVEN} \leq 40$	$1.84 / n$		
$15 \leq n_{ODD} \leq 39$	$2.25 / n$	$3.85 / n$	$2.25 / n$

**power failure transfer** (1) In power, the switching of a load from a primary source to a secondary (backup) source when a measured parameter of the primary source is outside specified limits. Examples include:

- *Power distribution.* The switching of primary utility mains to a secondary (backup) whenever the primary source operates outside specified parameters.
- *Telephony.* The switching from commercial power sources at the central office (CO) to locally generated (backup) power in the event commercial power falls outside desired limits.

(2) In telephony, the transfer of certain analog telephone instruments from private automatic branch exchange (PABX) station lines to pre-designed central office analog trunks in the event of commercial power failure and a low PABX battery condition. *Power failure transfer* is an emergency mode of operation in which only one instrument at the subscriber location may be powered from each central office trunk. Also called *power fail bypass*.

**power gain** (1) In general, the ratio of the power a device delivers to its load to the power the device receives at its input. Power gain is usually expressed in decibels (dB). (2) With an antenna, the ratio of the power flux (at a point in the far field) per unit area of the antenna to an isotropic radiator.

The Friis transmission formula is usually used to define far-field distance ( $r$ ), that is,

$$r \geq 2 \cdot D^2 \cdot \lambda$$

where  $D$  is the maximum aperture dimension of the antenna and  $\lambda$  is the wavelength of the radiation. The isotropic radiator must be contained in the smallest sphere containing the antenna; common points are the antenna terminals and points of symmetry.

**power law index profile** In optical fibers, a class of *graded index profiles* characterized by:

$$n(r) = \begin{cases} n_1 \sqrt{1 - 2\Delta \left(\frac{r}{r_c}\right)^g}, & r \leq r_c \\ n_1 \sqrt{1 - 2\Delta}, & r \geq r_c \end{cases}$$

where  $\Delta = \frac{n_1^2 - n_2^2}{2n_1^2}$  and

- $r$  is the distance from the fiber axis,
- $n(r)$  is the nominal refractive index as a function of distance from the fiber axis,
- $n_1$  is the nominal refractive index on axis,
- $n_2$  is the refractive index of the homogeneous cladding ( $n(r) = n_2$  for  $r \geq a$ ),
- $r_c$  is the core radius, and
- $g$  is the profile parameter, i.e., defines the shape of the index profile. ( $\alpha$  is often used in place of  $g$ . Hence, this is sometimes called a *alpha profile*.)

Multimode distortion is minimum when  $g$  takes a particular value depending on the material used. For most materials, this optimum value is approximately 2. When  $g$  increases without limit, the profile tends to a *step index profile*.

**power level** The magnitude of power averaged over a specified time interval. Expressed either in watts (W) or as a ratio to a reference power in dBm or dBW.

**power line carrier** A communications method employing a low-frequency RF carrier (usually less than 600 kHz) to transmit infor-



# Explore Litigation Insights

Docket Alarm provides insights to develop a more informed litigation strategy and the peace of mind of knowing you're on top of things.

## Real-Time Litigation Alerts



Keep your litigation team up-to-date with **real-time alerts** and advanced team management tools built for the enterprise, all while greatly reducing PACER spend.

Our comprehensive service means we can handle Federal, State, and Administrative courts across the country.

## Advanced Docket Research



With over 230 million records, Docket Alarm's cloud-native docket research platform finds what other services can't. Coverage includes Federal, State, plus PTAB, TTAB, ITC and NLRB decisions, all in one place.

Identify arguments that have been successful in the past with full text, pinpoint searching. Link to case law cited within any court document via Fastcase.

## Analytics At Your Fingertips



Learn what happened the last time a particular judge, opposing counsel or company faced cases similar to yours.

Advanced out-of-the-box PTAB and TTAB analytics are always at your fingertips.

## API

Docket Alarm offers a powerful API (application programming interface) to developers that want to integrate case filings into their apps.

## LAW FIRMS

Build custom dashboards for your attorneys and clients with live data direct from the court.

Automate many repetitive legal tasks like conflict checks, document management, and marketing.

## FINANCIAL INSTITUTIONS

Litigation and bankruptcy checks for companies and debtors.

## E-DISCOVERY AND LEGAL VENDORS

Sync your system to PACER to automate legal marketing.