

for Information Systems – Small Computer System Interface-2



Apple 1012 U.S. Pat. 6,470,399

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS .

a a na ha a a a a a na hanna anna an san Arana an Arana a

ANSI<sup>®</sup> X3.131-1994

American National Standard for Information Systems –

Small Computer System Interface-2

Secretariat Computer and Business Equipment Manufacturers Association

Approved January 31, 1994 American National Standards Institute, Inc.

#### Abstract

The SCSI protocol is designed to provide an efficient peer-to-peer I/O bus with up to 16 devices, including one or more hosts. Data may be transferred asynchronously at rates that only depend on device implementation and cable length. Synchronous data transfers are supported at rates up to 10 mega-transfers per second. With the 32-bit wide data transfer option, data rates of up to 40 megabytes per second are possible.

SCSI-2 includes command sets for magnetic and optical disks, tapes, printers, processors, CD-ROMs, scanners, medium changers, and communications devices.

# American National Standard

Approval of an American National Standard requires review by ANSI that the requirements for due process, consensus, and other criteria for approval have been met by the standards developer.

Consensus is established when, in the judgment of the ANSI Board of Standards Review, substantial agreement has been reached by directly and materially affected interests. Substantial agreement means much more than a simple majority, but not necessarily unanimity. Consensus requires that all views and objections be considered, and that a concerted effort be made toward their resolution.

The use of American National Standards is completely voluntary; their existence does not in any respect preclude anyone, whether he has approved the standards or not, from manufacturing, marketing, purchasing, or using products, processes, or procedures not conforming to the standards.

The American National Standards Institute does not develop standards and will in no circumstances give an interpretation of any American National Standard. Moreover, no person shall have the right or authority to issue an interpretation of an American National Standard in the name of the American National Standards Institute. Requests for interpretations should be addressed to the secretariat or sponsor whose name appears on the title page of this standard.

**CAUTION NOTICE:** This American National Standard may be revised or withdrawn at any time. The procedures of the American National Standards Institute require that action be taken periodically to reaffirm, revise, or withdraw this standard. Purchasers of American National Standards may receive current information on all standards by calling or writing the American National Standards Institute.

**CAUTION:** The developers of this standard have requested that holders of patents that may be required for the implementation of the standard disclose such patents to the publisher. However, neither the developers nor the publisher have undertaken a patent search in order to identify which, if any, patents may apply to this standard. As of the date of publication of this standard and following calls for the identification of patents that may be required for the implementation of the standard, no such claims have been made. No further patent search is conducted by the developer or publisher in respect to any standard it processes. No representation is made or implied that licenses are not required to avoid infringement in the use of this standard.

Published by

## American National Standards Institute 11 West 42nd Street, New York, New York 10036

Copyright ©1994 by Information Technology Industry Council (ITI) All rights reserved.

No part of this publication may be reproduced in any form, in an electronic retrieval system or otherwise, without prior written permission of ITI, 1250 Eye Street NW, Washington, DC 20005.

Printed in the United States of America

## Contents

Page         Foreword       xix         Introduction       xxii		
1	Scope	1
2	Normative references	2
3 3.1 3.2		3
4 4.1 4.2	General         6           Overview         6           Conventions         7	5
5 5.1 5.2 5.2.1 5.2.2 5.3.3 5.3.1 5.3.1.1 5.3.1.2 5.3.1.3 5.3.2 5.3.2.1 5.3.2.1 5.3.2.2 5.3.2.3 5.3.2.3 5.3.2.3 5.4.1 5.4.1.1 5.4.1.2 5.4.2.1 5.4.2.2 5.4.2.1 5.4.2.2 5.4.3 5.4.4 5.5		
5.6 5.6.1 5.6.2 5.6.3	SCSI bus signals         32           Signal values         33           OR-tied signals         33           Signal sources         33	3
5.7 5.7.1 5.7.2 5.7.3 5.7.4 5.7.5	SCSI bus timing34Arbitration delay35Assertion period35Bus clear delay35Bus free delay35Bus set delay36	5 5 5 5

	Pa	ige
5.7.6	Bus settle delay	36
5.7.7	Cable skew delay	36
5.7.8	Data release delay	36
5.7.9	Deskew delay	36
5.7.10	Disconnection delay	36
5.7.11	Hold time	36
5.7.12	Negation period	36
5.7.13	Power-on to selection time	36
5.7.14	Reset to selection time	36
5.7.15	Reset hold time	37
5.7.16	Selection abort time	37
5.7.17	Selection time-out delay	37
5.7.18	Transfer period	37
5.8	Fast synchronous transfer option	37
5.8.1	Fast assertion period	37
5.8.2	Fast cable skew delay	37
5.8.3	Fast deskew delay	37
5.8.4	Fast hold time	37
5,8.5	Fast negation period	38
6	Logical characteristics	39
6.1	SCSI bus phases	39
6.1.1	BUS FREE phase	39
6.1.2	ARBITRATION phase	40
6.1.3	SELECTION phase	40
6.1.3.1	SELECTION time-out procedure	41
6.1.4	RESELECTION phase	41
6.1.4.1	RESELECTION	41
6.1.4.2	RESELECTION time-out procedure	42
6.1.5	Information transfer phases	42
6.1.5.1	Asynchronous information transfer	43
6.1.5.2	Synchronous data transfer	43
6.1.5.3	Wide data transfer	44
6.1.6	COMMAND phase	46
6.1.7	Data phase	46
6.1.7.1	DATA IN phase	46
6.1.7.2	DATA OUT phase	46
6.1.8	STATUS phase	46
6.1.9	Message phase	46
6.1.9.1	MESSAGE IN phase	46
6.1.9.2	MESSAGE OUT phase	46
6.1.10	Signal restrictions between phases	47
6.2	SCSI bus conditions	47
6.2.1	Attention condition	47
6.2.2	Reset condition	48
6.2.2.1	Hard reset alternative	49
6.2.2.2	Soft reset alternative	49
6.3	SCSI bus phase sequences	50
6.4	SCSI pointers	51
6.5	Message system description	52
6.6	Messages	55
6.6.1	ABORT	55
6.6.2	ABORT TAG	55
6.6.3	BUS DEVICE RESET	56

	P	age
6.6.4	CLEAR QUEUE	56
6.6.5	COMMAND COMPLETE	56
6.6.6	DISCONNECT	56
6.6.7	IDENTIFY	57
6.6.8	IGNORE WIDE RESIDUE	58
6.6.9	INITIATE RECOVERY	58
6.6.10	INITIATOR DETECTED ERROR	59
6.6.11	LINKED COMMAND COMPLETE	59
6.6.12	LINKED COMMAND COMPLETE (WITH FLAG)	59
6.6.13	MESSAGE PARITY ERROR	59
6.6.14	MESSAGE REJECT	59
6.6.15	MODIFY DATA POINTER Message	60
6.6.16	NO OPERATION	60
6.6.17	Queue tag messages	60
6.6.17.1	HEAD OF QUEUE TAG	61
6.6.17.2	ORDERED QUEUE TAG	61
6.6.17.3	SIMPLE QUEUE TAG	61
6.6.18	RELEASE RECOVERY	61
6.6.19	RESTORE POINTERS	61
6.6.20	SAVE DATA POINTER	62
6.6.21	SYNCHRONOUS DATA TRANSFER REQUEST	62
6.6.22	TERMINATE I/O PROCESS	64
6.6.23	WIDE DATA TRANSFER REQUEST	64
7	SCSI commands and status	67
, 7.1	Command implementation requirements	67
7.1.1	Reserved	67
7.1.2	Operation code types	67
7.2	Command descriptor block	68
7.2.1	Operation code	69
7.2.2		70
7.2.3	Logical block address	70
7.2.4	Transfer length	70
7.2.5	Parameter list length	70
7.2.6	Allocation length	70
7.2.7	Control field	71
7.3	Status	71
7.4	Command examples	73
7.4.1	Single command example	73
7.4.2	Disconnect example	73
7.4.3	Linked command example	74
7.5	Command processing considerations and exception conditions	74
7.5.1	Programmable operating definition	74
7.5.2	Incorrect initiator connection	75
7.5.3	Selection of an invalid logical unit	75
7.5.4	Parameter rounding	76
7.5.5	Asynchronous event notification	76
7.5.6	Unexpected reselection	77
7.6	Contingent allegiance condition	78
7.7	Extended contingent allegiance condition	78
7.8	Queued I/O processes	79
7.8.1	Untagged queuing	79
7.8.2	Tagged queuing	79
7.8.3	Example of queued I/O process	80

.

.

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

		Page
7.8.3.1	Typical sequences for tagged queuing	81
7.8.3.2	Example of tagged queuing	81
7.9	Unit attention condition	
8	All device types	84
8.1	Model for all device types	
8.1.1	SCSI addresses	
	SCSI device address	
8.1.1.1		
8.1.1.2		
8.1.1.3	Target routines	
8.1.2	Commands implemented by all SCSI devices	
8.1.2.1	Using the INQUIRY command	
8.1.2.2	Using the REQUEST SENSE command	
8.1.2.3	Using the SEND DIAGNOSTIC command	85
8.1.2.4	Using the TEST UNIT READY command	85
8.2	Commands for all device types	
8.2.1	CHANGE DEFINITION command	
8.2.2	COMPARE command	
8.2.3	COPY command	
8.2.3.1	Errors detected by the managing SCSI device	
8.2.3.2	Errors detected by a target	
8.2.3.3	COPY function code 00h and 01h	
8.2.3.4	COPY function code 02h	
8.2.3.5		
8.2.3.6	COPY function code 04h	
8.2.3.7	Copies with unequal block lengths	
8.2 <i>.</i> 4	COPY AND VERIFY command	
8.2.5	INQUIRY command	
8.2.5.1	Standard INQUIRY data	
8.2.5.2	Vital product data	100
8.2.6	LOG SELECT command	101
8.2.7	LOG SENSE command	103
8.2.8	MODE SELECT(6) command	104
8.2.9	MODE SELECT(10) command	
8.2.10	MODE SENSE(6) command	
8.2.10.1	Current values	
8.2.10.2	Changeable values	
8.2.10.3	Default values	
8.2.10.3	Saved values	
8.2.10.4	Initial responses	
8.2.10.5	MODE SENSE(10) command	
8.2.12	READ BUFFER command	
8.2.12.1	Combined header and data mode (000b)	
8.2.12.2	Vendor-specific mode (001b)	
8.2.12.3	Data mode (010b)	
8.2.12.4	Descriptor mode (011b)	
8.2.13	RECEIVE DIAGNOSTIC RESULTS command	
8.2.14	REQUEST SENSE command	
8.2.14.1	Sense-key specific	116
8.2.14.2	Deferred errors	
8.2.14.3	Sense key and sense code definitions	119
8.2.15	SEND DIÁGNOSTIC command	
8.2.16	TEST UNIT READY command	
8.2.17	WRITE BUFFER command	

		Page
8.2.17.1	Combined header and data mode (000b)	
8.2.17.2	Vendor-specific mode (001b)	128
8.2.17.3	Data mode (010b)	
8.2.17.4	Download microcode mode (100b)	129
8.2.17.5	Download microcode and save mode (101b)	
8.3	Parameters for all device types	
8.3.1	Diagnostic parameters	
8.3.1.1	Supported diagnostic pages	
8.3.2	Log parameters	
8.3.2.1	Buffer over-run/under-run page	
8.3.2.2	Error counter pages	
8.3.2.3	Last <i>n</i> error events page	
8.3.2.4	Non-medium error page	
8.3.2.5	Supported log pages	
8.3.3	Mode parameters	
8.3.3.1	Control mode page	
8.3.3.2	Disconnect-reconnect page	
8.3.3.3	Peripheral device page	
8.3.4	Vital product data parameters	
8.3.4.1	ASCII implemented operating definition page	
8.3.4.2	ASCII information page	
8.3.4.3	Implemented operating definition page	
8.3.4.4 8.3.4.5	Unit serial number page	
0.3.4.5		149
9	Direct-access devices	150
9 9.1	Direct-access device model	
9.1.1	Removable medium	
9.1.2	Logical blocks	
9.1.3	Ready state	
9.1.4	Initialization	
9.1.5	Medium defects	
9.1.6	Data cache	
9.1.7	Reservations	
9.1.8	Seek and rezero	
9.1.9	Notched drives	
9.1.10	Rotational position locking	
9.1.11	Relative addressing	
9.1.12	Error reporting	
9.1.13	Examples	
9.1.13.1	Rotating media	
9.1.13.2	Sequential media	
9.1.13.3	Memory media	
9.2	Commands for direct-access devices.	
9.2.1	FORMAT UNIT command	158
9.2.1.1	Defect list formats	
9.2.1.2	Initialization pattern option	
9.2.2	LOCK UNLOCK CACHE command	165
9.2.3	PRE-FETCH command	166
9.2.4	PREVENT ALLOW MEDIUM REMOVAL command	
9.2.5	READ(6) command	
9.2.6	READ(10) command	
9.2.7	READ CAPACITY command	169
9.2.8	READ DEFECT DATA command	171

	Page
9.2.9	READ LONG command 173
9.2.10	REASSIGN BLOCKS command 174
9.2.11	RELEASE command
9.2.11.1	Logical unit release 176
9.2.11.2	Extent release
9.2.11.3	Third-party release
9.2.12	RESERVE command
9.2.12.1	Logical unit reservation
9.2.12.2	Extent reservation
9.2.12.3	Third-party reservation
9.2.12.3	Superseding reservations
9.2.13	REZERO UNIT command
9.2.14	SEARCH DATA commands
9.2.14.1	SEARCH DATA EQUAL command
9.2.14.2	SEARCH DATA HIGH command 183
9.2.14.3	SEARCH DATA LOW command 183
9.2.15	SEEK(6) and SEEK(10) commands 183
9.2.16	SET LIMITS command 184
9.2.17	START STOP UNIT command 185
9.2.18	SYNCHRONIZE CACHE command 186
9.2.19	VERIFY command
9.2.20	WRITE(6) command 188
9.2.21	WRITE(10) command 188
9.2.22	WRITE AND VERIFY command 189
9.2.23	WRITE LONG command 190
9.2.24	WRITE SAME command 191
9.3	Parameters for direct-access devices
9.3.1	Diagnostic parameters
9.3.1.1	Translate address page - SEND DIAGNOSTIC
9.3.1.2	Translate address page - RECEIVE DIAGNOSTIC
9.3.2	Log parameters
9.3.3	Mode parameters
9.3.3.1	Caching page
9.3.3.2	Flexible disk page
9.3.3.3	Format device page
9.3.3.4	Medium types supported page
9.3.3.5	Notch and partition page
9.3.3.5	
9.3.3.7	Read-write error recovery page
9.3.3.7	Rigid disk drive geometry page
	Verify error recovery page
9.4	Definitions specific to direct-access devices
10	Sequential accord devices
-	Sequential-access devices
10.1	Sequential-access device model
10.1.1	Physical elements
10.1.2	Data storage characteristics
10.1.3	Partitions within a volume
10.1.4	Logical elements within a partition
10.1.5	Data buffering 223
10.1.6	Recorded object descriptors (block identifiers) 224
10.1.7	Direction and position definitions 224
10.1.8	Error reporting
10.2	Command descriptions for sequential-access devices 226
10.2.1	ERASE command

	P	age
10.2.2	LOAD UNLOAD command	
10.2.2	LOCATE command	
10.2.3	READ command	
10.2.4	READ BLOCK LIMITS command	
	READ POSITION command	
10.2.6	READ REVERSE command	
10.2.7	RECOVER BUFFERED DATA command	
10.2.8	RELEASE UNIT command	200
10.2.9	Third-party release	207
10.2.9.1	RESERVE UNIT command	207
10.2.10	Third-party reservation	
10.2.10.1	Superseding reservations	200
10.2.10.2	REWIND command	
10.2.11		
10.2.12	SPACE command	
10.2.13	VERIFY command	
10.2.14	WRITE command	
10.2.15	WRITE FILEMARKS command	
10.3	Parameters for sequential-access devices	
10.3.1	Diagnostic parameters	246
10.3.2	Log parameters	246
10.3.3	Mode parameters	246
10.3.3.1	Device configuration page	
10.3.3.2	Medium partition page(1)	
10.3.3.3	Medium partition page(2-4)	
10.3.3.4	Read-write error recovery page	
10.4	Definitions specific to sequential access devices	256
11	Commands for printer devices	257
11.1	Model for printer devices	257
11.2	Commands for printer devices	
11.2.1	FORMAT command	
11.2.2	PRINT command	260
11.2.3	RECOVER BUFFERED DATA command	
11.2.4	SLEW AND PRINT command	
11.2.5	STOP PRINT command	
11.2.6	SYNCHRONIZE BUFFER command	
11.3	Parameters for printer devices	
11.3.1	Diagnostic parameters	263
11.3.2	Log parameters	263
11.3.3	Mode parameters	263
11.3.3.1	Parallel printer interface page	
11.3.3.2	Printer options page	
11.3.3.3	Serial printer interface page	269
12	Processor devices	271
12.1	Model for processor devices	
12.1.1	Host-to-host communication, SEND only	
12.1.2	Host-to-host communication, SEND and RECEIVE	
12.1.3	Host-to-special-output peripheral	
12.1.4	Host-to-special-input peripheral	
12.2	Commands for processor devices	
12.2.1	RECEIVE command	
12.2.2	SEND command	
12.3	Parameters for processor devices	275

vii

		Page
12.3.1	Diagnostic parameters	275
12.3.2	Log parameters	275
12.4	Definitions specific to processor devices	
13	Write-once devices	276
13.1	Model for write-once devices	
13.1.1	Logical blocks	
13.1.2	Initialization	
13.1.3	Physical medium defects	
13.1.3	Error reporting	
13.1.4	Commands for write-once devices	
	Parameters for write-once devices	
13.3		
13.4	Definitions specific to write-once devices	279
14	CD-ROM devices	
14.1	Model for CD-ROM devices	
14.1.1	CD-ROM media organization	
14.1.2	CD-ROM physical data format	
14.1.2.1	Frame format for audio	
14.1.2.2	Sector format for data	
14.1.2.3	Sub-channel information formats	
14.1.3	CD Audio error reporting	285
14.1.4	CD-ROM ready condition/not ready condition	
14.1.5	CD-ROM address reporting formats (MSF bit)	
14.1.6	Sensing support for CD-audio commands.	
14.1.7	Error reporting	
14.2	Commands for CD-ROM devices	
14.2.1	PAUSE RESUME command	
14.2.2	PLAY AUDIO(10) command	
14.2.3	PLAY AUDIO(12) command	
14.2.3	PLAY AUDIO MSF command	
14.2.4	PLAY AUDIO TRACK INDEX command	
14.2.5	PLAY AUDIO TRACK RELATIVE(10) command	
14.2.7	PLAY AUDIO TRACK RELATIVE(12) command	
14.2.8		
14.2.9		
14.2.10	READ SUB-CHANNEL command	
14.2.10.1	Sub-Q channel data format	
14.2.10.2	CD-ROM current position data format	
14.2.10.3	Media catalogue number data format	
14.2.10.4	Track international standard recording code data format	
14.2.11	READ TOC command	
14.3	Parameters for CD-ROM devices	
14.3.1	Diagnostic parameters	
14.3.2	Log parameters	307
14.3.3	Mode parameters	
14.3.3.1	CD-ROM audio control parameters	
14.3.3.2	CD-ROM device parameters	
14.3.3.3	Read error recovery parameters	
14.3.3.4	Verify error recovery parameters	
14.4	Definitions specific to CD-ROM devices	
15	Scanner devices	321
15.1	Model for scanner devices	

		Page
15.2	Commands for scanner devices	322
15.2.1	GET DATA BUFFER STATUS command	323
15.2.2	GET WINDOW command	325
15.2.3	OBJECT POSITION command	329
15.2.4	READ command	331
15.2.5	SCAN command	
15.2.6	SEND command	
15.2.7	SET WINDOW command	
15.2.7	Parameters for scanner devices	
15.3.1	Diagnostic parameters	
15.3.1	Log parameters	
	Mode parameters	335
15.3.3	Measurement units page	335
15.3.3.1		200
15.4	Definitions specific to scanner devices	<u>3</u> 37
		000
16	Optical memory devices	000
16.1	Model for optical memory devices	330
16.1.1	Defect management	
16.1.2	Error reporting	339
16.2	Commands for optical memory devices	340
16.2.1	ERASE(10) command	
16.2.2	ERASE(12) command	
16.2.3	MEDIUM SCAN command	
16.2.4	READ(12) command	344
16.2.5	READ DEFECT DATA(12) command	345
16.2.6	READ GENERATION command	346
16.2.7	READ UPDATED BLOCK(10) command	
16.2.8	SEARCH DATA(12) commands	
16.2.9	SET LIMITS(12) command	
16.2.10	UPDATE BLOCK command	
16.2.11	VERIFY(10) command	
16.2.12	VERIFY(12) command	
16.2.13	WRITE(10) command	352
16.2.14	WRITE(12) command	
16.2.15	WRITE AND VERIFY(10) command	353
16.2.16	WRITE AND VERIFY(12) command	
16.3	Parameters for optical memory devices	
16.3.1	Diagnostic parameters	
	Log parameters	
16.3.2	Mode parameters	
16.3.3		
16.3.3.1	Optical memory page	
16.4	Definitions specific to write-once and optical memory devices .	300
17	Medium-changer devices	350
17.1	Medium-changer devices model	359
17.1.1	Medium-changer elements	
	Medium transport elements	350
17.1.1.1		
17.1.1.2	Storage elements	
17.1.1.3	Import export elements	
17.1.1.4	Data transfer element	
17.1.2	SCSI addressing of medium changer devices	
17.1.3	Data access operations using a medium changer device	
17.1.4	Eler ent status maintenance requirements	
17.1.5	Volume tags	361

		Page
17.1.5.1	Volume tag format	
17.1.5.2	Primary and alternate volume tag information	. 362
17.2	Commands for medium changer devices	
17.2.1	EXCHANGE MEDIUM command	. 364
17.2.2	INITIALIZE ELEMENT STATUS command	. 365
17.2.3	MOVE MEDIUM command	. 366
17.2.4	POSITION TO ELEMENT command	
17.2.5	READ ELEMENT STATUS command	
17.2.5.1	Element status data	
17.2.5.2	Element status page	
17.2.5.3	Medium transport element descriptor	
17.2.5.4	Storage element descriptor	
17.2.5.5	Import export element descriptor	374
17.2.5.6	Data transfer element descriptor	
17.2.6	REQUEST VOLUME ELEMENT ADDRESS command	376
17.2.7	RELEASE command	
17.2.7.1	Logical unit release	
17.2.7.2	Element release (optional)	. 3/0
17.2.7.3	Third north release (Optional)	. 376
17.2.8	Third party release	. 378
	RESERVE command	
17.2.8.1	Logical unit reservation	
17.2.8.2	Element reservation (optional)	
17.2.8.3	Third party reservation	. 380
17.2.8.4	Superseding reservations	. 381
17.2.9	SEND VOLUME TAG command	
17.3	Parameters for medium changer devices	
17.3.1	Diagnostic parameters	
17.3.2	Log parameters	
17.3.3	Mode parameters	
17.3.3.1	Device capabilities page	. 385
17.3.3.2	Element address assignment page	386
17.3.3.3	Transport geometry parameters page	
17.4	Definitions specific to medium changer devices	389
18	Communications devices	200
18.1	Communications devices	
18.1.1	Implementation examples	390
18.1.1.1	Host-to-host communications	391
18.1.1.2	Host-to-device communications	
18.1.1.3	Multiple role communications	
18.2	Command descriptions for communications devices	
18.2.1 18.2.2	GET MESSAGE(6) command	
	GET MESSAGE(10) command	393
18.2.3	GET MESSAGE(12) command	
18.2.4	SEND MESSAGE(6) command	
18.2.5	SEND MESSAGE(10) command	
18.2.6	SEND MESSAGE(12) command	395
18.3	Parameters for communication devices	
18.3.1	Diagnostic parameters	
18.3.2	Log parameters	
18.3.3	Mode parameters	397
18.4	Definitions specific to communications devices	
Index		420

		Page
Tables	Cross-reference to connector contact assignments	. 20
1	Single-ended contact assignments - A cable	
2	Single-ended contact assignments - B cable	
3	Differential contact assignments - A cable	
4	Differential contact assignments - B cable	
5		
6	Signal sources	
7	SCSI bus timing values	
8	Information transfer phases	
9	Message format	
10	Message codes	
11	Extended message format	
12	Extended message codes	
13		
14	IGNORE WIDE RESIDUE message format	
15	Ignore field definition	
16	MODIFY DATA POINTER	
17	Queue tag message format	
18	SYNCHRONOUS DATA TRANSFER REQUEST	
19	WIDE DATA TRANSFER MESSAGE	
20	Operation code type	. 67
21	Typical command descriptor block for six-byte commands	. 68
22	Typical command descriptor block for ten-byte commands .	. 68
23	Typical command descriptor block for twelve-byte commands	68
24	Operation code	. 70
25	Control field	
26	Status byte	. 71
27	Status byte code	
28	Commands in order received by target	
29	Commands in order of execution	
30	Modified by HEAD OF QUEUE TAG message	
31	Commands for all device types	
32	CHANGE DEFINITION command	
33	Definition parameter field	
34	COMPARE command	
35	COPY command	
36	COPY parameter list	
37	COPY function codes	
38	Segment descriptor for COPY function codes 00h and 01h	
39	Segment descriptor for COPY function code 02h	
	Segment descriptor for COPY function code 03h	
40 41	Segment descriptor for COPY function code 04h	
	Pad and Cat bit definition	
42	COPY AND VERIFY command	
43	INQUIRY command	
44		
45	Standard INQUIRY data format	
46	Peripheral qualifier	
47	Peripheral device type	
48	ANSI-approved version	. 98
49	LOG SELECT command	. 101
50	Page control field	. 101
51	LOG SENSE command	
52	MODE SELECT(6) command	. 104
53	MODE SELECT(10) command	
54	MODE SENSE(6) command	. 106

xi

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

Tables (co	
55	Page control field
56	Mode page code usage for all devices
57	MODE SENSE(10) command 109
58	READ BUFFER command 109
59	READ BUFFER mode field 110
60	READ BUFFER header
61	READ BUFFER descriptor 111
62	Buffer offset boundary 111
63	RECEIVE DIAGNOSTIC RESULTS command
64	REQUEST SENSE command 112
65	Error codes 70h and 71h sense data format
66	Field pointer bytes 116
67	Actual retry count bytes 116
68	Format progress indication bytes 117
69	Sense key (0h-7h) descriptions 119
70	Sense key (8h-Fh) descriptions 120
71	ASC and ASCQ assignments 121
72	SEND DIAGNOSTIC command 125
73	TEST UNIT READY command
74	Preferred TEST UNIT READY responses
75	WRITE BUFFER command 127
76	WRITE BUFFER mode field 128
77	Diagnostic page format 129
78	Diagnostic page codes 130
79	Supported diagnostic pages 130
80	Log page format
81	Log parameter
82	Threshold met criteria
83	Log page codes
84	Parameter code field for buffer over-run/under-run counters 134
85	Count basis definition
86	Cause field definition
87	Parameter codes for error counter pages
88	Non-medium error event parameter codes
89	Supported log pages
90	Mode parameter list
91	Mode parameter header(6) 137
92	Mode parameter header(10) 137
93	Mode parameter block descriptor
94	Mode page format 139
95	Mode page codes 140
96	Control mode page 140
97	Queue algorithm modifier
98	Disconnect-reconnect page 142
99	Data transfer disconnect control 143
100	Peripheral device page 144
101	Interface identifier codes 144
102	Vital product data page codes 144
103	ASCII implemented operating definition
104	ASCII information page
105	Implemented operating definition page
106	Supported vital product data pages
107	Unit serial number page
108	Commands for direct-access devices

/

Tables (continued)         122           109         FORMAT UNIT command         158           110         FORMAT UNIT parameter list         159           111         Defect list header         159           112         FORMAT UNIT detect descriptor format and requirements         160           113         Defect descriptor - Bytes from index format         162           114         Defect descriptor - Physical sector format         163           116         Initialization pattern modifier         164           118         Initialization pattern modifier         164           119         LOCK UNLOCK CACHE command         166           120         PRE-FETCH command         166           121         PREVENT ALLOW MEDIUM REMOVAL command         167           122         READ(6) command         168           123         READ(10) command         168           124         READ CAPACITY command         170           126         READ DEFECT DATA command         171           127         READ IDG Command         173           128         READ IDG Command         173           129         REASIGN BLOCKS command         174           130         REASERO UNIT command	<b></b>	Page
110       FORMAT UNIT parameter list       159         111       Defect list header       159         112       FORMAT UNIT defect descriptor format and requirements       160         113       Defect descriptor - Bytes from index format       162         114       Defect descriptor - Physical sector format       163         115       Defect descriptor - Physical sector format       163         116       Initialization pattern descriptor       163         117       Initialization pattern type       164         120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       167         122       READ(6) command       168         123       READ(10) command       168         124       READ CAPACITY data       170         125       READ DAPECT DATA defect list       172         126       READ LONG command       173         127       READ LONG command       174         130       REASIGN BLOCKS defect list       174         131       RELEASE command       177         132       RESERVE command       177         133       Data format of extent descriptors       178         134 <td< th=""><th>•</th><th></th></td<>	•	
111       Defect list header       159         112       FORMAT UNIT defect descriptor format and requirements       160         113       Defect descriptor - Block format       162         114       Defect descriptor - Physical sector format       162         115       Defect descriptor - Physical sector format       163         116       Initialization pattern modifier       164         118       Initialization pattern modifier       164         119       LOCK UNLOCK CACHE command       165         120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       167         122       READ(6) command       168         123       READ CAPACITY command       169         124       READ DEFECT DATA command       170         125       READ LONG command       171         126       READ BLOCKS defect list       172         127       READ BLOCKS defect list       174         138       RELASE command       175         139       REASIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       175         133       REZERO UNIT comm		
112         FORMAT UNIT defect descriptor format and requirements         160           113         Defect descriptor - Block format         162           114         Defect descriptor - Physical sector format         163           115         Defect descriptor - Physical sector format         163           116         Initialization pattern modifier         164           118         Initialization pattern modifier         164           119         LOCK UNLOCK CACHE command         166           120         PRE-FETCH command         166           121         PREVENT ALLOW MEDIUM REMOVAL command         167           122         READ(6) command         168           123         READ CAPACITY data         170           126         READ DEFECT DATA command         171           127         READ DEFECT DATA defect list         172           128         READ LONG command         173           129         REASIGN BLOCKS defect list         174           130         REASRIGN BLOCKS defect list         174           131         RELEASE command         177           132         Data format of extent descriptors         178           134         Reservation types         178		
113       Defect descriptor - Bytes from index format       162         114       Defect descriptor - Bytes from index format       163         115       Defect descriptor - Bytes from index format       163         116       Initialization pattern descriptor       163         117       Initialization pattern modifier       164         118       Initialization pattern type       164         119       LOCK UNLOCK CACHE command       165         120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       166         122       READ (6) command       168         123       READ CAPACITY command       169         124       READ DEFECT DATA defect list       172         125       READ LONG command       173         126       REASIGN BLOCKS command       174         130       REASIGN BLOCKS command       174         131       RELEASE command       175         132       RESSIGN BLOCKS defect list       174         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       183         136       SE		
114         Defect descriptor - Bytes from index format         162           115         Defect descriptor - Physical sector format         163           116         Initialization pattern descriptor         163           117         Initialization pattern modifier         164           118         Initialization pattern type         164           119         LOCK UNLOCK CACHE command         165           120         PRE-FETCH command         166           121         PREVENT ALLOW MEDIUM REMOVAL command         166           122         READ (6) command         168           123         READ CAPACITY data         170           126         READ DEFECT DATA command         171           127         READ LONG command         173           128         READ LONG command         174           130         REASIGN BLOCKS command         174           131         RELESE command         177           132         RESERVE command         175           133         Data format of extent descriptors         178           134         Reservation types         178           135         REZERO UNIT command         180           136         SEARCH DATA parameter list		
115         Defect descriptor - Physical sector format         163           116         Initialization pattern modifier         164           117         Initialization pattern modifier         164           118         Initialization pattern type         164           119         LOCK UNLOCK CACHE command         165           120         PRE-FETCH command         166           121         PREVENT ALLOW MEDIUM REMOVAL command         167           122         READ(6) command         168           123         READ(10) command         168           124         READ CAPACITY command         169           125         READ DEFECT DATA command         171           126         READ DEFECT DATA command         172           128         READ LONG command         173           129         REASIGN BLOCKS command         174           130         REASIGN BLOCKS defect list         174           131         RELEASE command         175           132         RESERVE command         177           133         Data format of extent descriptors         178           134         Reservation types         178           135         REZERO UNIT command         180		
116Initialization pattern modifier163117Initialization pattern modifier164118Initialization pattern type164119LOCK UNLOCK CACHE command165120PRE-FETCH command166121PREVENT ALLOW MEDIUM REMOVAL command167122READ(6) command168123READ(10) command168124READ CAPACITY data170126READ DEFECT DATA command171127READ DEFECT DATA defect list172128READ LONG command173129REASSIGN BLOCKS command174130REASSIGN BLOCKS defect list174131RELEASE command177133Data format of extent descriptors178134Reservation types178135REZERO UNIT command180136SEARCH DATA command183139SEEK(10) command183140SET LIMITS command183141START SOP UNIT command186142SYNCHRONIZE CACHE command186143VERIFY command187144WRITE(10) command186143VERIFY command187144WRITE AND VERIFY command187145Diagnostic page codes192150Translate address page - SEND DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parame		
117       Initialization pattern type       164         118       Initialization pattern type       164         119       LOCK UNLOCK CACHE command       165         120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       166         122       READ(6) command       166         123       READ(10) command       168         124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS defect list       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA command       182         138       SEEK(6) command       183         139       SEEK(10) command       183         130       SEEK		
118       Initialization pattern type       164         119       LOCK UNLOCK CACHE command       165         120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       167         122       READ(6) command       168         123       READ(10) command       168         124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       173         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS command       177         131       RELEASE command       177         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA command       183         138       SEEK(6) command       183         139       SEEK(10) command <th></th> <th></th>		
119         LOCK UNLOCK CACHE command         165           120         PRE-FETCH command         166           121         PREVENT ALLOW MEDIUM REMOVAL command         167           122         READ (6) command         168           123         READ (10) command         168           124         READ CAPACITY data         170           126         READ CAPACITY data         170           126         READ LORG command         171           127         READ DEFECT DATA command         172           128         READ LONG command         173           129         REASSIGN BLOCKS command         174           130         REASSIGN BLOCKS defect list         174           131         RELEASE command         177           132         RESERVE command         177           133         Data format of extent descriptors         178           134         Reservation types         178           135         REZERO UNIT command         180           136         SEARCH DATA commands         181           137         SEARCH DATA parameter list         182           138         SEEK(10) command         183           140         SET LI		
120       PRE-FETCH command       166         121       PREVENT ALLOW MEDIUM REMOVAL command       167         122       READ(6) command       168         123       READ(10) command       168         124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       REASIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       175         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         141       START STOP UNIT command       184         142       SYNCHRONIZE CACHE command       184         143       START STOP UNIT command       185         144       WRITE LOND V		
121       PREVENT ALLOW MEDIUM REMOVAL command       167         122       READ(6) command       168         123       READ(10) command       168         124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       175         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(10) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       184         142       SYNCHRONIZE CACHE co		
122       READ(6) command       168         123       READ(10) command       168         124       READ (APACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA command       171         128       READ LONG command       172         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS command       174         131       RELEASE command       175         132       RESERVE command       175         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       183         139       SEEK(10) command       184         141       STAT STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       188 </td <th></th> <td></td>		
123       READ(10) command       168         124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA parameter list       182         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       184         141       START STOP UNIT command       184         142       SYNCHRONIZE CACHE command       185         143       VERIFY command       185         144       WRITE(10) command <th></th> <td></td>		
124       READ CAPACITY command       169         125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(10) command       188         145       WRITE (10) command		
125       READ CAPACITY data       170         126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       181         138       REZERO UNIT command       183         139       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       184         142       SYNCHRONIZE CACHE command       185         143       VERIFY command       186         144       WRITE (10) command       188         145       WRITE AND VERIFY command <td< td=""><th></th><td></td></td<>		
126       READ DEFECT DATA command       171         127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       181         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       186         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE (10) command       187         144       WRITE AND VERIFY command       188         145       WRITE AND VERIFY command       190         146       WRITE SAME command		
127       READ DEFECT DATA defect list       172         128       READ LONG command       173         129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       181         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(10) command       188         145       WRITE LAND VERIFY command       189         147       WRITE LAND VERIFY command       191         148       WRITE SAME command		
128         READ LONG command         173           129         REASSIGN BLOCKS command         174           130         REASSIGN BLOCKS defect list         174           131         RELEASE command         175           132         RESERVE command         175           133         Data format of extent descriptors         178           134         Reservation types         178           135         REZERO UNIT command         180           136         SEARCH DATA commands         181           137         SEARCH DATA commands         181           138         SEEK(10) command         183           139         SEEK(10) command         183           140         SET LIMITS command         184           141         START STOP UNIT command         185           142         SYNCHRONIZE CACHE command         186           143         VERIFY command         187           144         WRITE(6) command         188           145         WRITE (10) command         188           145         WRITE AND VERIFY command         189           147         WRITE SAME command         191           148         WRITE SAME command		
129       REASSIGN BLOCKS command       174         130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       183         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE (10) command       188         146       WRITE AND VERIFY command       190         147       WRITE AND VERIFY command       191         148       WRITE SAME command       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page		
130       REASSIGN BLOCKS defect list       174         131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       181         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE (10) command       188         146       WRITE SAME command       190         147       WRITE LONG command       191         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAG		
131       RELEASE command       175         132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA commands       181         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE (10) command       188         144       WRITE (0) command       188         145       WRITE (10) command       189         146       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192 <th></th> <td></td>		
132       RESERVE command       177         133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       188         147       WRITE LONG command       188         148       WRITE SAME command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific param		
133       Data format of extent descriptors       178         134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       188         147       WRITE LONG command       188         148       WRITE SAME command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific para		
134       Reservation types       178         135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE SAME command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         153       Direct-access medium-type codes       194         154		
135       REZERO UNIT command       180         136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       185         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE(10) command       188         147       WRITE AND VERIFY command       189         147       WRITE SAME command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode p		
136       SEARCH DATA commands       181         137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       183         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       187         144       WRITE(10) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE LONG command       189         148       WRITE SAME command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196<		
137       SEARCH DATA parameter list       182         138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE (10) command       188         147       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read an		
138       SEEK(6) command       183         139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field		
139       SEEK(10) command       183         140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE(10) command       189         147       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159 <t< td=""><th></th><td></td></t<>		
140       SET LIMITS command       184         141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       187         144       WRITE(10) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160 <th></th> <td></td>		
141       START STOP UNIT command       185         142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE (10) command       188         147       WRITE AND VERIFY command       189         148       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201		
142       SYNCHRONIZE CACHE command       186         143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 4 field       201		
143       VERIFY command       187         144       WRITE(6) command       188         145       WRITE(10) command       188         146       WRITE AND VERIFY command       189         147       WRITE LONG command       190         148       WRITE SAME command       191         149       Diagnostic page codes       192         150       Translate address page - SEND DIAGNOSTIC       192         151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201		
144       WRITE(6) command		
145       WRITE(10) command		
146WRITE AND VERIFY command189147WRITE LONG command190148WRITE SAME command191149Diagnostic page codes192150Translate address page - SEND DIAGNOSTIC192151Translate address page - RECEIVE DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parameter195155Mode page codes196156Caching page196157Demand read and write retention priority197158Flexible disk page199159Examples of transfer rates200160Pin 34 field201		
147WRITE LONG command190148WRITE SAME command191149Diagnostic page codes192150Translate address page - SEND DIAGNOSTIC192151Translate address page - RECEIVE DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parameter195155Mode page codes196156Caching page196157Demand read and write retention priority197158Flexible disk page199159Examples of transfer rates200160Pin 34 field201		
148WRITE SAME command191149Diagnostic page codes192150Translate address page - SEND DIAGNOSTIC192151Translate address page - RECEIVE DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parameter195155Mode page codes196156Caching page196157Demand read and write retention priority197158Flexible disk page199159Examples of transfer rates200160Pin 34 field201161Pin 4 field201		
149Diagnostic page codes192150Translate address page - SEND DIAGNOSTIC192151Translate address page - RECEIVE DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parameter195155Mode page codes196156Caching page196157Demand read and write retention priority197158Flexible disk page199159Examples of transfer rates200160Pin 34 field201161Pin 4 field201		
150Translate address page - SEND DIAGNOSTIC192151Translate address page - RECEIVE DIAGNOSTIC193152Log page codes194153Direct-access medium-type codes194154Device specific parameter195155Mode page codes196156Caching page196157Demand read and write retention priority197158Flexible disk page199159Examples of transfer rates200160Pin 34 field201161Pin 4 field201	-	
151       Translate address page - RECEIVE DIAGNOSTIC       193         152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201		
152       Log page codes       194         153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201		
153       Direct-access medium-type codes       194         154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201         161       Pin 4 field       201		
154       Device specific parameter       195         155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201         161       Pin 4 field       201		
155       Mode page codes       196         156       Caching page       196         157       Demand read and write retention priority       197         158       Flexible disk page       199         159       Examples of transfer rates       200         160       Pin 34 field       201         161       Pin 4 field       201		· ·
156         Caching page         196           157         Demand read and write retention priority         197           158         Flexible disk page         199           159         Examples of transfer rates         200           160         Pin 34 field         201           161         Pin 4 field         201		
157         Demand read and write retention priority         197           158         Flexible disk page         199           159         Examples of transfer rates         200           160         Pin 34 field         201           161         Pin 4 field         201		
158         Flexible disk page         199           159         Examples of transfer rates         200           160         Pin 34 field         201           161         Pin 4 field         201		
159         Examples of transfer rates         200           160         Pin 34 field         201           161         Pin 4 field         201		· · ·
160         Pin 34 field         201           161         Pin 4 field         201		
161 Pin 4 field 201		
102 MIN 34 TIEIQ		
	102	ศ. 1911 - 1910

/		Page
Tables (co	•	
163	Format device page	
164	Reporting of default sector formatting support	
165	Reporting of changeable sector formatting support	
166	Medium types supported page	. 205
167	Notch page	. 206
168	Read-write error recovery page	. 207
169	Error recovery bit definitions	. 208
170	Combined error recovery parameter descriptions	. 209
171	Rigid disk drive geometry page	
172	Rotational position locking	
173	Verify error recovery page	
174	Commands for sequential-access devices	
175	ERASE command	
176	LOAD UNLOAD command	
177	LOCATE command	
178	READ command	
178	READ BLOCK LIMITS command	
180		
181	READ POSITION command	
182	READ POSITION data format	
183	READ REVERSE command	
184	RECOVER BUFFERED DATA command	
185	RELEASE UNIT command	
186	RESERVE UNIT command	
187	REWIND command	
188	SPACE command	
189	Code field definition	
190	VERIFY command	. 242
191	WRITE command	. 243
192	WRITE FILEMARKS command	. 244
193	Diagnostic page codes	. 246
194	Log page codes	
195	Device-specific parameter	
196	Buffered modes	
197	Speed field definition	
198	Sequential-access density codes	
199	Mode page codes	
200	Device configuration page	
201	EOD formats	
202	Medium partition page(1)	
202		
203	Medium partition page(2-4)	
	Read-write error recovery page	
205	Commands for printer devices	
206		
207	Format type	
208	PRINT command	
209		
210	SLEW AND PRINT command	
211	STOP PRINT command	
212	SYNCHRONIZE BUFFER command	
213	Diagnostic page codes	
214	Log page codes	
215	Printer device-specific parameter	
216	Mode page codes	. 264

		Page
Tables (co		-
217	Parallel printer interface	
218	Parity select	
219	VFU control byte	265
220	Printer options	
221	Font identification	
222	Siew mode	
223	Line slew	
224	Form slew	
225	Data termination option	
226	Serial printer interface	
227	Parity selection	270
228	Pacing protocol	270
229	Commands for processor devices	
230	RECEIVE command	
231	SEND command	
232	SEND command - AEN data format	
233	Diagnostic page codes	
234	Log page codes	
235	Commands for write-once devices	
236	Example mixed mode CD-ROM disc layout	
237	MSF address format	285
238	Commands for CD-ROM device	
239	PAUSE RESUME command	288
240	PLAY AUDIO(10) command	289
241	PLAY AUDIO(12) command	290
242	PLAY AUDIO MSF command	
243	PLAY AUDIO TRACK INDEX command	292
244	PLAY AUDIO TRACK RELATIVE(10) command	293
245	PLAY AUDIO TRACK RELATIVE(12) command	294
246	READ CD-ROM CAPACITY command	
247	READ CAPACITY data format	295
248	READ HEADER command	296
249	READ HEADER data format	296
250	CD-ROM data mode codes	297
251	READ SUB-CHANNEL command	297
252	Sub-channel data format codes	298
253	Sub-Q channel data format	298
254	Audio status codes	299
255	ADR sub-channel Q field	300
256	Sub-channel Q control bits	300
257	CD-ROM current position data format	302
258	Media catalogue number data format	302
259	Track international standard recording code data format	303
260	READ TOC command	305
261	READ TOC data format	305
262	Diagnostic page codes	307
263	Log page codes	
264	CD-ROM medium type codes	
265	CD-ROM device-specific parameter	
266	CD-ROM density codes	
267	Mode page codes	
268	CD-ROM audio control parameters page	
269	Multiplier for LBAs	
270	Output port channel selection	
~	and how outside according to the second se	

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

	Page	э
Tables (co		
271	CD-ROM parameters page 311	
272	Inactivity timer multiplier values	
273	Read error recovery parameters page	
274	Error recovery bit settings	
275	CD-ROM error recovery descriptions	
276	Verify error recovery parameters page	
277	Commands for scanner devices	
278	GET DATA BUFFER STATUS command	
279	Data buffer status format	
280	GET WINDOW command	
281	Get window data header 325	
282	Window descriptor bytes	
283	Image composition codes	
284	Padding types	
285	Compression types and arguments	
286	OBJECT POSITION command	
287	Position function	
288	READ command	
289	Data type codes	
290	SCAN command	-
291	SEND command	-
292	SET WINDOW command 333	
293	Set window data header 333	
294	Diagnostic page codes	
295	Log page codes 334	
296	Mode page codes 335	
297	Measurement units page 335	
298	Basic measurement units 336	
299	Commands for optical memory devices	
300	ERASE(10) command 341	
301	ERASE(12) command 342	
302	MEDIUM SCAN command 342	
303	MEDIUM SCAN parameter list	
304	READ(12) command	
305	READ DEFECT DATA(12) command	
306	READ DEFECT DATA(12) list header	
307	READ GENERATION command 346	
308	Maximum generation data block	3
309	READ UPDATED BLOCK(10) command	
310	SEARCH DATA(12) commands 348	
311	SET LIMITS(12) command 348	
312	UPDATE BLOCK command 349	
313	VERIFY command	
314	VERIFY(12) command 351	
315	WRITE(10) command 352	
316	WRITE(12) command 353	
317	WRITE AND VERIFY(10) command	
318	WRITE AND VERIFY(12) command	
319	Diagnostic page codes 355	
320	Log page codes	5
321	Optical memory medium-type codes	
322	Optical memory device specific parameter	5
323	Optical memory density codes	
324	Mode page codes 357	7

xvi

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

		Page
Tables (co	ontinued)	
325	Optical memory page	. 358
326	Volume tag information format	. 362
327	Commands for medium changer devices	. 363
328	EXCHANGE MEDIUM command	
329	INITIALIZE ELEMENT STATUS command	
330	MOVE MEDIUM command	. 366
331	POSITION TO ELEMENT command	
332	READ ELEMENT STATUS command	
333	Element type code	. 368
334	Element status data	. 369
335	Element status page	. 371
336	Medium transport element descriptor	
337	Storage element descriptor	. 373
338	Import export element descriptor	
339	Data transfer element descriptor	
340	REQUEST VOLUME ELEMENT ADDRESS command	
341	Volume element address header format	
342	RELEASE command	. 378
343	RESERVE command	
344	Data format of element list descriptors	
345	SEND VOLUME TAG command	. 381
346	Send volume tag action codes	381
347	Send volume tag parameters format	. 382
348	Diagnostic page codes	. 383
349	Log page codes	. 384
350	Mode page codes	. 384
351	Device capabilities page	. 385
352	Element address assignment page	. 386
353	Transport geometry parameters page	. 388
354	Commands for communications devices	
355	GET MESSAGE(6) command	
356	GET MESSAGE(10) command	
357	GET MESSAGE(12) command	
358	SEND MESSAGE(6) command	394
359	SEND MESSAGE(10) command	395
360	SEND MESSAGE(12) command	
361	Diagnostic page codes	
362	Log page codes	396
363	Mode page codes	
363 B.1	Fast SCSI jitter budget	
B.2	Mapping of jitter to SCSI	
в.2 D.1	ASC and ASCQ assignments	
D.1 D.2	SCSI-2 Operation Codes	
D.2 E.1	Vendor identification list	
<b>C.</b> I		10

Figures	Page
Figures 1	50/68-contact non-shielded high-density SCSI device connector 11
2	50/68-contact non-shielded high-density cable connector 12
2	50-contact non-shielded low-density SCSI device connector
4	50-contact non-shielded low-density cable connector 14
5	50/68-contact shielded high-density SCSI device connector 16
6	50/68-contact shielded high-density cable connector
7	50-contact shielded low-density SCSI device connector 18
8	50-contact shielded low-density cable connector
9	Alternative 1 termination
10	Alternative 2 termination for single-ended devices
11	Termination for differential devices
12	Differential driver protection circuit
13	SCSI ID bits
14	Sample SCSI configurations 31
15	Wide SCSI byte ordering 45
16	Phase sequences
17	Simplified SCSI system
18	Typical volume layout
19	Typical medium track layout
20	Serpentine recording example
21	Parallel recording example 220
22	Helical scan recording example 220
23	Early-warning example 220
24	Partitioning example - one partition per track group
25	Partitioning example - one partition per two track groups 221
26	Partitioning example - two partitions per track group 222
27	SCSI printer model 257
28	Illustration of element status data structure
A.1	SCSI signal sequence example 402
C.1	SCSI-3 standards structure 405

#### Annexes

Α	SCSI signal sequence example
В	Fast SCSI skew time 403
С	Other SCSI standardization activities
D	Numeric order codes 406
E	Vendor identification

xviii

Foreword (This foreword is not part of American National Standard X3.131-1994.)

The Small Computer System Interface-2 standard is designed to provide an efficient peer-to-peer I/O bus with up to 16 devices, including one or more hosts. Data may be transferred asynchronously at rates that only depend on device implementation and cable length. Synchronous data transfers are supported at rates up to 10 mega-transfers per second. With the 32-bit wide data transfer option, data rates of up to 40 megabytes per second are possible. This standard includes command sets for magnetic and optical disks, tapes, printers, processors, CD-ROMs, scanners, medium changers, and communications devices.

This standard was developed by Task Group X3T9.2 of Accredited Standards Committee X3 during 1986-90. The standards approval process started in 1991. This document includes five annexes, which are informative and are not considered part of the standard.

Requests for interpretation, suggestions for improvement and addenda, or defect reports are welcome. They should be sent to the X3 Secretariat, Computer and Business Equipment Manufacturers Association, 1250 Eye Street, NW, Suite 200, Washington, DC 20005-3922.

This standard was processed and approved for submittal to ANSI by Accredited Standards Committee on Information Processing Systems, X3. Committee approval of the standard does not necessarily imply that all committee members voted for approval. At the time it approved this standard, the X3 Committee had the following members:

James D. Converse, Chair Donald C. Loughry, Vice-Chair Joanne M. Flanagan, Secretary

<i>Organization Represented</i> American Nuclear Society	Name of Representative Geraldine C. Main Sally Hartzell (Alt.)
AMP, Inc.	Edward Kelley Charles Brill (Alt.)
Association of the Institute for Certification of Computer Professionals (AICCP) AT&T/NCR	Thomas W. Kern Thomas F. Frost (Alt.)
Apple Computer, Inc Boeing Company	Karen Higginbottom Catherine Howells Andrea Vanosdoll (Alt.)
Bull HN Information Systems, Inc Compag Computers Digital Equipment Corporation	William George James Barnes
Eastman Kodak Company	
Guide International, Inc.	
Hewlett-Packard Hitachi America, Ltd	Donald C. Loughry
Hughes Aircraft Company IBM Corporation	Harold Zebrack
National Communications Systems	Mary Ann Lawler (Alt.) Dennis Bodson

Organization Represented	Name of Representative
National Institute of Standards and Technology	Robert E. Rountree
	Michael Hogan (Alt.)
Northern Telecom, Inc	Mel Woinsky
	Subhash Patel (Alt.)
Neville & Associates	Carlton Neville
Recognition Technology Users Association	Herbert P. Schantz
0 0.	G. Edwin Hale (Alt.)
Share, Inc	Gary Ainsworth
	David Thewlis (Alt.)
Sony Corporation of America	Michael Deese
Storage Technology Corporation	Joseph S. Zajaczkowski
	Samuel D. Cheatham (Alt.)
Sun Microsystems, Inc	Scott Jameson
,,	Gary S. Robinson (Alt.)
3M Company	Eddie T. Morioka
	Paul D. Jahnke (Alt.)
Unisys Corporation	.John Hill
	Stephen P. Oksala (Alt.)
U.S. Department of Defense	William Rinehuls
•	C. J. Pasquariello (Alt.)
U.S. Department of Energy	Alton Cox
	Lawrence A. Wasson (Alt.)
U.S. General Services Administration	Douglas Arai
	Larry L. Jackson (Alt.)
Wintergreen Information Services	John Wheeler
Xerox Corporation	Dwight McBain
,	Roy Peirce (Alt.)

Subcommittee X3T9 on I/O Interface, which reviewed this standard, had the following members:

Gene Milligan Carl Zeitler	Del Shoemaker, Chair Bob Fink, Vice-Chair	Charles Brill Bill Burr Jeff Connell Steve Cooper Roger Cummings Rhonda Dirvin Jim Hamstra Dave Husak Reinhard Knerr Larry Lamers George Michael Gene Milligan	Doug Morrissey Steven Myers Roger Pandanda Everett Rigsbee, III Floyd Ross Amit Shah Jeff Stone Pat Thaler Don Tolmie Schelto van Doorn Jim Vogt Carl Zeitler
----------------------------	--	---	--

Working Group X3T9.2 on Lower Level Interface, which developed this standard, had the following members:

John B. Lohmeyer, Chair I. Dal Allan, Vice-Chair Lawrence J. Lamers, Secretary

Bruce Anderson **Dennis Appleyard** Geoff Barton Robert Bellino Sudhir Bhatnager Charles Brill William E. Burr Steve Caron Kurt Chan Stephen R. Cornaby Forrest Crowell Joe Dambach Jan V. Dedek Peter Dougherty William Galloway Paul Hanmann Norman H. Harris David Hess Steve Kappes Sam Karunanithi **Robert Kellert** Oscar Kornblum Richard J. Krass Robert Liu Thomas R. Marks Bob Masterson David McFadden James McGrath Tetsuro Motoyoma George Penokie Gary S. Peterson Heinz Piorunneck Doug Piper Chris Pisciotta Donna Pope Kenneth Post D. Michael Robinson Arnold J. Roccati Wayne E. Roen Jeff Rosa Wayne Sanderson D. Shaff

**Robbie Shergill** Robert L. Simpson Scott Smyers Robert N. Snively Jeff Stai Pete Tobias Harvey Waltersdorf Al Wilhelm Kurt Witte **Charles Yang** Ed Young Saied Zangenehpour Jon Abilay (Alt.) William F. Alarcon (Alt.) David C. Andel (Alt.) Dexter Anderson (Alt.) Paul Anderson (Alt.) Harlan Andrews (Alt.) Percy R. Aria (Alt.) Joe Chen (Alt.) Roger Cummings (Alt.) Lam Dang (Alt.) Viet Dang (Alt.) David DesRoches (Alt.) Brian Fox (Alt.) John A. Gallant (Alt.) Edward A. Gardner (Alt.) Raymond Gilson (Alt.) Chuck Grant (Alt.) Douglas Hagermán (Alt.) George T. Hahn Jr. (Alt.) Ken Hallam (Alt.) William Ham (Alt.) Tom Hanan (Alt.) Robert C. Herron (Alt.) Gerald Houlder (Alt.) Edward Hrvatin (Alt.) Stephen Huberty (Alt.) Paul Jackson (Alt.) Skip Jones (Alt.) Steven A. Justiss (Alt.) Chuck Kummeth (Alt.)

Joe Lawlor (Alt.) Greg Leonhardt (Alt.) Ernest Luttig (Alt.) Jim Luttrull (Alt.) Satwinder S. Mangat (Alt.) Gerald Marazas (Alt.) Jim McGrath (Alt.) Dave Mcintyre (Alt.) Bill Medlinski (Alt.) Gene Milligan (Alt.) Hiroshi Minawa (Alt.) Neil Mitchell (Alt.) E. J. Mondor (Alt.) David G. Moore (Alt.) John Morse (Alt.) Bob Mortensen (Alt.) Gary Murdock (Alt.) Glen Nance (Alt.) Paul R. Nitza (Alt.) John F. Osborn (Alt.) Robert Otis (Alt.) Dan Paplowski (Alt.) Doug Pickford (Alt.) Gregorio Rodriguez (Alt.) Russell Smith (Alt.) D. W. Spence (Alt.) Gary R. Stephens (Alt.) Peter Stevens (Alt.) Arlan P. Stone (Alt.) Sassan Teymouri (Alt.) David Thaver (Alt.) Paul Thompson (Alt.) Adrienne Turenne (Alt.) Rex Vedder (Alt.) Mark Veteikis (Alt.) Bob Whiteman (Alt.) Jeffrey L. Williams (Alt.) Natalie Willman (Alt.) Michael Wingard (Alt.) Paul Wolf (Alt.) Fred Yamamoto (Alt.) Mike Yokoyama (Alt.)

xxi

#### Introduction

ANSI X3.131-1994 replaces ANSI X3.131-1986 Small Computer System Interface.

The clauses contain material as described below.

- Clause 1 describes the scope.
- Clause 2 lists the normative references.
- Clause 3 provides a glossary common to the whole document.
- Clause 4 provides descriptions and conventions.
- Clause 5 describes the physical characteristics.
- Clause 6 describes the logical characteristics of the interface.
- Clause 7 describes the SCSI command and status structure.
- Clause 8 specifies those commands that have a consistent meaning for all device types.
- Clause 9 specifies commands for direct-access devices.
- Clause 10 specifies commands for sequential-access devices.
- Clause 11 specifies commands for printer devices.
- Clause 12 specifies commands for processor devices.
- Clause 13 specifies commands for write-once devices.
- Clause 14 specifies commands for CD-ROM devices.
- Clause 15 specifies commands for scanner devices.
- Clause 16 specifies commands for optical memory devices.
- Clause 17 specifies commands for medium changer devices.
- Clause 18 specifies commands for communications devices.
- Annex A illustrates SCSI signal sequence.
- Annex B illustrates fast SCSI skew time.
- Annex C describes other SCSI standardization activities.
- Annex D contains SCSI-2 additional sense codes and operation codes in numeric order.
- Annex E contains the list of SCSI-2 vendor identifications.

The SCSI protocol is designed to provide an efficient peer-to-peer I/O bus with up to 16 devices, including one or more hosts. Data may be transferred asynchronously at rates that only depend on device implementation and cable length. Synchronous data transfers are supported at rates up to 10 mega-transfers per second. With the 32-bit wide data transfer option, data rates of up to 40 megabytes per second are possible.

SCSI-2 includes command sets for magnetic and optical disks, tapes, printers, processors, CD-ROMs, scanners, medium changers, and communications devices.

In 1985, when the first SCSI standard was being finalized, several manufacturers wanted to increase the mandatory requirements of SCSI and to define further features for direct-access devices. Rather than delay the SCSI standard, an ad hoc group was formed to develop a working paper that was eventually called the Common Command Set (CCS). Many disk products were designed using this working paper.

xxii

In parallel with the development of the CCS working paper, work began on an enhanced SCSI standard, which was named SCSI-2. SCSI-2 included the results of the CCS working paper and extended them to all device types. It also added caching commands, performance enhancement features, and other worthwhile functions. While SCSI-2 has gone well beyond the original SCSI standard (now referred to as SCSI-1), it retains a high degree of compatibility with SCSI-1 devices.

SCSI-2 has evolved significantly from SCSI-1 with the new document nearly three times larger. Most of the changes are additions, but several obsolete options were removed:

- a) Single initiator option;
- b) Non-arbitrating systems option;
- c) The SCSI-1 alternative 1 shielded connector;
- d) Non-extended sense data option;
- e) Reservation queuing option;
- f) The read-only device command set.

There are several new low-level requirements:

- a) Parity is now required;
- b) Initiators are required to provide terminator power;
- c) The arbitration delay was increased from 2.2 to 2.4  $\mu$ s;
- d) Message support is now required.

Several low-level options were added:

- a) Wide SCSI (up to 32 bits wide using a second cable);
- b) Fast SCSI (synchronous data transfers of up to 10 mega-transfers per second);
- c) Command queuing (up to 256 commands per initiator per logical unit);
- d) High-density connector alternatives were added;
- e) Asynchronous event notification;
- f) Extended contingent allegiance.

New command sets were added including:

- a) CD-ROM (replaces read-only device);
- b) Scanner device;
- c) Optical memory device (provides for write-once, read-only, and erasable media);
- d) Medium changer device;
- e) Communications device.

All command sets were enhanced:

- a) Device models were added;
- b) Extended sense was expanded;
- c) The INQUIRY data was expanded;
- d) The MODE SELECT and MODE SENSE commands were paged for all device types;

e) The CHANGE DEFINITION, LOG SELECT, LOG SENSE, READ BUFFER, and WRITE BUFFER commands were added for all device types;

XXIII

f) The COPY command definition was expanded to include inexact block size handling and an image copy option;

g) The direct-access device command set was enhanced to add cache management, several new commands and to provide more initiator control over defect management;

h) The sequential-access device command set was enhanced to add a partitioned media concept;

i) The printer device command set was enhanced by adding several mode pages;

j) The write-once (optical) device command set was enhanced by adding several new commands plus extending several command descriptor blocks to twelve bytes to accommodate larger transfer lengths.

xxiv

American National Standard for Information Systems –

## Information Technology – Small Computer System Interface-2

#### 1 Scope

This standard defines an input/output bus for interconnecting computers and peripheral devices. It defines extensions to the Small Computer System Interface (ISO 9316: 1989), referred to herein as SCSI-1. It also provides more complete standardization of the previously defined command sets. It includes the necessary specification of the mechanical, electrical, and functional characteristics of the interface to allow interoperability of conforming devices. This standard is referred to herein as SCSI-2. The term, SCSI, is used wherever it is not necessary to distinguish between the two versions.

#### 2 Normative references

The following standards contain provisions which, through reference in this text, constitute provisions of this American National Standard. At the time of publication, the editions indicated were valid. All standards are subject to revision, and parties to agreements based on this American National Standard are encouraged to investigate the possibility of applying the most recent editions of the standards and publications listed below.

Members of IEC and ISO maintain registers of currently valid standards.

ANSI X3.170a-1991, Information systems – Enhanced small device interface (available only as part of ANSI X3.170-1990)

EIA RS-485-1983, Standard for electrical characteristics of generators and receivers for use in balanced digital multipoint systems<sup>1</sup>)

IEC 908: 1987, Compact disc digital audio system<sup>2)</sup>

ISO/IEC 10149: 1989, Information technology – Data interchange on read-only 120 mm optical data disks (CD-ROM)<sup>2)</sup>

2

<sup>&</sup>lt;sup>1)</sup> Available from the Electronic Industries Association, 2001 Pennsylvania Avenue, NW, Washington, DC 20006.

<sup>&</sup>lt;sup>2)</sup> Available from the American National Standards Institute, 11 West 42nd Street, New York, NY 10036.

## 3 Definitions, symbols and abbreviations

## 3.1 Definitions

For the purposes of this standard, the following definitions apply.

3.1.1 active I/O process: An I/O process that is presently in execution (not queued).

3.1.2 byte: Indicates an 8-bit construct.

3.1.3 command descriptor block (CDB): The structure used to communicate commands from an initiator to a target.

3.1.4 command queue: The queue used to store the queued I/O processes (see 7.8).

**3.1.5 connect**: The initiator function that selects a target to establish a nexus and to start an I/O process. The connection that results is an initial connection.

**3.1.6 connection**: An initial connection or reconnection. A connection can only occur between one initiator and one target.

3.1.7 contact: The electrically-conductive portion of a connector associated with a single conductor in a cable.

**3.1.8 contingent allegiance**: A condition typically generated by a CHECK CONDITION status during which a target preserves sense data (see 7.6).

3.1.9 current I/O process: The I/O process that is presently connected on the SCSI bus.

**3.1.10 disconnect**: The action that occurs when an SCSI device releases control of the SCSI bus, allowing it to go to the BUS FREE phase.

**3.1.11 extended contingent allegiance**: A condition generated by an INITIATE RECOVERY message to assist in extended error recovery procedures in multi-initiator systems (see 7.7).

3.1.12 field: A group of one or more contiguous bits.

**3.1.13 host adapter**: A device which connects between a host system and the SCSI bus. The device usually performs the lower layers of the SCSI protocol and normally operates in the initiator role. This function may be integrated into the host system.

**3.1.14 initial connection**: An initial connection is the result of a connect and it exists from the assertion of the BSY signal in a SELECTION phase until the next BUS FREE phase occurs.

3.1.15 initiator: An SCSI device that requests an I/O process to be performed by another SCSI device (a target).

3.1.16 invalid: An illegal (reserved) or unsupported field or code value.

**3.1.17 I/O process:** An I/O process consists of one initial connection and zero or more reconnections, all pertaining to a single command or a group of linked commands. More specifically, the connection(s) pertain to a nexus in which zero or more command descriptor blocks are transferred. An I/O process begins with the establishment of a nexus. An I/O process normally ends with the BUS FREE phase following successful transfer of a COMMAND COMPLETE or a RELEASE RECOVERY message. An I/O process also ends with the BUS FREE phase following an ABORT, ABORT TAG, BUS DEVICE RESET, CLEAR QUEUE message, or a hard RESET condition, or an unexpected disconnect occurs.

3.1.18 | T nexus: A nexus which exists between an initiator and a target.

3.1.19 I\_T\_L nexus: A nexus which exists between an initiator, a target, and a logical unit. This relationship replaces the prior I\_T nexus.

**3.1.20 I\_T\_R nexus:** A nexus which exists between an initiator, a target, and a target routine. This relationship replaces the prior I T nexus.

3.1.21 I\_T\_x nexus: A nexus which is either an I\_T\_L or I\_T\_R nexus.

**3.1.22 I\_T\_L\_Q nexus**: A nexus between an initiator, a target, a logical unit, and a queue tag following the successfu receipt of one of the queue tag messages. This relationship replaces the prior I\_T\_L nexus.

**3.1.23 I\_T\_x\_y nexus**: A nexus which is either an I\_T\_x or I\_T\_L\_Q.

**3.1.24 logical block**: A unit of data supplied or requested by an initiator.

3.1.25 logical unit: A physical or virtual peripheral device addressable through a target.

3.1.26 logical unit number: An encoded three-bit identifier for the logical unit.

3.1.27 mandatory: The referenced item is required to claim compliance with this standard.

**3.1.28 nexus**: A relationship that begins with the establishment of an initial connection and ends with the completion of the I/O process. The relationship may be restricted to specify a single logical unit or target routine by the successful transfer of an IDENTIFY message. The relationship may be further restricted by the successful transfer of a queue tag message.

**3.1.29 one**: A true signal value or a true condition of a variable.

**3.1.30 optional**: The referenced item is not required to claim compliance with this standard. Implementation of an optional item must be as defined in this standard.

**3.1.31 page**: Several commands use regular parameter structures that are referred to as pages. These pages are identified with a value known as a page code.

**3.1.32 peripheral device**: A physical peripheral device that can be attached to an SCSI device, which connects to the SCSI bus. The peripheral device and the SCSI device (peripheral controller) may be physically packaged together. Often there is a one-to-one mapping between peripheral devices and logical units, but this is not required. Examples of peripheral devices are: magnetic disks, printers, optical disks, and magnetic tapes.

**3.1.33 queue tag**: The value associated with an I/O process that uniquely identifies it from other queued I/O processes in the logical unit for the same initiator.

3.1.34 queued I/O process: An I/O process that is in the command queue.

**3.1.35 reconnect**: The act of reviving a nexus to continue an I/O process. A target reconnects to an initiator by using the RESELECTION and MESSAGE IN phases after winning arbitration. An initiator reconnects to a target by using the SELECTION and MESSAGE OUT phases after winning arbitration (see 7.5.2).

**3.1.36 reconnection**: A reconnection is the result of a reconnect and it exists from the assertion of the BSY signal in a SELECTION or RESELECTION phase until the next BUS FREE phase occurs.

3.1.37 reserved: Identifies bits, fields, and code values that are set aside for future standardization.

**3.1.38 SCSI address**: The hex representation of the unique address (0-15) assigned to an SCSI device. This address would normally be assigned and set in the SCSI device during system installation.

3.1.39 SCSI ID: The bit-significant representation of the SCSI address referring to one of the signal lines DB(7-0).

3.1.40 SCSI device: A host adapter or a target controller that can be attached to the SCSI bus.

3.1.41 signal assertion: The act of driving a signal to the true state.

**3.1.42 signal negation**: The act of driving a signal to the false state or allowing the cable terminators to bias the signal to the false state (by placing the driver in the high impedance condition).

**3.1.43 signal release**: The act of allowing the cable terminators to bias the signal to the false state (by placing the driver in the high impedance condition).

3.1.44 status: One byte of information sent from a target to an initiator upon completion of each command.

3.1.45 target: An SCSI device that performs an operation requested by an initiator.

3.1.46 target routine: A target routine is an I/O process directed to a target, and not to a logical unit (see 6.6.7).

**3.1.47 third-party**: When used in reference to COPY commands, third-party means a COPY command issued to one device to perform a copy operation between two other devices. When used in reference to RESERVE, or RELEASE commands, third-party means a reservation made on behalf of another device (e.g. A processor device requests that a direct-access device reserve itself for exclusive use by a sequential-access device).

3.1.48 unexpected disconnect: A disconnection that occurs as a result of an exception condition (see 6.1.1).

**3.1.49 vendor-specific (VS)**: Something (e.g. a bit, field, code value, etc.) that is not defined by this standard and may be used differently in various implementations.

3.1.50 zero: A false signal value or a false condition of a variable.

#### 3.2 Symbols and abbreviations

AEN Asynchronous event notification (see 7.5.5) AWG American Wire Gauge LSB Least significant bit LUN Logical unit number MSB Most significant bit SCSI Either SCSI-1 or SCSI-2 SCSI-1 The Small Computer System Interface (ISO 9316:1989) SCSI-2 The Small Computer System Interface - 2 (this standard)

## 4 General

## 4.1 Overview

SCSI is a local I/O bus that can be operated over a wide range of data rates. The primary objective of the interface is to provide host computers with device independence within a class of devices. Thus, different disk drives, tape drives, printers, optical media drives, and other devices can be added to the host computers without requiring modifications to generic system hardware or software. Provision is made for the addition of special features and functions through the use of vendor unique fields and codes. Reserved fields and codes are provided for future standardization.

A second key objective of SCSI-2 is to provide compatibility with those SCSI-1 devices that support bus parity and that meet conformance level 2 of SCSI-1. While some previously vendor unique commands and parameters have been defined by the SCSI-2 standard, devices meeting SCSI-1 and SCSI-2 can co-exist on the same bus. It is intended that those operating systems providing support for both command sets be able to operate in environments mixing SCSI-1 and SCSI-2 devices. Properly conforming SCSI-1 devices, both initiators and targets, should respond in an acceptable manner to reject SCSI-2 protocol extensions. All SCSI-2 protocol extensions are designed to be permissive of such rejections and to allow the SCSI-1 device to continue operation without requiring the use of the extension.

A third key objective of SCSI-2 is to move device-dependent intelligence out to the SCSI-2 devices. The commanc set definitions allow a sophisticated operating system to obtain all required initialization information from the attachec SCSI-2 devices. The formalized sequence of requests identify the type of attached SCSI-2 device, the characteristics of the device, and all the changeable parameters supported by the device. Further requests can determine the readiness of the device to operate, the types of media supported by the device, and all other pertinent system information. Those parameters not required by the operating system for operation, initialization, or system tuning are not exposed to the SCSI-2 interface, but are managed by the SCSI-2 device itself.

The interface uses logical rather than physical addressing for all data blocks. For direct-access devices, each logica unit may be interrogated to determine how many blocks it contains. A logical unit may coincide with all or part o a peripheral device.

The interface protocol includes provision for the connection of multiple initiators (SCSI devices capable of initiating an operation) and multiple targets (SCSI devices capable of responding to a request to perform an operation) Distributed arbitration (i.e. bus-contention logic) is built into the architecture of SCSI. A priority system awards interface control to the highest priority SCSI devices that is contending for use of the bus. The time to complete arbitration is independent of the number of devices that are contending and can be completed in less than 10  $\mu$ s

There are two electrical alternatives: single-ended and differential. Single-ended and differential devices are electrically incompatible and can not be mixed on the same physical bus.

Provision is made for cable lengths up to 25 m using differential drivers and receivers. A single-ended driver and receiver configuration is defined for cable lengths of up to 6 m and is primarily intended for applications within  $\varepsilon$  cabinet.

Arbitration is defined to permit multiple initiators and to permit concurrent I/O operations. All SCSI devices are required to be capable of operating with the defined asynchronous transfer protocol. In addition, an optiona synchronous transfer protocol is defined. A message protocol for control of the interface is also specified. In mos cases, messages are not directly apparent to the host computer software.

Commands are classified as mandatory, optional, or vendor-specific. SCSI devices are required to implement al mandatory commands defined for the appropriate device type and may implement other commands as well. SCS devices contain commands that facilitate the writing of self-configuring software drivers that can discover all necessary attributes without prior knowledge of specific peripheral characteristics (such as storage capacity). Many commande

also implement a very large logical block address space (2<sup>32</sup> blocks), although some commands implement a somewhat smaller logical block address space (2<sup>21</sup> blocks).

Starting with clause 8 and for each clause on a specific device type, the clause is constructed of at least four subclauses. The first subclause is the model for the device type. The model establishes the framework for interpreting the commands for the device type. The attributes and capabilities of the device type are discussed and examples are given. The second subclause defines the commands applicable to the device type. The third subclause defines the parameters applicable to the device type. These are the diagnostic parameters, log parameters, mode parameters and vital product data parameters that are transmitted as part of the appropriate commands. Most of the parameters are formatted into pages. The fourth subclause gives the definition of terms that apply specifically to that device type.

Starting with clause 9 the commands in each of these clauses are unique to the device type, or they have interpretations, fields, or features that are specific for the device type. Thus, for example, although the WRITE command is used for several device types, it has a somewhat different form for each type, with different parameters and meanings. Therefore, it is specified separately for each device type.

#### 4.2 Conventions

Certain words and terms used in this standard have a specific meaning beyond the normal English meaning. These words and terms are defined either in clause 3 or in the text where they first appear. Names of signals, phases, messages, commands, statuses, sense keys, additional sense codes, and additional sense code qualifiers are in all uppercase (e.g. REQUEST SENSE). Lower-case is used for words having the normal English meaning.

Fields containing only one bit are usually referred to as the name bit instead of the name field.

Numbers that are not immediately followed by lower-case b or h are decimal values.

Numbers immediately followed by lower-case b (xxb) are binary values.

Numbers immediately followed by lower-case h (xxh) are hexadecimal values.

## **5 Physical characteristics**

This clause contains the physical definition of SCSI-2. The connectors, cables, signals, terminators, and bus timin values needed to implement the interface are covered.

## 5.1 Physical description

SCSI devices are daisy-chained together using a common 50-conductor A cable and, optionally, a 68-conductor i cable. Both ends of each cable are terminated. All signals are common between all SCSI devices on the A cable in systems that employ the wide SCSI option, wide SCSI devices additionally connect to the B cable. Various widt SCSI devices may be mixed.

NOTE 1 An alternate 16-bit single-cable solution and an alternate 32-bit solution is being defined and the B cable definition will be removed in a future version of SCSI.

Two driver/receiver alternatives are specified:

- a) Single-ended drivers and receivers, which allow a maximum cable length of 6 m (primarily for connection within an enclosure).
- b) Differential drivers and receivers, which allow a maximum cable length of 25 m.

The single-ended and differential alternatives are mutually exclusive on the same physical bus.

NOTE 2 Use of single-ended drivers and receivers with the fast synchronous data transfer option is not recommended.

## 5.2 Cable requirements

The characteristic impedance of the cable should be no less than 90  $\Omega$  and no greater than 140  $\Omega$ . The characteristi impedance of the cable used when implementing the fast synchronous data transfer option is defined in 5.2.3.

NOTE 3 There are successful single-ended implementations using cables with less than 90  $\Omega$  characteristic impedance. However, system integrity in single-ended implementations is improved when the characteristic impedance of the cable is greater than 90  $\Omega$ . Cable parameters other than characteristic impedance are critical to system integrity. Alternative cable parameters are being investigated as a part of a future version of SCSI.

A minimum conductor size of 0,080 42 mm<sup>2</sup> (28 AWG) should be used to minimize noise effects and ensure prope distribution of terminator power. A smaller conductor size may be used for signals other than terminator power.

#### NOTES

4 To minimize discontinuities and signal reflections, cables of different impedances should not be used in the same bus. Implementations may require trade-offs in shielding effectiveness, cable length, the number of loads, transfer rates, and cost to achieve satisfactory system operation.

5 To minimize discontinuities due to local impedance variation, a flat cable should be spaced at least 1,27 mm (0,050 in) from other cables, any other conductor, or the cable itself when the cable is folded.

6 Regulatory agencies may require use of larger wire size.

#### 5.2.1 Single-ended cable

A 50-conductor flat cable or 25-signal twisted-pair cable shall be used for the A cable. A 68-conductor flat cable o 34-signal twisted-pair cable shall be used for the B cable if the wide SCSI option is implemented. The maximum cumulative cable length shall be 6,0 m. If twisted-pair cables are used, then twisted pairs in the cable shall be wire to physically opposing contacts in the connector.

A stub length of no more than 0,1 m is allowed off the mainline interconnection within any connected equipment o from any connected point.

NOTE 7 Stub clustering should be avoided. Stubs should be spaced at least 0,3 m apart.

SCSI bus termination shall be at each end of the cable and may be internal to the SCSI devices that are at the ends of the cable.

## 5.2.2 Differential cable

A 50-conductor flat cable or 25-signal twisted-pair cable shall be used for the A cable. A 68-conductor flat cable or 34-signal twisted-pair cable shall be used for the B cable if the wide SCSI option is implemented. The maximum cumulative cable length shall be 25 m. If twisted-pair cables are used, then twisted pairs in the cable shall be wired to physically opposing contacts in the connector.

A stub length of no more than 0,2 m is allowed off the mainline interconnection within any connected equipment or from any connected point.

SCSI bus termination shall be at each end of the cable and may be internal to the SCSI devices that are at the ends of the cable.

NOTE 8 The use of twisted pair cable (either twisted-flat or discrete wire twisted pairs) is strongly recommended. Without twisted pairs, even at slow data rates and very short distances, crosstalk between adjacent signals causes spurious pulses with differential signals.

## 5.2.3 Cable requirements for fast synchronous data transfer

In systems which use the fast synchronous data transfer option (see 5.8), the A and B cables should meet the conductor size recommendation in 5.2. The cable should have an overall shield suitable for termination in a shielded connector.

In such systems, the cables shall have the following electrical characteristics:

Characteristic impedance:	90 Ω to 132 Ω
Signal attenuation:	0,095 dB maximum per metre at 5 Mhz
Pair-to-pair propagation delay delta:	0,20 ns maximum per metre
DC resistance:	0,230 Ω maximum per metre at 20°C

# 5.3 Connector requirements

Two types of connectors are defined: non-shielded and shielded. The non-shielded connectors are typically used for in-cabinet applications. Shielded connectors are typically used for external applications where electromagnetic compatibility (EMC) and electrostatic discharge (ESD) protection may be required. Either type of connector may be used with the single-ended or differential drivers.

### 5.3.1 Non-shielded connector requirements

Two non-shielded connector alternatives are specified for the A cable and one non-shielded connector is specified for the B cable.

## 5.3.1.1 Non-shielded connector alternative 1 - A cable

The alternative 1 non-shielded high-density SCSI device connector for the A cable (see figure 1) shall be a 50conductor connector consisting of two rows of 25 female contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

The alternative 1 non-shielded high-density cable connector for the A cable (see figure 2) shall be a 50-conductor connector consisting of two rows of 25 male contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

### 5.3.1.2 Non-shielded connector alternative 2 - A cable


The alternative 2 non-shielded low-density SCSI device connector for the A cable (see figure 3) shall be a  $50^{\circ}$  conductor connector consisting of two rows of 25 male pins with adjacent pins 2,54 mm (0,1 in) apart. A shroud an header body should be used. The non-mating portion of the connector is shown for reference only.

The alternative 2 non-shielded low-density cable connector for the A cable (see figure 4) shall be a 50-conduct connector consisting of two rows of 25 female contacts with adjacent contacts 2,54 mm (0,1 in) apart. It i recommended that keyed connectors be used.


## 5.3.1.3 Non-shielded connector - B cable

The non-shielded high-density SCSI device connector for the B cable (see figure 1) shall be a 68-conductor connector consisting of two rows of 34 female contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portio of the connector is shown for reference only.

The non-shielded high-density cable connector for the B cable (see figure 2) shall be a 68-conductor connector consisting of two rows of 34 male contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portio of the connector is shown for reference only.

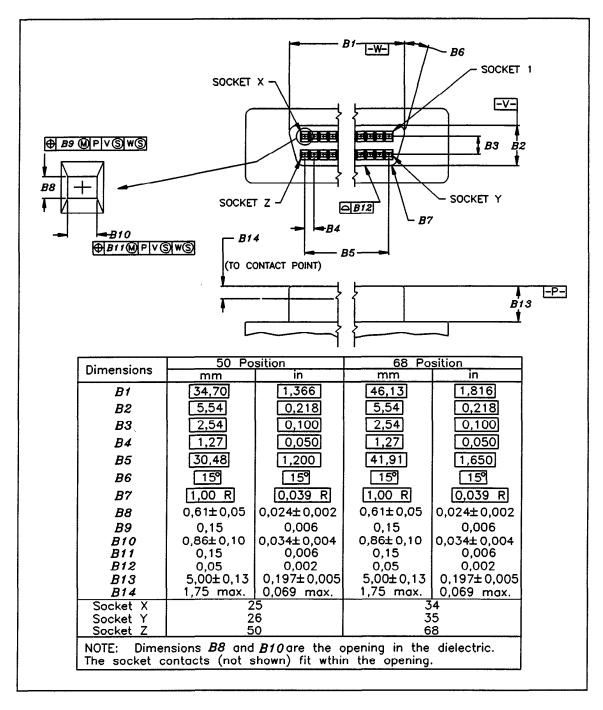


# Figure 1 - 50/68-contact non-shielded high-density SCSI device connector (A cable/B cable)

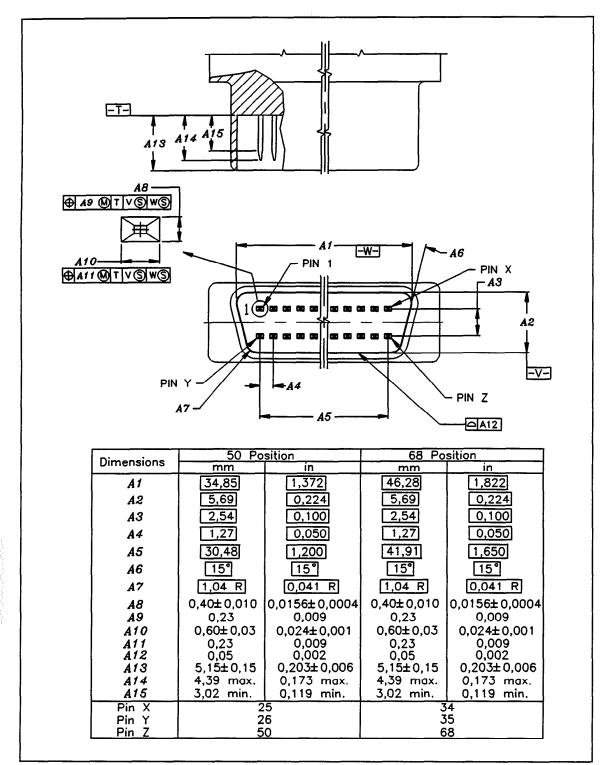


## Figure 2 - 50/68-contact non-shielded high-density cable connector (A cable/B cable)

Copyright American Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

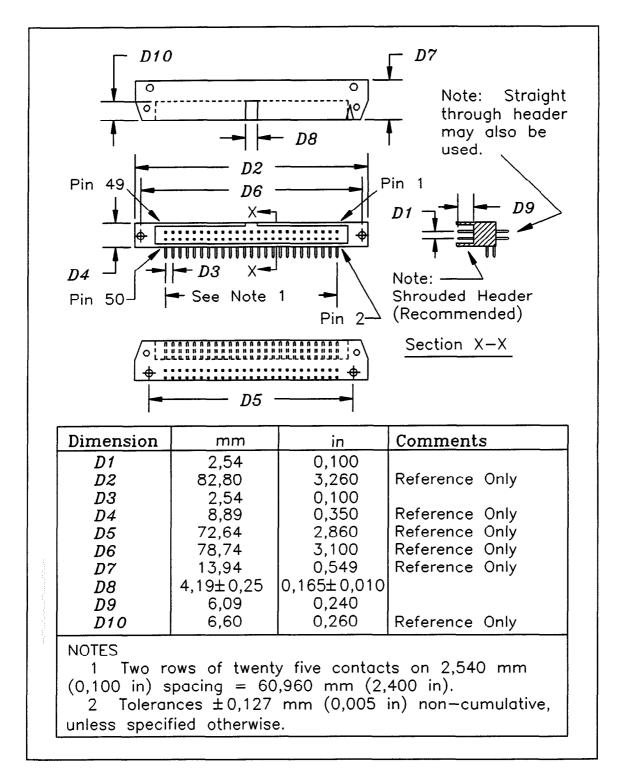

# Figure 3 - 50-contact non-shielded low-density SCSI device connector (A cable)

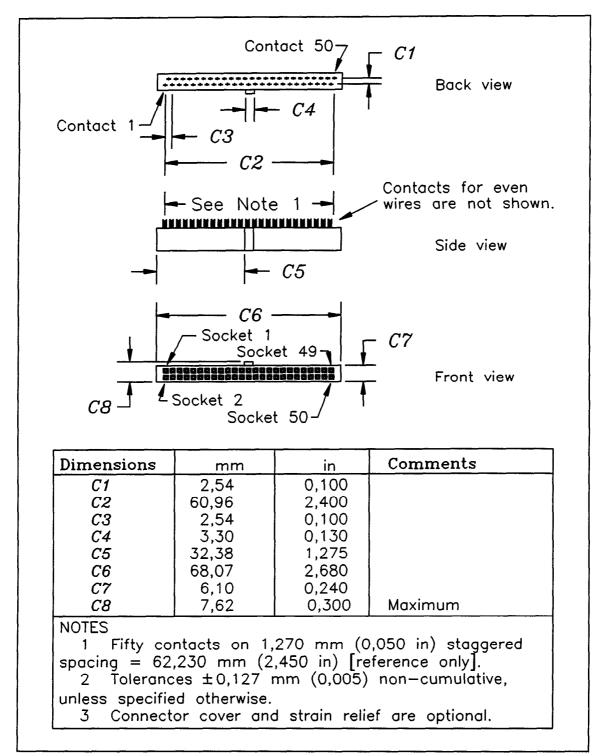

## Figure 4 - 50-contact non-shielded low-density cable connector (A cable)

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

### 5.3.2 Shielded connector requirements

Two shielded connector alternatives are specified for the A cable and one shielded connector is specified for the B cable. The connector shielding system should provide a d.c. resistance of less than 10 m $\Omega$  from the cable shield at its termination point to the SCSI device enclosure.

In order to support daisy-chain connections, SCSI devices that use shielded connectors should provide two shielded device connectors on the device enclosure. These two connectors may be wired one-to-one with a stub to the SCSI device's drivers and receivers provided the maximum stub length is not violated. Alternatively, two cables may be run from the two shielded connectors to the drivers and receivers so that the maximum stub length is not violated. The length of the cable within the device enclosure is included when calculating the total cable length of the SCSI bus.

NOTE 9 SCSI-1 defined three shielded connector systems in an annex. The alternative 1 shielded connector of SCSI-1 has been replaced by a high-density connector in this standard. The alternative 2 shielded connector remains unchanged. The EUROCARD boxes shielded connector system of SCSI-1 has been deleted in this standard.

### 5.3.2.1 Shielded connector alternative 1 - A cable

The shielded high-density SCSI device connector for the A cable (see figure 5) is a 50-conductor connector consisting of two rows of 25 female contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

The shielded high-density cable connector for the A cable (see figure 6) is a 50-conductor connector consisting of two rows of 25 male contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

### 5.3.2.2 Shielded connector alternative 2 - A cable


The shielded low-density device connector for the A cable (see figure 7) is a 50-conductor connector consisting of two rows of ribbon contacts spaced 2,16 mm (0,085 in) apart. The non-mating portion of the connector is shown for reference only.

The shielded low-density cable connector for the A cable (see figure 8) is a 50-conductor connector consisting of two rows of ribbon contacts spaced 2,16 mm (0,085 in) apart. The non-mating portion of the connector is shown for reference only.

## 5.3.2.3 Shielded connector - B cable

The shielded high-density SCSI device connector for the B cable (see figure 5) is a 68-conductor connector consisting of two rows of 34 female contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

The shielded high-density cable connector for the B cable (see figure 6) is a 68-conductor connector consisting of two rows of 34 male contacts with adjacent contacts 1,27 mm (0,05 in) apart. The non-mating portion of the connector is shown for reference only.

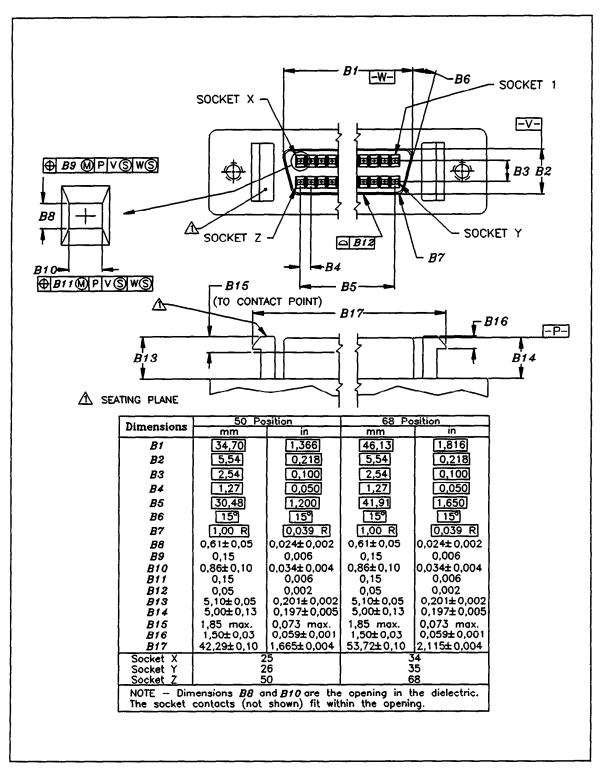

## Figure 5 - 50/68-contact shielded high-densitý SCSI device connector (A cable/B cable)

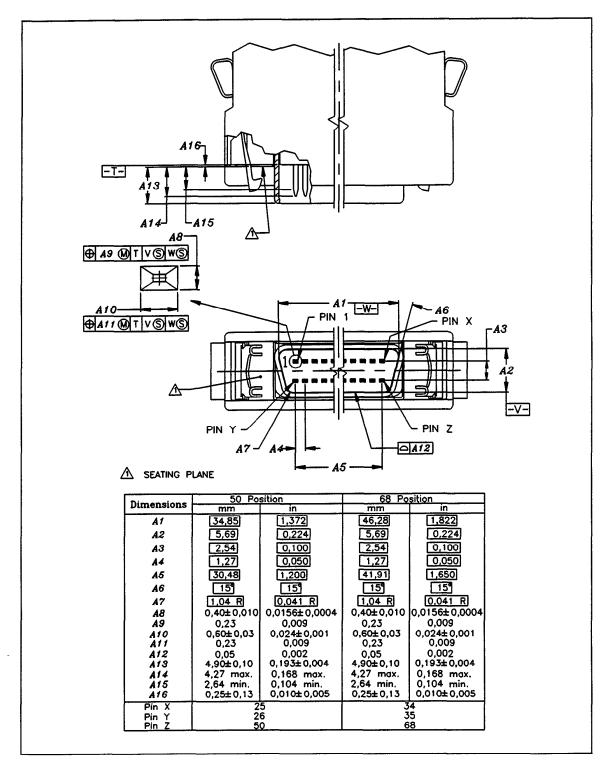


Figure 6 - 50/68-contact shielded high-density cable connector (A cable/B cable)

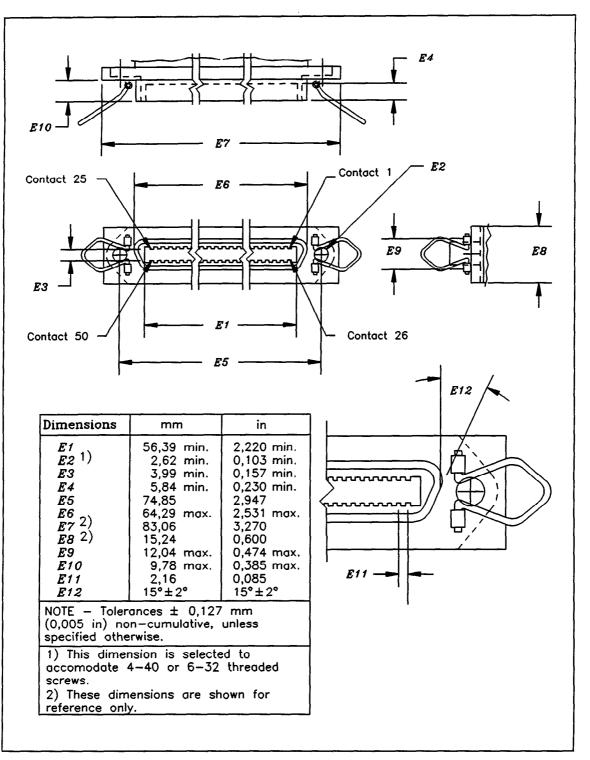


Figure 7 - 50-contact shielded low-density SCSI device connector

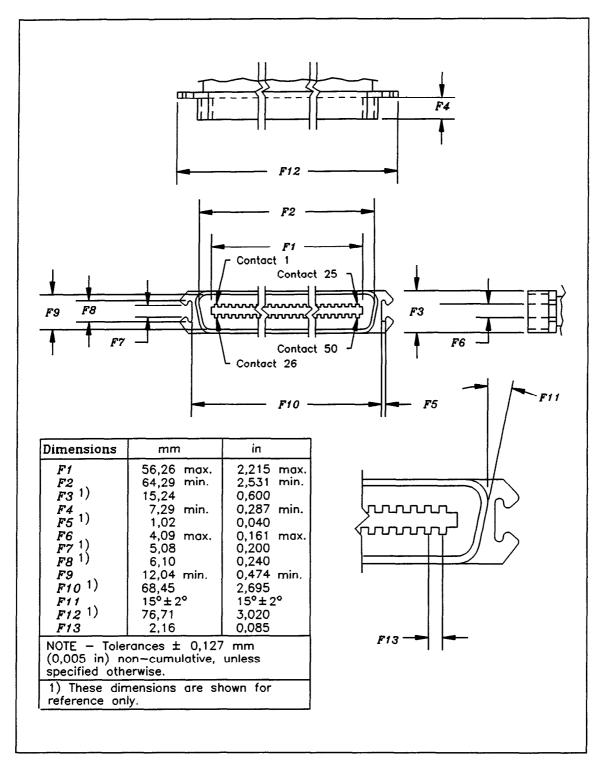


Figure 8 - 50-contact shielded low-density cable connector

# 5.3.3 Connector contact assignments

The connector contact assignments are defined in tables 1 through 5. Table 1 defines which of the other four table to use and which set of contact assignments to use.

Connector type	Driver/ receiver type	Cable		Contact assignment table	Contact set
Non-shielded alternative 1			1 & 2	2	2
Non-shielded alternative 1		B	1 & 2	3	
Non-shielded alternative 1		A	1 & 2	4 5	2
Non-shielded alternative 1	Differential	В	1&2	5	
Non-shielded alternative 2	Single-ended	A	3 & 4	2	1
Non-shielded alternative 2		A	3&4	2 4	1
Shielded alternative 1	Single-ended	А	5 & 6	2	2
Shielded alternative 1	Single-ended	В	5 & 6	2 3	-
Shielded alternative 1	Differential	B A	5 & 6	4	2
Shielded alternative 1	Differential	В	5 & 6	4 5	-
Chielded elternative O	Single ended		790		
Shielded alternative 2	Single-ended	A	7 & 8	2	2
Shielded alternative 2	Differential	Α	7 & 8	4	2

Table 1 - Cross-reference to connector contact assignments

	Connec contact		ole	Connec contact		Qi ana l	
Signal name	Set 2	Set 1	numi	uctor Der	Set 1	Set 2	Signal name
GROUND GROUND	1 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 2 2 14 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 11 2 3 4 5 1 1 2 3 4 5 1 1 2 3 4 5 1 1 2 1 2 1 1 2 1 1 2 1 1 2 2 2 2 2 2 2 1 1 1 2	1 3 5 7 9 11 13 15 7 9 11 13 15 7 9 23 25 7 29 1 33 5 37 9 4 3 35 7 9 4 3 35 7 9 4 3 35 7 9 4 3 35 7 9 4 3 35 7 9 4 4 3 5 7 9 4 1 4 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 9 1 1 3 5 7 7 9 1 1 3 5 7 7 9 1 1 3 5 7 7 9 1 1 3 5 5 7 9 1 1 3 3 5 5 7 9 1 3 3 5 5 7 9 1 3 3 5 5 7 9 1 4 3 3 5 5 7 9 1 3 3 5 5 7 9 1 4 3 3 5 5 7 7 9 1 3 3 5 5 7 7 9 1 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 9 1 4 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 3 5 5 7 7 9 1 4 3 5 5 7 7 9 1 4 4 3 5 5 7 7 9 1 4 5 7 7 9 1 4 5 7 9 1 4 3 5 7 7 9 1 4 5 7 9 1 4 3 5 5 7 7 9 1 4 5 7 9 1 4 5 7 9 1 4 5 7 9 1 4 5 7 7 9 1 4 5 7 7 9 1 4 5 7 7 9 1 4 5 3 5 5 7 9 1 4 5 5 7 9 1 3 5 5 7 7 9 1 4 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 5 5 5 5 9 1 5 5 1 5 5 5 5 1 5 5 5 5	1 3 5 7 9 1 3 5 5 7 9 1 3 5 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 5 7 9 1 3 5 5 7 9 1 5 5 5 7 9 1 3 5 5 7 9 1 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	2 4 6 8 0 2 2 4 6 8 0 2 2 4 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 3 3 3 8 0 2 3 3 8 0 2 2 4 4 6 8 0 2 3 3 3 8 0 2 3 3 3 8 0 2 3 3 3 8 0 2 3 3 3 8 0 2 3 3 3 3 3 3 8 0 2 3 3 3 3 3 3 3 3 8 0 2 3 3 3 3 3 8 0 2 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3 3	2 4 6 8 0 2 4 6 8 0 2 4 6 8 0 2 4 6 8 0 2 4 6 8 0 2 4 6 8 0 2 4 4 4 6 8 0 2 4 4 6 8 0 2 4 4 4 6 8 0 2 4 4 4 6 8 0 2 4 4 4 8 0 2 4 4 6 8 0 2 4 4 6 8 0 2 4 4 6 8 0 2 4 4 6 8 0 2 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	26 27 28 30 32 33 45 36 37 38 30 40 42 43 44 50	- DB(0) - DB(1) - DB(2) - DB(3) - DB(5) - DB(6) - DB(7) - DB(P) GROUND GROUND RESERVED TERMPWR RESERVED GROUND - ATN GROUND - ATN GROUND - ATN GROUND - ATN GROUND - ATN GROUND - ATN GROUND - SEL - C/D - REQ
when using 0.	number ntreline 025 inch ther cab nments. contact a .ch set c	refers t flat r: centre ole types assignmen of contac	to the Libbon Line 1 S may hts ar	e cond cable flat r be us re sho oplies	ductor po e with a ribbon ca sed to in own. Ref s to each	osition w low-dens able with nplement fer to ta n connect	sity connector or a high-density equivalent able 1 to

Table 2 - Single-ended contact assignments - A cable

Signal name	Connector contact number		ble uctor ber	Connector contact number	Signal name
GROUND GROUND	1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28	1 3 5 7 9 11 3 5 7 9 9 11 3 5 7 7 9 11 3 5 7 7 9 11 3 5 7 7 9 11 3 5 7 7 9 11 3 5 7 7 9 11 3 5 7 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 3 5 5 7 9 1 5 5 5 7 9 1 3 5 5 7 9 1 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5 5	2 4 6 8 10 12 14 6 18 22 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 02 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 0 2 2 4 6 8 8 0 2 2 4 6 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 2 4 6 8 8 0 2 4 4 6 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 4 6 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 4 4 6 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 0 2 2 4 5 8 8 8 8 9 2 2 4 5 8 8 9 8 8 9 2 8 8 9 2 8 8 9 2 8 8 8 9 8 8 8 9 2 8 8 8 8	35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62	GROUND - DB(8) - DB(9) - DB(10) - DB(11) - DB(12) - DB(13) - DB(14) - DB(15) - DB(15) - DB(P1) - ACKB GROUND - REQB - DB(16) - DB(17) - DB(18) TERMPWRB TERMPWRB TERMPWRB TERMPWRB - DB(19) - DB(20) - DB(21) - DB(22) - DB(22) - DB(22) - DB(24) - DB(25) - DB(27)
GROUND GROUND GROUND GROUND GROUND GROUND	29 30 31 32 33 34	57 59 61 63 65 67	58 60 62 64 66 68	63 64 65 66 67 68	- DB (28) - DB (29) - DB (30) - DB (31) - DB (P3) GROUND
2 The conductor 0,025 inch ce	n next to a sign number refers t ntreline flat ri contact assignme	o the bbon	cond	uctor position w	/hen using :ypes may be used

# Table 3 - Single-ended contact assignments - B cable

NOTE 10 An alternate 16-bit single-cable solution and an alternate 32-bit solution is being defined and the B cable definition will be removed in a future version of SCSI.

Table 4 - Differentia	contact	assignments	- A	cable
-----------------------	---------	-------------	-----	-------

÷

Signal	Connec contact	Cable			ector t number	Signal	
	Set 2	Set 1	numi		Set 1	Set 2	name
GROUND +DB(0) +DB(1) +DB(2) +DB(3) +DB(4) +DB(5) +DB(6) +DB(7) +DB(7) +DB(P) DIFFSENS RESERVED TERMPWR RESERVED +ATN GROUND +BSY +ACK +RST +ACK +RST +ACK +RST +MSG +SEL +C/D +REQ +I/O GROUND	1 2 3 4 5 6 7 8 9 0 11 12 13 4 5 6 7 8 9 0 11 23 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 2 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 14 5 6 7 8 9 0 11 12 3 14 5 6 7 8 9 0 11 12 3 14 5 6 7 8 9 0 11 12 3 14 5 16 8 9 0 11 12 3 14 5 16 17 8 9 0 11 12 3 14 5 16 17 8 9 0 11 12 3 14 5 16 17 11 2 3 11 2 2 3 4 5 11 12 2 3 11 12 2 3 14 5 16 17 11 2 2 3 2 2 3 2 2 3 2 2 3 2 2 3 2 2 3 2 2 3 1 1 1 2 2 3 2	1 3 5 7 9 11 13 15 17 9 12 23 22 7 9 13 35 7 5 7 9 1 33 5 7 5 7 9 1 43 5 7 9 1 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 41 43 5 7 9 4 1 4 5 7 9 4 1 4 5 7 9 4 1 4 5 7 9 1 4 5 7 9 1 3 5 7 5 7 9 1 4 3 5 7 5 7 9 1 4 3 5 7 5 7 9 1 4 3 5 7 5 7 9 1 4 3 5 7 5 7 5 7 5 7 9 4 4 3 5 7 5 7 9 4 4 3 5 7 5 7 5 7 9 4 4 3 5 7 5 7 5 7 5 7 5 7 9 4 4 3 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5	1 3 5 7 9 1 3 5 7 5 7 9 1 3 5 7 9 1 3 5 7 5 7 5 7 9 1 3 5 7 5 7 5 7 9 1 3 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5 7 5	2 4 6 8 0 12 14 16 18 222 4 28 32 34 36 8 38 6 38 6 38 6 38 42 4 46 8 50	2468 8012468 11214 168222468022468332 334686868024468 33802446850	26 27 29 30 32 33 45 36 38 90 41 43 43 443 445 67 89 0 41 23 45 67 890 50	GROUND - DB (0) - DB (1) - DB (2) - DB (3) - DB (4) - DB (5) - DB (6) - DB (7) - DB (7) - DB (P) GROUND RESERVED TERMPWR RESERVED - ATN GROUND - BSY - ACK - RST - ACK - RST - ACK - RST - ACK - RST - MSG - SEL - C/D - REQ - I/O GROUND
when using O	entreline ,025 inch Other cab gnments. contact a ich set c	e flat r n centre ble types assignmen of contac	ibbon line t s may nts ar ots ar	cable flat i be us re she oplies	e with a ribbon o sed to i own. Re s to eac	a low-den cable wit implement efer to t ch connec	sity connector or h a high-density equivalent able 1 to

,

:

~

Signal name	Connector contact number		ble uctor ber	Connector contact number	Signal name
GROUND +DB(8) +DB(9) +DB(10) +DB(11) +DB(11) +DB(13) +DB(14) +DB(14) +DB(15) +DB(P1) +ACKB GROUND +REQB +DB(16) +DB(17) +DB(17) +DB(18) TERMPWRB TERMPWRB +DB(20) +DB(21) +DB(22) +DB(22) +DB(22) +DB(22) +DB(25) +DB(25) +DB(27) +DB(28) +DB(29) +DB(30) +DB(31) +DB(P3) GROUND	1 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 10 11 2 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 11 12 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 11 12 2 3 4 5 6 7 8 9 0 11 12 2 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 4 5 6 7 8 9 0 21 22 3 2 5 6 7 8 9 20 1 2 2 3 2 2 5 2 6 7 8 9 2 1 2 2 3 2 2 5 2 2 7 8 9 2 3 2 2 5 2 2 3 2 2 5 2 2 3 2 2 5 2 2 3 2 2 3 2 2 3 2 2 3 2 2 3 2 2 3 2 3 2 3	$\begin{smallmatrix}1&3&5&7&9\\&1&1&3&5&7\\&9&1&1&3&5&7\\&1&1&1&2&2&2&2&2&3\\&2&2&2&2&3&3&3&5&7\\&1&1&2&2&2&2&2&2&3\\&3&3&3&3&3&3&4&4&5&5&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&3&3&5&7\\&1&2&2&2&2&2&2&2&2&2&2&2&2\\&1&2&2&2&2&2$	2468024680246802468024680246802468024680	35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 35 4 55 56 7 58 9 60 61 62 63 64 65 66 67 68	GROUND - DB (8) - DB (9) - DB (10) - DB (11) - DB (12) - DB (13) - DB (14) - DB (15) - DB (P1) - ACKB DIFFSENS - REQB - DB (16) - DB (16) - DB (16) - DB (18) TERMPWRB TERMPWRB - DB (19) - DB (22) - DB (23) - DB (26) - DB (29) - DB (31) - DB (P3) GROUND
0,025 inch cent	number refers to reline flat ribb quivalent contact	oon ca	ble.	Other cable typ	en using bes may be used

# Table 5 - Differential contact assignments - B cable

NOTE 11 An alternate 16-bit single-cable solution and an alternate 32-bit solution is being defined and the B cable definition will be removed in a future version of SCSI.

# 5.4 Electrical description

For the measurements in this subclause, SCSI bus termination is assumed to be external to the SCSI device. See 5.4.4 for the terminating requirements for the RESERVED lines. SCSI devices may have the provision for allowing optional internal termination.

## 5.4.1 Single-ended alternative

All signals not defined as RESERVED, GROUND, or TERMPWR shall be terminated at both ends of the cable. The implementor may choose one of the following two methods to terminate each end (see figures 9 and 10):

- a) The termination of each signal shall consist of 220  $\Omega$  (±5%) to the TERMPWR line and 330  $\Omega$  (±5%) to ground. Using resistors with ±1% tolerance improves noise margins.
- b) The termination of each signal shall meet these requirements:
  - 1) The terminators shall each supply a characteristic impedance between 100  $\Omega$  and 132  $\Omega$ .
  - 2) The terminators shall be powered by the TERMPWR line and may receive additional power from other
  - sources but shall not require such additional power for proper operation (see 5.4.3).
  - 3) The current available to any signal line driver shall not exceed 48 mA when the driver asserts the line and pulls it to 0,5 V d.c. Only 44,8 mA of this current shall be available from the two terminators.
  - 4) The voltage on all released signal lines shall be at least 2,5 V d.c. when the TERMPWR line is within specified values (see 5.4.3).
  - 5) These conditions shall be met with any legal configuration of targets and initiators as long as at least one device is supplying TERMPWR.

The first termination method above is the same as in SCSI-1. The second termination method is recommended for better signal quality.

## 5.4.1.1 Output characteristics

All signals shall use open-collector or three-state drivers. Each signal driven by an SCSI device shall have the following output characteristics when measured at the SCSI device's connector:

 $V_{OL}$  (low-level output voltage) = 0,0 to 0,5 V d.c. at 48 mA sinking (signal assertion)

 $V_{OH}$  (high-level output voltage) = 2,5 to 5,25 V d.c. (signal negation)

## 5.4.1.2 Input characteristics

SCSI devices with power on shall meet the following electrical characteristics on each signal (including both receivers and passive drivers):

 $\begin{array}{ll} V_{|\mathsf{L}} \mbox{ (low-level input voltage)} &= 0,0 \ V \ d.c. \ to \ 0,8 \ V \ d.c. \ (signal true) \\ &= 2,0 \ V \ d.c. \ to \ 5,25 \ V \ d.c. \ (signal true) \\ &= 2,0 \ V \ d.c. \ to \ 5,25 \ V \ d.c. \ (signal false) \\ &= -0,4 \ mA \ to \ 0,0 \ mA \ at \ V_{|} = 0,5 \ V \ d.c. \\ &= 0,0 \ mA \ to \ 0,1 \ mA \ at \ V_{|} = 2,7 \ V \ d.c. \\ &= 0,2 \ V \ d.c. \\ &= 25 \ pF \ (measured \ at \ the \ device \ connector \ closest \ to \ the \ stub, \ if \ any, \ within \ the \ device) \\ &= 0,0 \ V \ d.c. \\ &= 0,0 \ V \ d.c. \\ &= 0,0 \ V \ d.c. \\ &= 0,2 \ V \ d.c. \ d.c. \\ &= 0,2 \ V \ d.c. \ d.$ 

It is recommended that SCSI devices with power off also meet the above I<sub>IL</sub> and I<sub>IH</sub> electrical characteristics on each signal.

To achieve maximum noise immunity and to assure proper operation with complex cable configurations, it is recommended that the nominal switching threshold be approximately 1,4 V.

## 5.4.2 Differential alternative

All signals consist of two lines denoted +SIGNAL and -SIGNAL. A signal is true when +SIGNAL is more positive that -SIGNAL, and a signal is false when -SIGNAL is more positive than +SIGNAL. All assigned signals of the A and E cables described in 5.6 shall be terminated at each end of the cable with a terminator network as shown in figure 11 Resistor tolerances in the terminator network shall be +5 % or less.

The DIFFSENS signal of the connector is used as an active high enable for the differential drivers. If a single-ender device or terminator is inadvertently connected, this signal is grounded, disabling the differential drivers (see figure 12).

The characteristic impedance of differential terminators is 122  $\Omega$ .

## 5.4.2.1 Output characteristics

Each signal driven by an SCSI device shall have the following output characteristics when measured at the SCS device's connector:

 $\begin{array}{ll} V_{OL} \mbox{ (low-level output voltage)} &= 1,7 \mbox{ V maximum at } I_{OL} \mbox{ (low-level output current)} &= 55 \mbox{ mA.} \\ &= 2,7 \mbox{ V minimum at } I_{OH} \mbox{ (high-level output current)} &= -55 \mbox{ mA.} \\ &= 1,0 \mbox{ V minimum with common-mode voltage ranges from -7 \mbox{ V d.c. to } + 12 \mbox{ V d.c.} \end{array}$ 

V<sub>OL</sub> and V<sub>OH</sub> shall be as measured between the output terminal and the SCSI device's logic ground reference.

The output characteristics shall additionally conform to EIA RS-485-1983.

## 5.4.2.2 Input characteristics

SCSI devices shall meet the following electrical characteristics on each signal (including both receivers and passive drivers):

 $I_{|}$  (input current on either input) =  $\pm 2,0$  mA maximum. Maximum input capacitance = 25 pF.

The  $l_1$  requirement shall be met with the input voltage varying between -7 V d.c. and +12 V d.c., with power on c off, and with the hysteresis equaling 35 mV, minimum.

The input characteristics shall additionally conform to EIA RS-485-1983.

## 5.4.3 Terminator power

SCSI initiators shall supply terminator power to the TERMPWR contact(s) and, if it implements the wide SCSI option to the TERMPWRB contacts. This power shall be supplied through a diode or similar semiconductor that prevent backflow of power to the SCSI device. Targets and SCSI devices that become temporary initiators (e.g. targets which implement the COPY command or asynchronous event notification) are not required to supply terminator power. An SCSI device may supply terminator power. Interface error rates are lower if the termination voltage is maintained a the extreme ends of the cable.

All terminators independent of location shall be powered from the TERMPWR and TERMPWRB contact(s). The use of keyed connectors is recommended in SCSI devices that provide terminator power to prevent accidental grounding or the incorrect connection of terminator power.

NOTE 12 Regulatory agencies may require limiting maximum (short circuit) current to the terminator power lines. Recommended current limiting is 1,5 A for TERMPWR and 2 A for TERMPWRB. For systems utilizing multiple initiators, the initiators may be configured with option straps or current limiting devices. Maximum available current should not exceed 5 A. SCSI devices shall sink no more than 1,0 mA from TERMPWR and no more than 1,0 mA from TERMPWRB except to power an optional internal terminator.


Single-ended SCSI devices providing terminator power on cable A shall have the following characteristics: V<sub>Term</sub> = 4,25 V d.c. to 5,25 V d.c. 900 mA minimum source drive capability

Differential SCSI devices providing terminator power on cable A shall have the following characteristics: V<sub>Term</sub> = 4,0 V d.c. to 5,25 V d.c. 600 mA minimum source drive capability

Single-ended SCSI devices providing terminator power on cable B shall have the following characteristics: V<sub>Term</sub> = 4,5 V d.c. to 5,25 V d.c. 1500 mA minimum source drive capability

Differential SCSI devices providing terminator power on cable B shall have the following characteristics: V<sub>Term</sub> = 4,0 V d.c. to 5,25 V d.c. 1000 mA minimum source drive capability

NOTE 13 It is recommended that the terminator power lines be decoupled at each terminator with at least a 2,2 µF highfrequency capacitor to improve signal quality.

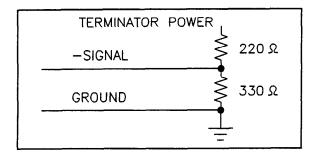



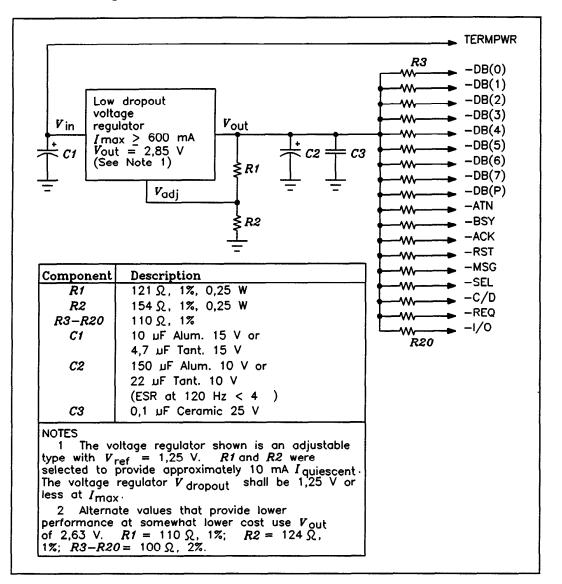
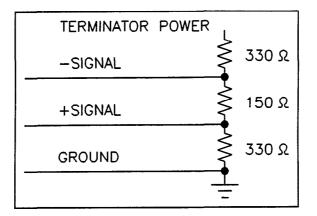


Figure 10 - Alternative 2 termination for single-ended devices

Copyright America Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS





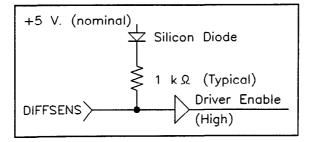


Figure 12 - Differential driver protection circuit

## 5.4.4 RESERVED lines

The lines labelled RESERVED in the A cable contact assignment tables (table 2 and table 4) shall be connected to ground in the bus terminator assemblies or in the end devices on the SCSI cable. The RESERVED lines should be open in the other SCSI devices, but may be connected to ground.

# 5.5 SCSI bus


Communication on the SCSI bus is allowed between only two SCSI devices at any given time. There is a maximum of eight SCSI devices. Each SCSI device has an SCSI ID bit assigned as shown in figure 13. Three sample system configurations are shown in figure 14. There can be any combination of initiators and targets provided there is a least one of each.

When two SCSI devices communicate on the SCSI bus, one acts as an initiator and the other acts as a target. The initiator originates an operation and the target performs the operation. An SCSI device usually has a fixed role as an initiator or target, but some devices may be able to assume either role.


An initiator may address up to eight peripheral devices that are connected to a target. The target may be physically housed within the peripheral device in which case the peripheral device is referred to as an embedded SCSI device

Certain SCSI bus functions are assigned to the initiator and certain SCSI bus functions are assigned to the target The initiator may arbitrate for the SCSI bus and select a particular target. The target may request the transfer o COMMAND, DATA, STATUS, or other information on the DATA BUS, and in some cases it may arbitrate for the SCS bus and reselect an initiator for the purpose of continuing an operation.

Information transfers on the DATA BUS are asynchronous and follow a defined REQ/ACK handshake protocol. One byte of information may be transferred with each handshake on the A cable and, if the wide data transfer option is implemented, one or three bytes of information may be transferred with each handshake on the B cable. An optior is defined for synchronous data transfer.

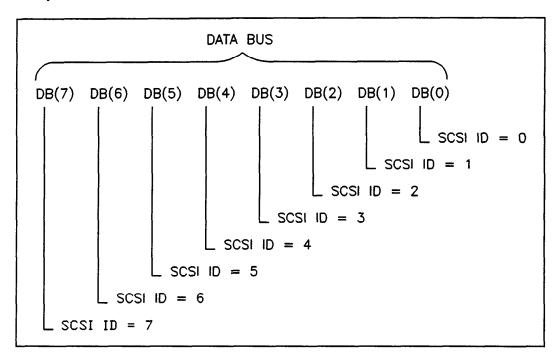

### Figure 13 - SCSI ID bits

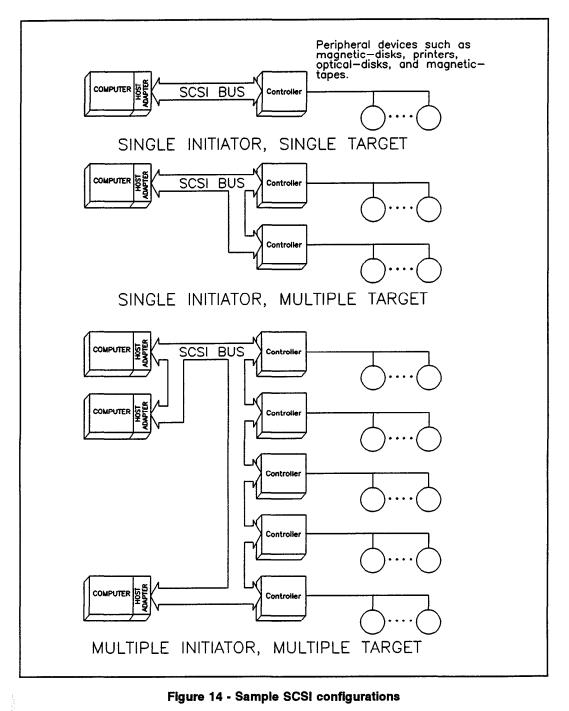

31

# 5.6 SCSI bus signals

There are a total of 18 signals on the A cable and 29 signals on the B cable. A total of 11 signals are used for contro and 36 are used for data (messages, commands, status and data), including parity. These signals are described as follows:

- a) BSY (BUSY). An OR-tied signal that indicates that the bus is being used.
- b) SEL (SELECT). An OR-tied signal used by an initiator to select a target or by a target to reselect an initiator

NOTE 14 The SEL signal was not defined as OR-tied in SCSI-1. It has been defined as OR-tied in SCSI-2 in anticipation of needing another OR-tied signal for future standardization. This does not cause an operational problem in mixing SCSI-1 and SCSI-2 devices.

- c) C/D (CONTROL/DATA). A signal driven by a target that indicates whether CONTROL or DATA information is on the DATA BUS. True indicates CONTROL.
- I/O (INPUT/OUTPUT). A signal driven by a target that controls the direction of data movement on the DATA BUS with respect to an initiator. True indicates input to the initiator. This signal is also used to distinguish between SELECTION and RESELECTION phases.
- e) MSG (MESSAGE). A signal driven by a target during the MESSAGE phase.
- f) **REQ (REQUEST).** A signal driven by a target on the A cable to indicate a request for an ACK information transfer handshake.
- g) **REQB (REQUEST).** A signal driven by a target on the B cable to indicate a request for an ACKB information transfer handshake.
- h) ACK (ACKNOWLEDGE). A signal driven by an initiator on the A cable to indicate an acknowledgment for a REQ information transfer handshake.
- i) **ACKB (ACKNOWLEDGE).** A signal driven by an initiator on the B cable to indicate an acknowledgment for a REQB information transfer handshake.
- j) **ATN (ATTENTION).** A signal driven by an initiator to indicate the ATTENTION condition.
- k) RST (RESET). An OR-tied signal that indicates the RESET condition.
- I) DB(7-0,P) (DATA BUS). Eight data-bit signals, plus a parity-bit signal that form a DATA BUS. DB(7) is the most significant bit and has the highest priority during the ARBITRATION phase. Bit number, significance, and priority decrease downward to DB(0). A data bit is defined as one when the signal value is true and is defined as zero when the signal value is false. Data parity DB(P) shall be odd. Parity is undefined during the ARBITRATION phase.
- m) DB(31-8,P1,P2,P3) (DATA BUS). Twenty-four data-bit signals, plus three parity-bit signals that form an extension to the DATA BUS. DB(P1,P2,P3) are parity bits for DB(15-8), DB(23-16), and DB(31-24) respectively. A data bit is defined as one when the signal value is true and is defined as zero when the signal value is false. Data parity DB(Px) shall be odd.

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

32

## 5.6.1 Signal values

Signals may assume true or false values. There are two methods of driving these signals. In both cases, the signal shall be actively driven true, or asserted. In the case of OR-tied drivers, the driver does not drive the signal to the false state, rather the bias circuitry of the bus terminators pulls the signal false whenever it is released by the drivers at every SCSI device. If any driver is asserted, then the signal is true. In the case of non-OR-tied drivers, the signal may be actively driven false. In this standard, wherever the term negated is used, it means that the signal may be actively driven false, or may be simply released (in which case the bias circuitry pulls it false), at the option of the implementor. The advantage to actively driving signals false during information transfer is that the transition from true to false occurs more quickly and the noise margin is much higher than if the signal is simply released. This facilitates reliable data transfer at high rates, especially at the longer cable lengths used with differential drivers.

#### 5.6.2 OR-tied signals

The BSY, SEL, and RST signals shall be OR-tied only. In the ordinary operation of the bus, the BSY and RST signals may be simultaneously driven true by several drivers. No signals other than BSY, RST, and DB(P) are simultaneously driven by two or more drivers, and any signal other than BSY, SEL, and RST may employ OR-tied or non-OR-tied drivers. DB(P) shall not be driven false during the ARBITRATION phase but may be driven false in other phases. There is no operational problem in mixing OR-tied and non-OR-tied drivers on signals other than BSY and RST.

#### 5.6.3 Signal sources

Table 6 indicates which type of SCSI device is allowed to source each signal. No attempt is made to show if the source is driving asserted, driving negated, or is passive. All SCSI device drivers that are not active sources be in the passive state. The RST signal may be asserted by any SCSI device at any time.

Bus p	hase		A cal	ole sign	nals		В	cable :	signals
		BSY	SEL	C/D, I/O, MSG, REQ	ACK, ATN	DB(7-0) DB(P)	REQB	АСКВ	DB(31-8) DB(P1) DB(P2) DB(P3)
SELEC RESEL COMMAI DATA DATA STATUS MESSA	RATION TION ECTION ND IN OUT S	None All I&T I&T Targ Targ Targ Targ Targ Targ	None Win Init Targ None None None None None	None None Targ Targ Targ Targ Targ Targ Targ	None Init Init Init Init Init Init Init Init	None S ID Init Targ Init Targ Init Targ Targ Init	None None None None Targ Targ None None None	None None None None Init Init None None None	None None None Targ Init None None None
A11:	The sig arbitra	ignal shall be driven by all SCSI devices that are actively ating.						tively	
S ID:	that is release (DB(P))	nique data bit (the SCSI ID) shall be driven by each SCSI device t is actively arbitrating; the other seven data bits shall be eased (i.e., not driven) by this SCSI device. The parity bit (P)) may be released or driven to the true state, but shall never driven to the false state during this phase.						all be ty bit	
I&T:		e signal shall be driven by the initiator, target, or both, as cified in the SELECTION phase and RESELECTION phase.						th, as	
Init:	If driv	If driven, this signal shall be driven only by the active initiator.					initiator.		
None:	device.	The signal shall be released; that is, not be driven by any SCSI device. The bias circuitry of the bus terminators pulls the signal to the false state.					/ SCSI ne signal		
Win:	The sig arbitra		ll be c	lriven b	y the c	ne SCSI de	evice th	nat wins	5
Targ:	If the target.		is driv	ven, it	shall b	e driven c	only by	the act	ive

Table 6 - Signal sources

# 5.7 SCSI bus timing

Unless otherwise indicated, the delay-time measurements for each SCSI device, shown in table 7, shall be calculated from signal conditions existing at that SCSI device's own SCSI bus connection. Thus, these measurements (except cable skew delay) can be made without considering delays in the cable. The timing characteristics of each signal are described in the following paragraphs.

Table 7 - SCSI bus timing values

Timing description	Timing value
Arbitration delay	2,4 µs
Assertion period	90 ns
Bus clear delay	800 ns
Bus free delay	800 ns
Bus set delay	1,8 µs
Bus settle delay	400 ns
Cable skew delay	10 ns
Data release delay	400 ns
Deskew delay	45 ns
Disconnection delay	200 µs
Hold time	45 ns
Negation period	90 ns
Power-on to selection time	10 s recommended
Reset to selection time	250 ms recommended
Reset hold time	25 µs
Selection abort time	200 µs 250 ms recommended
Selection time-out delay	
Transfer period	set during an SDTR message 30 ns
Fast assertion period	5 ns
Fast cable skew delay Fast doskow delay	20 ns
Fast deskew delay Fast hold time	10 ns
Fast negation period	30 ns
rast negation period	00 113

### 5.7.1 Arbitration delay

The minimum time an SCSI device shall wait from asserting BSY for arbitration until the DATA BUS can be examined to see if arbitration has been won. There is no maximum time.

#### 5.7.2 Assertion period

The minimum time that a target shall assert REQ (or REQB) while using synchronous data transfers. Also, the minimum time that an initiator shall assert ACK (or ACKB) while using synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

#### 5.7.3 Bus clear delay

The maximum time for an SCSI device to stop driving all bus signals after:

- a) The BUS FREE phase is detected (see 6.1.1)
- b) SEL is received from another SCSI device during the ARBITRATION phase
- c) The transition of RST to true.

For the first condition above, the maximum time for an SCSI device to clear the bus is 1200 nanoseconds from BSY and SEL first becoming both false. If an SCSI device requires more than a bus settle delay to detect BUS FREE phase, it shall clear the bus within a bus clear delay minus the excess time.

## 5.7.4 Bus free delay

The minimum time that an SCSI device shall wait from its detection of the BUS FREE phase (see 6.1.1) until its assertion of BSY when going to the ARBITRATION phase.

## 5.7.5 Bus set delay

The maximum time for an SCSI device to assert BSY and its SCSI ID bit on the DATA BUS after it detects BUS FREE phase (see 6.1.1) for the purpose of entering the ARBITRATION phase.

## 5.7.6 Bus settle delay

The minimum time to wait for the bus to settle after changing certain control signals as called out in the protocol definitions.

## 5.7.7 Cable skew delay

The maximum difference in propagation time allowed between any two SCSI bus signals measured between any two SCSI devices.

## 5.7.8 Data release delay

The maximum time for an initiator to release the DATA BUS signals following the transition of the I/O signal from false to true.

## 5.7.9 Deskew delay

The minimum time required for deskew of certain signals.

## 5.7.10 Disconnection delay

The minimum time that a target shall wait after releasing BSY before participating in an ARBITRATION phase when honouring a DISCONNECT message from the initiator.

## 5.7.11 Hold time

The minimum time added between the assertion of REQ (or REQB) or ACK (or ACKB) and the changing of the data lines to provide hold time in the initiator or target while using synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

### 5.7.12 Negation period

The minimum time that a target shall negate REQ (or REQB) while using synchronous data transfers. Also, the minimum time that an initiator shall negate ACK (or ACKB) while using synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

### 5.7.13 Power-on to selection time

The recommended maximum time from power application until an SCSI target is able to respond with appropriate status and sense data to the TEST UNIT READY, INQUIRY, and REQUEST SENSE commands.

## 5.7.14 Reset to selection time

The recommended maximum time after a hard RESET condition until an SCSI target is able to respond with appropriate status and sense data to the TEST UNIT READY, INQUIRY, and REQUEST SENSE commands.

## 5.7.15 Reset hold time

The minimum time for which RST is asserted. There is no maximum time.

### 5.7.16 Selection abort time

The maximum time that a target (or initiator) shall take from its most recent detection of being selected (or reselected) until asserting a BSY response. This time-out is required to ensure that a target (or initiator) does not assert BSY after a SELECTION (or RESELECTION) phase has been aborted. This is not the selection time-out period; see 6.1.3.1 and 6.1.4.2 for a complete description.

## 5.7.17 Selection time-out delay

The minimum time that an SCSI device should wait for a BSY response during the SELECTION or RESELECTION phase before starting the time-out procedure.

Note 15 The selection time-out delay is only a recommended time period.

## 5.7.18 Transfer period

The minimum time allowed between the leading edges of successive REQ pulses or of successive ACK pulses while using synchronous data transfers. (See 6.1.5.2 and 6.6.21.)

## 5.8 Fast synchronous transfer option

When devices negotiate a synchronous data transfer period of less than 200 ns they are said to be using fast synchronous data transfers. Devices that negotiate a synchronous data transfer period greater than or equal to 200 ns use timing parameters specified in 5.7. When a fast synchronous data transfer period is negotiated, those specific times redefined in this section are used; those not redefined remain the same. The minimum synchronous data transfer period is 100 ns.

### 5.8.1 Fast assertion period

The minimum time that a target shall assert REQ (or REQB) while using fast synchronous data transfers. It is also the minimum time that an initiator shall assert ACK (or ACKB) while using fast synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

### 5.8.2 Fast cable skew delay

The maximum difference in propagation time allowed between any two SCSI bus signals measured between any two SCSI devices while using fast synchronous data transfers.

### 5.8.3 Fast deskew delay

The minimum time required for deskew of certain signals while using fast synchronous data transfers.

### 5.8.4 Fast hold time

The minimum time added between the assertion of REQ (or REQB) or ACK (or ACKB) and the changing of the data lines to provide hold time in the initiator or target while using fast synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

## 5.8.5 Fast negation period

The minimum time that a target shall negate REQ (or REQB) while using fast synchronous data transfers. Also, the minimum time that an initiator shall negate ACK (or ACKB) while using fast synchronous data transfers. REQB and ACKB timings only apply to optional wide data transfers.

# 6 Logical characteristics

# 6.1 SCSI bus phases

The SCSI architecture includes eight distinct phases:

- a) BUS FREE phase
- b) ARBITRATION phase
- c) SELECTION phase
- d) **RESELECTION** phase
- e) COMMAND phase -
- f) DATA phase
- These phases are collectively termed the information transfer phases.
- g) STATUS phase || h) MESSAGE phase -!!

The SCSI bus can never be in more than one phase at any given time. In the following descriptions, signals that are not mentioned shall not be asserted.

# 6.1.1 BUS FREE phase

The BUS FREE phase indicates that there is no current I/O process and that the SCSI bus is available for a connection.

SCSI devices shall detect the BUS FREE phase after the SEL and BSY signals are both false for at least a bus settle delay.

SCSI devices shall release all SCSI bus signals within a bus clear delay after the BSY and SEL signals become continuously false for a bus settle delay. If an SCSI device requires more than a bus settle delay to detect the BUS FREE phase then it shall release all SCSI bus signals within a bus clear delay minus the excess time to detect the BUS FREE phase. The total time to clear the SCSI bus shall not exceed a bus settle delay plus a bus clear delay.

During normal operation the BUS FREE phase is entered when a target releases the BSY signal. However, the BUS FREE phase may be entered following the release of the SEL signal after a SELECTION or RESELECTION phase time-out.

Initiators normally do not expect BUS FREE phase to begin because of the target's release of the BSY signal except after one of the following occurrences:

- a) after a reset condition is detected;
- b) after an ABORT message is successfully received by a target;
- c) after a BUS DEVICE RESET message is successfully received by a target;
- d) after a DISCONNECT message is successfully transmitted from a target (see 6.6.6);
- e) after a COMMAND COMPLETE message is successfully transmitted from a target (see 6.6.5);
- f) after a RELEASE RECOVERY message is successfully received by a target;
- g) after an ABORT TAG message is successfully received by a target;
- h) after a CLEAR QUEUE message is successfully received by a target.

If an initiator detects the release of the BSY signal by the target at any other time, the target is indicating an error condition to the initiator. The target may perform this transition to the BUS FREE phase independent of the state of the ATN signal. The initiator shall manage this condition as an unsuccessful I/O process termination. The target terminates the I/O process by clearing all pending data and status information for the affected nexus. The target may optionally prepare sense data that may be retrieved by a REQUEST SENSE command.

## 6.1.2 ARBITRATION phase

The ARBITRATION phase allows one SCSI device to gain control of the SCSI bus so that it can initiate or resume ar I/O process.

The procedure for an SCSI device to obtain control of the SCSI bus is as follows:

a) The SCSI device shall first wait for the BUS FREE phase to occur. The BUS FREE phase is detected whenever both the BSY and SEL signals are simultaneously and continuously false for a minimum of a bus settle delay

NOTE 16 This bus settle delay is necessary because a transmission line phenomenon known as a wired-OR glitch may cause the BSY signal to briefly appear false, even though it is being driven true.

- b) The SCSI device shall wait a minimum of a bus free delay after detection of the BUS FREE phase (i.e. after the BSY and SEL signals are both false for a bus settle delay) before driving any signal.
- c) Following the bus free delay in step (b), the SCSI device may arbitrate for the SCSI bus by asserting both the BSY signal and its own SCSI ID, however the SCSI device shall not arbitrate (i.e. assert the BSY signal and its SCSI ID) if more than a bus set delay has passed since the BUS FREE phase was last observed.

NOTE 17 There is no maximum delay before asserting the BSY signal and the SCSI ID following the bus free delay in step (b) as long as the bus remains in the BUS FREE phase. However, SCSI devices that delay longer than a bus settle delay plus a bus set delay from the time when the BSY and SEL signals first become false may fail to participate in arbitration when competing with faster SCSI devices.

d) After waiting at least an arbitration delay (measured from its assertion of the BSY signal) the SCSI device shall examine the DATA BUS. If a higher priority SCSI ID bit is true on the DATA BUS (DB(7) is the highest), then the SCSI device has lost the arbitration and the SCSI device may release its signals and return to step (a). If no higher priority SCSI ID bit is true on the DATA BUS, then the SCSI device has won the arbitration and it shall assert the SEL signal. Any SCSI device other than the winner has lost the arbitration and shall release the BSY signal and its SCSI ID bit within a bus clear delay after the SEL signal becomes true. An SCSI device that loses arbitration may return to step (a).

NOTES

18 Step d) above requires that any device complete the arbitration phase to the point of SEL being asserted if it begins the arbitration phase as stated in step c). This precludes the possibility of the bus being hung. 19 It is recommended that new implementations wait for the SEL signal to become true before releasing the BSY signal and SCSI ID bit when arbitration is lost.

e) The SCSI device that wins arbitration shall wait at least a bus clear delay plus a bus settle delay after asserting

the SEL signal before changing any signals.

NOTE 20 The SCSI ID bit is a single bit on the DATA BUS that corresponds to the SCSI device's unique SCSI address. All other DATA BUS bits shall be released by the SCSI device. Parity is not valid during the ARBITRATION phase. During the ARBITRATION phase, DB(P) may be released or asserted, but shall not be actively driven false.

### 6.1.3 SELECTION phase

The SELECTION phase allows an initiator to select a target for the purpose of initiating some target function (e.g., READ or WRITE command). During the SELECTION phase the I/O signal is negated so that this phase can be distinguished from the RESELECTION phase.

The SCSI device that won the arbitration has both the BSY and SEL signals asserted and has delayed at least a bus clear delay plus a bus settle delay before ending the ARBITRATION phase. The SCSI device that won the arbitration becomes an initiator by not asserting the I/O signal.

The initiator shall set the DATA BUS to a value that is the OR of its SCSI ID bit and the target's SCSI ID bit and it shall assert the ATN signal (indicating that a MESSAGE OUT phase is to follow the SELECTION phase). The initiator shall

then wait at least two deskew delays and release the BSY signal. The initiator shall then wait at least a bus settle delay before looking for a response from the target.

The target shall determine that it is selected when the SEL signal and its SCSI ID bit are true and the BSY and I/O signals are false for at least a bus settle delay. The selected target may examine the DATA BUS in order to determine the SCSI ID of the selecting initiator. The selected target shall then assert the BSY signal within a selection abort time of its most recent detection of being selected; this is required for correct operation of the selection time-out procedure.

The target shall not respond to a selection if bad parity is detected. Also, if more than two SCSI ID bits are on the DATA BUS, the target shall not respond to selection.

NOTE 21 Although an SCSI-2 initiator may not use the single initiator option or the selection without asserting ATN option of SCSI-1, an SCSI-2 target may elect to support these options for compatibility with SCSI-1 initiators. When doing so the SCSI-2 target responds as described in the SCSI-1 standard.

No less than two deskew delays after the initiator detects the BSY signal is true, it shall release the SEL signal and may change the DATA BUS. The target shall wait until the SEL signal is false before asserting the REQ signal to enter an information transfer phase.

## 6.1.3.1 SELECTION time-out procedure

Two optional selection time-out procedures are specified for clearing the SCSI bus if the initiator waits a minimum of a selection time-out delay and there has been no BSY signal response from the target:

- a) Optionally, the initiator shall assert the RST signal (see 6.2.2);
- b) Optionally, the initiator shall continue asserting the SEL and ATN signals and shall release the DATA BUS. If the initiator has not detected the BSY signal to be true after at least a selection abort time plus two deskew delays, the initiator shall release the SEL and ATN signals allowing the SCSI bus to go to the BUS FREE phase. SCSI devices shall ensure that when responding to selection that the selection was still valid within a selection abort time of their assertion of the BSY signal. Failure to comply with this requirement could result in an improper selection (two targets connected to the same initiator, wrong target connected to an initiator, or a target connected to no initiator).

## 6.1.4 RESELECTION phase

RESELECTION is an optional phase that allows a target to reconnect to an initiator for the purpose of continuing some operation that was previously started by the initiator but was suspended by the target, (i.e. the target disconnected by allowing a BUS FREE phase to occur before the operation was complete).

# 6.1.4.1 RESELECTION

Upon completing the ARBITRATION phase, the winning SCSI device has both the BSY and SEL signals asserted and has delayed at least a bus clear delay plus a bus settle delay. The winning SCSI device becomes a target by asserting the I/O signal. The winning SCSI device shall also set the DATA BUS to a value that is the logical OR of its SCSI ID bit and the initiator's SCSI ID bit. The target shall wait at least two deskew delays and release the BSY signal. The target shall then wait at least a bus settle delay before looking for a response from the initiator.

The initiator shall determine that it is reselected when the SEL and I/O signals and its SCSI ID bit are true and the BSY signal is false for at least a bus settle delay. The reselected initiator may examine the DATA BUS in order to determine the SCSI ID of the reselecting target. The reselected initiator shall then assert the BSY signal within a selection abort time of its most recent detection of being reselected; this is required for correct operation of the time-out procedure. The initiator shall not respond to a RESELECTION phase if bad parity is detected. Also, the initiator shall not respond to a RESELECTION phase if other than two SCSI ID bits are on the DATA BUS.

After the target detects the BSY signal is true, it shall also assert the BSY signal and wait at least two deskew delays and then release the SEL signal. The target may then change the I/O signal and the DATA BUS. After the reselected

initiator detects the SEL signal is false, it shall release the BSY signal. The target shall continue asserting the BS signal until it relinquishes the SCSI bus.

NOTE 22 When the target is asserting the BSY signal, a transmission line phenomenon known as a wired-OR glitch may cause the BSY signal to appear false for up to a round-trip propagation delay following the release of the BSY signal by the initiator. This is the reason why the BUS FREE phase is recognized only after both the BSY and SEL signals are continuously false for a minimum of a bus settle delay. Cables longer than 25 m should not be used even if the chosen driver, receiver, and cable provide adequate noise margins, because they increase the duration of the glitch and could cause SCSI devices to inadvertently detect the BUS FREE phase.

#### 6.1.4.2 RESELECTION time-out procedure

Two optional RESELECTION time-out procedures are specified for clearing the SCSI bus during a RESELECTIO phase if the target waits a minimum of a selection time-out delay and there has been no BSY signal response fror the initiator:

- a) Optionally, the target shall assert the RST signal (see 6.2.2);
- b) Optionally, the target shall continue asserting the SEL and I/O signals and shall release all DATA BUS signals. If the target has not detected the BSY signal to be true after at least a selection abort time plus two desked delays, the target shall release the SEL and I/O signals allowing the SCSI bus to go to the BUS FREE phase SCSI devices that respond to the RESELECTION phase shall ensure that the reselection was still valid within a selection abort time of their assertion of the BSY signal. Failure to comply with this requirement could resu in an improper reselection (two initiators connected to the same target or the wrong initiator connected to target).

#### 6.1.5 Information transfer phases

NOTE 23 The COMMAND, DATA, STATUS, and MESSAGE phases are all grouped together as the information transfer phases because they are all used to transfer data or control information via the DATA BUS. The actual content of the information is beyond the scope of this section.

The C/D, I/O, and MSG signals are used to distinguish between the different information transfer phases (see table 8). The target drives these three signals and therefore controls all changes from one phase to another. The initiato can request a MESSAGE OUT phase by asserting the ATN signal, while the target can cause the BUS FREE phase by releasing the MSG, C/D, I/O, and BSY signals.

The information transfer phases use one or more REQ/ACK handshakes to control the information transfer. Each REQ/ACK handshake allows the transfer of one byte of information. During the information transfer phases the BS' signal shall remain true and the SEL signal shall remain false. Additionally, during the information transfer phases the target shall continuously envelope the REQ/ACK handshake(s) with the C/D, I/O, and MSG signals in such a manner that these control signals are valid for a bus settle delay before the assertion of the REQ signal of the firs handshake and remain valid until after the negation of the ACK signal at the end of the handshake of the last transfer of the phase.

#### NOTES

24 After the negation of the ACK signal of the last transfer of the phase, the target may prepare for a new phase by asserting or negating the C/D, I/O, and MSG signals. These signals may be changed together or individually. They may be changed in any order and may be changed more than once. It is desirable that each line change only once. A new phase does not begin until the REQ signal is asserted for the first byte of the new phase.

25 A phase is defined as ending when the C/D, I/O, or MSG signals change after the negation of the ACK signal. The time between the end of a phase and the assertion of the REQ signal beginning a new phase is undefined. An initiator is allowed to anticipate a new phase based on the previous phase, the expected new phase, and early information provided by changes in the C/D, I/O, and MSG signals. However, the anticipated phase is not valid until the REQ signal is asserted at the beginning of the next phase.

Sign	al	Phase name	Direction of transfer Comment
MSG C/D	1/0		
0 0 0 0 0 1 0 1 1 0 1 0	0 1 0 1 0	DATA OUT DATA IN COMMAND STATUS *	Initiator to target \ Data Initiator from target / phase Initiator to target Initiator from target
1 1 1 1	0	MESSAGE OUT MESSAGE IN	Initiator to target \ Message Initiator from target / phase * = Reserved for future standardization

#### Table 8 - Information transfer phases

### 6.1.5.1 Asynchronous information transfer

The target shall control the direction of information transfer by means of the I/O signal. When the I/O signal is true, information shall be transferred from the target to the initiator. When the I/O signal is false, information shall be transferred from the target.

If the I/O signal is true (transfer to the initiator), the target shall first drive the DB(7-0,P) signals to their desired values, delay at least one deskew delay plus a cable skew delay, then assert the REQ signal. The DB(7-0,P) signals shall remain valid until the ACK signal is true at the target. The initiator shall read the DB(7-0,P) signals after the REQ signal is true, then indicate its acceptance of the data by asserting the ACK signal. When the ACK signal becomes true at the target, the target may change or release the DB(7-0,P) signals and shall negate the REQ signal. After the REQ signal is false the initiator shall then negate the ACK signal. After the ACK signal is false the initiator shall then asserting the REQ signal is false the target may continue the transfer by driving the DB(7-0,P) signals and asserting the REQ signal, as described above.

If the I/O signal is false (transfer to the target) the target shall request information by asserting the REQ signal. The initiator shall drive the DB(7-0,P) signals to their desired values, delay at least one deskew delay plus a cable skew delay and assert the ACK signal. The initiator shall continue to drive the DB(7-0,P) signals until the REQ signal is false. When the ACK signal becomes true at the target, the target shall read the DB(7-0,P), signals then negate the REQ signal. When the REQ signal becomes false at the initiator, the initiator may change or release the DB(7-0,P) signals and shall negate the ACK signal. After the ACK signal is false the target may continue the transfer by asserting the REQ signal, as described above.

#### 6.1.5.2 Synchronous data transfer

Synchronous data transfer is optional and is only used in data phases. It shall be used in a data phase if a synchronous data transfer agreement has been established (see 6.6.21). The agreement specifies the REQ/ACK offset and the minimum transfer period.

The REQ/ACK offset specifies the maximum number of REQ pulses that can be sent by the target in advance of the number of ACK pulses received from the initiator, establishing a pacing mechanism. If the number of REQ pulses exceeds the number of ACK pulses by the REQ/ACK offset, the target shall not assert the REQ signal until after the leading edge of the next ACK pulse is received. For successful completion of the data phase the number of ACK and REQ pulses shall be equal.

The target shall assert the REQ signal for a minimum of an assertion period. The target shall then wait at least the greater of a transfer period from the last transition of the REQ signal to true or a minimum of a negation period from the last transition of the REQ signal to false before again asserting the REQ signal.

The initiator shall send one pulse on the ACK signal for each REQ pulse received. The ACK signal may be asserted as soon as the leading edge of the corresponding REQ pulse has been received. The initiator shall assert the ACK signal for a minimum of an assertion period. The initiator shall wait at least the greater of a transfer period from the

last transition of the ACK signal to true or for a minimum of a negation period from the last transition of the ACK signa to false before asserting the ACK signal.

If the I/O signal is true (transfer to the initiator), the target shall first drive the DB(7-0,P) signals to their desired values wait at least one deskew delay plus one cable skew delay, then assert the REQ signals. The DB(7-0,P) signals shal be held valid for a minimum of one deskew delay plus one cable skew delay plus one hold time after the assertior of the REQ signal. The target shall assert the REQ signal for a minimum of an assertion period. The target may then negate the REQ signal and change or release the DB(7-0,P) signals. The initiator shall read the value on the DB(7-0,P) signals within one hold time of the transition of the REQ signal to true. The initiator shall then respond with an ACK pulse.

If the I/O signal is false (transfer to the target), the initiator shall transfer one byte for each REQ pulse received. After receiving the leading edge of a REQ pulse, the initiator shall first drive the DB(7-0,P) signals to their desired values, delay at least one deskew delay plus one cable skew delay, then assert the ACK signal. The initiator shall hold the DB(7-0,P) signals valid for at least one deskew delay plus one cable skew delay plus one hold time after the assertion of the ACK signal. The initiator shall assert the ACK signal for a minimum of an assertion period. The initiator may then negate the ACK signal and may change or release the DB(7-0,P) signals. The target shall read the value of the DB(7-0,P) signals within one hold time of the transition of the ACK signal to true.

NOTE 26 The description in SCSI-1 allowed some implementors to presume that the leading edge of the first REQ pulse beyond the REQ/ACK offset agreement would not occur until after the trailing edge of the last ACK pulse within the agreement. Devices implemented with this understanding may be subject to data destruction when in synchronous data transfer mode with devices that issue the leading edge of the next REQ pulse, at the boundary of the agreement, as soon as the leading edge of the last ACK pulse within the agreement is received. Implementors using devices of the former type in initiator designs may ensure data integrity by restricting the synchronous offset agreement to values smaller than the maximum nominally offered by their device.

### 6.1.5.3 Wide data transfer

Wide data transfer is optional and may be used in the DATA phase only if a non-zero wide data transfer agreement is in effect (see WIDE DATA TRANSFER REQUEST message, 6.6.23). The messages determine the use of wide mode by both SCSI devices and establish a data path width to be used during the DATA phase.

Wide data transfers of 16- or 32-bits may be established. Targets and initiators that support 32-bit wide transfers should also support 16-bit wide transfers. All SCSI devices shall support 8-bit data transfers.

During 16-bit wide data transfers, the first logical data byte for each data phase shall be transferred across the DB(7-0,P) signals on the A cable and the second logical data byte shall be transferred across the DB(15-8,P1) signals on the B cable. Subsequent pairs of data bytes are likewise transferred in parallel across the A and B cables (see figure 15).

NOTE 27 X3T10 is documenting an alternate 16-bit single-cable solution and an alternate 32-bit solution and expects to be able to remove the B cable definition in a future version of SCSI.

During 32-bit wide data transfers, the first logical data byte for each data phase shall be transferred across the DB(7-0,P) signals on the A cable and the second, third, and fourth logical data bytes shall be transferred across the DB(15-8,P1), DB(23-16,P2), and DB(31-24,P3) signals, respectively, on the B cable. Subsequent groups of four data bytes are likewise transferred in parallel across the A and B cables (see figure 15).

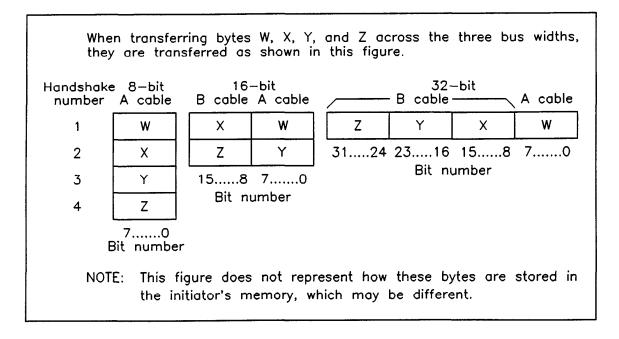


Figure 15 - Wide SCSI byte ordering

If the last data byte transferred does not fall on the DB(15-8,P1) signals for a 16-bit wide transfer or the DB(31-24,P3) signals for a 32-bit wide transfer, then the values of the remaining higher-numbered bits are undefined. However, parity bits for these undefined bytes shall be valid for whatever data is placed on the bus.

To ensure proper data integrity, certain sequence requirements shall be met between the REQ/ACK handshakes on the A cable and the REQB/ACKB handshakes on the B cable:

- a) The REQB and ACKB signals shall only be asserted during data phases while a nonzero wide data transfer agreement is in effect. These signals shall not be asserted during other phases.
- b) The same information transfer mode (asynchronous or synchronous) shall be used for both the A cable and the B cable. If synchronous data transfer mode is in effect, the same REQ/ACK offset and transfer period shall be used for both cables.
- c) The information transfer procedures defined in 6.1.5.1 and 6.1.5.2 for the A cable (the REQ, ACK, and DB(7-0,P) signals) shall also apply to the B cable (the REQB, ACKB, and DB(31-8,P1,P2,P3) signals). The only means available for a target to manage the timing relationship between the signals on the two cables is its management of the REQ and REQB signals. Similarly, the only means for the initiator to manage the timing between the two cables is its management of the ACK and ACKB signals.
- d) The target shall ensure that the number of REQ/ACK handshakes and the number of REQB/ACKB handshakes in a data phase are equal before it changes to another phase. The target shall not change the phase until the ACK and ACKB signals have both become false for the last REQ/ACK handshake and the last REQB/ACKB handshake.

NOTE 28 If any violations of these rules are detected by the target, the target may attempt to end the data phase and return CHECK CONDITION status. If it is impossible to correctly terminate the data phase, the target may abnormally terminate the I/O process by an unexpected disconnect. If any violations of these rules are detected by the initiator, the initiator may attempt to send an INITIATOR DETECTED ERROR message to the target. If the initiator is unable to terminate the I/O process normally, it may generate the reset condition.

## 6.1.6 COMMAND phase

The COMMAND phase allows the target to request command information from the initiator.

The target shall assert the C/D signal and negate the I/O and MSG signals during the REQ/ACK handshake(s) of this phase.

### 6.1.7 Data phase

The data phase is a term that encompasses both the DATA IN phase and the DATA OUT phase.

## 6.1.7.1 DATA IN phase

The DATA IN phase allows the target to request that data be sent to the initiator from the target.

The target shall assert the I/O signal and negate the C/D and MSG signals during the REQ/ACK handshake(s) of this phase.

## 6.1.7.2 DATA OUT phase

The DATA OUT phase allows the target to request that data be sent from the initiator to the target.

The target shall negate the C/D, I/O, and MSG signals during the REQ/ACK handshake(s) of this phase.

## 6.1.8 STATUS phase

The STATUS phase allows the target to request that status information be sent from the target to the initiator.

The target shall assert the C/D and I/O signals and negate the MSG signal during the REQ/ACK handshake of this phase.

### 6.1.9 Message phase

The message phase is a term that references either a MESSAGE IN, or a MESSAGE OUT phase. Multiple messages may be sent during either phase. The first byte transferred in either of these phases shall be either a single-byte message or the first byte of a multiple-byte message. Multiple-byte messages shall be wholly contained within a single message phase.

## 6.1.9.1 MESSAGE IN phase

The MESSAGE IN phase allows the target to request that message(s) be sent to the initiator from the target.

The target shall assert the C/D, I/O, and MSG signals during the REQ/ACK handshake(s) of this phase.

## 6.1.9.2 MESSAGE OUT phase

The MESSAGE OUT phase allows the target to request that message(s) be sent from the initiator to the target. The target invokes this phase in response to the attention condition created by the initiator (see 6.2.1).

The target shall assert the C/D and MSG signals and negate the I/O signal during the REQ/ACK handshake(s) of this phase. The target shall handshake byte(s) in this phase until the ATN signal is negated, except when rejecting a message.

If the target detects one or more parity error(s) on the message byte(s) received, it may indicate its desire to retry the message(s) by asserting the REQ signal after detecting the ATN signal has gone false and prior to changing to any other phase. The initiator, upon detecting this condition, shall resend all of the previous message byte(s) in the

same order as previously sent during this phase. When resending more than one message byte, the initiator shall assert the ATN signal at least two deskew delays prior to asserting the ACK signal on the first byte and shall maintain the ATN signal asserted until the last byte is sent as described in 6.2.1.

If the target does not retry the MESSAGE OUT phase or it exhausts its retry limit it may

- a) return CHECK CONDITION status and set the sense key to ABORTED COMMAND and the additional sense code to MESSAGE ERROR or;
- b) indicate an exception condition by performing an unexpected disconnect.

The target may act on messages as received as long as no parity error is detected and may ignore all remaining messages sent under one ATN condition after a parity error is detected. When a sequence of messages is resent by an initiator because of a target detected parity error, the target shall not act on any message which it acted on the first time received.

If the target receives all of the message byte(s) successfully (i.e. no parity errors), it shall indicate that it does not wish to retry by changing to any information transfer phase other than the MESSAGE OUT phase and transfer at least one byte. The target may also indicate that it has successfully received the message byte(s) by changing to the BUS FREE phase (e.g. ABORT or BUS DEVICE RESET messages).

## 6.1.10 Signal restrictions between phases

When the SCSI bus is between two information transfer phases, the following restrictions shall apply to the SCSI bus signals:

- a) The BSY, SEL, REQ, REQB, ACK and ACKB signals shall not change.
- b) The C/D, I/O, MSG, and DATA BUS signals may change. When switching the DATA BUS direction from out (initiator driving) to in (target driving), the target shall delay driving the DATA BUS by at least a data release delay plus a bus settle delay after asserting the I/O signal and the initiator shall release the DATA BUS no later than a data release delay after the transition of the I/O signal to true. When switching the DATA BUS direction from in (target driving) to out (initiator driving), the target shall release the DATA BUS no later than a deskew delay after negating the I/O signal.
- c) The ATN and RST signals may change as defined under the descriptions for the attention condition (see 6.2.1) and reset condition (see 6.2.2).

# 6.2 SCSI bus conditions

The SCSI bus has two asynchronous conditions; the attention condition and the reset condition. These conditions cause the SCSI device to perform certain actions and can alter the phase sequence.

Furthermore, SCSI devices may not all be powered-on at the same time. This standard does not address power sequencing issues. However, each SCSI device, as it is powered on, should perform appropriate internal reset operations and internal test operations. Following a power-on to selection time after power-on, SCSI targets should be able to respond with appropriate status and sense data to the TEST UNIT READY, INQUIRY, and REQUEST SENSE commands.

### 6.2.1 Attention condition

The attention condition allows an initiator to inform a target that the initiator has a message ready. The target may get this message by performing a MESSAGE OUT phase.

The initiator creates the attention condition by asserting ATN at any time except during the ARBITRATION or BUS FREE phases.

The initiator shall negate the ATN signal at least two deskew delays before asserting the ACK signal while transferring the last byte of the messages indicated with a Yes in table 10. If the target detects that the initiator failed to mee this requirement, then the target shall go to BUS FREE phase (see unexpected disconnect, 6.1.1).

The initiator shall assert the ATN signal at least two deskew delays before negating the ACK signal for the last byte transferred in a bus phase for the attention condition to be honoured before transition to a new bus phase. Asserting the ATN signal later might not be honoured until a later bus phase and then may not result in the expected action

A target shall respond with MESSAGE OUT phase as follows:

- a) If the ATN signal becomes true during a COMMAND phase, the target shall enter MESSAGE OUT phase afte transferring part or all of the command descriptor block bytes.
- b) If the ATN signal becomes true during a DATA phase, the target shall enter MESSAGE OUT phase at the target's earliest convenience (often, but not necessarily on a logical block boundary). The initiator shall continue REQ/ACK handshakes until it detects the phase change.
- c) If the ATN signal becomes true during a STATUS phase, the target shall enter MESSAGE OUT phase after the status byte has been acknowledged by the initiator.
- d) If the ATN signal becomes true during a MESSAGE IN phase, the target shall enter MESSAGE OUT phase before it sends another message. This permits a MESSAGE PARITY ERROR message from the initiator to be associated with the appropriate message.
- e) If the ATN signal becomes true during a SELECTION phase and before the initiator releases the BSY signal the target shall enter MESSAGE OUT phase immediately after that SELECTION phase.
- f) If the ATN signal becomes true during a RESELECTION phase, the target shall enter MESSAGE OUT phase after the target has sent its IDENTIFY message for that RESELECTION phase.

NOTE 29 The initiator should only assert the ATN signal during a RESELECTION phase to transmit a BUS DEVICE RESET or DISCONNECT message. Other uses may result in ambiguities concerning the nexus.

The initiator shall keep the ATN signal asserted if more than one byte is to be transferred. The initiator may negate the ATN signal at any time except it shall not negate the ATN signal while the ACK signal is asserted during  $\varepsilon$  MESSAGE OUT phase. Normally, the initiator negates the ATN signal while the REQ signal is true and the ACK signal is false during the last REQ/ACK handshake of the MESSAGE OUT phase.

## 6.2.2 Reset condition

The reset condition is used to immediately clear all SCSI devices from the bus. This condition shall take precedence over all other phases and conditions. Any SCSI device may create the reset condition by asserting the RST signa for a minimum of a reset hold time.

All SCSI devices shall release all SCSI bus signals (except the RST signal) within a bus clear delay of the transitior of the RST signal to true. The BUS FREE phase always follows the reset condition.

The effect of the reset condition on I/O processes that have not completed, SCSI device reservations, and SCS device operating modes is determined by whether the SCSI device has implemented the hard reset alternative or the soft reset alternative (one of which shall be implemented) as defined in 6.2.2.1 and 6.2.2.2. The hard and soft rese alternatives are mutually exclusive within a system. A facility for targets to report which reset alternative is implemented is provided in the SftRe bit of the INQUIRY data (see 8.2.5).

NOTE 30 Environmental conditions (e.g. static discharge) may generate brief glitches on the RST signal. It is recommended that SCSI devices not react to these glitches. The manner of rejecting glitches is vendor-specific. The bus clear delay following a RST signal transition to true is measured from the original transition of the RST signal, not from the time that the signal has been confirmed. This limits the time to confirm the RST signal to a maximum of a bus clear delay.

### 6.2.2.1 Hard reset alternative

SCSI devices that implement the hard reset alternative, upon detection of the reset condition, shall:

- a) clear all I/O processes including queued I/O processes.
- b) release all SCSI device reservations.
- c) return any SCSI device operating modes to their appropriate initial conditions, similar to those conditions that would be found after a normal power-on reset. MODE SELECT conditions shall be restored to their last saved values if saved values have been established. MODE SELECT conditions for which no values have been saved shall be returned to their default values.
- d) unit attention condition shall be set (see 7.9).

It is recommended that following a reset to selection time after a hard reset condition ends, SCSI targets be able to respond with appropriate status and sense data to the TEST UNIT READY, INQUIRY, and REQUEST SENSE commands.

#### 6.2.2.2 Soft reset alternative

SCSI devices that implement the soft reset alternative, upon detection of the reset condition, shall:

- a) Attempt to complete any I/O processes which have not completed and that were fully identified
- b) Preserve all SCSI device reservations
- c) Preserve any SCSI device operating modes (MODE SELECT, PREVENT/ALLOW MEDIUM REMOVAL commands, etc.)
- d) Preserve all the information required to continue normal dispatching of I/O processes queued prior to the reset condition.

The soft reset alternative allows an initiator to reset the SCSI bus with minimum disruption to the operation of other initiators in a multiple initiator system. To ensure proper operation the following conditions shall be met.

- a) An initiator shall not consider an I/O process to be fully identified until the IDENTIFY message (and queue tag message, if any) is sent to the target and the target responds by changing to any other information transfer phase and requests that at least one byte be transferred.
- b) A target shall consider an I/O process to be fully identified when it successfully receives the IDENTIFY message and any queue tag message and the initiator negates the ATN signal.
- c) If an initiator selects a logical unit for which there already is an active I/O process with the same queue tag (if any) for the same initiator, the target shall clear the original I/O process and perform the new I/O process.
- d) If a target reselects an initiator to continue an I/O process for which the initiator has no record, the initiator shall abort that I/O process by sending the ABORT or ABORT TAG message, depending on whether the reselecting I/O process is a tagged I/O process.
- e) An initiator shall consider an I/O process to be completed when it negates ACK for a successfully received COMMAND COMPLETE message.
- f) A target shall consider an I/O process to be completed when it detects the transition of ACK to false for the COMMAND COMPLETE message with the ATN signal false.
- g) An initiator shall not negate the ACK signal for the SAVE DATA POINTER message until it has actually saved the data pointer for the I/O process.
- h) A target shall consider the data pointer to be saved when it detects the transition of the ACK signal to false for the SAVE DATA POINTER message with the ATN signal false.
- i) If the reset condition occurs between the time that the target asserts the REQ signal for the SAVE DATA POINTER message and it detects the transition of the ACK signal to false, the target shall terminate the I/O process with CHECK CONDITION status. The target shall set the sense key to ABORTED COMMAND. This is necessary because the target cannot determine whether the data pointer has actually been saved.

NOTE 31 If the ATN signal is true in conditions f) or h), the target would normally switch to MESSAGE OUT phase and attempt to transfer a message byte. If the reset condition occurs before the target successfully receives the message byte, it may assume that the initiator has not successfully received the COMMAND COMPLETE message or the SAVE DATA POINTER message. In the case of COMMAND COMPLETE message, the target may reselect the initiator and attempt to send the COMMAND COMPLETE message again. In the case of the SAVE DATA POINTER message, the target may reselect the initiator and terminate the I/O process as described in condition i).

# 6.3 SCSI bus phase sequences

The order in which phases are used on the SCSI bus follows a prescribed sequence.

The reset condition can abort any phase and is always followed by the BUS FREE phase. Also any other phase can be followed by the BUS FREE phase but many such instances are error conditions (see 6.1.1).

The additional allowable sequences shall be as shown in Figure 16. The normal progression is from the BUS FREE phase to ARBITRATION, from ARBITRATION to SELECTION or RESELECTION, and from SELECTION or RESELECTION to one or more of the information transfer phases (COMMAND, DATA, STATUS, or MESSAGE). The final information transfer phase is normally the MESSAGE IN phase where a DISCONNECT, or COMMAND COMPLETE message is transferred, followed by the BUS FREE phase.

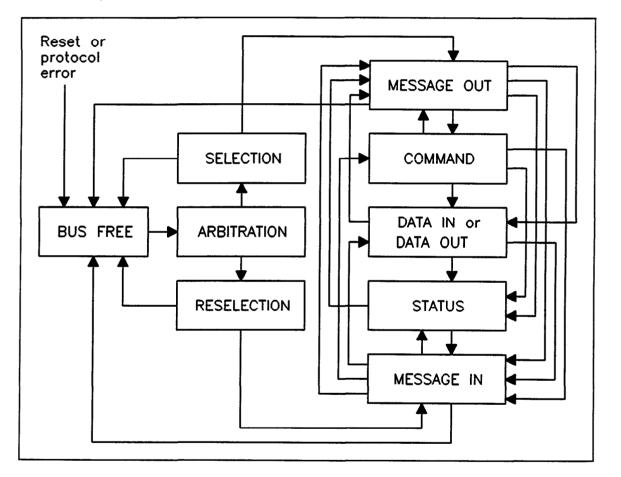



Figure 16 - Phase sequences

# 6.4 SCSI pointers

Consider the system shown in figure 17 in which an initiator and target communicate on the SCSI bus in order to execute an I/O process.

The SCSI architecture provides for a set of three pointers for each I/O process, called the saved pointers. The set of three pointers consist of one for the command, one for the data, and one for the status. When an I/O process becomes active, its three saved pointers are copied into the initiator's set of three current pointers. There is only one set of current pointers in each initiator. The current pointers point to the next command, data, or status byte to be transferred between the initiator's memory and the target. The saved and current pointers reside in the initiator.

The saved command pointer always points to the start of the command descriptor block (see 7.2) for the I/O process. The saved status pointer always points to the start of the status area for the I/O process. The saved data pointer points to the start of the start o

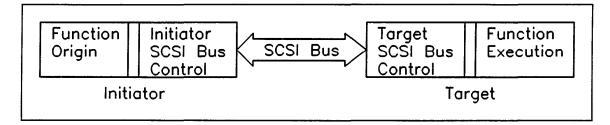

# Figure 17 - Simplified SCSI system

In response to the SAVE DATA POINTER message, the initiator stores the value of the current data pointer into the saved data pointer for that I/O process. The target may restore the current pointers to the saved pointer values for the active I/O process by sending a RESTORE POINTERS message (see 6.6.19) to the initiator. The initiator then copies the set of saved pointers into the set of current pointers. Whenever a target disconnects from the bus, only the set of saved pointers are retained. The set of current pointers is restored from the set of saved pointers upon reconnection of the I/O process.

NOTE 32 Since the data pointer value may be modified by the target before the I/O process ends, it should not be used to test for actual transfer length because it is not reliable.

# 6.5 Message system description

The message system allows communication between an initiator and target for the purpose of interface management. A message may be one, two, or multiple bytes in length. One or more messages may be sent during a single MESSAGE phase, but a message may not be split between multiple MESSAGE phases. The initiator is required to end the MESSAGE OUT phase (by negating ATN) when it sends certain messages identified in table 10.

One-byte, two-byte, and extended message formats are defined. The first byte of the message determines the format as defined in table 9.

Value	Message format
00h	One-byte message (COMMAND COMPLETE)
01h	Extended messages
02h - 1Fh	One-byte messages
20h - 2Fh	Two-byte messages
30h - 7Fh	Reserved
80h - FFh	One-byte message (IDENTIFY)

Table 9	•	Message	format
---------	---	---------	--------

One-byte messages consist of a single byte transferred during a MESSAGE phase. The value of the byte determines which message is to be performed as defined in table 10.

Code	Sup	port	Message Name	Direction	Nogato ATN
	Init	Targ			Negate ATN before last ACK
06h	0	м	ABORT	Out	Yes
ODh	0	0	ABORT TAG see note 1)	Out	Yes
OCh	0	M	BUS DEVICE RESET	Out	Yes
OEh	0	0	CLEAR QUEUE see note 1)	Out	Yes
00h	M	M	COMMAND COMPLETE	In	
04h	0	0	DISCONNECT	In   Out	
04h	0	0	DISCONNECT		Yes
80h+	M	0 M	IDENTIFY IDENTIFY	Out	No
80h+ 23h	0 0	M O	IGNORE WIDE RESIDUE (two bytes)	In Out	NO
230 0Fh	ŏ	l o l	INITIATE RECOVERY	In	
OFh	ŏ	ŏ	INITIATE RECOVERY see note 2)	Out	Yes
05h	M	м	INITIATOR DETECTED ERROR	Out	Yes
OAh	ö	Ö	LINKED COMMAND COMPLETE	In	
OBh	ŏ	ŏ	LINKED COMMAND COMPLETE (WITH FLAG)	In	
09h	M	M	MESSAGE PARITY ERROR	0ut	Yes
07h	M	M	MESSAGE REJECT	In Out	Yes
***	0	0	MODIFY DATA POINTER	In	
08h	M	М	NO OPERATION	Out	Yes
			Queue tag messages (two bytes)		
21h	0	0	HEAD OF QUEUE TAG	Out	No
22h	0	0	ORDERED QUEUE TAG	Out	No
20h	0	0	SIMPLE QUEUE TAG	In Out	No
10h	0	0	RELEASE RECOVERY	Out	Yes
03h	0	0	RESTORE POINTERS	In	
02h	0	0	SAVE DATA POINTER	In	
***	0	0	SYNCHRONOUS DATA TRANSFER REQUEST	In Out	Yes
11h ***	0	0	TERMINATE I/O PROCESS	Out Out	Yes
	0	0	WIDE DATA TRANSFER REQUEST	In Out	Yes
12h-1Fh			Reserved Reserved for two-byte messages		
24h-2Fh 30h-7Fh			Reserved		
Key:	M In Yes No ***	= Ta = Ir = Ir = No = No = Ex	andatory support, 0 = Optional support arget to initiator, Out = Initiator nitiator shall negate ATN before las- nitiator may or may not negate ATN be assage. (see attention condition, 6 bt applicable (tended message (see tables 11 and 12 des 80h through FFh are used for IDD see table 13).	to target, t ACK of me efore last .2.1.) 2)	essage. ACK of
i 2 (	The AE is imp Outbou	lemer and IN	AG and CLEAR QUEUE messages are requited. ITTIATE RECOVERY messages are only value only		

Table 10 - Message codes

Two-byte messages consist of two consecutive bytes transferred during a MESSAGE phase. The value of the first byte determines which message is to be performed as defined in table 10. The second byte is a parameter byte which is used as defined in the message description (see 6.6).

A value of one in the first byte of a message indicates the beginning of a multiple-byte extended message. The minimum number of bytes sent for an extended message is three. The extended message format and the extended message codes are shown in tables 11 and 12, respectively.

Bit Byte	7	6	5	4	3	2	1	0		
0				Extended	message	(01h)				
1				Extended	message	length (n	)			
2		Extended message code (y)								
3				Extended		ongumonto				
n+1			· · · · · · · · · · · · · · · · · · ·	Extended	message	arguments				

Table 11 - Extended message format

The extended message length specifies the length in bytes of the extended message code plus the extended message arguments to follow. Therefore, the total length of the message is equal to the extended message length plus two. A value of zero for the extended message length indicates 256 bytes follow.

The extended message codes are listed in table 12. The extended message arguments are specified within the extended message descriptions.

Code (y)	Description
02h 00h 01h 03h 04h - 7Fh 80h - FFh	Reserved (see note) MODIFY DATA POINTER SYNCHRONOUS DATA TRANSFER REQUEST WIDE DATA TRANSFER REQUEST Reserved Vendor-specific
NOTE - Exte message in	ended message code O2h was used for the EXTENDED IDENTIFY SCSI-1.

The first message sent by the initiator after the SELECTION phase shall be an IDENTIFY, ABORT, or BUS DEVIC RESET message. If a target receives any other message it shall go to BUS FREE phase (see unexpected disconnec 6.1.1).

If the first message is an IDENTIFY message, then it may be immediately followed by other messages, such as th first of a pair of SYNCHRONOUS DATA TRANSFER REQUEST messages. If tagged queuing is used the queue ta message immediately follows the IDENTIFY message (see 6.6.7). The IDENTIFY message establishes a logica connection between the initiator and the specified logical unit or target routine within the target known as an I\_T\_ nexus or I\_T\_R nexus. After the RESELECTION phase, the target's first message shall be IDENTIFY. This allows th I\_T\_L nexus or I\_T\_R nexus to be reestablished. Only one logical unit or target routine shall be identified for an connection. If a target receives a second IDENTIFY message with a different logical unit number or target routin number during a connection, it shall go to BUS FREE phase (see unexpected disconnect, 6.1.1). The treatment of other logical unit addressing errors is described in 7.5.

All initiators shall implement the mandatory messages tabulated in the Init column of table 10. All targets she implement the mandatory messages tabulated in the Targ column of table 10.

Whenever an  $I_T_L$  nexus or  $I_T_R$  nexus is established by an initiator that is allowing disconnection, the initiator she ensure that the current pointers are equal to the saved pointers for that particular logical unit or target routine. A implied restore pointers operation shall occur as a result of a reconnection.

# 6.6 Messages

The SCSI messages are defined in this subclause.

## 6.6.1 ABORT

The ABORT message is sent from the initiator to the target to clear any I/O process for the I\_T\_x nexus. The target shall go to the BUS FREE phase following successful receipt of this message. The pending data, status, and I/O processes for any other nexus shall not be cleared.

If only an I\_T nexus has been established, the target shall go to the BUS FREE phase. No status or message shall be sent for the current I/O process and no other I/O process shall be affected.

NOTES

33 The ABORT message in the case of only an I\_T nexus is useful to an initiator that cannot get an IDENTIFY message through to the target due to parity errors and just needs to end the current connection. Any pending data, status, or queued I/O processes for the I\_T nexus is not affected.

34 It is not possible to abort an I\_T nexus on a reconnection because of item f) in 6.2.1.

It is not an error to issue this message to an I\_T\_x nexus that does not have an active or queued I/O process.

Previously established conditions, including MODE SELECT parameters, reservations, and extended contingent allegiance shall not be changed by the ABORT message.

NOTE 35 The BUS DEVICE RESET, CLEAR QUEUE, ABORT, and ABORT TAG messages provide a means to clear one or more I/O processes prior to normal termination. The BUS DEVICE RESET message clears all I/O processes for all initiators on all logical units and all target routines of the target. The CLEAR QUEUE message clears all I/O processes for all initiators on the specified logical unit or target routine of the target. The ABORT message clears all I/O processes for the selecting initiator on the specified logical unit or target routine of the target. The ABORT message clears all I/O processes for the selecting initiator on the specified logical unit or target routine of the target. The ABORT TAG message clears the current I/O process only.

# 6.6.2 ABORT TAG

The ABORT TAG message shall be implemented if tagged queuing is implemented and may be implemented if untagged queuing is implemented. The target shall go to the BUS FREE phase following successful receipt of this message. The target shall clear the current I/O process. If the target has already started execution of the I/O process, the execution shall be halted. The medium contents may have been modified before the execution was halted. In either case, any pending status or data for the I/O process shall be cleared and no status or ending message shall be sent to the initiator. Pending status, data, and commands for other active or queued I/O processes shall not be affected. Execution of other I/O processes queued for the I\_T\_x nexus shall not be aborted.

Previously established conditions, including MODE SELECT parameters, reservations, and extended contingent allegiance shall not be changed by the ABORT TAG message.

On a reconnection, the ABORT TAG message aborts the current I/O process if it is fully identified. If the I/O process is not fully identified (i.e. an I\_T\_L nexus exists, but the target is reconnecting for an I\_T\_L\_Q nexus), then the I/O process is not aborted and the target goes to the BUS FREE phase.

NOTE 36 A nexus is not fully identified on a reconnection if the ATN signal is asserted during or prior to the IDENTIFY message and the target only has tagged I/O processes for that initiator on that logical unit.

## 6.6.3 BUS DEVICE RESET

The BUS DEVICE RESET message is sent from an initiator to direct a target to clear all I/O processes on that SCSI device. This message forces a hard reset condition to the selected SCSI device. The target shall go to the BUS FREE phase following successful receipt of this message. The target shall create a unit attention condition for al initiators (see 7.9).

# 6.6.4 CLEAR QUEUE

The CLEAR QUEUE message shall be implemented if tagged queuing is implemented and may be implemented if untagged queuing is implemented. The target shall go to the BUS FREE phase following successful receipt of this message. The target shall perform an action equivalent to receiving a series of ABORT messages from each initiator. All I/O processes, from all initiators, in the queue for the specified logical unit shall be cleared from the queue. All active I/O processes shall be terminated. The medium may have been altered by partially executed commands. All pending status and data for that logical unit or target routine for all initiators shall be cleared. No status or message shall be sent for any of the I/O processes. A unit attention condition shall be generated for all other initiators with I/O processes that either were active or were queued for that logical unit or target routine. When reporting the unit attention condition the additional sense code shall be set to COMMANDS CLEARED BY ANOTHER INITIATOR.

Previously established conditions, including MODE SELECT parameters, reservations, and extended contingent allegiance shall not be changed by the CLEAR QUEUE message.

## 6.6.5 COMMAND COMPLETE

The COMMAND COMPLETE message is sent from a target to an initiator to indicate that the execution of an I/O process has completed and that valid status has been sent to the initiator. After successfully sending this message, the target shall go to the BUS FREE phase by releasing the BSY signal. The target shall consider the message transmission to be successful when it detects the negation of ACK for the COMMAND COMPLETE message with the ATN signal false.

NOTE 37 The I/O process may have completed successfully or unsuccessfully as indicated in the status.

### 6.6.6 DISCONNECT

The DISCONNECT message is sent from a target to inform an initiator that the present connection is going to be broken (the target plans to disconnect by releasing the BSY signal), but that a later reconnect will be required in order to complete the current I/O process. This message shall not cause the initiator to save the data pointer. After successfully sending this message, the target shall go to the BUS FREE phase by releasing the BSY signal. The target shall consider the message transmission to be successful when it detects the negation of the ACK signal for the DISCONNECT message with the ATN signal false.

Targets that break data transfers into multiple connections shall end each successful connection (except possibly the last) with a SAVE DATA POINTER - DISCONNECT message sequence.

This message may also be sent from an initiator to a target to instruct the target to disconnect from the SCSI bus. If this option is supported, and after the DISCONNECT message is received, the target shall switch to MESSAGE IN phase, send the DISCONNECT message to the initiator (possibly preceded by SAVE DATA POINTER message), and then disconnect by releasing BSY. After releasing the BSY signal, the target shall not participate in another ARBITRATION phase for at least a disconnection delay or the time limit specified in the disconnect time limit mode parameter (see 8.3.3.2) whichever is greater. If this option is not supported or the target cannot disconnect at the time when it receives the DISCONNECT message from the initiator, the target shall respond by sending a MESSAGE REJECT message to the initiator.

# 6.6.7 IDENTIFY

The IDENTIFY message (see table 13) is sent by either the initiator or the target to establish an  $I_T_L$  nexus or an  $I_T$  nexus.

NOTE 38 Use of the IDENTIFY message to establish an I\_T\_R nexus allows connection to one of up to eight target routines or functions in the target. These target routines are expected to be used for maintenance and diagnostic purposes.

Bit	7	6	5	4	3	2	1	0
	Identify	DiscPriv	LUNTAR	Reserved	Reserved		LUNTRN	

Table 13 - IDENTIFY message format

The identify bit shall be set to one to specify that this is an IDENTIFY message.

A disconnect privilege (DiscPriv) bit of one specifies that the initiator has granted the target the privilege of disconnecting. A DiscPriv bit of zero specifies that the target shall not disconnect. This bit is not defined and shall be set to zero when an IDENTIFY message is sent by a target.

A logical unit target (LUNTAR) bit of zero specifies that the I/O process is directed to or from a logical unit. A LUNTAR bit of one specifies that the I/O process is directed to or from a target routine.

The logical unit number target routine number (LUNTRN) field specifies a logical unit number if the LUNTAR bit is zero. The LUNTRN field specifies a target routine number if the LUNTAR bit is one. The response to an invalid value in the LUNTRN field is described in 7.5.3. Only the INQUIRY and REQUEST SENSE commands are valid for target routines. If a target receives any other command for a target routine, it shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST.

An IDENTIFY message is invalid if a reserved bit is set to one or if the LUNTAR bit is set to one and the target does not implement target routines. A device may respond to an invalid IDENTIFY message by immediately sending a MESSAGE REJECT message or by returning CHECK CONDITION status. If a CHECK CONDITION status is returned, the sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID BITS IN IDENTIFY MESSAGE FIELD.

Only one logical unit number or target routine number shall be identified per I/O process. The initiator may send one or more IDENTIFY messages during a connection. A second IDENTIFY message with a different value in either the LUNTAR bit or LUNTRN field shall not be issued before a BUS FREE phase has occurred; if a target receives a second IDENTIFY message with a different value in either of these fields, it shall go to BUS FREE phase (see unexpected disconnect, 6.1.1). Thus an initiator may change the DiscPriv bit, but may not attempt to switch to another I/O process. (See the DTDC field of the disconnect-reconnect page (8.3.3.2) for additional controls over disconnection.)

An implied RESTORE POINTERS message shall be performed by the initiator prior to the assertion of the ACK signal on the next phase for an inbound IDENTIFY message sent during reconnection.

An implied RESTORE POINTERS message shall be performed by the initiator following successful identification of the nexus during the MESSAGE IN phase of a reconnection and before the negation of the ACK signal for the next transfer following the successful identification.

Identification is considered successful during an initial connection or an initiator reconnect when the target detects no error during the transfer of the IDENTIFY message and an optional queue tag message in the MESSAGE OUT phase immediately following the SELECTION phase. See 6.5 for the ordering of the IDENTIFY and queue tag messages. See 6.1.9.2 for handling target detected errors during the MESSAGE OUT phase.

Identification is considered successful during a target reconnect when the ATN signal is not asserted during the transfer of either the IDENTIFY message or the SIMPLE QUEUE TAG message for an I\_T\_L\_Q nexus in the MESSAGE IN phase immediately following the RESELECTION phase. See clause 6.5 for the ordering of the IDENTIFY and queue tag messages. See 6.2.1, item d), for handling target detected errors during the MESSAGE IN phase.

## 6.6.8 IGNORE WIDE RESIDUE




Table 14 - IGNORE WIDE RESIDUE message format

The IGNORE WIDE RESIDUE message (see table 14) shall be sent from a target to indicate that the number of valic bytes sent during the last REQ/ACK handshake and REQB/ACKB handshake of a DATA IN phase is less than the negotiated transfer width. The ignore field indicates the number of invalid data bytes transferred. This message shal be sent immediately following that DATA IN phase and prior to any other messages. The ignore field is defined ir table 15.

NOTE 39 More than one IGNORE WIDE RESIDUE message may occur during an I/O process.

Ignore	Invalid data bits				
	32-bit transfers	16-bit transfers			
00h 01h	Reserved DB(31-24)	Reserved DB(15-8)			
02h 03h	DB(31-16) DB(31-8)	Reserved Reserved			
04h - FFh	Reserved	Reserved			

Table 15 - Ignore field definition

Even though a byte is invalid its corresponding parity bit shall be valid for the value transferred. For 16-bit transfers DB(31-16) are always invalid and the corresponding parity bits are also invalid.

### 6.6.9 INITIATE RECOVERY

A target that supports extended contingent allegiance shall inform the initiator it is entering this condition by sending an INITIATE RECOVERY message immediately following a CHECK CONDITION or COMMAND TERMINATED status The extended contingent allegiance condition remains in effect until terminated as described in 7.7.

If an asynchronous event occurs, the target may enter an extended contingent allegiance condition by becoming  $\varepsilon$  temporary initiator and sending the INITIATE RECOVERY message following the IDENTIFY message and any queue tag message and before the COMMAND phase of the SEND command that is used to perform the asynchronous event notification (see 7.5.5). The successful transmission of this message establishes the extended contingen allegiance condition which remains in effect until terminated as described in 7.7.

NOTE 40 If the target notifies multiple initiators of the asynchronous event, it should include the INITIATE RECOVERY message in only one of the notifications.

A MESSAGE REJECT response to an INITIATE RECOVERY message indicates that an extended contingent allegiance condition shall not be established. The enabled or disabled state of an extended contingent allegiance (see 8.3.3.1 is not changed by the rejection of an INITIATE RECOVERY message.

## 6.6.10 INITIATOR DETECTED ERROR

The INITIATOR DETECTED ERROR message is sent from an initiator to inform a target that an error has occurred that does not preclude the target from retrying the operation. The source of the error may either be related to previous activities on the SCSI bus or may be internal to the initiator and unrelated to any previous SCSI bus activity. Although present pointer integrity is not assured, a RESTORE POINTERS message or a disconnect followed by a reconnect, shall cause the pointers to be restored to their defined prior state.

# 6.6.11 LINKED COMMAND COMPLETE

The LINKED COMMAND COMPLETE message is sent from a target to an initiator to indicate that the execution of a linked command has completed and that status has been sent. The initiator shall then set the pointers to the initial state for the next linked command.

### 6.6.12 LINKED COMMAND COMPLETE (WITH FLAG)

The LINKED COMMAND COMPLETE (WITH FLAG) message is sent from a target to an initiator to indicate that the execution of a linked command (with the flag bit set to one) has completed and that status has been sent. The initiator shall then set the pointers to the initial state of the next linked command. Typically this message would be used to cause an interrupt in the initiator between two linked commands.

### 6.6.13 MESSAGE PARITY ERROR

The MESSAGE PARITY ERROR message is sent from the initiator to the target to indicate that it received a message byte with a parity error (see 6.1.9.2).

In order to indicate its intentions of sending this message, the initiator shall assert the ATN signal prior to its release of the ACK signal for the REQ/ACK handshake of the message byte that has the parity error. This provides an interlock so that the target can determine which message byte has the parity error. If the target receives this message under any other circumstance, it shall signal a catastrophic error condition by releasing the BSY signal without any further information transfer attempt (see 6.1.1).

If after receiving the MESSAGE PARITY ERROR message the target returns to the MESSAGE IN phase before switching to some other phase, the target shall resend the entire message that had the parity error.

### 6.6.14 MESSAGE REJECT

The MESSAGE REJECT message is sent from either the initiator or target to indicate that the last message or message byte it received was inappropriate or has not been implemented.

In order to indicate its intentions of sending this message, the initiator shall assert the ATN signal prior to its release of the ACK signal for the REQ/ACK handshake of the message byte that is to be rejected. If the target receives this message under any other circumstance, it shall reject this message.

When a target sends this message, it shall change to MESSAGE IN phase and send this message prior to requesting additional message bytes from the initiator. This provides an interlock so that the initiator can determine which message byte is rejected.

After a target sends a MESSAGE REJECT message and if the ATN signal is still asserted, then it shall return to the MESSAGE OUT phase. The subsequent MESSAGE OUT phase shall begin with the first byte of a message.

## 6.6.15 MODIFY DATA POINTER Message

Bit Byte	7	6	5	4	3	2	1	0			
0	Extended message (01h)										
1		Extended message length (05h)									
2		MODIFY DATA POINTER (00h)									
3	(MSB)			Angument							
6				Argument				(LSB)			

#### Table 16 - MODIFY DATA POINTER

The MODIFY DATA POINTER message (see table 16) is sent from the target to the initiator and requests that the signed argument be added (two's complement) to the value of the current data pointer.

## 6.6.16 NO OPERATION

The NO OPERATION message is sent from an initiator in response to a target's request for a message when the initiator does not currently have any other valid message to send.

For example, if the target does not respond to the attention condition until a later phase and at that time the origina message is no longer valid the initiator may send the NO OPERATION message when the target enters the MESSAGE OUT phase.

### 6.6.17 Queue tag messages




Table 17 defines the format for the queue tag messages. If the target implements tagged queuing, all of the queue tag messages are mandatory: HEAD OF QUEUE TAG, ORDERED QUEUE TAG, and SIMPLE QUEUE TAG. Tagged queuing is only defined for logical units, not for target routines.

If a target does not implement tagged queuing and a queue tag message is received or if a queue tag message is received for a target routine, it shall respond with a MESSAGE REJECT message and accept the I/O process as i it were untagged.

The queue tag messages are used to specify an identifier, called a queue tag, for the I/O process that establishes the I\_T\_L\_Q nexus. The queue tag field is an 8-bit unsigned integer assigned by the initiator during an initia connection. The queue tag for every I/O process for each I\_T\_L nexus should be unique. If the target receives  $\varepsilon$ queue tag that is currently in use for the I\_T\_L nexus, then it shall respond as defined in 7.5.2. A queue tag becomes available for reassignment when the I/O process ends. The numeric value of a queue tag has no effect on the order of execution.

NOTE 41 For each logical unit on each target, each initiator has up to 256 queue tags to assign to I/O processes. Thus a target with eight logical units could have up to 14 336 I/O processes concurrently in existence if there were seven initiators on the bus.

Whenever an initiator connects to a target, the appropriate queue tag message shall be sent immediately following the IDENTIFY message and within the same MESSAGE OUT phase to establish the  $I_T_L_Q$  nexus for the I/O process. Only one  $I_T_L_Q$  nexus may be established during a connection. If a queue tag message is not sent, then only an  $I_T_x$  nexus is established for the I/O process (untagged command).

Whenever a target reconnects to an initiator to continue a tagged I/O process, the SIMPLE QUEUE TAG message shall be sent immediately following the IDENTIFY message and within the same MESSAGE IN phase to revive the I\_T\_L\_Q nexus for the I/O process. Only one I\_T\_L\_Q nexus may be revived during a reconnection. If the SIMPLE QUEUE TAG message is not sent, then only an I\_T\_x nexus is revived for the I/O process (untagged command).

If a target attempts to reconnect using an invalid queue tag, then the initiator should respond with an ABORT TAG message.

# 6.6.17.1 HEAD OF QUEUE TAG

The HEAD OF QUEUE TAG message specifies that the I/O process be placed first in that logical unit's command queue. An I/O process already being executed by the target shall not be preempted. A subsequent I/O process received with a HEAD OF QUEUE TAG message shall be placed at the head of the command queue for execution in last-in, first-out order.

## 6.6.17.2 ORDERED QUEUE TAG

The ORDERED QUEUE TAG message specifies that the I/O process be placed in that logical unit's command queue for execution in the order received. All queued I/O processes for the logical unit received prior to this I/O process shall be executed before this I/O process is executed. All queued I/O processes received after this I/O process shall be executed after this I/O process, except for I/O processes received with a HEAD OF QUEUE TAG message.

# 6.6.17.3 SIMPLE QUEUE TAG

The SIMPLE QUEUE TAG message specifies that the I/O process be placed in that logical unit's command queue. The order of execution is described in 7.8.

## 6.6.18 RELEASE RECOVERY

The RELEASE RECOVERY message is sent from an initiator to a target to terminate an extended contingent allegiance condition previously established by an INITIATE RECOVERY message. This message shall be sent immediately following the IDENTIFY message in the same MESSAGE OUT phase. The extended contingent allegiance condition ends upon successful receipt of the RELEASE RECOVERY message. The target shall go to the BUS FREE phase following successful receipt of this message.

If a RELEASE RECOVERY message is received by a target that implements extended contingent allegiance when an extended contingent allegiance condition does not exist, the message shall not be rejected and the target shall go to the BUS FREE phase.

### 6.6.19 RESTORE POINTERS

The RESTORE POINTERS message is sent from a target to direct the initiator to copy the most recently saved command, data, and status pointers for the I/O process to the corresponding current pointers. The command and status pointers shall be restored to the beginning of the present command and status areas. The data pointer shall be restored to the beginning of the data area in the absence of a SAVE DATA POINTER message or to the value at the point at which the last SAVE DATA POINTER message occurred for that nexus.

### 6.6.20 SAVE DATA POINTER

The SAVE DATA POINTER message is sent from a target to direct the initiator to copy the current data pointer to the saved data pointer for the current I/O process. (See 6.4 for a definition of pointers.)

# 6.6.21 SYNCHRONOUS DATA TRANSFER REQUEST

Bit Byte	7	6	5	4	3	2	1	0		
0				Extended	message	(01h)				
1	Extended message length (03h)									
2	SYNCHRONOUS DATA TRANSFER REQUEST code (01h)									
3	·····			Transfer	period fa	actor	· · · · · · · · · · · · · · · · · · ·	······································		
4				REQ/ACK d	offset					

## Table 18 - SYNCHRONOUS DATA TRANSFER REQUEST

A SYNCHRONOUS DATA TRANSFER REQUEST (SDTR) message (see table 18) exchange shall be initiated by an SCSI device whenever a previously-arranged data transfer agreement may have become invalid. The agreement becomes invalid after any condition which may leave the data transfer agreement in an indeterminate state such as:

- a) after a hard reset condition;
- b) after a BUS DEVICE RESET message and;
- c) after a power cycle.

In addition, an SCSI device may initiate an SDTR message exchange whenever it is appropriate to negotiate a new data transfer agreement (either synchronous or asynchronous). SCSI devices that are capable of synchronous data transfers shall not respond to an SDTR message with a MESSAGE REJECT message.

### NOTES

42 Renegotiation at every selection is not recommended, since a significant performance impact is likely. 43 Due to historical problems with early host adapters that could not accept an SDTR message, some targets may not initiate synchronous negotiation after a power cycle as required by this standard. Host adapters that support synchronous mode may avoid the ensuing failure modes when the target is independently power cycled by initiating a synchronous negotiation on each REQUEST SENSE and INQUIRY command.

The SDTR message exchange establishes the permissible transfer periods and the REQ/ACK offsets for all logical units and target routines on the two devices. This agreement only applies to data phases.

The transfer period factor times four is the value of the transfer period. The transfer period is the minimum time allowed between leading edges of successive REQ pulses and of successive ACK pulses to meet the device requirements for successful reception of data.

The REQ/ACK offset is the maximum number of REQ pulses allowed to be outstanding before the leading edge of its corresponding ACK pulse is received at the target. This value is chosen to prevent overflow conditions in the device's reception buffer and offset counter. A REQ/ACK offset value of zero shall indicate asynchronous data transfer mode; a value of FFh shall indicate unlimited REQ/ACK offset.

The originating device (the device that sends the first of the pair of SDTR messages) sets its values according to the rules above to permit it to receive data successfully. If the responding device can also receive data successfully with these values (or smaller transfer periods or larger REQ/ACK offsets or both), it returns the same values in its SDTR message. If it requires a larger transfer period, a smaller REQ/ACK offset, or both in order to receive data successfully, it substitutes values in its SDTR message as required, returning unchanged any value not required to be changed. Each device when transmitting data shall respect the limits set by the other's SDTR message, but it is

permitted to transfer data with larger transfer periods, smaller REQ/ACK offsets, or both than specified in the other's SDTR message. The successful completion of an exchange of SDTR messages implies an agreement as follows:

Responding device SDTR response a) Non-zero REQ/ACK offset	Implied agreement Each device transmits data with a transfer period equal to or greater than and a REQ/ACK offset equal to or less than the values received in the other device's SDTR message.
b) REQ/ACK offset equal to zero	Asynchronous transfer
c) MESSAGE REJECT message	Asynchronous transfer

If the initiator recognizes that negotiation is required, it asserts the ATN signal and sends a SDTR message to begin the negotiating process. After successfully completing the MESSAGE OUT phase, the target shall respond with the proper SDTR message. If an abnormal condition prevents the target from returning an appropriate response, both devices shall go to asynchronous data transfer mode for data transfers between the two devices.

Following target response (1) above, the implied agreement for synchronous operation shall be considered to be negated by both the initiator and the target if the initiator asserts the ATN signal and the first message out is either MESSAGE PARITY ERROR or MESSAGE REJECT. In this case, both devices shall go to asynchronous data transfer mode for data transfers between the two devices. For the MESSAGE PARITY ERROR case, the implied agreement shall be reinstated if a retransmittal of the second of the pair of messages is successfully accomplished. After a vendor-specific number of retry attempts (greater than zero), if the target receives a MESSAGE PARITY ERROR message, it shall terminate the retry activity. This may be done either by changing to any other information transfer phase and transferring at least one byte of information or by going to the BUS FREE phase (see 6.1.1). The initiator shall accept such action as aborting the negotiation, and both devices shall go to asynchronous data transfer mode for data transfer between the two devices.

If the target recognizes that negotiation is required, it sends an SDTR message to the initiator. Prior to releasing the ACK signal on the last byte of the SDTR message from the target, the initiator shall assert the ATN signal and respond with its SDTR message or with a MESSAGE REJECT message. If an abnormal condition prevents the initiator from returning an appropriate response, both devices shall go to asynchronous data transfer mode for data transfers between the two devices.

Following an initiator's responding SDTR message, an implied agreement for synchronous operation shall not be considered to exist until the target leaves the MESSAGE OUT phase, indicating that the target has accepted the negotiation. After a vendor-specific number of retry attempts (greater than zero), if the target has not received the initiator's responding SDTR message, it shall go to the BUS FREE phase without any further information transfer attempt (see 6.1.1). This indicates that a catastrophic error condition has occurred. Both devices shall go to asynchronous data transfer mode for data transfers between the two devices.

If, following an initiator's responding SDTR message, the target shifts to MESSAGE IN phase and the first message in is MESSAGE REJECT, the implied agreement shall be considered to be negated and both devices shall go to asynchronous data transfer mode for data transfers between the two devices.

The implied synchronous agreement shall remain in effect until a BUS DEVICE RESET message is received, until a hard reset condition occurs, or until one of the two SCSI devices elects to modify the agreement. The default data transfer mode is asynchronous data transfer mode. The default data transfer mode is entered at power on, after a BUS DEVICE RESET message, or after a hard reset condition.

## 6.6.22 TERMINATE I/O PROCESS

The TERMINATE I/O PROCESS message is sent from the initiator to the target to terminate the current I/O process without corrupting the medium.

With the following exceptions, the target shall terminate the current I/O process and return COMMAND TERMINATED status. The sense key shall be set to NO SENSE. The additional sense code and qualifier are set to I/O PROCESS TERMINATED.

If the associated I/O process involves a data phase, the target shall set the valid bit in the sense data to one and set the information field as follows:

- a) If the command descriptor block specifies an allocation length or parameter list length, the information field shall be set to the difference (residue) between the number of bytes successfully transferred and the requested length.
- b) If the command descriptor block specifies a transfer length field, the information field shall be set as defined in the REQUEST SENSE command (see 8.2.14).

If an error is detected for the associated I/O process the target shall ignore the TERMINATE I/O PROCESS message.

If the operation requested for the associated I/O process has been completed but status has not been returned, the target shall ignore the TERMINATE I/O PROCESS message.

If the target does not support this message or is unable to stop the current I/O process, it shall send a MESSAGE REJECT message to the initiator and continue the I/O process in a normal manner.

The effect of a TERMINATE I/O PROCESS message on the command queue depends on the queue error recovery option specified in the control mode page (see 8.3.3.1) and on whether or not a contingent allegiance condition is generated.

NOTE 44 The TERMINATE I/O PROCESS message provides a means for the initiator to request the target to reduce the transfer length of the current command to the amount that has already been transferred. The initiator can use the sense data to determine the actual number of bytes or blocks that have been transferred. This message is normally used by the initiator to stop a lengthy read, write, or verify operation when a higher-priority command is available to be executed. It is up to the initiator to complete the terminated command at a later time, if required.

### 6.6.23 WIDE DATA TRANSFER REQUEST

Table 19 - WIDE DATA TRANSFER MESSAGE	

Bit Byte	7	6	5	4	3	2	1	0	
0				Extended	message	(01h)			
1		Extended message length (02h)							
2		- <u>-</u>		WIDE DATA	A TRANSFE	R REQUEST	code (03	sh)	
3				Transfer	width ex	ponent			

A WIDE DATA TRANSFER REQUEST (WDTR) message (see table 19) exchange shall be initiated by an SCSI device whenever a previously-arranged transfer width agreement may have become invalid. The agreement becomes invalid after any condition which may leave the data transfer agreement in an indeterminate state such as:

- after a hard reset condition;
- b) after a BUS DEVICE RESET message and;
- c) after a power cycle.

64 Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS In addition, an SCSI device may initiate a WDTR message exchange whenever it is appropriate to negotiate a new transfer width agreement. SCSI devices that are capable of wide data transfers (greater than eight bits) shall not respond to a WDTR message with a MESSAGE REJECT message.

NOTE 45 Renegotiation at every selection is not recommended, since a significant performance impact is likely.

The WDTR message exchange establishes an agreement between two SCSI devices on the width of the data path to be used for DATA phase transfers between the two devices. This agreement applies to DATA IN and DATA OUT phases only. All other information transfer phases shall use an eight-bit data path.

If an SCSI device implements both wide data transfer option and synchronous data transfer option, then it shall negotiate the wide data transfer agreement prior to negotiating the synchronous data transfer agreement. If a synchronous data transfer agreement is in effect, then an SCSI device that accepts a WDTR message shall reset the synchronous agreement to asynchronous mode.

The transfer width is two to the transfer width exponent bytes wide. The transfer width that is established applies to all logical units on both SCSI devices. Valid transfer widths are 8 bits (m = 00h), 16 bits (m = 01h), and 32 bits (m = 02h). Values of m greater than 02h are reserved.

The originating SCSI device (the SCSI device that sends the first of the pair of WDTR messages) sets its transfer width value to the maximum data path width it elects to accommodate. If the responding SCSI device can also accommodate this transfer width, it returns the same value in its WDTR message. If it requires a smaller transfer width, it substitutes the smaller value in its WDTR message. The successful completion of an exchange of WDTR messages implies an agreement as follows:

<u>Responding device WDTR response</u> a) Non-zero transfer width	Implied agreement Each device transmits and receives data with a transfer width equal to the responding SCSI device's transfer width.
b) Transfer width equal to zero	Eight-bit data transfer

c) MESSAGE REJECT message Eight-bit data transfer

If the initiator recognizes that negotiation is required, it asserts the ATN signal and sends a WDTR message to begin the negotiating process. After successfully completing the MESSAGE OUT phase, the target shall respond with the proper WDTR message. If an abnormal condition prevents the target from returning an appropriate response, both devices shall go to eight-bit data transfer mode for data transfers between the two devices.

Following target response 1) above, the implied agreement for wide data transfers shall be considered to be negated by both the initiator and the target if the initiator asserts ATN and the first message out is either MESSAGE PARITY ERROR or MESSAGE REJECT. In this case, both devices shall go to eight-bit data transfer mode for data transfers between the two devices. For the MESSAGE PARITY ERROR case, the implied agreement shall be reinstated if a retransmittal of the second of the pair of messages is successfully accomplished. After a vendor-specific number of retry attempts (greater than zero), if the target receives a MESSAGE PARITY ERROR message, it shall terminate the retry activity. This may be done either by changing to any other information transfer phase and transferring at least one byte of information or by going to the BUS FREE phase (see 6.1.1). The initiator shall accept such action as aborting the negotiation, and both devices shall go to eight-bit data transfer mode for data transfers between the two devices.

If the target recognizes that negotiation is required, it sends a WDTR message to the initiator. Prior to releasing the ACK signal on the last byte of the WDTR message from the target, the initiator shall assert the ATN signal and respond with its WDTR message or with a MESSAGE REJECT message. If an abnormal condition prevents the initiator from returning an appropriate response, both devices shall go to eight-bit data transfer mode for data transfers between the two devices.

Following an initiator's responding WDTR message, an implied agreement for wide data transfer operation shall not be considered to exist until the target leaves the MESSAGE OUT phase, indicating that the target has accepted the negotiation. After a vendor-specific number of retry attempts (greater than zero), if the target has not received the initiator's responding WDTR message, it shall go to the BUS FREE phase without any further information transfer attempt (see 6.1.1). This indicates that a catastrophic error condition has occurred. Both devices shall go to eight-bit data transfer mode for data transfers between the two devices.

If, following an initiator's responding WDTR message, the target shifts to MESSAGE IN phase and the first message in is MESSAGE REJECT, the implied agreement shall be considered to be negated and both devices shall go to eight-bit data transfer mode for data transfers between the two devices.

The implied transfer width agreement shall remain in effect until a BUS DEVICE RESET message is received, until a hard reset condition occurs, or until one of the two SCSI devices elects to modify the agreement. The default data transfer width is eight-bit data transfer mode. The default data transfer mode is entered at power on, after a BUS DEVICE RESET message, or after a hard reset condition.

# 7 SCSI commands and status

This clause defines the SCSI command and status structures and gives several examples.

By keeping to a minimum the functions essential to communicate via this protocol, a wide range of peripheral devices of varying capability can operate in the same environment. Because subsets of the full architecture may be implemented, optional functions are noted.

# 7.1 Command implementation requirements

The first byte of all SCSI commands shall contain an operation code as defined in this standard. Targets shall implement all commands with a mandatory operation code (see 7.1.2) both in clause 8 and in the appropriate clause for their device type.

## 7.1.1 Reserved

Reserved bits, fields, bytes, and code values are set aside for future standardization. Their use and interpretation may be specified by future extensions to this standard. A reserved bit, field, or byte shall be set to zero, or in accordance with a future extension to this standard. A target that receives a reserved bit, field, or byte that is not zero or receives a reserved code value shall terminate the command with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. It shall also be acceptable for a target to interpret a bit, field, byte, or code value in accordance with a future extension to this standard.

## 7.1.2 Operation code types

The operation code types are defined in table 20.

Operation code type	Description
М	Mandatory - Commands so designated shall be implemented in order to meet the minimum requirement of this standard.
0	Optional - Commands so designated, if implemented, shall be implemented as defined in this standard.
V	Vendor-specific - Operation codes so designated are available for vendor defined commands. See the vendor specifications where compatibility is desired.
R	Reserved - Operation codes so designated shall not be used. They are reserved for future extensions to this standard.

Table 20 - Operation code type

# 7.2 Command descriptor block

A command is communicated by sending a command descriptor block to the target. For several commands, the command descriptor block is accompanied by a list of parameters sent during the DATA OUT phase. See the specific commands for detailed information.

The command descriptor block always has an operation code as its first byte and a control byte as its last byte.

For all commands, if there is an invalid parameter in the command descriptor block, then the target shall terminate the command without altering the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code			
1	Logic	al unit n	umber	(MSB)				
2				Logical	block add	lress (if 1	required)	
3								(LSB)
4				Transfer Paramete Allocati	length ( r list le on length	if require ngth (if (if requi	ed) required) ired)	
5				Control			,,,,,,,	

Table 21 - Typical command descriptor block for six-byte commands

### Table 22 - Typical command descriptor block for ten-byte commands

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code			
1	Logica	al unit n	umber			Reserved		
2	(MSB)				······	<u></u>		
3				Logical	blook odd	lress (if	noguinod)	
4				Logical	DIOCK AUG	11.622 (TI	redutied)	
5								(LSB)
6				Reserved		·		
7	(MSB)			Transfer	length (	if requir	ed)	
8				Allocati	on length	(if requ	required) ired)	(LSB)
9				Control				

Bit Byte	7	1	0					
0				Operatio	n code			
1	Logic	al unit n	umber			Reserved		
2	(MSB)							
3				Logical	block ad	dress (if a	required)	
4				Logioui	DIGON du	41000 (11.	equilities)	
5								(LSB)
6	(MSB)							
7				Transfer	length	(if require angth (if r	ed)	
8				Allocati	on lengt	n (if requ	ired)	
9								(LSB)
10				Reserved				
11				Control				

Table 23 - Typical command descriptor block for twelve-byte commands

### 7.2.1 Operation code

The operation code (see table 24) of the command descriptor block has a group code field and a command code field. The three-bit group code field provides for eight groups of command codes. The five-bit command code field provides for thirty-two command codes in each group. Thus, a total of 256 possible operation codes exist. Operation codes are defined in the subsequent subclauses.

The group code specifies one of the following groups:

- a) Group 0 six-byte commands (see table 21)
- b) Group 1 ten-byte commands (see table 22)
- c) Group 2 ten-byte commands (see table 22)
- d) Group 3 reserved
- e) Group 4 reserved
- f) Group 5 twelve-byte commands (see table 23)
- g) Group 6 vendor-specific
- h) Group 7 vendor-specific

Bit	7	6	5	4	3	2	1	0
		Group cod	le			ommand co		

#### **Table 24 - Operation code**

#### 7.2.2 Logical unit number

The logical unit number is defined in the IDENTIFY message (6.6.7). The target shall ignore the logical unit number specified within the command descriptor block if an IDENTIFY message was received. It is recommended that the logical unit number in the command descriptor block be set to zero.

NOTICE: The logical unit number field is included in the command descriptor block for compatibility with some SCSI-1 devices. This field may be reclaimed in SCSI-3. New implementations should use the outbound IDENTIFY message, which is mandatory in SCSI-2, to establish the I\_T\_L nexus.

### 7.2.3 Logical block address

The logical block address on logical units or within a partition on device volumes shall begin with block zero and be contiguous up to the last logical block on that logical unit or within that partition.

A six-byte command descriptor block contains a 21-bit logical block address. The ten-byte and the twelve-byte command descriptor blocks contain 32-bit logical block addresses. Logical block addresses in additional paramete data have their length specified for each occurrence. See the specific command descriptions.

## 7.2.4 Transfer length

The transfer length field specifies the amount of data to be transferred, usually the number of blocks. For severa commands the transfer length indicates the requested number of bytes to be sent as defined in the command description. For these commands the transfer length field may be identified by a different name. See the following descriptions and the individual command descriptions for further information.

Commands that use one byte for the transfer length allow up to 256 blocks of data to be transferred by one command. A transfer length value of 1 to 255 indicates the number of blocks that shall be transferred. A value o zero indicates 256 blocks.

In commands that use multiple bytes for the transfer length, a transfer length of zero indicates that no data transfe shall take place. A value of one or greater indicates the number of blocks that shall be transferred.

Refer to the specific command description for further information.

### 7.2.5 Parameter list length

The parameter list length is used to specify the number of bytes sent during the DATA OUT phase. This field is typically used in command descriptor blocks for parameters that are sent to a target (e.g. mode parameters diagnostic parameters, log parameters, etc.). A parameter length of zero indicates that no data shall be transferred This condition shall not be considered as an error.

### 7.2.6 Allocation length

The allocation length field specifies the maximum number of bytes that an initiator has allocated for returned data An allocation length of zero indicates that no data shall be transferred. This condition shall not be considered as ar error. The target shall terminate the DATA IN phase when allocation length bytes have been transferred or when a available data have been transferred to the initiator, whichever is less. The allocation length is used to limit the maximum amount of data (e.g. sense data, mode data, log data, diagnostic data, etc.) returned to an initiator.

# 7.2.7 Control field

The control field is the last byte of every command descriptor block. The control field is defined in table 25.

Bit	7	6	5	4	3	2	1	0
	Vendor-	specific		Reserved			Flag	Link

## Table 25 - Control field

The flag bit specifies which message the target shall return to the initiator if the link bit is one and the command completes without error. Implementation of the flag bit is optional.

The flag bit should be set to zero if the link bit is zero. If link bit is zero and the flag bit is one, the target shall return CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

If the flag bit is zero and the link bit is one, and if the command completes successfully, the target shall send the LINKED COMMAND COMPLETE message. If the flag bit is one and the link bit is one, and if the command completes successfully, the target shall send the LINKED COMMAND COMPLETE (WITH FLAG) message.

NOTE 46 The flag bit is typically used to cause an interrupt in the initiator between linked commands.

The link bit is used to continue the I/O process across multiple commands. Implementation of the link bit is optional.

A link bit of one indicates that the initiator requests a continuation of the I/O process and that the target should enter the command phase upon successful completion of the current command.

If the link bit is one, and if the command completes successfully, the target shall return INTERMEDIATE or INTERMEDIATE-CONDITION MET status and shall then send one of the two messages defined by the flag bit.

If either of the link and flag bits are set to one, and the target does not implement linked commands, it shall return CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

## 7.3 Status

The status byte and status byte code are defined in tables 26 and 27. A status byte shall be sent from the target to the initiator during the STATUS phase at the completion of each command unless the command is terminated by one of the following events:

- a) an ABORT message;
- b) an ABORT TAG message;
- c) a BUS DEVICE RESET message;
- d) a CLEAR QUEUE message;
- e) a hard reset condition;
- f) an unexpected disconnect (see 6.1.1).

The STATUS phase normally occurs at the end of a command but in some cases may occur prior to transferring the command descriptor block.

Bit	7	6	5	4	3	2	1	0	
	Res	erved			atus byte	code		Reserved	

# Table 26 - Status byte

B	its o	of s	tatu	s by	te			Status
7	6	5	4	3	2	1	0	
R R R R R R R R R R	R R R R R R R R R	0 0 0 0 0 0 1 1	0 0 0 1 1 0 0	0 0 1 0 1 0 1	0 0 1 0 1 0 0 0	0 1 0 0 0 0 0 1 0	R R R R R R R R R R R R R R R R R R R	GOOD CHECK CONDITION CONDITION MET BUSY INTERMEDIATE INTERMEDIATE-CONDITION MET RESERVATION CONFLICT COMMAND TERMINATED QUEUE FULL
		A11	L oth	ner d	codes	5		Reserved
Key:	R =	Res	serve	ed bi	it			Lean

Table 27 - Status byte code

A definition of the status byte codes is given below.

7.3.1 GOOD: This status indicates that the target has successfully completed the command.

7.3.2 CHECK CONDITION: This status indicates that a contingent allegiance condition has occurred (see 7.6).

**7.3.3 CONDITION MET:** This status or INTERMEDIATE-CONDITION MET is returned whenever the requestec operation is satisfied (see the SEARCH DATA and PREFETCH commands).

**7.3.4 BUSY:** This status indicates that the target is busy. This status shall be returned whenever a target is unable to accept a command from an otherwise acceptable initiator (i.e. no reservation conflicts). The recommended initiator recovery action is to issue the command again at a later time.

**7.3.5 INTERMEDIATE:** This status or INTERMEDIATE-CONDITION MET shall be returned for every successfully completed command in a series of linked commands (except the last command), unless the command is terminated with CHECK CONDITION, RESERVATION CONFLICT, or COMMAND TERMINATED status. If INTERMEDIATE or INTERMEDIATE-CONDITION MET status is not returned, the series of linked commands is terminated and the I/C process is ended.

7.3.6 INTERMEDIATE-CONDITION MET: This status is the combination of the CONDITION MET and INTERMEDIATE statuses.

**7.3.7 RESERVATION CONFLICT**: This status shall be returned whenever an initiator attempts to access a logica unit or an extent within a logical unit that is reserved with a conflicting reservation type for another SCSI device (see the RESERVE and RESERVE UNIT commands). The recommended initiator recovery action is to issue the command again at a later time.

**7.3.8 COMMAND TERMINATED**: This status shall be returned whenever the target terminates the current I/C process after receiving a TERMINATE I/O PROCESS message (see 6.6.22). This status also indicates that *e* contingent allegiance condition has occurred (see 7.6).

**7.3.9 QUEUE FULL**: This status shall be implemented if tagged queuing is implemented. This status is returned when a SIMPLE QUEUE TAG, ORDERED QUEUE TAG, or HEAD OF QUEUE TAG message is received and the command queue is full. The I/O process is not placed in the command queue.

# 7.4 Command examples

The following subclauses give examples of typical command processing in the SCSI environment.

## 7.4.1 Single command example

An I/O process containing one untagged READ command is used in this clause to illustrate a simple I/O process on the SCSI bus. This example does not include error or exception conditions.

The initiator has one set of active pointers that includes a command pointer, a data pointer, and a status pointer. In addition, the initiator has one set of saved pointers for each I/O process that it is able to concurrently manage. The initiator sets up the saved pointers to point to the appropriate bytes for the I/O process and copies the saved pointers to the active pointers. It then arbitrates for the SCSI bus, and upon winning arbitration, selects the target. Once the target is selected, the target assumes control of the I/O process.

During the SELECTION phase, the initiator asserts the ATN signal to inform the target that the initiator wishes to send a message. The target enters the MESSAGE OUT phase and transfers the IDENTIFY message from the initiator. This message informs the target of which logical unit is to be used. At this point, an I\_T\_L nexus has been established for the I/O process. This nexus associates the initiator's pointers with the I/O process.

The target switches to the COMMAND phase and transfers the command descriptor block from the initiator. In this case, the command descriptor block contains a READ command. The target interprets the command and switches to the DATA IN phase, transfers the data, switches to STATUS phase, sends GOOD status, switches to MESSAGE IN phase, and transfers a COMMAND COMPLETE message. After successfully sending the COMMAND COMPLETE message, the target goes to the BUS FREE phase by releasing the BSY signal and the I/O process ends.

## 7.4.2 Disconnect example

In the above single command example, the length of time necessary to obtain the data may require a time-consuming physical positioning operation. In order to improve system throughput, the target may disconnect from the initiator, thereby freeing the SCSI bus to allow other I/O process to occur.

After the target has received the READ command (and has determined that there will be a delay), it disconnects from the SCSI bus by sending a DISCONNECT message and by going to the BUS FREE phase.

After the target retrieves the requested data from the peripheral device it arbitrates for the SCSI bus. Upon winning arbitration, it reselects the initiator and sends an IDENTIFY message to the initiator via the MESSAGE IN phase. This revives the I\_T\_L nexus so that the initiator can retrieve the correct set of pointers for the I/O process. The initiator restores the active pointers to their most recent saved values (which, in this case, are the initial values) and the target continues (as in the single command example) to finish the I/O process.

If target wishes to disconnect after transferring part of the data (e.g. while crossing a cylinder boundary), it may do so by sending a SAVE DATA POINTER message and a DISCONNECT message to the initiator and then disconnecting. When reconnection is completed, the current data pointer is restored to its value immediately prior to the SAVE DATA POINTER message.

On those occasions when an error or exception condition occurs and the target elects to repeat the information transfer, the target may repeat the transfer by either issuing a RESTORE POINTERS message or by disconnecting without issuing a SAVE DATA POINTER message. When reconnection is completed, the most recent saved pointer values are restored.

### 7.4.3 Linked command example

An I/O process may contain multiple commands linked together. Upon completing a linked command successfull the target automatically proceeds to the next linked command for the I/O process. All commands in a series of linke commands are addressed to the same nexus and are part of a single I/O process.

The commands are not entirely independent. When using the relative address bit (see 9.1.11), the address of th last logical block accessed by one of the commands is available to the next command. Thus one can search for particular data pattern using a SEARCH DATA command and then read the logical block containing the data patter with a READ command linked to the SEARCH DATA command. One can also read a logical block at a specifie displacement from the block containing the data pattern.

A LINKED COMMAND COMPLETE or LINKED COMMAND COMPLETE (WITH FLAG) message is sent from the targe to the initiator to indicate that a linked command completed. The initiator then updates the saved pointers for th nexus so that subsequent transfers from the target reference the next command of the series. Command processin of linked and single commands is similar except that relative addressing is permitted in linked commands.

For example, a successful completion of a SEARCH DATA EQUAL command causes the target to continue with th linked READ command from the initiator. If the relative address bit in the READ command has been set to one, an the address field of the READ command is set to zero, the target transfers the successfully searched block to th initiator.

# 7.5 Command processing considerations and exception conditions

The following subclauses describe some exception conditions and errors associated with command processing an the sequencing of commands.

## 7.5.1 Programmable operating definition

Some applications require that the operating definition of a logical unit be modified to meet the special requirement of a particular initiator. The program-controlled modification of the operating definition is typically provided to allo operating systems to change the operating definition of a more recently developed targets to one that is mor compatible with the operating system. This ability requires that the system comply with the low-level hardwar definitions of SCSI-2.

The parameters that can be changed by modifying the operating definition of a logical unit include the vendor identification, the device type, the device model, the SCSI compliance level, the SCSI specification level, the command set, and other parameters. The low-level hardware parameters including signal timing and parity definition cannot be changed by modifying the operating definition. The present operating definition of a logical unit wit respect to an initiator can be determined at any time by execution of an INQUIRY command. In some vendor-specific cases, it may also be necessary to perform other commands including MODE SENSE and READ CAPACITY.

Each logical unit begins with a particular operating definition. If the logical unit supports the CHANGE DEFINITIO command, the present operating definition can be changed to any other operating definition supported by the logical unit. The actual details of the operating definition of a logical unit are vendor-specific. If the operating definition changed to one that does not include the CHANGE DEFINITION command, the target should continue to accept the CHANGE DEFINITION command.

If an error occurs during execution of a CHANGE DEFINITION command, the original operating definition remain in effect after the command is executed. The new operating definition becomes active only after successful executio of the CHANGE DEFINITION command.

Since new operating definitions may preclude the execution of I/O processes that are already in progress, the targe may disconnect to allow completion of any I/O processes that are in progress. Operating definition changes that ma cause conflicts with the normal operation from other initiators shall be indicated to those initiators by generating

unit attention condition for each other initiator. The additional sense code shall be set to CHANGED OPERATING DEFINITION.

An initiator may request a list of the operating definitions that the target supports and descriptive text for each operating definition using the INQUIRY command.

### 7.5.2 Incorrect initiator connection

An incorrect initiator connection occurs on a reconnection if:

- a) an initiator attempts to reconnect to an I/O process, and
- b) a soft reset condition has not occurred, and
- c) the initiator does not send an ABORT, ABORT TAG, BUS DEVICE RESET, CLEAR QUEUE, or TERMINATE I/O PROCESS message during the same MESSAGE OUT phase as the IDENTIFY message.

An incorrect initiator connection also occurs on an initial connection when an initiator:

- a) attempts to establish an I\_T\_L\_Q nexus when an I\_T\_L nexus already exists from a previous connection, or
   b) attempts to establish an I\_T\_L nexus when an I\_T\_L\_Q nexus already exists, unless there is a contingent
- allegiance or extended contingent allegiance condition present for the logical unit.

A target that detects an incorrect initiator connection shall abort all I/O processes for the initiator on the logical unit or target routine and shall return CHECK CONDITION status. The sense key shall be set to ABORTED COMMAND and the additional sense code shall be set to OVERLAPPED COMMANDS ATTEMPTED.

If an initiator reconnects to an I/O process and a soft reset condition has occurred, the target shall meet the requirements of 6.2.2.2.

#### NOTES

47 An incorrect initiator connection may be indicative of a serious error and, if not detected, could result in an I/O process operating with a wrong set of pointers. This is considered a catastrophic failure on the part of the initiator. Therefore, vendor-specific error recovery procedures may be required to guarantee the data integrity on the medium. The target may return additional sense data to aid in this error recovery procedure (e.g. sequential-access devices may return the residue of blocks remaining to be written or read at the time the second command was received).

48 Some targets may not detect an incorrect initiator connection until after the command descriptor block has been received.

### 7.5.3 Selection of an invalid logical unit

The target's response to selection of a logical unit that is not valid is described in the following paragraphs.

The logical unit may not be valid because:

- a) the target does not support the logical unit (e.g. some targets support only one peripheral device). In response to an INQUIRY command, the target shall return the INQUIRY data with the peripheral qualifier set to the value required in 8.2.5.1. In response to any other command except REQUEST SENSE, the target shall terminate the command with CHECK CONDITION status. In response to a REQUEST SENSE command, the target shall return sense data. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to LOGICAL UNIT NOT SUPPORTED.
- b) the target supports the logical unit, but the peripheral device is not currently attached to the target. In response to an INQUIRY command, the target shall return the INQUIRY data with the peripheral qualifier set to the value required in 8.2.5.1. In response to any other command except REQUEST SENSE, the target shall terminate the command with CHECK CONDITION status. In response to a REQUEST SENSE command, the target shall return sense data. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to LOGICAL UNIT NOT SUPPORTED.
- c) the target supports the logical unit and the peripheral device is attached, but not operational. In response to an INQUIRY command, the target shall return the INQUIRY data with the peripheral qualifier set to the value required in 8.2.5.1. The target's response to any command other than INQUIRY and REQUEST SENSE is vendor-specific.

d) the target supports the logical unit but is incapable of determining if the peripheral device is attached or is no operational when it is not ready. In response to an INQUIRY command, the target shall return the INQUIRY data with the peripheral qualifier set to the value required in 8.2.5.1. In response to a REQUEST SENSE command the target shall return the REQUEST SENSE data with a sense key of NO SENSE unless a contingen allegiance exists. The target's response to any other command is vendor-specific.

#### 7.5.4 Parameter rounding

Certain parameters sent to a target with various commands contain a range of values. Targets may choose to implement only selected values from this range. When the target receives a value that it does not support, it eithe rejects the command (CHECK CONDITION status with ILLEGAL REQUEST sense key) or it rounds the value received to a supported value. The target shall reject unsupported values unless rounding is permitted in the description o the parameter.

Rounding of parameter values, when permitted, shall be performed as follows - A target that receives a paramete value that is not an exact supported value shall adjust the value to one that it supports and shall return CHEC; CONDITION status with a sense key of RECOVERED ERROR. The additional sense code shall be set to ROUNDE! PARAMETER. The initiator is responsible to issue an appropriate command to learn what value the target has selected.

NOTE 49 Generally, the target should adjust maximum-value fields down to the next lower supported value than the one specified by the initiator. Minimum-value fields should be rounded up to the next higher supported value than the one specified by the initiator. In some cases, the type of rounding (up or down) is explicitly specified in the description of the parameter.

#### 7.5.5 Asynchronous event notification

Implementation of asynchronous event notification is optional. This protocol can be used to inform processor devices that an asynchronous event has occurred. A SEND command with an AEN bit of one is issued to a processor device with a subsequent data phase that includes the REQUEST SENSE information. SCSI devices that respond to ar INQUIRY command as a processor device type with asynchronous event notification capability may be notified o asynchronous events using this protocol. An SCSI device has to be capable of acting as an initiator in order to perform asynchronous event notification.

NOTE 50 Asynchronous event notification cannot be used with a device that acts as a temporary initiator (e.g. devices executing COPY commands) since they are not identified as a processor device.

Parameters affecting the use of asynchronous event notification are contained in the control mode page (see 8.3.3.1)

The four uses of asynchronous event notification are:

- a) informing a processor of an error condition encountered after command completion;
- b) informing all processor devices that a newly initialized device is available;
- c) informing all processor devices of other unit attention conditions;
- d) informing all processor devices of other asynchronous events.

An example of the first case above is a device that implements a write cache. If the target is unable to write cached data to the medium, it may use an asynchronous event notification to inform the initiator of the failure. An extended contingent allegiance condition may also be established during the same I\_T\_L nexus used for the asynchronous event notification (see 6.6.9).

An example of the third case above is a device that supports removable media. Asynchronous event notification may be used to inform an initiator of a not-ready-to-ready transition (medium changed) or of an operator initiated even (e.g. activating a write protect switch or activating a start or stop switch).

An example of the fourth case above is a sequential-access device performing a REWIND command with the immediate bit set to one. Asynchronous event notification may be used to inform an initiator that the beginning c

medium has been reached. Completion of a CD-ROM AUDIO PLAY command started in the immediate mode is another example of this case.

Notification of an asynchronous event is performed using the SEND command with the AEN bit set to one. The information identifying the condition being reported shall be returned during the DATA OUT phase of the SEND command. See 12.2.2 for further information on the format of the data sent.

An error condition or unit attention condition shall be reported once per occurrence of the event causing it. The target may choose to use an asynchronous event notification or to return CHECK CONDITION status on a subsequent command, but not both. Notification of command-related error conditions shall be sent only to the processor that initiated the I/O process.

The asynchronous event notification protocol can be used to notify processor devices that a system resource has become available. If a target chooses to use this method, the sense key in the sense data sent to the processor device shall be set to UNIT ATTENTION.

The asynchronous event notification protocol shall be sent only to SCSI devices that return processor device type with an AENC bit of one in response to an INQUIRY command. The INQUIRY command should be issued to logical unit zero of each SCSI device responding to selection. This procedure shall be conducted prior to the first asynchronous event notification and shall be repeated whenever the device deems it appropriate or when an event occurs that may invalidate the current information. (See 6.6.21, SYNCHRONOUS DATA TRANSFER REQUEST message, for examples of these events.)

Each SCSI device that returns processor device type with an AENC bit of one shall be issued a TEST UNIT READY command to determine that the SCSI device is ready to receive an asynchronous event notification. An SCSI device returning CHECK CONDITION status is issued a REQUEST SENSE command. This clears any pending unit attention condition. An SCSI device that returns processor device type with an AENC bit of one and returns GOOD status when issued a TEST UNIT READY command shall accept a SEND command with an AEN bit of one.

NOTE 51 An SCSI device which can use asynchronous event notification at initialization time should provide means to defeat these notifications. This can be done with a switch or jumper wire. Devices that implement saved parameters may alternatively save the asynchronous event notification permissions either on a per SCSI device basis or as a system-wide option. In any case, a device conducts a survey with INQUIRY commands to be sure that the devices on the SCSI bus are appropriate destinations for SEND commands with an AEN bit of one. (The devices on the bus or the SCSI ID assignments may have changed.)

#### 7.5.6 Unexpected reselection

An unexpected reselection occurs if an SCSI device attempts to reconnect to an I/O process for which a nexus does not exist. An SCSI device should respond to an unexpected reselection by sending an ABORT message.

# 7.6 Contingent allegiance condition

The contingent allegiance condition shall exist following the return of CHECK CONDITION or COMMAND TERMINATED status. The contingent allegiance condition shall be preserved for the I\_T\_x nexus until it is cleared. The contingent allegiance condition shall be cleared upon the generation of a hard reset condition, or by an ABORT message, a BUS DEVICE RESET message, or any subsequent command for the I\_T\_x nexus. While the contingent allegiance condition exists the target shall preserve the sense data for the initiator.

While the contingent allegiance condition exists, if the target is unable to maintain separate sense data, the target shall respond to any other requests for access to the logical unit or target routine from another initiator with a BUSY status. Execution of all tagged I/O processes for the I\_T\_L nexus for which the contingent allegiance condition exists shall be suspended until the contingent allegiance condition is cleared.

# 7.7 Extended contingent allegiance condition

Implementation of extended contingent allegiance is optional. The extended contingent allegiance condition extends the contingent allegiance condition for an I\_T\_x nexus. This condition is generated by the target sending an INITIATE RECOVERY message to the initiator following CHECK CONDITION or COMMAND TERMINATED status and prior to the COMMAND COMPLETE message. This condition shall be preserved until it is cleared by a BUS DEVICE RESET message, a RELEASE RECOVERY message, or a hard reset condition.

While the extended contingent allegiance condition exists, the target shall respond to any other request for access to the logical unit from another initiator with BUSY status. Execution of all I/O processes for the logical unit for which the extended contingent allegiance condition exists shall be suspended until the RELEASE RECOVERY message is received by the target.

### NOTES

52 It is not required to generate an extended contingent allegiance condition for every CHECK CONDITION or COMMAND TERMINATED status that occurs. Simple errors not requiring an extended recovery may be dealt with by using the contingent allegiance protocol.

53 During the existence of the extended contingent allegiance condition, appropriate error recovery sequences may be executed. Such commands can correct data, modify or delete queued commands, perform LOG SENSE commands and obtain diagnostic information. Extended contingent allegiance is recommended for error conditions that may require execution of multiple-step error-recovery protocols without interference from other initiators.

An extended contingent allegiance condition may also be generated using an asynchronous event notification protocol. When the event is detected, the bus device that detected the event assumes the initiator role and transmits a SEND command with an AEN bit of one to the appropriate device(s) (see 12.2.2).

If the device wishes to generate an extended contingent allegiance condition during an asynchronous event notification, it shall send an INITIATE RECOVERY message following the IDENTIFY message (and following any queue tag message) and prior to the COMMAND phase of the SEND command. An extended contingent allegiance condition can be generated for only one I\_T\_L nexus at a time. The extended contingent allegiance condition is cleared when a RELEASE RECOVERY message is received from the device to which the INITIATE RECOVERY message was sent. The generation of a hard reset condition, or receipt of a BUS DEVICE RESET message, shall also clear the extended contingent allegiance condition.

During an extended contingent allegiance, only untagged I/O processes from the SCSI device to which the INITIATE RECOVERY message was sent shall be executed by the target for the logical unit. If the initiator sends a queue tag message, the target shall respond with QUEUE FULL status. After the extended contingent allegiance condition is cleared, any commands remaining in the command queue shall be executed.

# 7.8 Queued I/O processes

The implementation of queuing for I/O processes is optional. Queuing of I/O processes allows a target to accept multiple I/O processes.

There are two methods for implementation of queuing, tagged and untagged. Tagged queuing allows a target to accept multiple I/O processes from each initiator for each logical unit. Untagged queuing allows a target to accept one I/O process from each initiator for each logical unit or target routine. Untagged queuing may be supported by SCSI-1 or SCSI-2 devices. Tagged queuing is new in SCSI-2.

A target may support both tagged and untagged queuing. An initiator may not mix the use of tagged and untagged queuing for I/O processes to a logical unit, except during a contingent allegiance or extended contingent allegiance condition when only untagged initial connections are allowed. An initiator that elects to use tagged queuing does not preclude another initiator on the same SCSI bus from using untagged queuing.

## 7.8.1 Untagged queuing

Untagged queuing allows a target to accept a command from an initiator for a logical unit or target routine while I/O processes from other initiators are being executed. Only one command for each  $I_T$  nexus shall be accepted at a time.

An I/O process may be initiated any time the BUS FREE phase exists, even if an I/O process from a different initiator is active. If the disconnect privilege is not granted in the IDENTIFY message of the current I/O process, the target may either suspend all other I/O processes or it may return BUSY status to the current I/O process.

The I\_T\_x nexus sufficiently specifies the relationship so that the target can reconnect to the initiator to restore the pointers for I/O process as long as only one I/O process per I\_T\_x nexus is issued. It is the responsibility of the initiator to assure that only one such I/O process is issued at any time (see 7.5.2).

## 7.8.2 Tagged queuing

Tagged queuing allows a target to accept multiple I/O processes from the same or different initiators until the logical unit's command queue is full. If an I/O process is received and the command queue is full, the target shall terminate the I/O process with QUEUE FULL status.

The command queue is setup by the target for each supported logical unit. Initiators may add or delete I/O processes to the queue. When adding an I/O process, the initiator may specify fixed order of execution, allow the target to define the order of execution, or specify that the I/O process is to be executed next.

If the disconnect privilege is not granted in the IDENTIFY message for a tagged I/O process, the target shall return BUSY status.

The queue tag messages (see 6.6.17) allow the initiator to establish a unique  $I_T_L_Q$  nexus to identify each I/O process. The  $I_T_L_Q$  nexus allows the target to reconnect to a specific I/O process, and allows the initiator to restore the set of pointers for that I/O process. An initiator may have several I/O processes ongoing to the same or different logical units as long as each has a unique nexus.

If only SIMPLE QUEUE TAG messages are used, the target may execute the commands in any order that is deemed desirable within the constraints of the queue management algorithm specified in the control mode page (see 8.3.3.1).

If ORDERED QUEUE TAG messages are used, the target shall execute the commands in the order received with respect to other commands received with ORDERED QUEUE TAG messages. All commands received with a SIMPLE QUEUE TAG message prior to a command received with an ORDERED QUEUE TAG message, regardless of initiator, shall be executed before that command with the ORDERED QUEUE TAG message. All commands received with a SIMPLE QUEUE TAG message after a command received with an ORDERED QUEUE TAG message, regardless of initiator, shall be executed after that command received with an ORDERED QUEUE TAG message, regardless of initiator, shall be executed after that command with the ORDERED QUEUE TAG message.

A command received with a HEAD OF QUEUE TAG message is placed first in the queue, to be executed next. *F* command received with a HEAD OF QUEUE TAG message shall be executed prior to any queued I/O process Consecutive commands received with HEAD OF QUEUE TAG messages are executed in a last-in-first-out order.

An I/O process received without a queue tag message, while there are any tagged I/O commands in the commanc queue from the same initiator, is an incorrect initiator connection (see 7.5.2), unless there is a contingent allegiance or extended contingent allegiance condition.

A series of linked commands constitute a single I/O process. These commands are assigned the queue tagestablished in the initial connection. A command received with a HEAD OF QUEUE TAG message shall not suspend a series of linked commands for which the target has begun execution.

The RESERVE and RELEASE commands should be sent with an ORDERED QUEUE TAG message. Use of the HEAL OF QUEUE TAG message with these commands could result in reservation conflicts with previously issuec commands.

NOTE 54 Initiators should not issue another I/O processes following a reservation request until that request is honoured by the target. This prevents possible sequencing errors or file system corruption.

There are two methods of dealing with the command queue following a contingent allegiance condition. The method used is specified in the control mode page by the queue error management bit (see 8.3.3.1).

The first method allows the execution of tagged I/O processes to resume when the contingent allegiance or extendec contingent allegiance condition is cleared. The target returns BUSY status to other initiators while the contingent allegiance or extended contingent allegiance condition exists. During this time, all tagged I/O processes are suspended. All I/O processes used for recovery operations shall be untagged. The queue may be modified by removing all or selected I/O processes from the queue as part of the recovery procedure.

If commands are combined by the queuing algorithm such that the exception condition affects more than one command, then a contingent allegiance condition shall be generated for all affected commands.

The second method aborts all I/O processes when the contingent allegiance or extended contingent allegiance condition is cleared. A unit attention condition shall be generated for all other initiators and the additional sense code shall be set to COMMANDS CLEARED BY ANOTHER INITIATOR.

A device that does not support tagged I/O processes (e.g. not implemented, disabled by the Dque bit in the control mode page, or switched to an operating definition that does not include tagged I/O processes) it shall respond to any queue tag message with a MESSAGE REJECT message. The target shall continue the I/O process as if it were an untagged I/O process.

Tagged queuing may also be temporarily disabled during certain initialization periods or to control internal resource utilization. During these periods the target may return QUEUE FULL status or it may respond to any queue tag message with a MESSAGE REJECT message.

Several messages may be used to clear part or all of the command queue. Please refer to the ABORT, ABORT TAG, BUS DEVICE RESET, and CLEAR QUEUE messages in clause 6 for details.

## 7.8.3 Example of queued I/O process

This example of queuing I/O processes illustrates the execution of a number of commands. After each command, the state of the queue kept in the target is shown to indicate the function actually performed by the queuing.

# 7.8.3.1 Typical sequences for tagged queuing

An I/O process using tagged queuing uses the following sequences for normal execution. The initiator first arbitrates for the SCSI bus, and after successfully obtaining the SCSI bus, selects the appropriate SCSI device. The ATN signal is asserted during the SELECTION phase to indicate that a MESSAGE OUT phase is requested by the initiator. The first message byte transferred is an IDENTIFY message. The ATN signal continues to be asserted during the MESSAGE OUT phase to indicate that the initiator has another message. The second message byte transferred is the first byte of the appropriate queue tag message, in this case a SIMPLE QUEUE TAG message. The third and last message byte is transmitted containing the second byte of the queue tag message, the queue tag. As it is transferred, the ATN signal is negated to indicate that no more message bytes are available. The target then transfers the command descriptor block. Assuming the command requires disconnection, the target transmits a DISCONNECT message to the initiator and then enters the BUS FREE phase. The target places the command, identified by the I\_T L Q nexus, at the appropriate place in the command queue.

When the target removes I/O processes from the queue for execution, a physical latency period may occur. At the end of this period, when the target is prepared to transfer the appropriate data, the target begins an ARBITRATION phase and, upon winning, enters a RESELECTION phase. After a successful reselection, the target sends the IDENTIFY message followed by a SIMPLE QUEUE TAG message with the queue tag value originally sent by the initiator. The initiator uses the I\_T\_L\_Q nexus to identify the correct set of pointers and control blocks associated with the I/O process and to establish the necessary conditions for data transfer. The target begins data transfer. When the data transfer is successfully completed, the target returns GOOD status and terminates the I/O process with a COMMAND COMPLETE message.

## 7.8.3.2 Example of tagged queuing

An example of the execution of five queued I/O processes is described to demonstrate how tagged queuing operates. All tagged I/O processes are from one initiator to a single logical unit of a single target. The five I/O processes are defined in table 28. The target is a direct-access device. At the time the I/O processes are first being executed, it is assumed that the actuator is in position to access logical block 10 000.

Command	Queue tag message	Queue tag value	Logical block address	Transfer length	Status
READ	SIMPLE	01h	10 000	1 000	Queued
READ	SIMPLE	02h	100	1	Queued
READ	ORDERED	03h	1 000	1 000	Queued
READ	SIMPLE	04h	10 000	1	Queued
READ	SIMPLE	05h	2 000	1 000	Queued

Table 28 - Commands in order received by target

The optimum order would require that those blocks close to the actuator position be the first blocks accessed, followed by those increasingly far from the actuator position. However, the command with queue tag 03h is an ordered I/O process, so that all simple I/O processes transferred previously must be executed before, while all simple I/O processes transferred after the ordered I/O process.

If a target supports an optimizing algorithm the actual order in which the I/O processes are executed could be as shown in table 29.

Command	Queue tag message	Queue tag value	Logical block address	Transfer length	Status
READ	SIMPLE	01h	10 000	1 000	Queued
READ	SIMPLE	02h	100	1	Queued
READ	ORDERED	03h	1 000	1 000	Queued
READ	SIMPLE	05h	2 000	1 000	Queued
READ	SIMPLE	04h	10 000	1 1	Queued

## Table 29 - Commands in order of execution

I/O processes with queue tag values 01h and 02h are executed in the order received since the actuator is already in position to execute I/O process 01h. I/O process 02h must be executed before I/O process 04h or 05h because the ordered I/O process 03h was transmitted after I/O processes 01h and 02h but before I/O processes 04h and 05h. I/O process 03h is then executed after I/O process 02h. The I/O processes 04h and 05h are executed after the ordered I/O process 03h. I/O process 05h is executed before I/O process 04h and 05h are executed after the ordered I/O process 03h. I/O process 05h is executed before I/O process 04h because the actuator is in position to access block 2 000 after executing I/O process 03h. I/O process 03h. I/O process 04h is executed last.

As an example of the operation of the HEAD OF QUEUE TAG I/O process, consider that a new I/O process, identified by a HEAD OF QUEUE TAG message with a queue tag of 08h, is transmitted to the target while the ordered I/O process 03h is being executed. The I/O process 03h continues execution, but the new HEAD OF QUEUE TAG I/O process is placed in the queue for execution before all subsequent I/O processes. In this case, the queue for execution after the ordered I/O process 03h was executed would appear as shown in table 30.

Command	Queue tag message	Queue tag value	Logical block address	Transfer length	Status
READ	ORDERED	03h	1 000	1 000	Executing
READ	HEAD OF QUEUE	08h	0	8	Queued
READ	SIMPLE	05h	2 000	1 000	Queued
READ	SIMPLE	04h	10 000	1	Queued

Table 30 - Modified by HEAD OF QUEUE TAG message

To obtain maximum performance gains using tagged queuing requires careful implementation of the queuing algorithms in the target. In addition, initiators should allow a maximum number of simple I/O processes to be executed with a minimum number of ordered I/O processes. RESERVE and RELEASE commands, SET LIMITS commands, and appropriate software locking conventions should be used to guarantee the proper relationship between the commands executed and the data stored on the peripheral devices. These conventions are not defined by this standard.

# 7.9 Unit attention condition

The target shall generate a unit attention condition for each initiator on each valid logical unit whenever the target has been reset by a BUS DEVICE RESET message, a hard reset condition, or by a power-on reset. The target shall also generate a unit attention condition on the affected logical unit(s) for each initiator whenever one of the following events occurs:

- a) A removable medium may have been changed;
- b) The mode parameters in effect for this initiator have been changed by another initiator;
- c) The version or level of microcode has been changed;
- d) Tagged commands queued for this initiator were cleared by another initiator;
- e) INQUIRY data has been changed;
- f) The mode parameters in effect for the initiator have been restored from non-volatile memory;
- g) A change in the condition of a synchronized spindle;
- h) Any other event occurs that requires the attention of the initiator.

## NOTES

56 Targets may queue unit attention conditions on logical units. After the first unit attention condition is cleared, another unit attention condition may exist (e.g. a power on condition followed by a microcode change condition). 57 See 7.5.3 for requirements concerning selection of an invalid logical unit.

The unit attention condition shall persist on the logical unit for each initiator until that initiator clears the condition as described in the following paragraphs.

If an INQUIRY command is received from an initiator to a logical unit with a pending unit attention condition (before the target generates the contingent allegiance condition), the target shall perform the INQUIRY command and shall not clear the unit attention condition. If the INQUIRY command is received after the target has generated the contingent allegiance condition for a pending unit attention condition, then the unit attention condition on the logical unit shall be cleared, and the target shall perform the INQUIRY command.

If any other command is received after the target has generated the contingent allegiance condition for a pending unit attention condition, the unit attention condition on the logical unit shall be cleared, and if no other unit attention condition is pending the target shall perform the command. If another unit attention condition is pending, the target shall not perform the command and shall generate another contingent allegiance condition.

If a REQUEST SENSE command is received from an initiator with a pending unit attention condition (before the target generates the contingent allegiance condition), then the target shall either:

- a) report any pending sense data and preserve the unit attention condition on the logical unit, or,
- b) report the unit attention condition, may discard any pending sense data, and clear the unit attention condition on the logical unit for that initiator.

If the target has already generated the contingent allegiance condition for the unit attention condition, the target shall perform the second action listed above.

If an initiator issues a command other than INQUIRY or REQUEST SENSE while a unit attention condition exists for that initiator (prior to generating the contingent allegiance condition for the unit attention condition), the target shall not perform the command and shall report CHECK CONDITION status unless a higher priority status as defined by the target is also pending (e.g. BUSY or RESERVATION CONFLICT).

If, after generating the contingent allegiance condition for a pending unit attention condition, the next command received from that initiator on the logical unit is not REQUEST SENSE, then that command shall be performed and the unit attention condition shall be cleared for that initiator on the logical unit and the sense data is lost (see 7.6).

If a target becomes a temporary initiator to issue a SEND command with an AEN bit of one, which informs the initiator (temporary target) of the unit attention condition, and the SEND command completes with GOOD status, then the target shall clear the unit attention condition for that initiator on the logical unit (see 7.5.5).

# 8 All device types

# 8.1 Model for all device types

This model describes some of the general characteristics expected of most SCSI devices. It is not intended to define any requirements nor is it intended to alter any requirements defined elsewhere in this standard. Clause 7 also contains model information pertaining to all device types.

# 8.1.1 SCSI addresses

There are two levels of addresses within the SCSI architecture: the SCSI device address and the logical unit number or target routine number.

## 8.1.1.1 SCSI device address

SCSI devices occupy (i.e. respond to) one address on the SCSI bus. Generally, the SCSI device provides a means (e.g. switches, jumpers) to select one of the eight available addresses (0 through 7). This address is used during bus arbitration and selection or reselection of SCSI devices. Each device on the SCSI bus is assigned a unique address.

Normally, the SCSI device address is set when the system is configured and it remains static thereafter. Some systems and devices provide vendor-specific means to alter this address at other times.

## 8.1.1.2 Logical units

Each target has one or more logical units, beginning with logical unit zero. There is a maximum of eight logical units. These logical units are usually mapped directly to peripheral devices, but they may be a portion of a peripheral device or may comprise multiple peripheral devices.

An initiator can determine whether a target implements a logical unit by issuing an INQUIRY command and examining the returned peripheral qualifier and peripheral device type.

The concept of a logical unit is not defined for an initiator. (An SCSI device may implement both the initiator role and the target role. In this case logical unit(s) are defined only for the target role.)

# 8.1.1.3 Target routines

An optional feature of the SCSI architecture permits each target to have one or more target routines, beginning with target routine number zero. There is a maximum of eight target routines. These target routines are processes that execute directly on the target and are not associated with a particular logical unit or peripheral device. Target routines are addressed using the LUNTAR bit of the IDENTIFY message (see 6.6.7).

Target routines are principally intended to return information about the target and the only valid commands are INQUIRY and REQUEST SENSE.

# 8.1.2 Commands implemented by all SCSI devices

This standard defines four commands that all SCSI-2 targets implement - INQUIRY, REQUEST SENSE, SEND DIAGNOSTIC, and TEST UNIT READY. These commands are used to configure the system, to test targets, and to return important information concerning errors and exception conditions.

### 8.1.2.1 Using the INQUIRY command

The INQUIRY command may be used by a system to determine the configuration of the SCSI bus. Target devices respond with information that includes their type and standard level and may include the vendor's identification, model number and other useful information. It is recommended that SCSI targets be capable of returning this information (or whatever part of it that is available) upon completing power-on initialization. An SCSI device may take longer to get certain portions of this information, especially if it retrieves the information from the medium.

#### 8.1.2.2 Using the REQUEST SENSE command

Whenever a contingent allegiance condition (see 7.6) is established, the initiator that received the error should issue a REQUEST SENSE command to receive the sense data describing what caused the contingent allegiance condition. If the initiator issues some other command, the sense data is lost.

# 8.1.2.3 Using the SEND DIAGNOSTIC command

The SEND DIAGNOSTIC command provides a means to request the target to perform a self test. While the test is target specific, the means of requesting the test is standardized and the response is simply GOOD status if all is well or CHECK CONDITION status if the test fails.

The SEND DIAGNOSTIC command also provides other powerful features when used in conjunction with the RECEIVE DIAGNOSTIC RESULTS command, but this capability is optional.

## 8.1.2.4 Using the TEST UNIT READY command

The TEST UNIT READY command is useful in that it allows an initiator to poll a logical unit until it is ready without the need to allocate space for returned data. It is especially useful to check cartridge status of logical units with removable media. Targets are expected to respond promptly to indicate the current status of the device (i.e. a target should avoid lengthy disconnections in an attempt to respond with GOOD status).

# 8.2 Commands for all device types

The operation codes for commands that apply to all device types are listed in table 31.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY INQUIRY LOG SELECT LOG SELECT(6) MODE SELECT(6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(6) MODE SENSE(10) READ BUFFER RECEIVE DIAGNOSTIC RESULTS REQUEST SENSE SEND DIAGNOSTIC TEST UNIT READY WRITE BUFFER	40h 39h 18h 3Ah 12h 4Ch 4Dh 15h 55h 1Ah 55h 1Ch 03h 1Dh 00h 3Bh	0 0 0 0 M 0 0 N N N N O 0 M M M 0	8.2.1 8.2.2 8.2.3 8.2.4 8.2.5 8.2.6 8.2.7 8.2.8 8.2.9 8.2.10 8.2.11 8.2.13 8.2.13 8.2.14 8.2.15 8.2.16 8.2.17
<pre>Key: M = Command implementation is ma 0 = Command implementation is op Z = Command implementation is de</pre>	otional.	ecific.	

#### Table 31 - Commands for all device types

## 8.2.1 CHANGE DEFINITION command

The CHANGE DEFINITION command (see table 32) modifies the operating definition of the selected logical unit o target with respect to commands from the selecting initiator or for all initiators.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (40h)										
1	Logical unit number Reserved											
2	Reserved						Save					
3	Reserved Definition parameter						:					
4	Reserved											
5				Reserved								
6				Reserved								
7				Reserved								
8				Parameter	r data le	ngth		_				
9				Control								

**Table 32 - CHANGE DEFINITION command** 

A save control bit (Save) of zero indicates that the target shall not save the operating definition. A Save bit of one indicates that the target shall save the operating definition to non-volatile memory.

The definition parameter field is defined in table 33.

Table 33 - Definition	parameter field
-----------------------	-----------------

Value	Meaning of definition parameter
00h	Use current operating definition
01h	SCSI-1 operating definition
02h	CCS operating definition
03h	SCSI-2 operating definition
04 - 3Fh	Reserved
40 - 7Fh	Vendor-specific

NOTE 57 The current operating definition parameter values establish operating definitions compatible with the appropriate SCSI specification. Vendor-specific values are available for those applications where more complex operation definition changes are required. Definitions supported by a device are returned in the implemented operating definition page (see 8.3.4.3).

The parameter data length field specifies the length in bytes of the parameter data that shall be transferred from the initiator to the target. A parameter data length of zero indicates that no data shall be transferred. This condition sha not be considered as an error. Parameter data lengths greater than zero indicate the number of bytes of parameter data that shall be transferred.

The parameter data is vendor-specific.

NOTE 58 The parameter data may be used to specify a password to validate an operating definition change.

The CHANGE DEFINITION command causes one of the operating definition modifications listed below:

- a) Change the operating definition of a logical unit relative to the initiator that issued the command. In this case, the target is capable of maintaining an unique operating definition for each logical unit relative to each initiator in the system.
- b) Change the operating definition of the target relative to the initiator that issued the command. In this case, the target is capable of maintaining a unique operating definition, for each initiator in the system, that applies to all logical units of the target.
- c) The operating definition of a logical unit relative to all initiators in the system. In this case, the target is capable of maintaining an unique operating definition for each logical unit relative to all initiators in the system.
- d) The operating definition of the target relative to all initiators in the system. In this case, the target is capable of maintaining only one operating definition.

#### NOTES

59 This standard does not provide a direct means to determine which of the above four methods has been implemented by the target. An indirect means of determining which method is implemented exists in that the target is required to inform affected initiators of operating definition changes via the unit attention condition.

60 The final two modifications listed above may result in incompatibilities if other initiators are operated below the SCSI-2 level.

The operating definition is modified after successful completion of the command. A target shall consider the command successfully completed when it detects the assertion of the ACK signal for the COMMAND COMPLETE message. The initiator should verify the new operating definition by issuing an INQUIRY command requesting the implemented operating definition page (see 8.3.4.1).

It is permissible for an SCSI-2 device that has its definition changed to an SCSI-1 device to accept a CHANGE DEFINITION command.

NOTE 61 The method of changing the operating definition is implementation dependent. Some implementations may require that the target's operating mode be reinitialized as if a power-up or hard-reset had occurred. Other implementations may modify only those operating definitions that are affected by the CHANGE DEFINITION command.

If the CHANGE DEFINITION command is not executed successfully for any reason, the operating definition shall remain the same as it was before the CHANGE DEFINITION command was attempted. If it is impossible to return to the previous operating definition, a unit attention condition shall be generated by the target.

NOTE 62 The present operating definition of the target may always be interrogated through the INQUIRY command. When an SCSI-2 target has its operating definition changed to CCS or SCSI-1, certain changes are needed to promote compatibility with preexisting SCSI-1 initiators. The recommended changes are as follows:

- a) The target should not initiate selections to other SCSI devices to determine if any initiators support AEN. The target should assume that none are capable of receiving AEN and not issue an AEN.
- b) The target should not generate extended contingent allegiance conditions by issuing an INITIATE RECOVERY message.
- c) If a REQUEST SENSE command with an allocation length of zero is received, the target should return four bytes of sense data.
- d) If an INQUIRY command is received, the returned data should have appropriate values in the ANSI-approved version field and the response data format field. The features supported bits should be zero.
- e) A change in the operating definition may change the vendor identifier, the device type, the device model, the SCSI implementation level, the command set, mode pages, and any other operating characteristics.

After a power-on condition or a hard RESET condition, the target shall set its initial operating definition to the last saved value, if saving is implemented, or its default value, if saving is not implemented.

# 8.2.2 COMPARE command

The COMPARE command (see table 34) provides the means to compare data from one logical unit with another c the same logical unit in a manner similar to the COPY command.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (39h)										
1	Logical	unit nur	nber	T	Res	erved		Pad			
2	······			Reserved		<u></u>					
3	(MSB)										
4				Paramete	r list le	ngth					
5								(LSB)			
6				Reserved							
7				Reserved			·····				
8				Reserved							
9		·····	<b></b>	Control		<u> </u>					

Table 34 - COMPARE command

This command functions in the same manner as the COPY command, except that the data from the source is compared on a byte-by-byte basis with the data from the destination. The parameter list transferred to the target is the same as for the COPY command. This parameter list contains the information to identify the logical units involvec in the comparison and the length of the comparison. (See 8.2.3 for additional information about the COPY command.)

If the comparison is unsuccessful, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to MISCOMPARE. The remaining fields in the sense data shall be set as documented in the COPY command.

# 8.2.3 COPY command

The COPY command (see table 35) provides a means to copy data from one logical unit to another or the same logical unit. The logical unit that receives and performs the COPY command is called the copy manager. The copy manager is responsible for copying data from a logical unit (source device) to a logical unit (destination device). These logical units may reside on different SCSI devices or the same SCSI device (in fact all three may be the same logical unit). Some SCSI devices that implement this command may not support copies to or from another SCSI device, or may not support third party copies (i.e. both the source and the destination logical units reside on other SCSI devices).

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (18h)									
1	Logical unit number			Reserved				Pad		
2	(MSB)			••••••						
3	Parameter list length									
4								(LSB)		
5				Control						

Table	35 -	COPY	command
-------	------	------	---------

The Pad bit (8.2.3.7) is used in conjunction with the Cat bit (8.2.3.7) in the segment descriptors to define what action should be taken when a segment of the copy does not fit exactly into an integer number of destination blocks.

The parameter list length field specifies the length in bytes of the parameters that shall be sent during the DATA OUT phase of the command. A parameter list length of zero indicates that no data shall be transferred. This condition shall not be considered as an error.

The COPY parameter list (see table 36) begins with a four-byte header that contains the COPY function code and priority. Following the header is one or more segment descriptors.

Bit Byte	7	6	5	4	3	2	1	0		
0		COPY fund	ction cod	e			Priority			
1		Vendor-specific								
2		Reserved								
3	Reserved									
	Segment descriptor(s)									
0				Segment (	descripto	r 0				
n	(See specific table for length.)									
0				Segment o	descripto	гx				
n			(See :	specific 1	table for	length.)				

Table	36 -	COPY	parameter	list
-------	------	------	-----------	------

The COPY function code field defines a specific format for the segment descriptors. The COPY function codes are defined in table 37. A target need not support all function codes for its device type.

Peripheral device	COPY	Segment descriptor					
Source	code	table	Comments				
Block devices	Stream devices	0	38				
(Device types 0,4,5,7) Stream devices	Block devices	1	38	(Note 3)			
(Device types 1,3,9) Block devices	(Device types 0,4,5,7) Block devices	2	39	(Note 3)			
(Device types 0,4,5,7) Stream devices	(Device types 0,4,5,7) Stream devices	3	40				
(Device types 1,3,9) Sequential-access (Device type 1)	(Device types 1,2,3,9) Sequential-access (Device type 1)	4	41	Image copy			
NOTES 1 COPY function codes 05h - OFh are reserved. 2 COPY function codes 10h - 1Fh are vendor-specific. 3 When using the COMPARE command the destination block device may be a CD-ROM device or an optical-memory device that uses read-only media. 4 See 8.2.5.1 for peripheral device type definitions.							

Table 37 - COPY function codes

The priority field of the COPY parameter list establishes the relative priority of this COPY command to othe commands being executed by the same target. All other commands are assumed to have a priority of 1. Priority ( is the highest priority, with increasing values indicating lower priorities.

The segment descriptor formats are determined by the COPY function code. The segment descriptor format used for block devices (i.e. write-once, CD-ROM, optical-memory, and direct-access devices) shall be the same. The segment descriptor format used for stream devices (i.e. printer, processor, communications, and sequential-access devices)

shall be the same. Thus a copy operation from a write-once device to a printer device uses the same segmen descriptor format as a copy operation from a direct-access device to a sequential-access device (see table 37). The segment descriptor formats are described in 8.2.3.3 through 8.2.3.6. A maximum of 256 segment descriptors are permitted. The segment descriptors are identified by ascending numbers beginning with zero.

# 8.2.3.1 Errors detected by the managing SCSI device

Two classes of exception conditions may occur during execution of a COPY command. The first class consists o those exception conditions detected by the SCSI device that received the COPY command and is managing the execution of the command. These conditions include parity errors while transferring the COPY command and statue byte, invalid parameters in the COPY command, invalid segment descriptors, and inability of the SCSI device controlling the COPY functions to continue operating. In the event of such an exception condition, the SCSI device managing the COPY shall:

- a) terminate the COPY command with CHECK CONDITION status.
- b) set the valid bit in the sense data to one. The segment number shall contain the number of the segmen descriptor being processed at the time the exception condition is detected. The sense key shall contain the sense key code describing the exception condition (i.e. not COPY ABORTED). The information field shall contain the difference between the number of blocks field in the segment descriptor being processed at the time of the failure and the number of blocks successfully copied. This number is the residue of unprocessed blocks remaining for the segment descriptor.

## 8.2.3.2 Errors detected by a target

The second class of errors consists of exception conditions detected by the SCSI device transferring data at the request of the SCSI device managing the transfer. The SCSI device managing the COPY command detects exception conditions by receiving CHECK CONDITION status from one of the SCSI devices it is managing. It then shall recover the sense data associated with the exception condition.

The SCSI device managing the COPY command may also be the source or destination SCSI device (or both). It shall distinguish between a failure of the management of the COPY and a failure of the data transfer being requested. It shall then create the appropriate sense data internally.

After recovering the sense data associated with the detected error, the SCSI device managing the COPY command shall:

- a) terminate the COPY command with CHECK CONDITION status.
- b) set the valid bit in the sense data to one. The segment number shall contain the number of the segment descriptor being processed at the time the exception condition is detected. The sense key shall be set to COPY ABORTED. The information field shall contain the difference between the number of blocks field in the segment descriptor being processed at the time of the failure and the number of blocks successfully copied. This number is the residue of unprocessed blocks remaining for the segment descriptor.

The first byte of the command-specific information field shall specify the starting byte number, relative to the first byte of sense data, of an area that contains (unchanged) the source logical unit's status byte and sense data. A zero value indicates that no status byte or sense data is being returned for the source logical unit.

The second byte of the command-specific information field shall specify the starting byte number, relative to the first byte of sense data, of an area that contains (unchanged) the destination logical unit's status byte and sense data. A zero value indicates that no status byte or sense data is being returned for the destination logical unit.

### 8.2.3.3 COPY function code 00h and 01h

The format for the segment descriptors for COPY transfers between block and stream devices is specified in table 38. This format is required for COPY function codes 00h or 01h. The segment descriptor may be repeated up to 256 times within the parameter list length specified in the command descriptor block.

Bit Byte	7	6	5	4	3	2	1	0
0	Source a	address		Reserved	Cat	Source LUN		
1	Destination address			Reser	Reserved Destination			LUN
2	(MSB)			Stream de	vice blo	ck length		
3				Stream device block length				(LSB)
4	(MSB)			Block device number of blocks				
7				DIOCK dev		(LSB)		
8	(MSB) Block device logical block address					addross		
11								(LSB)

Table 38 - Segment descriptor for COPY function codes 00	00h and 01h
--	-------------

The source address and source LUN fields specify the SCSI bus ID and logical unit of the device to copy the data from for this segment of the COPY command. The destination address and destination LUN fields specify the SCSI bus ID and logical unit to copy the data to for this segment of the COPY command. Some SCSI devices may not support third-party COPY in which the copying SCSI device is not the source or destination device. Some SCSI

devices only support COPY within the SCSI device and not to other SCSI devices. If an unsupported COPY operation is requested, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN PARAMETER LIST (see 8.2.3.1).

A catenate (Cat) bit (optional) of one indicates that the COPY manager shall catenate the last source block of  $\epsilon$  segment with the first source block of the next segment if the last source block does not end exactly at the end o the destination block. The definition of a Cat bit of zero depends on the setting of the Pad bit in the command descriptor block (see 8.2.3.7).

The stream device block-length field specifies the block length to be used on the stream device logical unit during this segment of the COPY command. If the SCSI device managing the COPY knows this block length is no supported, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN PARAMETER LIST. If the block length is found to be invalid while executing a read or write operation to the stream device, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to With CHECK CONDITION status and the sense key shall be terminated with CHECK CONDITION status and the sense key shall be set to COPY ABORTED (see 8.2.3.2).

The block device number of blocks field specifies the number of blocks in the current segment to be copied. A value of zero indicates that no blocks shall be transferred in this segment.

The block device logical block address field specifies the starting logical block address on the logical unit for this segment.

## 8.2.3.4 COPY function code 02h

The format for the segment descriptors for COPY transfers among block devices is specified in table 39. This forma is required for COPY function code 02h. The segment descriptor may be repeated up to 256 times within the parameter list length specified in the command descriptor block.

Bit Byte	7	6	5	4	3	2	1	0			
0	Source a	address		DC	Cat	Source	LUN				
1	Destination address			Reserved Destination L			tion LUN				
2	Reserved										
3	Reserved										
4	(MSB) Number of blocks										
7								(LSB)			
8	(MSB) Source logical block address										
11								(LSB)			
12	(MSB)		Doctine	tion logi		, addpace					
15			Destina	CION IOGI	CAT DIOCI	Destination logical block address					

## Table 39 - Segment descriptor for COPY function code 02h

See 8.2.3.3 for definitions of the source address, the source LUN, the destination address, the destination LUN, and Cat fields.

A destination count (DC) bit of zero indicates that the number of blocks field refers to the source logical unit. A DC bit of one indicates that the number of blocks field refers to the destination logical unit.

The number of blocks field specifies the number of blocks to be transferred to or from (depending on the DC bit) the block device during this segment. A value of zero indicates that no blocks shall be transferred.

The source logical block address field specifies the starting logical block address on the source block device.

The destination logical block address field specifies the starting logical block address on the destination block device.

#### 8.2.3.5 COPY function code 03h

The format for the segment descriptors for COPY transfers among stream devices is specified by table 40. This format is required for COPY function code 03h. The segment descriptor may be repeated up to 256 times within the parameter list length specified in the command descriptor block.

Bit Byte	7	6	5	4	3	2	1	0
0	Source address DC Cat Source LUN						_UN	
1	Destination address Reserved Destination LUN							
2	Reserved							
3	Reserved							
4	(MSB) Source block length							
5	Source block length							(LSB)
6	(MSB)							
7	Destination block length							(LSB)
8	(MSB)			Numbon of	E blocks			
11	Number of blocks							(LSB)

Table 40 - Segment descriptor for COPY function code 03h

See 8.2.3.3 for definitions of the source address, the source LUN, the destination address, the destination LUN, and Cat fields.

A destination count (DC) bit of zero indicates that the number of blocks field refers to the source logical unit. A DC bit of one indicates that the number of blocks field refers to the destination logical unit.

The source block length field specifies the block-length of the source device for this segment of the COPY. A zero in this field indicates variable block-length. For non-zero values, this field shall match the logical unit's actual block-length.

If block-length mismatches are detected prior to the beginning of the read operation by the SCSI device managing the COPY, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN PARAMETER LIST (see 8.2.3.1).

If the mismatches are detected during the read operation by the COPY manager, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to COPY ABORTED (see 8.2.3.2). and the additional sense code shall be set to INVALID FIELD IN PARAMETER LIST.

The destination block-length field specifies the block length to be used on the destination logical unit during the COPY. Destination block length mismatches are handled in an analogous manner as source block length mismatches.

The number of blocks field specifies the number of blocks to be transferred to or from (depending on the DC bit) the device during this segment. A value of zero indicates that no blocks shall be transferred.

#### 8.2.3.6 COPY function code 04h

The format for the segment descriptors for image COPY transfers between sequential-access devices is specified ir table 41. This format is required for COPY function code 04h. The segment descriptor may be repeated up to 25*€* times within the parameter list length specified in the command descriptor block.

Bit Byte	7	6	5	4	3	2	1	0
0	Source	address		Reser	ved	Source LUN		
1	Destination address			Reser	Reserved Destination LUN			
2				Count				
3 7		- <u> </u>		Reser	ved			
8				Vendo	r-specif	ic		

Table 41 -	Segment	descriptor	for COPY	function code 04h
------------	---------	------------	----------	-------------------

See 8.2.3.3 for definitions of the source address, the source LUN, the destination address, the destination LUN, and Cat fields.

The image mode COPY command copies an exact image of the source device medium to the destination device medium, beginning at their current positions. The copy function terminates when the source device:

- a) encounters an end-of-partition as defined by the source device;
- b) encounters an end-of-data as defined by the source device (i.e. BLANK CHECK sense key);
- c) has copied the number of consecutive filemarks specified in the count field from the source device to the destination device;
- d) has copied the number of consecutive setmarks specified in the count field from the source device to th∈ destination device, if the RSmk bit in the device configuration page (see 10.3.3.1) is one.

A count field of zero indicates that the COPY command shall not terminate due to any number of consecutive filemarks or setmarks. Other error or exception conditions (e.g. early-warning end-of-partition on the destination device) may cause the COPY command to terminate prior to completion. In such cases, it is not possible to calculate a residue, so the information field in the sense data shall be set to zero.

#### 8.2.3.7 Copies with unequal block lengths

When copying data between two devices with unequal block lengths, it is possible for the last source block to no completely fill the last destination block for one or more segments in the COPY command. Two optional bits are defined to assist in controlling the copy manager's actions in this circumstance. The Pad bit (in the commanc descriptor block) and the Cat bit (in each applicable segment descriptor) are defined in table 42.

Table 4	42 -	Pad	and	Cat	bit	definition
---------	------	-----	-----	-----	-----	------------

Pad	Cat	COPY manager's action
0	0	On inexact segments, it is device specific whether the COPY manager rejects the COPY command with CHECK CONDITION status and ILLEGAL REQUEST sense key, the COPY manager writes or accepts short blocks (variable-block mode on sequential-access devices), or the COPY manager adds pad characters (OOh) to the destination block or strips pad characters from the source block.
1	0	On inexact segments, the COPY manager shall add pad characters (OOh) to the destination block to completely fill the block, or it shall strip pad characters from the source block, always stopping at the end of a complete block.
x	1	The COPY manager shall always write or read complete blocks. On inexact segments, the remainder of the block contains data from the next segment. This code is not valid in the last segment of the COPY command.

NOTE 63 Use of pad characters is intended to assist in managing COPY commands between devices of different block lengths where partial-block residues may occur. The initiator who issued the COPY command is responsible for management of these pad areas (i.e. remembering where they are). One possible method is to write the COPY parameter list information to the destination medium prior to issuing the COPY command for backup and to read this information prior to issuing the COPY command for backup and to read this information prior to issuing the COPY command for backup and to read this information prior to issuing the COPY command for backup and to read this information prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to issuing the COPY command for backup and to read the prior to backup and to read the prior backup and to read the p

## 8.2.4 COPY AND VERIFY command

The COPY AND VERIFY command (see table 43) performs the same function as the COPY command, except that a verification of the data written to the destination logical unit is performed after the data is written. The parameter list transferred to the target is the same as for the COPY command. This parameter list contains the information to identify the logical units involved in the copy and the length of the copy. See 8.2.3 for additional information about the COPY command.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (3	BAh)		
1	Logical	unit num	per	F	Reserved		BytChk	Pad
2				Reserved			·	
3	(MSB)							
4				Parameter	r list le	ength		
5								(LSB)
6				Reserved				
7				Reserved				
8			- ***	Reserved				
9				Control				

#### Table 43 - COPY AND VERIFY command

A byte check (BytChk) bit of zero causes a medium verification to be performed with no data comparison. A BytChk bit of one causes a byte-by-byte comparison of data written on the destination medium and the data transferred from the source medium. If the comparison is unsuccessful for any reason, the copy manager shall return CHECK

CONDITION status with the sense key set to MISCOMPARE. The remaining fields in the sense data shall be set as documented in the COPY command.

## 8.2.5 INQUIRY command

The INQUIRY command (see table 44) requests that information regarding parameters of the target and its attached peripheral device(s) be sent to the initiator. An option allows the initiator to request additional information about the target or logical unit (see 8.2.5.2).

Bit Byte	7	6	5	4	3	2	1	0	
0		Operation code (12h)							
1	Logical	unit num	ber			Reserved		EVPD	
2	Page code								
3	Reserved						· · · · ·		
4				Allocatio	on length	ו	-		
5				Control					

Table 44 - INQUIRY command	Table	44 -	INQUIRY	command	
----------------------------	-------	------	---------	---------	--

An enable vital product data (EVPD) bit of one specifies that the target shall return the optional vital product data specified by the page code field. If the target does not support vital product data and this bit is set to one, the target shall return CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and an additional sense code of INVALID FIELD IN CDB.

An EVPD bit of zero specifies that the target shall return the standard INQUIRY data. If the page code field is not zero, the target shall return CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and an additional sense code of INVALID FIELD IN CDB.

The page code field specifies which page of vital product data information the target shall return (see 8.3.4).

The INQUIRY command shall return CHECK CONDITION status only when the target cannot return the requested INQUIRY data.

NOTE 64 The INQUIRY data should be returned even though the peripheral device may not be ready for other commands.

If an INQUIRY command is received from an initiator with a pending unit attention condition (i.e. before the target reports CHECK CONDITION status), the target shall perform the INQUIRY command and shall not clear the unit attention condition (see 7.9).

### NOTES

65 The INQUIRY command is typically used by the initiator after a reset or power-up condition to determine the device types for system configuration. To minimize delays after a reset or power-up condition, the standard INQUIRY data should be available without incurring any media access delays. If the target does store some of the INQUIRY data on the device, it may return zeros or ASCII spaces (20h) in those fields until the data is available from the device.

66 The INQUIRY data may change as the target executes its initialization sequence or in response to a CHANGE DEFINITION command. For example, the target may contain a minimum command set in its non-volatile memory and may load its final firmware from the device when it becomes ready. After it has loaded the firmware, it may support more options and therefore return different supported options information in the INQUIRY data.

# 8.2.5.1 Standard INQUIRY data

The standard INQUIRY data (see table 45) contains 36 required bytes, followed by a variable number of vendorspecific parameters. Bytes 56 through 95, if returned, are reserved for future standardization.

Bit Byte	7	6	5	4	3	2	1	0	
0	Peripher	ripheral qualifier Peripheral device type							
1	RMB			Device-t	ype modif:	ier			
2	ISO ve	ersion	EC	CMA versi	on	ANSI-a	oproved ve	ersion	
3	AENC	TrmIOP	Rese	erved		Response	data form	nat	
4				Addition	al length	(n-4)			
5				Reserved					
6				Reserved					
7	RelAdr	WBus32	WBus16	Sync	Linked	Reserved	CmdQue	SftRe	
8	(MSB)			Vondon i	dontificat	tion			
15		Vendor identification (LSB)							
16	(MSB)	Product identification							
31				Product .	Laentiilea	acion		(LSB)	
32	(MSB)			Product	revision :				
35				i oudet i	evision .	TEVET		(LSB)	
36			, , , , , , , , , , , , , , , , , , ,	Vendor-sp	anifin				
55				venuor-si	Dectife				
56				Reserved					
95				neserved					
			Venc	lor-speci1	ic parame	eters			
96									
n				Vendor-sp					

Table 45 - Standard INQUIRY data format

The peripheral qualifier and peripheral device-type fields identify the device currently connected to the logical unit. If the target is not capable of supporting a device on this logical unit, this field shall be set to 7Fh (peripheral qualifier set to 011b and peripheral device type set to 1Fh). The peripheral qualifier is defined in table 46 and the peripheral device type is defined in table 47.

,

Table 4	16 -	Periphera	l qualifier
---------	------	-----------	-------------

Qualifier	Description
000Ь	The specified peripheral device type is currently connected to this logical unit. If the target cannot determine whether or not a physical device is currently connected, it shall also use this peripheral qualifier when returning the INQUIRY data. This peripheral qualifier does not mean that the device is ready for access by the initiator.
001b	The target is capable of supporting the specified peripheral device type on this logical unit; however, the physical device is not currently connected to this logical unit.
010b	Reserved
011b	The target is not capable of supporting a physical device on this logical unit. For this peripheral qualifier the peripheral device type shall be set to 1Fh to provide compatibility with previous versions of SCSI. All other peripheral device type values are reserved for this peripheral qualifier.
1XXb	Vendor-specific

Table 47 - Peripheral device type

Code	Description
00h	Direct-access device (e.g. magnetic disk)
01h	Sequential-access device (e.g. magnetic tape)
02h	Printer device
03h	Processor device
04h	Write-once device (e.g. some optical disks)
05h	CD-ROM device
06h	Scanner device
07h	Optical memory device (e.g. some optical disks)
08h	Medium changer device (e.g. jukeboxes)
09h	Communications device
0Ah - 0Bh	Defined by ASC IT8 (Graphic arts pre-press devices)
0Ch - 1Eh	Reserved
1Fh	Unknown or no device type

A removable medium (RMB) bit of zero indicates that the medium is not removable. A RMB bit of one indicates that the medium is removable.

The device-type modifier field was defined in SCSI-1 to permit vendor-specific qualification codes of the device type. This field is retained for compatibility with SCSI-1. Targets that do not support this field should return a value of zero.

The usage of non-zero code values in the ISO version and ECMA version fields are defined by the International Organization for Standardization and the European Computer Manufacturers Association, respectively. A zero code value in these fields shall indicate that the target does not claim compliance to the ISO version of SCSI (ISO 9316) or the ECMA version of SCSI (ECMA-111). It is possible to claim compliance to more than one of these SCSI standards.

The ANSI-approved version field indicates the implemented version of this standard and is defined in table 48.

Code	Description
Oh	The device might or might not comply to an ANSI-approved standard.
1h 2h 3h - 7h	The device complies to ANSI X3.131-1986 (SCSI-1). The device complies to this version of SCSI. This code is reserved to designate this standard upon approval by ANSI. Reserved

Table 48 - ANSI-approved version

The asynchronous event notification capability (AENC) bit indicates that the device supports the asynchronous event notification capability as defined in 7.5.5.

- a) Processor device-type definition: An AENC bit of one indicates that the processor device is capable of accepting asynchronous event notifications. An AENC bit of zero indicates that the processor device does not support asynchronous event notifications.
- b) All other device-types: This bit is reserved.

A terminate I/O process (TrmIOP) bit of one indicates that the device supports the TERMINATE I/O PROCESS message as defined in 6.6.22. A value of zero indicates that the device does not support the TERMINATE I/O PROCESS message.

A response data format value of zero indicates the INQUIRY data format is as specified in SCSI-1. A response data format value of one indicates compatibility with some products that were designed prior to the development of this standard (i.e. CCS). A response data format value of two indicates that the data shall be in the format specified in this standard. Response data format values greater than two are reserved.

The additional length field shall specify the length in bytes of the parameters. If the allocation length of the command descriptor block is too small to transfer all of the parameters, the additional length shall not be adjusted to reflect the truncation.

A relative addressing (RelAdr) bit of one indicates that the device supports the relative addressing mode for this logical unit. If this bit is set to one, the linked command (Linked) bit shall also be set to one; since relative addressing can only be used with linked commands. A RelAdr bit of zero indicates the device does not support relative addressing for this logical unit.

A wide bus 32 (Wbus32) bit of one indicates that the device supports 32-bit wide data transfers. A value of zero indicates that the device does not support 32-bit wide data transfers.

A wide bus 16 (Wbus16) bit of one indicates that the device supports 16-bit wide data transfers. A value of zero indicates that the device does not support 16-bit wide data transfers.

NOTE 67 If the values of both the Wbus16 and Wbus32 bits are zero, the device only supports 8-bit wide data transfers.

A synchronous transfer (Sync) bit of one indicates that the device supports synchronous data transfer. A value of zero indicates the device does not support synchronous data transfer.

A linked command (Linked) bit of one indicates that the device supports linked commands for this logical unit. A value of zero indicates the device does not support linked commands for this logical unit.

A command queuing (CmdQue) bit of one indicates that the device supports tagged command queuing for this logical unit. A value of zero indicates the device does not support tagged command queuing for this logical unit.

A soft reset (SftRe) bit of zero indicates that the device responds to the RESET condition with the hard RESET alternative (see 6.2.2.1). A SftRe bit of one indicates that the device responds to the RESET condition with the soft RESET alternative (see 6.2.2.2).

ASCII data fields shall contain only graphic codes (i.e. code values 20h through 7Eh). Left-aligned fields shall place any unused bytes at the end of the field (highest offset) and the unused bytes shall be filled with space characters (20h). Right-aligned fields shall place any unused bytes at the start of the field (lowest offset) and the unused bytes shall be filled with space characters (20h).

The vendor identification field contains eight bytes of ASCII data identifying the vendor of the product. The data shall be left aligned within this field.

NOTE 68 It is intended that this field provide a unique vendor identification of the manufacturer of the SCSI device. In the absence of a formal registration procedure, X3T10 maintains a list of vendor identification codes in use. Vendors are requested to voluntarily submit their identification codes to X3T10 to prevent duplication of codes (see annex E).

The product identification field contains sixteen bytes of ASCII data as defined by the vendor. The data shall be leftaligned within this field.

The product revision level field contains four bytes of ASCII data as defined by the vendor. The data shall be leftaligned within this field.

## 8.2.5.2 Vital product data

Implementation of vital product data is optional. The information returned consists of configuration data (e.g. vendor identification, product identification, model, serial number), manufacturing data (e.g. plant and date of manufacture), field replaceable unit data and other vendor- or device-specific data.

The initiator requests the vital product data information by setting the EVPD bit to one and specifying the page code of the desired vital product data (see 8.3.4). If the target does not implement the requested page it shall return CHECK CONDITION status. The a sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN CDB.

## NOTES

69 The target should have the ability to execute the INQUIRY command even when a device error occurs that prohibits normal command execution. In such a case, CHECK CONDITION status should be returned for commands other than INQUIRY or REQUEST SENSE. The sense data returned may contain the field replaceable unit code. The vital product data should be obtained for the failing device using the INQUIRY command.

70 This standard defines a format that allows device-independent initiator software to display the vital product data returned by the INQUIRY command. For example, the initiator may display the data associated for the field replaceable unit returned in the sense data. The contents of the data may be vendor-specific; therefore, it may not be usable without detailed information about the device.

71 This standard does not define the location or method of storing the vital product data. The retrieval of the data may require completion of initialization operations within the device that may induce delays before the data is available to the initiator. Time-critical requirements are an implementation consideration and are not addressed in this standard.

## 8.2.6 LOG SELECT command

The LOG SELECT command (see table 49) provides a means for the initiator to manage statistical information maintained by the device about the device or its logical units. Targets that implement the LOG SELECT command shall also implement the LOG SENSE command. Structures in the form of log parameters within log pages are defined as a way to manage the log data. The LOG SELECT command provides for sending zero or more log pages during a DATA OUT phase. This standard defines the format of the log pages, but does not define the exact conditions and events that are logged.

Bit Byte	7	6	5	4	3	2	1	0			
0		Operation code (4Ch)									
1	Logical	unit num	ber		SP						
2	PC			Reserved							
3				Reserved							
4				Reserved							
5				Reserved							
6				Reserved							
7	(MSB)			Benereten list longth							
8				Parameter list length (LSB)							
9	Control										

Table 4	9 -	LOG	SELECT	command
---------	-----	-----	--------	---------

A parameter code reset (PCR) bit of one and a parameter list length of zero shall cause all implemented parameters to be set to the target-defined default values (e.g. zero). If the PCR bit is one and the parameter list length is greater than zero, the command is terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN CDB. A PCR bit of zero specifies that the log parameters shall not be reset.

A save parameters (SP) bit of one indicates that after performing the specified LOG SELECT operation the target shall save to non-volatile memory all parameters identified as savable by the DS bit in the log page (see 8.3.2). A SP bit of zero specifies that parameters shall not be saved.

Saving of log parameters is optional and indicated for each log parameter by the DS bit in the page. Log parameters may be saved at vendor-specific times subject to the TSD bit (see 8.3.2) in the log parameter. If the target does not implement saved parameters for any log parameter and the SP bit is set to one, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

It is not an error to set the SP bit to one and to set the DS bit of a log parameter to one. In this case, the parameter value for that log parameter is not saved.

The page control (PC) field defines the type of parameter values to be selected. The page control field is defined in table 50.

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

Туре	LOG SELECT parameter values	LOG SENSE parameter values
00b	Current threshold values	Threshold values
01b	Current cumulative values	Cumulative values
10b	Default threshold values	Default threshold values
11b	Default cumulative values	Default cumulative values

#### Table 50 - Page control field

The current cumulative values may be updated by the target or by the initiator using the LOG SELECT command to reflect the cumulative number of events experienced by the target. Fields in the parameter control byte (8.3.2) of each log parameter control the updating and saving of the current cumulative parameters.

The target shall set the current threshold parameters to the default threshold values in response to a LOG SELECT command with the PC field set to 10b and the parameter list length field set to zero.

The target shall set all cumulative parameters to their default values in response to a LOG SELECT command with the PC field set to 11b and the parameter list length field set to zero.

The current threshold value can only be modified by the initiator via the LOG SELECT command. If the initiator attempts to change current threshold values that are not available or not implemented for that log parameter, then the target shall terminate the LOG SELECT command with CHECK CONDITION status, the sense key set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN PARAMETER LIST. The saving of current threshold parameters and the criteria for the current threshold being met are controlled by bits in the parameter control byte (8.3.2).

NOTE 72 Pages or log parameters that are not available may become available at some later time (e.g. after the device has become ready).

The parameter list length field specifies the length in bytes of the parameter list that shall be transferred from the initiator to the target during the DATA OUT phase. A parameter list length of zero indicates that no pages shall be transferred. This condition shall not be considered an error. If the initiator sends page codes or parameter codes within the parameter list that are reserved or not implemented by the target, the target shall terminate the LOG SELECT command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

If a parameter list length results in the truncation of any log parameter, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

The initiator should send pages in ascending order by page code value if multiple pages are sent during a DATA OUT phase. If multiple log parameters within a page are sent during the DATA OUT phase, they should be sent in ascending order by parameter code value. The target shall return CHECK CONDITION status if the initiator sends pages out of order or parameter codes out of order. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

NOTE 73 Initiators should issue LOG SENSE commands prior to issuing LOG SELECT commands to determine supported pages and page lengths.

The target may provide independent sets of log parameters for each logical unit or for each combination of logical units and initiators. If the target does not support independent sets of log parameters and any log parameters are changed that affect other initiators, then the target shall generate a unit attention condition for all initiators except the one that issued the LOG SELECT command (see 7.9). This unit attention condition is returned with an additional sense code of LOG PARAMETERS CHANGED.

If the initiator sends a log parameter that is not supported by the target, the target shall terminate the command with CHECK CONDITION status, set the sense key to ILLEGAL REQUEST, and set the additional sense code to INVALID FIELD IN PARAMETER LIST.

## 8.2.7 LOG SENSE command

The LOG SENSE command (see table 51) provides a means for the initiator to retrieve statistical information maintained by the device about the device or its logical units. It is a complementary command to the LOG SELECT command.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (4Dh)									
1	Logical	unit num	per		Reserved PPC					
2		PC		Page code						
3				Reserved						
4		1		Reserved						
5	(MSB)			Panamata						
6				Parameter pointer						
7	(MSB)			All						
8				Allocati	(LSB)					
9				Control						

Table 51 -	LOG	SENSE	command
------------	-----	-------	---------

The parameter pointer control (PPC) bit controls the type of parameters requested from the target:

- a) A PPC bit of one indicates that the target shall return a log page with parameter code values that have changed since the last LOG SELECT or LOG SENSE command. The target shall return only those parameter codes following the parameter pointer field.
- b) A PPC bit of zero indicates that the log parameter requested from the target shall begin with the parameter code specified in the parameter pointer field and return the number of bytes specified by the allocation length field in ascending order of parameter codes from the specified log page. A PPC bit of zero and a parameter pointer field of zero shall cause all available log parameters for the specified log page to be returned to the initiator subject to the specified allocation length.

Saving parameters is an optional function of the LOG SENSE command. If the target does not implement saving log parameters and if the save parameters (SP) bit is one, then the target shall return CHECK CONDITION status, set the sense key to ILLEGAL REQUEST, and set the additional sense code to INVALID FIELD IN CDB.

An SP bit of zero indicates the target shall perform the specified LOG SENSE command and shall not save any log parameters. If saving log parameters is implemented, an SP bit of one indicates that the target shall perform the specified LOG SENSE command and shall save all log parameters identified as savable by the DS bit (8.3.2) to a non-volatile, vendor-specific location.

The page control (PC) field defines the type of parameter values to be selected (see 8.2.6 for the definition of the page control field). The parameter values returned by a LOG SENSE command are determined as follows:

- a) The specified parameter values at the last update (in response to a LOG SELECT or LOG SENSE command or done automatically by the target for cumulative values).
- b) The saved values, if an update has not occurred since the last power-on, hard RESET condition, or BUS DEVICE RESET message and saved parameters are implemented.

c) The default values, if an update has not occurred since the last power-on, hard RESET condition, or BUS DEVICE RESET message and saved values are not available or not implemented.

The page code field identifies which page of data is being requested (see 8.3.2). If the page code is reserved or not implemented, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN CDB.

The parameter pointer field allows the initiator to request parameter data beginning from a specific parameter code to the maximum allocation length or the maximum parameter code supported by the target, whichever is less. If the value of the parameter pointer field is larger than the largest available parameter code that can be returned by the target on the specified page, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN CDB.

Log parameters within the specified log page shall be transferred in ascending order according to parameter code.

## 8.2.8 MODE SELECT(6) command

The MODE SELECT(6) command (see table 52) provides a means for the initiator to specify medium, logical unit, or peripheral device parameters to the target. Targets that implement the MODE SELECT command shall also implement the MODE SENSE command. Initiators should issue MODE SENSE prior to each MODE SELECT to determine supported pages, page lengths, and other parameters.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (15h)								
1	Logical	unit num	nber	PF Reserved				SP	
2				Reserved	ł				
3	Reserved								
4	Parameter list length								
5	Control								

Table 52 - MODE SELECT(6) command

If a target supports saved pages, it may save only one copy of the page for each logical unit and have it apply to all initiators, or it may save separate copies for each initiator for each logical unit. If separate copies are saved, the target shall maintain separate current values for each I\_T\_L nexus. Pages that are common to all initiators are not required to have multiple copies.

If an initiator sends a MODE SELECT command that changes any parameters applying to other initiators, the target shall generate a unit attention condition for all initiators except the one that issued the MODE SELECT command (see 7.9). The target shall set the additional sense code to MODE PARAMETERS CHANGED.

The target may provide for independent sets of parameters for each attached logical unit or for each combination of logical unit and initiator. If independent sets of parameters are implemented, and a third party reservation is requested, the target transfers the set of parameters in effect for the initiator of the RESERVE command to the parameters used for commands from the third party device (see 9.2.12.3 and 10.2.10.1).

A page format (PF) bit of zero indicates that the MODE SELECT parameters are as specified in SCSI-1, (i.e. all parameters after the block descriptors are vendor-specific). A PF bit of one indicates that the MODE SELECT parameters following the header and block descriptor(s) are structured as pages of related parameters and are as specified in this standard.

A save pages (SP) bit of zero indicates the target shall perform the specified MODE SELECT operation, and shall not save any pages. An SP bit of one indicates that the target shall perform the specified MODE SELECT operation, and shall save to a non-volatile vendor-specific location all the savable pages including any sent during the DATA OUT phase. The SP bit is optional, even when mode pages are supported by the target. Pages that are saved are identified by the parameter savable bit that is returned in the page header by the MODE SENSE command (see 8.3.3). If the PS bit is set in the MODE SENSE data then the page shall be savable by issuing a MODE SELECT command with the SP bit set. If the target does not implement saved pages and the SP bit is set to one, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

The parameter list length field specifies the length in bytes of the mode parameter list that shall be transferred from the initiator to the target during the DATA OUT phase. A parameter list length of zero indicates that no data shall be transferred. This condition shall not be considered as an error.

The target shall terminate the command with CHECK CONDITION status if the parameter list length results in the truncation of any mode parameter header, mode parameter block descriptor(s), or mode page. The sense key shall be set to ILLEGAL REQUEST, and the additional sense code shall be set to PARAMETER LIST LENGTH ERROR.

The mode parameter list for the MODE SELECT and MODE SENSE commands is defined in 8.3.3. Parts of each mode parameter list are uniquely defined for each device-type.

The target shall terminate the MODE SELECT command with CHECK CONDITION status, set the sense key to ILLEGAL REQUEST, set the additional sense code to INVALID FIELD IN PARAMETER LIST, and shall not change any mode parameters for the following conditions:

- a) If the initiator sets any field that is reported as not changeable by the target to a value other than its current value.
- b) If the initiator sets any field in the mode parameter header or block descriptor(s) to an unsupported value.
- c) If an initiator sends a mode page with a page length not equal to the page length returned by the MODE SENSE command for that page.
- d) If the initiator sends a unsupported value for a mode parameter and rounding is not implemented for that mode parameter.
- e) If the initiator sets any reserved field in the mode parameter list to a non-zero value.

If the initiator sends a value for a mode parameter that is outside the range supported by the target and rounding is implemented for that mode parameter, the target may either:

- a) round the parameter to an acceptable value and terminate the command as described in 7.5.4;
- b) terminate the command with CHECK CONDITION status, the sense key set to ILLEGAL REQUEST, and set the additional sense code to INVALID FIELD IN PARAMETER LIST.

A target may alter any mode parameter in any mode page (even those reported as non-changeable) as a result of changes to other mode parameters.

The target validates the non-changeable mode parameters against the current values that existed for those mode parameters prior to the MODE SELECT command.

NOTE 74 If the current values calculated by the target affect the initiator's operation, the initiator should issue a MODE SENSE command after each MODE SELECT command.

# 8.2.9 MODE SELECT(10) command

The MODE SELECT(10) command (see table 53) provides a means for the initiator to specify medium, logical unit or peripheral device parameters to the target. See the MODE SELECT(6) command (8.2.8) for a description of the fields in this command. Initiators should issue MODE SENSE prior to each MODE SELECT to determine supported mode pages, mode page lengths, and other parameters.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (	55h)		
1	Logical	unit num	ber	PF		Reserved		SP
2				Reserved				
3	Reserved							
4				Reserved				
5				Reserved				
6				Reserved				
7	(MSB)			Bonomotor		onath		
8	Parameter list length (L							(LSB)
9				Control				

Targets that implement the MODE SELECT(10) command shall also implement the MODE SENSE(10) command.

# 8.2.10 MODE SENSE(6) command

The MODE SENSE(6) command (see table 54) provides a means for a target to report parameters to the initiator It is a complementary command to the MODE SELECT(6) command.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	code (1	Ah)		
1	Logical unit number			Reserved	DBD		Reserved	
2	PC			Page code				
3				Reserved				
4				Allocatio	n length			
5				Control				

Table 54 - MODE SENSE(6) command	Table 54 -	MODE	SENSE(6)	command
----------------------------------	------------	------	----------	---------

A disable block descriptors (DBD) bit of zero indicates that the target may return zero or more block descriptors in the returned MODE SENSE data (see 8.3.3), at the target's discretion. A DBD bit of one specifies that the target shall not return any block descriptors in the returned MODE SENSE data.

The page control (PC) field defines the type of mode parameter values to be returned in the mode pages. The page control field is defined in table 55.

106

Code	Type of parameter	Subclause
00b	Current values	8.2.10.1
01b	Changeable values	8.2.10.2
10b	Default values	8.2.10.3
11b	Saved values	8.2.10.4

Table 55 - Page control field

NOTE 75 The page control field only affects the mode parameters within the mode pages, however the PS bit, page code and page length fields should return current values since they have no meaning when used with other types. The mode parameter header and mode parameter block descriptor should return current values.

The page code specifies which mode page(s) to return. Mode page code usage is defined in table 56.

Table 56 - Mode page code usage for all devices

Page code	Description	Subclause
00h 01h - 1Fh 20h - 3Eh 3Fh	Vendor-specific (does not require page format) See specific device-types Vendor-specific (page format required) Return all mode pages	

An initiator may request any one or all of the supported mode pages from a target. If an initiator issues a MODE SENSE command with a page code value not implemented by the target, the target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST and the additional sense code to INVALID FIELD IN CDB.

A page code of 3Fh indicates that all mode pages implemented by the target shall be returned to the initiator. If the mode parameter list exceeds 256 bytes for a MODE SENSE(6) command or 65 536 bytes for a MODE SENSE(10) command, the target shall return CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

Mode page 00h, if implemented, shall be returned after all other mode pages.

NOTES

76 Mode pages should be returned in ascending page code order except for mode page 00h.

77 If the PC field and the page code field are both set to zero the target should return a mode parameter header and block descriptor (if applicable). This provides for compatibility with existing SCSI-1 initiators.

The mode parameter list for all device types for MODE SELECT and MODE SENSE is defined in 8.3.3. Parts of the mode parameter list are specifically defined for each device type. See subclause three of each peripheral device type for further information.

#### 8.2.10.1 Current values

A PC field value of 0h requests that the target return the current values of the mode parameters. The current values returned are:

- a) the current values of the mode parameters established by last successful MODE SELECT command;
- b) the saved values of the mode parameters if a MODE SELECT command has not successfully completed since the last power-on, hard RESET condition, or BUS DEVICE RESET message;
- c) the default values of the mode parameters, if saved values, are not available or not supported.

#### 8.2.10.2 Changeable values

A PC field value of 1h requests that the target return a mask denoting those mode parameters that are changeable In the mask, the fields of the mode parameters that are changeable shall be set to all one bits and the fields of the mode parameters that are non-changeable (i.e. defined by the target) shall be set to all zero bits.

NOTES

78 An attempt to change a non-changeable mode parameter (via MODE SELECT) results in an error condition (see 8.2.8). 79 The initiator should issue a MODE SENSE command with the PC field set to 1h and the page code field set to 3Fh to determine which mode pages are supported, which mode parameters within the mode pages are changeable, and the supported length of each mode page prior to issuing any MODE SELECT commands.

## 8.2.10.3 Default values

A PC field value of 2h requests that the target return the default values of the mode parameters. Parameters not supported by the target shall be set to zero. Default values are accessible even if the device is not ready.

## 8.2.10.4 Saved values

A PC field value of 3h requests that the target return the saved values of the mode parameters. Implementation of saved page parameters is optional. Mode parameters not supported by the target shall be set to zero. If saved values are not implemented, the command shall be terminated with CHECK CONDITION status, the sense key set to ILLEGAL REQUEST and the additional sense code set to SAVING PARAMETERS NOT SUPPORTED.

NOTE 80 The method of saving parameters is vendor-specific. The parameters are preserved in such a manner that they are retained when the target is powered down. All savable pages can be considered saved when a MODE SELECT command issued with the SP bit set to one has returned a GOOD status or after the successful completion of a FORMAT UNIT command.

# 8.2.10.5 Initial responses

After a power-up condition or hard reset condition, the target shall respond in the following manner:

- a) If default values are requested, report the default values.
- b) If saved values are requested, report valid restored mode parameters, or restore the mode parameters and report them. If the saved values of the mode parameters are not able to be accessed from the non-volatile vendor-specific location, terminate the command with CHECK CONDITION status and set the sense key set to NOT READY. If saved parameters are not implemented respond as defined in 8.2.10.4.
- c) If current values are requested and the current values of the mode parameters have not been sent by the initiator (via a MODE SELECT command), the target may return either the default or saved values, as defined above. If current values have been sent, the current values shall be reported.

# 8.2.11 MODE SENSE(10) command

The MODE SENSE(10) command (see table 57) provides a means for a target to report parameters to the initiator. It is a complementary command to the MODE SELECT(10) command. If the MODE SELECT(10) command is implemented the MODE SENSE(10) command shall be implemented. See the MODE SENSE(6) command for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0
0	Operation code (5Ah)							
1	Logical unit number			Reserved	DBD		Reserved	1
2	P	>			Page co	ode		
3				Reserved				
4	Reserved							
5				Reserved				
6				Reserved				
7	(MSB)			Allocotic	- longth			
8				Allocatio	n rengti	r		(LSB)
9				Control				

Table	57 -	MODE	SENSE	(10)	command
Iable	<b>v</b> i -		OLIVOR		<b>V</b> VIIIIIMIIM

## 8.2.12 READ BUFFER command

The READ BUFFER command (see table 58) is used in conjunction with the WRITE BUFFER command as a diagnostic function for testing target memory and the SCSI bus integrity. This command shall not alter the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation code (3Ch)				
1	Logical unit number			Res	erved			
2				Buffer I	D			
3	(MSB)							
4				Buffer o	ffset			
5								(LSB)
6	(MSB)							
7				Allocatio	on length			
8								(LSB)
9				Control				

**Table 58 - READ BUFFER command** 

The function of this command and the meaning of fields within the command descriptor block depend on the contents of the mode field. The mode field is defined in table 59.

Mode	Description	Туре		
000b	Combined header and data	Optional		
001b	Vendor-specific	Vendor-specific		
0106	Data	Optional		
0110	Descriptor	Optional		
1006	Reserved	Reserved		
101b	Reserved	Reserved		
110b	Reserved	Reserved		
111b	Reserved	Reserved		

Table 59 - READ BUFFER mode field

NOTE 81 Modes 000b and 001b are included for compatibility with products that were designed prior to the generation of this standard. Some products that were designed prior to the generation of this standard restrict the available length to 65 535 bytes.

#### 8.2.12.1 Combined header and data mode (000b)

In this mode, a four-byte header followed by data bytes is returned to the initiator during the DATA IN phase. The buffer ID and the buffer offset fields are reserved.

The four-byte READ BUFFER header (see table 60) is followed by data bytes from the target's data buffer.

#### Table 60 - READ BUFFER header

Bit Byte	7	6	5	4	3	2	1	0
0	Reserved							
1 3	(MSB)			Buffer ca	apacity			(LSB)

The buffer capacity field specifies the total number of data bytes available in the target's data buffer. This number is not reduced to reflect the allocation length; nor is it reduced to reflect the actual number of bytes written using the WRITE BUFFER command. Following the READ BUFFER header, the target shall transfer data from its data buffer. The target terminates the DATA IN phase when allocation length bytes of header plus data have been transferred or when all available header and buffer data have been transferred to the initiator, whichever is less.

## 8.2.12.2 Vendor-specific mode (001b)

In this mode, the meanings of the buffer ID, buffer offset, and allocation length fields are not specified by this standard.

#### 8.2.12.3 Data mode (010b)

In this mode, the DATA IN phase contains buffer data. The buffer ID field identifies a specific buffer within the target from which data shall be transferred. The vendor assigns buffer ID codes to buffers within the target. Buffer ID zero shall be supported. If more than one buffer is supported, additional buffer ID codes shall be assigned contiguously, beginning with one. Buffer ID code assignments for the READ BUFFER command shall be the same as for the WRITE BUFFER command. If an unsupported buffer ID code is selected, the target shall return CHECK CONDITION status, shall set the sense key to ILLEGAL REQUEST, and set the additional sense code to ILLEGAL FIELD IN CDB. The target terminates the DATA IN phase when allocation length bytes have been transferred or when all the available data from the buffer has been transferred to the initiator, whichever amount is less.

The buffer offset field contains the byte offset within the specified buffer from which data shall be transferred from. The initiator should conform to the offset boundary requirements returned in the READ BUFFER descriptor (see 8.2.12.4). If the target is unable to accept the specified buffer offset, it shall return CHECK CONDITION status, shall set the sense key to ILLEGAL REQUEST, and set the additional sense code to ILLEGAL FIELD IN CDB.

## 8.2.12.4 Descriptor mode (011b)

In this mode, a maximum of four bytes of READ BUFFER descriptor information is returned. The target shall return the descriptor information for the buffer specified by the buffer ID (see the description of the buffer ID in 8.2.12.3). If there is no buffer associated with the specified buffer ID, the target shall return all zeros in the READ BUFFER descriptor. The buffer offset field is reserved in this mode. The allocation length should be set to four or greater. The target shall transfer the lesser of the allocation length or four bytes of READ BUFFER descriptor. The READ BUFFER descriptor is defined as shown in table 61.

Bit Byte	7	6	5	4	3	2	1	0
0				Offset bo	oundary			
13	(MSB)			Buffer ca	apacity		٠	(LSB)

Table 61 - READ BUFFER descriptor

The offset boundary field returns the boundary alignment within the selected buffer for subsequent WRITE BUFFER and READ BUFFER commands. The value contained in the offset boundary field shall be interpreted as a power of two.

The value contained in the buffer offset field of subsequent WRITE BUFFER and READ BUFFER commands should be a multiple of 2<sup>offset boundary</sup> as shown in table 62.

Offset boundary	2**Offset boundary	Buffer offsets
0	2**0 = 1	Byte boundaries
1	2**1 = 2	Even-byte boundaries
2	2**2 = 4	Four-byte boundaries
3	2**3 = 8	Eight-byte boundaries
4	2**4 = 16	16-byte boundaries
FFh	Not applicable	0 is the only supported buffer offset.

Table 62 - Buffer offset boundary

The buffer capacity field shall return the size of the selected buffer in bytes.

NOTE 82 In a multi-tasking system, a buffer may be altered between the WRITE BUFFER and READ BUFFER commands by another task. Buffer testing applications may wish to ensure that only a single task is active. Use of reservations (to all logical units on the device) or linked commands may also be helpful in avoiding buffer alteration between these two commands.

# 8.2.13 RECEIVE DIAGNOSTIC RESULTS command

The RECEIVE DIAGNOSTIC RESULTS command (see table 63) requests analysis data be sent to the initiator afte completion of a SEND DIAGNOSTIC command (see 8.2.15). If the target supports the optional page format, the page code field sent in the previous SEND DIAGNOSTIC command specifies the format of the returned data.

Bit Byte	7	6	5	4	3	2	1	0	
0				Operatio	n code (1	Ch)			
1	Logical unit number Reserved								
2	Reserved								
3	(MSB)			Allocati	on length				
4				ALIOCALI	on rengti			(LSB)	
5				Control					

# Table 63 - RECEIVE DIAGNOSTIC RESULTS command

NOTES

83 To ensure that the diagnostic command information is not destroyed by a command sent from another initiator, either the SEND DIAGNOSTIC command should either be linked to the RECEIVE DIAGNOSTIC RESULTS command or the logical unit should be reserved.

84 Although diagnostic software is generally device-specific, this command and the SEND DIAGNOSTIC command provide a means to isolate the operating system software from the device-specific diagnostic software. Hence, the operating system can remain device-independent. This also allows diagnostic software to be transferred more easily to other operating systems.

See 8.3.1 for RECEIVE DIAGNOSTIC RESULTS page format definitions.

# 8.2.14 REQUEST SENSE command

The REQUEST SENSE command (see table 64) requests that the target transfer sense data to the initiator.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (03h)								
1	Logical unit number Reserved								
2	Reserved								
3	Reserved								
4	Allocation length								
5	Control								

# Table 64 - REQUEST SENSE command

The sense data:

- a) shall be available if a contingent allegiance condition exists for the I\_T\_x nexus;
- b) shall be available if other information (e.g. medium position) is available in any field;
- c) may be available if an unexpected disconnect occurred.

112

If the target has no other sense data available to return, it shall return a sense key of NO SENSE and an additional sense code of NO ADDITIONAL SENSE INFORMATION.

The sense data shall be preserved by the target fo the initiator until retrieved by a REQUEST SENSE command or until the receipt of any other I/O process for the same I\_T\_x nexus. Sense data shall be cleared upon receipt of any subsequent I/O process (including REQUEST SENSE) to the same I\_T\_x nexus.

NOTE 85 Some target implementations do not update sense data except on commands that return CHECK CONDITION or COMMAND TERMINATED status. Thus when polling for a logical unit to become ready, the initiator should issue TEST UNIT READY commands until GOOD status is returned. If desired, the initiator may issue REQUEST SENSE commands after the TEST UNIT READY commands that return CHECK CONDITION or COMMAND TERMINATED status to obtain the sense data.

The target shall return CHECK CONDITION status for a REQUEST SENSE command only to report exception conditions specific to the command itself. For example:

- a) A non-zero reserved bit is detected in the command descriptor block;
- b) An unrecovered parity error is detected on the data bus;
- c) A target malfunction prevents return of the sense data.

If a recovered error occurs during the execution of the REQUEST SENSE command, the target shall return the sense data with GOOD status. If a target returns CHECK CONDITION status for a REQUEST SENSE command, the sense data may be invalid.

NOTE 86 The sense data appropriate to the selection of an invalid logical unit is defined in 7.5.3.

Targets shall be capable of returning eighteen bytes of data in response to a REQUEST SENSE command. If the allocation length is eighteen or greater, and a target returns less than eighteen bytes of data, the initiator should assume that the bytes not transferred would have been zeros had the target returned those bytes. Initiators can determine how much sense data has been returned by examining the allocation length parameter in the command descriptor block and the additional sense length in the sense data. Targets shall not adjust the additional sense length to reflect truncation if the allocation length is less than the sense data available.

The sense data format for error codes 70h (current errors) and 71h (deferred errors) are defined in table 65. Error code values of 72h to 7Eh are reserved. Error code 7Fh is for a vendor-specific sense data format. Targets shall implement error code 70h; implementation of error code 71h is optional. Error code values of 00h to 6Fh are not defined by this standard and their use is not recommended.

Bit Byte	7	6	5	4	3	2	1	0		
0	Valid Error code (70h or 71h)									
1	Segment number									
2	Filemark	EOM	ILI	Reserved Sense key						
3	(MSB)			Informati	lon					
6								(LSB)		
7	Additional sense length (n-7)									
8	(MSB)			Command-specific information (LSB)						
12				Additional sense code						
13				Additional sense code qualifier						
14		Field replaceable unit code								
15	SKSV			Sense-key specific —						
17				Sense-Key	shectit	U C				
18				Additiona	loonso	bytas				
n					T 261126					

Table 65 - Error codes 70h and 71h sense data format

A valid bit of zero indicates that the information field is not as defined in this standard. A valid bit of one indicates the information field contains valid information as defined in this standard. Targets shall implement the valid bit.

The segment number field contains the number of the current segment descriptor if the REQUEST SENSE command is in response to a COPY, COMPARE, or COPY AND VERIFY command. Up to 256 segments are supported, beginning with segment zero.

The filemark bit is mandatory for sequential-access devices, and this bit is reserved for all other device types. A filemark bit of one indicates that the current command has read a filemark or setmark. The additional sense code field may be used to indicate whether a filemark or setmark was read. Reporting of setmarks is optional and indicated by the Rsmk bit for sequential-access devices in the configuration parameters page (see 10.3.3.1).

The end-of-medium (EOM) bit is mandatory for sequential-access and printer devices, and this bit is reserved for all other device types. An EOM bit of one indicates that an end-of-medium condition (end-of-partition, beginning-of-partition, out-of-paper, etc.) exists. For sequential-access devices, this bit indicates that the unit is at or past the early-warning if the direction was forward, or that the command could not be completed because beginning-of-partition was encountered if the direction was reverse.

An incorrect length indicator (ILI) bit of one usually indicates that the requested logical block length did not match the logical block length of the data on the medium.

The sense key, additional sense code and additional sense code qualifier provide a hierarchy of information. The intention of the hierarchy is to provide a top-down approach for an initiator to determine information relating to the error and exception conditions. The sense key provides generic categories in which error and exception conditions can be reported. Initiators would typically use sense keys for high level error recovery procedures. Additional sense codes provide further detail describing the sense key. Additional sense code qualifiers add further detail to the

additional sense code. The additional sense code and additional sense code qualifier can be used by initiators where sophisticated error recovery procedures require detailed information describing the error and exception conditions.

The sense key field is mandatory and indicates generic information describing an error or exception condition. The sense keys are defined in 8.2.14.3.

The contents of the information field is device-type or command specific and is defined within the appropriate clause for the device type or command of interest. Targets shall implement the information field. Unless specified otherwise, this field contains:

- a) the unsigned logical block address associated with the sense key, for direct-access devices (device type 0), write-once devices (device type 4), CD-ROM devices (device type 5), and optical memory devices (device type 7).
- b) the difference (residue) of the requested length minus the actual length in either bytes or blocks, as determined by the command, for sequential-access devices (device type 1), printer devices (device type 2), processor devices (device type 3) and some direct access device commands, except as defined for d) below. (Negative values are indicated by two's complement notation.)
- c) the difference (residue) of the requested number of blocks minus the actual number of blocks copied or compared for the current segment descriptor of a COPY, COMPARE, or COPY AND VERIFY command.
- d) For sequential-access devices operating in buffered modes 1h or 2h that detect an unrecoverable write error when unwritten data blocks, filemarks, or setmarks remain in the buffer, the value of the information field for all commands shall be:
  - 1) the total number of data blocks, filemarks, and setmarks in the buffer if the device is in fixed block mode (block length field of the MODE SENSE block descriptor is non-zero and the fixed bit of the WRITE command is one).
  - 2) the number of bytes in the buffer, including filemarks and setmarks, if the device is in variable mode (the fixed bit of the WRITE command is zero).

The additional sense length field indicates the number of additional sense bytes to follow. If the allocation length of the command descriptor block is too small to transfer all of the additional sense bytes, the additional sense length is not adjusted to reflect the truncation.

The command-specific information field contains information that depends on the command that was executed. Further meaning for this field is defined within the command description. The command-specific information field is mandatory if the target supports any of the following commands: COPY, COMPARE, COPY AND VERIFY, SEARCH DATA, and REASSIGN BLOCKS.

The additional sense code (ASC) field indicates further information related to the error or exception condition reported in the sense key field. Targets shall support the additional sense code field. Support of the additional sense codes not explicitly required by this standard is optional. A list of additional sense codes is in 8.2.14.3. If the target does not have further information related to the error or exception condition, the additional sense code is set to NO ADDITIONAL SENSE INFORMATION.

The additional sense code qualifier (ASCQ) indicates detailed information related to the additional sense code. The additional sense code qualifier is optional. If the error or exception condition is reportable by the device, the value returned shall be as specified in 8.2.14.3. If the target does not have detailed information related to the error or exception condition, the additional sense code qualifier is set to zero.

Non-zero values in the field replaceable unit code field are used to define a device-specific mechanism or unit that has failed. A value of zero in this field shall indicate that no specific mechanism or unit has been identified to have failed or that the data is not available. The field replaceable unit code field is optional. The format of this information is not specified by this standard. Additional information about the field replaceable unit may be available in the ASCII information page (see 8.3.4.2), if supported by the target.

The sense-key specific bytes are described in 8.2.14.1, below.

The additional sense bytes field may contain command specific data, peripheral device specific data, or vendorspecific data that further defines the nature of the CHECK CONDITION status.

#### 8.2.14.1 Sense-key specific

The sense-key specific field as defined by this standard when the value of the sense-key specific valid (SKSV) bit is one. The sense-key specific valid bit and sense-key specific field are optional. The definition of this field is determined by the value of the sense key field. This field is reserved for sense keys not described below. An SKSV value of zero indicates that this field is not as defined by this standard.

If the sense key field is set to ILLEGAL REQUEST and the SKSV bit is set to one, the sense-key specific field shall be as defined as shown in table 66. The field pointer field indicates which illegal parameters in the command descriptor block or the data parameters are in error.

Bit Byte	7	6	5	4	3	2	1	0		
15	SKSV	C/D	Reserved	Reserved	BPV	Bit pointer				
16	(MSB)	l		·		L				
17			Field pointer							

Table 66 -	Field poir	iter bytes
------------	------------	------------

A command data (C/D) bit of one indicates that the illegal parameter is in the command descriptor block. A C/D bit of zero indicates that the illegal parameter is in the data parameters sent by the initiator during the DATA OUT phase.

A bit pointer valid (BPV) bit of zero indicates that the value in the bit pointer field is not valid. A BPV bit of one indicates that the bit pointer field specifies which bit of the byte designated by the field pointer field is in error. When a multiple-bit field is in error, the bit pointer field shall point to the most-significant (left-most) bit of the field.

The field pointer field indicates which byte of the command descriptor block or of the parameter data was in error. Bytes are numbered starting from zero, as shown in the tables describing the commands and parameters. When a multiple-byte field is in error, the pointer shall point to the most- significant (left-most) byte of the field.

NOTE 87 Bytes identified as being in error are not necessarily the place that has to be changed to correct the problem.

If the sense key is RECOVERED ERROR, HARDWARE ERROR or MEDIUM ERROR and if the SKSV bit is one, the sense-key specific field shall be as shown in table 67.

Bit Byte	7	6	5	4	3	2	1	0		
15	SKSV		Reserved							
16	(MSB)			Actual re						
17				ACCUAL 16				(LSB)		

Table 67 - Actual retry c	ount i	bytes
---------------------------	--------	-------

The actual retry count field returns implementation-specific information on the actual number of retries of the recovery algorithm used in attempting to recover an error or exception condition.

NOTE 88 This field should relate to the retry count fields within the error recovery page of the MODE SELECT command.

If the sense key is NOT READY and the SKSV bit is one, the sense-key specific field shall be as shown in table 68. These fields only apply to the FORMAT UNIT command with the Immed bit set to one.

Bit Byte	7	6	5	4	3	2	1	0	
15	SKSV		Reserved						
16	(MSB)		Drogroop indication						
17			Progress indication(LSB						

Table 68 - Format progress indication bytes

The progress indication field is a percent complete indication in which the returned value is the numerator that has 65 536 (10000h) as its denominator. The progress indication shall based upon the total format operation including any certification or initialization operations.

NOTE 89 It is intended that the progress indication be time related. However, since format time varies with the number of defects encountered, etc., it is reasonable for the target to assign values to various steps within the process. The granularity of these steps should be small enough to provide reasonable assurances to the initiator that progress is being made.

### 8.2.14.2 Deferred errors

Error code 70h indicates that the CHECK CONDITION or COMMAND TERMINATED status returned is the result of an error or exception condition on the I/O process that returned the CHECK CONDITION or COMMAND TERMINATED status or an unexpected disconnect. This includes errors generated during execution of the command by the actual execution process. It also includes errors not related to any command that are first observed during execution of a command. Examples of this latter type of error include disk servo-mechanism, off-track errors, and power-up test errors.

Error code 71h (deferred error) indicates that the CHECK CONDITION status returned is the result of an error or exception condition that occurred during execution of a previous command for which GOOD status has already been returned. Such commands are associated with use of the immediate bit, with some forms of caching, and with multiple command buffering. Targets that implement these features are required to implement deferred error reporting.

The deferred error indication may be sent at a time selected by the target through the asynchronous event notification process (see 7.5.5) if AEN is supported by both the initiator and target.

If AEN is not supported, the deferred error may be indicated by returning CHECK CONDITION status to the appropriate initiator as described below. The subsequent execution of a REQUEST SENSE command shall return the deferred error sense information.

If an I/O process terminates with CHECK CONDITION status and the subsequent sense data returns a deferred error that I/O process shall not have been executed. After the target detects a deferred error condition on a logical unit, it shall return a deferred error according to the rules described below:

- a) If a deferred error can be recovered with no external system intervention, a deferred error indication shall not be posted unless required by the error handling parameters of the MODE SELECT command. The occurrence of the error may be logged if statistical or error logging is supported.
- b) If a deferred error can be associated with a causing initiator and with a particular function or a particular subset of data, and the error is either unrecovered or required to be reported by the mode parameters, a deferred error indication shall be returned to the causing initiator. If an initiator other than the causing initiator attempts access to the particular function or subset of data associated with the deferred error, a BUSY status shall be returned to that initiator in response to the command attempting the access.

NOTE 90 Not all devices may be sufficiently sophisticated to identify the function or data that failed. Those that cannot should treat the error in the following manner.

- c) If a deferred error cannot be associated with a causing initiator or with a particular subset of data, a deferrec error indication shall be returned on behalf of the failing logical unit to each initiator. If multiple deferred errors have accumulated for some initiators, only the last error shall be returned.
- d) If a deferred error cannot be associated with a particular logical unit, it shall be returned to the appropriat∈ initiator for all logical units supported by the target.
- e) If a current command has not yet started executing, and a deferred error occurs, the command shall be terminated with CHECK CONDITION status and deferred error information posted in the sense data. By convention, the current command is considered to have started execution if the target has changed phase from the COMMAND phase to the next normal phase of the command sequence. If a deferred error occurs while a current command is executing and the current command has been affected by the error, the command shall be terminated by CHECK CONDITION status and current error information shall be returned in the sense data In this case, if the current error information does not adequately define the deferred error condition, a deferred error may be returned after the current error information has been recovered. If a deferred error occurs while a current command is executing and the current command completes successfully, the target may choose to return the deferred error information after the completion of the current command.

NOTE 91 Deferred errors may indicate that an operation was unsuccessful long after the command performing the data transfer returned GOOD status. If data that cannot be replicated or recovered from other sources is being stored using buffered write operations, synchronization commands should be performed before the critical data is destroyed in the host initiator. This is necessary to be sure that recovery actions can be taken if deferred errors do occur in the storing of the data. If AEN is not implemented, the synchronizing process should provide the necessary commands to allow returning CHECK CONDITION status and subsequent returning of deferred error sense information after all buffered operations are guaranteed to be complete.

# 8.2.14.3 Sense key and sense code definitions

The sense keys are defined in tables 69 and 70.

Table 69	- Sense	key	(0h-7h)	descriptions
----------	---------	-----	---------	--------------

Sense key	Description
Oh	NO SENSE. Indicates that there is no specific sense key information to be reported for the designated logical unit. This would be the case for a successful command or a command that received CHECK CONDITION or COMMAND TERMINATED status because one of the filemark, EOM, or ILI bits is set to one.
1h	RECOVERED ERROR. Indicates that the last command completed successfully with some recovery action performed by the target. Details may be determinable by examining the additional sense bytes and the information field. When multiple recovered errors occur during one command, the choice of which error to report (first, last, most severe, etc.) is device specific.
2h	NOT READY. Indicates that the logical unit addressed cannot be accessed. Operator intervention may be required to correct this condition.
Зh	MEDIUM ERROR. Indicates that the command terminated with a non- recovered error condition that was probably caused by a flaw in the medium or an error in the recorded data. This sense key may also be returned if the target is unable to distinguish between a flaw in the medium and a specific hardware failure (sense key 4h).
4h	HARDWARE ERROR. Indicates that the target detected a non- recoverable hardware failure (for example, controller failure, device failure, parity error, etc.) while performing the command or during a self test.
5h	ILLEGAL REQUEST. Indicates that there was an illegal parameter in the command descriptor block or in the additional parameters supplied as data for some commands (FORMAT UNIT, SEARCH DATA, etc.). If the target detects an invalid parameter in the command descriptor block, then it shall terminate the command without altering the medium. If the target detects an invalid parameter in the additional parameters supplied as data, then the target may have already altered the medium. This sense key may also indicate that an invalid IDENTIFY message was received (6.6.7).
6h	UNIT ATTENTION. Indicates that the removable medium may have been changed or the target has been reset. See 7.9 for more detailed information about the unit attention condition.
7h	DATA PROTECT. Indicates that a command that reads or writes the medium was attempted on a block that is protected from this operation. The read or write operation is not performed.

,

Table 70 - Sense	key (8h	-Fh) descriptions
------------------	---------	-------------------

,

Sense key	Description
8h	BLANK CHECK. Indicates that a write-once device or a sequential- access device encountered blank medium or format-defined end-of- data indication while reading or a write-once device encountered a non-blank medium while writing.
9h	VENDOR-SPECIFIC. This sense key is available for reporting vendor specific conditions.
Ah	COPY ABORTED. Indicates a COPY, COMPARE, or COPY AND VERIFY command was aborted due to an error condition on the source device, the destination device, or both. (See 8.2.3.2 for additional information about this sense key.)
Bh	ABORTED COMMAND. Indicates that the target aborted the command. The initiator may be able to recover by trying the command again.
Ch	EQUAL. Indicates a SEARCH DATA command has satisfied an equal comparison.
Dh	VOLUME OVERFLOW. Indicates that a buffered peripheral device has reached the end-of-partition and data may remain in the buffer that has not been written to the medium. A RECOVER BUFFERED DATA command(s) may be issued to read the unwritten data from the buffer.
Eh	MISCOMPARE. Indicates that the source data did not match the data read from the medium.
Fh	RESERVED.

-

120 Copyright American National Standards Institute Provided by INS under license with ANSI No reproduction or networking permitted without license from IHS

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC ٠

,

The additional sense codes and additional sense code qualifiers are defined in table 71.

Table 71 - ASC and ASCQ assignments

	D - DIRECT	ACCESS DEVICE
N N		ITIAL ACCESS DEVICE
		ER DEVICE
		ESSOR DEVICE
		TE ONCE READ MULTIPLE DEVICE
		AD ONLY (CD-ROM) DEVICE
	S - S	CANNER DÈVICE
		OPTICAL MEMORY DEVICE
		MEDIA CHANGER DEVICE
	C	- COMMUNICATION DEVICE
	· · · · · · · · · · · · · · · · · · ·	
ASC ASCQ	DTLPWRSOMC	DESCRIPTION
	<b>D W O</b>	ADDDEGO NADY NOT FOUND FOR DATA FIELD
13h 00h	DWO	ADDRESS MARK NOT FOUND FOR DATA FIELD
12h 00h	D W O	ADDRESS MARK NOT FOUND FOR ID FIELD
00h 11h	R	AUDIO PLAY OPERATION IN PROGRESS
00h 12h	R	AUDIO PLAY OPERATION PAUSED
00h 14h	R R	AUDIO PLAY OPERATION STOPPED DUE TO ERROR AUDIO PLAY OPERATION SUCCESSFULLY COMPLETED
00h 13h 00h 04h	тѕ	BEGINNING-OF-PARTITION/MEDIUM DETECTED
00h 04h 14h 04h	T	BLOCK SEQUENCE ERROR
30h 02h	DT WRO	CANNOT READ MEDIUM - INCOMPATIBLE FORMAT
30h 01h	DT WR O	CANNOT READ MEDIUM - UNKNOWN FORMAT
52h 00h	T	CARTRIDGE FAULT
3Fh 02h	DTLPWRSOMC	
11h 06h	WR O	CIRC UNRECOVERED ERROR
30h 03h	DT	CLEANING CARTRIDGE INSTALLED
4Ah 00h	DTLPWRSOMC	COMMAND PHASE ERROR
2Ch 00h	DTLPWRSOMC	COMMAND SEQUENCE ERROR
2Fh 00h	DTLPWRSOMC	COMMANDS CLEARED BY ANOTHER INITIATOR
2Bh 00h	DTLPWRSO C	COPY CANNOT EXECUTE SINCE HOST CANNOT DISCONNECT
41h 00h	D	DATA PATH FAILURE (SHOULD USE 40 NN)
4Bh 00h	DTLPWRSOMC	DATA PHASE ERROR
11h 07h	W O	DATA RESYNCHRONIZATION ERROR
16h 00h	D W O	DATA SYNCHRONIZATION MARK ERROR
19h 00h	D O	DEFECT LIST ERROR
19h 03h	D O D O D O	DEFECT LIST ERROR IN GROWN LIST DEFECT LIST ERROR IN PRIMARY LIST
19h 02h 19h 01h		DEFECT LIST ERROR IN PRIMARY LIST DEFECT LIST NOT AVAILABLE
10h 00h		DEFECT LIST NOT AVAILABLE DEFECT LIST NOT FOUND
32h 01h	D w O	DEFECT LIST UPDATE FAILURE
40h NNh	DTLPWRSOMC	DIAGNOSTIC FAILURE ON COMPONENT NN (80H-FFH)
63h 00h	R	END OF USER AREA ENCOUNTERED ON THIS TRACK
00h 05h	т ѕ	END-OF-DATA DETECTED
14h 03h	Ť	END-OF-DATA NOT FOUND
00h 02h	TS	END-OF-PARTITION/MEDIUM DETECTED
51h 00h	т 0	ERASE FAILURE
0Ah 00h	DTLPWRSOMC	ERROR LOG OVERFLOW
11h 02h	DT W SO	ERROR TOO LONG TO CORRECT
03h 02h	Т	EXCESSIVE WRITE ERRORS
3Bh 07h	L	FAILED TO SENSE BOTTOM-OF-FORM
3Bh 06h	_L	FAILED TO SENSE TOP-OF-FORM
00h 01h	T	FILEMARK DETECTED
14h 02h	T	FILEMARK OR SETMARK NOT FOUND
09h 02h	WRO DL O	FOCUS SERVO FAILURE FORMAT COMMAND FAILED
31h 01h 58h 00h	DL O O	GENERATION DOES NOT EXIST
	<u> </u>	

1

-

Table 71 (continued)

ASC ASCQ	DTLPWRSOMC	DESCRIPTION
1Ch 02h 00h 06h	DTLPWRSOMC	GROWN DEFECT LIST NOT FOUND I/O PROCESS TERMINATED
10h 00h 22h 00h		ID CRC OR ECC ERROR Illegal function (should use 20 00, 24 00, or 26 00)
64h 00h	R	ILLEGAL MODE FOR THIS TRACK
28h 01h	M DT WR OM	IMPORT OR EXPORT ELEMENT ACCESSED INCOMPATIBLE MEDIUM INSTALLED
30h 00h 11h 08h	DT WROM T	INCOMPATIBLE MEDIOM INSTALLED
48h 00h	DTLPWRSOMC	INITIATOR DETECTED ERROR MESSAGE RECEIVED
3Fh 03h 44h 00h	DTLPWRSOMC DTLPWRSOMC	INQUIRY DATA HAS CHANGED INTERNAL TARGET FAILURE
3Dh 00h	DTLPWRSOMC	INVALID BITS IN IDENTIFY MESSAGE
2Ch 02h		INVALID COMBINATION OF WINDOWS SPECIFIED
20h 00h 21h 01h	DTLPWRSOMC M	INVALID COMMAND OPERATION CODE INVALID ELEMENT ADDRESS
24h 00h	DTLPWRSOMC	INVALID FIELD IN CDB
26h 00h 49h 00h	DTLPWRSOMC DTLPWRSOMC	INVALID FIELD IN PARAMETER LIST INVALID MESSAGE ERROR
11h 05h	WR O	L-EC UNCORRECTABLE ERROR
60h 00h 5Bh 02h	S DTLPWRSOM	LAMP FAILURE LOG COUNTER AT MAXIMUM
5Bh 00h	DTLPWRSOM	LOG EXCEPTION
5Bh 03h	DTLPWRSOM	LOG LIST CODES EXHAUSTED
2Ah 02h 21h 00h	DTL WRSOMC	LOG PARAMETERS CHANGED LOGICAL BLOCK ADDRESS OUT OF RANGE
08h 00h	DTL WRSOMC	LOGICAL UNIT COMMUNICATION FAILURE
08h 02h 08h 01h	DTL WRSOMC	LOGICAL UNIT COMMUNICATION PARITY ERROR LOGICAL UNIT COMMUNICATION TIME-OUT
05h 00h	DTLPWRSOMC	LOGICAL UNIT DOES NOT RESPOND TO SELECTION
4Ch 00h 3Eh 00h	DTLPWRSOMC DTLPWRSOMC	LOGICAL UNIT FAILED SELF-CONFIGURATION LOGICAL UNIT HAS NOT SELF-CONFIGURED YET
04h 01h	DTLPWRSOMC	LOGICAL UNIT IS IN PROCESS OF BECOMING READY LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE
04h 00h	DTLPWRSOMC	LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE
04h 04h 04h 02h	DTL O DTLPWRSOMC	LOGICAL UNIT NOT READY, FORMAT IN PROGRESS LOGICAL UNIT NOT READY, INITIALIZING COMMAND REQUIRED
04h 03h	DTLPWRSOMC	LOGICAL UNIT NOT READY, MANUAL INTERVENTION REQUIRED
25h 00h 15h 01h	DTLPWRSOMC DTL WRSOM	LOGICAL UNIT NOT SUPPORTED MECHANICAL POSITIONING ERROR
53h 00h	DTL WRSOM	MEDIA LOAD OR EJECT FAILED
3Bh 0Dh 31h 00h	от и о	MEDIUM DESTINATION ELEMENT FULL MEDIUM FORMAT CORRUPTED
3Ah 00h	DTL WRSOM	MEDIUM NOT PRESENT
53h 02h 3Bh 0Eh	DT WROM M	MEDIUM REMOVAL PREVENTED MEDIUM SOURCE ELEMENT EMPTY
43h 00h	DTLPWRSOMC	MESSAGE ERROR
3Fh 01h	DTLPWRSOMC	MICROCODE HAS BEEN CHANGED
1Dh 00h 11h 0Ah	D W O DT O	MISCOMPARE DURING VERIFY OPERATION MISCORRECTED ERROR
2Ah 01h	DTL WRSOMC	MODE PARAMETERS CHANGED
07h 00h 11h 03h	DTL WRSOM DT W SO	MULTIPLE PERIPHERAL DEVICES SELECTED MULTIPLE READ ERRORS
00h 00h	DTLPWRSOMC	NO ADDITIONAL SENSE INFORMATION
00h 15h 32h 00h	R DWO	NO CURRENT AUDIO STATUS TO RETURN NO DEFECT SPARE LOCATION AVAILABLE
11h 09h	Т	NO GAP FOUND
01h 00h 06h 00h	D W O D WR OM	NO INDEX/SECTOR SIGNAL NO REFERENCE POSITION FOUND

Table 71 (continued)

Och         D         WR OM         NO SEEK COMPLETE           Och         D         DT         WR TOW WRITE COMPLETE         NO WRITE CUMRENT           SAN         OCh         DTLPWRSOMC         NOT READY TO READY TANNSITION, MEDIUM MAY HAVE CHANGED           SAN         OCh         DTLPWRSOMC         OPERATOR REQUEST OR STATE CHANGE INPUT (UNSPECIFIED)           SAN         OSh         DTLW         OPERATOR SELECTED WRITE PENNET           SAN         OSh         DTLW         OPERATOR SELECTED WRITE PROTECT           SAN         OSh         DTLW         OPERATOR SELECTED WRITE PROTECT           SAN         OCH         VCRWRITE ERROR ON UPDATE IN PLACE           SAN         OCH         VCRWRITE ERROR ON UPDATE IN PLACE           SAN         OCH         VCRWRITE AND         OVERWRITE AND           SAN         OCH         PARENT JAL         DENDIT           SAN         OCH         DY UCRWRITER CHANGED         DANN           SAN         DTLPWRSOMC         PARAMETER VALUE INVALID         DANN           SAN         DTLWRSOMC         PARAMETER CHANGED         FULL           SAN         DTLWRSOMC         PARAMETER CHANGED         FULL           SAN         DTLWRSOMC         PARAMETER CHANGED <t< th=""><th>ASC</th><th>ASCQ</th><th>DTLPWRSOMC</th><th>DESCRIPTION</th></t<>	ASC	ASCQ	DTLPWRSOMC	DESCRIPTION
28h00hDTLPWRSOMCNOT READY TO READY TRANSITION, MEDIUM MAY HAVE CHANGED5Ah00hDTLPWRSOMOPERATOR REQUEST OR STATE CHANGE INPUT (UNSPECIFIED)5Ah03h07K07FATOR SELECTED WRITE PERMIT6Ah02h07K07FATOR SELECTED WRITE PERMIT6Ah02h07K07FATOR SELECTED WRITE PROTECT6Ah02h0007FATOR SELECTED WRITE PROTECT6Ah02h0007K6Ah00h07FATOR SELECTED WRITE PROTECT72000hT07FATOR SELECTED72100h07FATOR SELECTED WRITE PROTECT72600hT07FATARAMETER72600h07FATOR SELECTED72607h07FATARAMETER72772872872807FATARAMETER128729728728720728728721729728721729728721729728721729728721729728721729728721729729721729729721729729721729729721729729721729729721729729721729729721729729721729729721729729729729729720729 <td7< td=""><td></td><td></td><td></td><td></td></td7<>				
SAAOthDTUNOPERATORMEDIUMREMOVAL REQUESTSAAOSAOTVOOPERATOR SELECTED WRITE PERMIT(UNSPECIFIED)SAAOSADTWOPERATOR SELECTED WRITE PROTECTSAAOSADTL/WRSOMOVERATOR SELECTED WRITE PROTECTSAAODATVERWRITE EROR ON UPDATE IN PLACE2DhOOHTPAPER2DhOOHTPAPER2BHOSADIL/WRSOMCPARAMETER NOT SUPPORTED2GhOOHDIL/WRSOMCPARAMETER VALUE INVALID2GhODADIL/WRSOMCPARAMETER VALUE INVALID2GhODADIL/WRSOMCPARAMETER VALUE INVALID2GhOCADIL/WRSOMCPARAMETER NOT SUPPORTED2GhOCADIL/WRSOMCPARAMETER NOT SUPPORTED2GhOCATPOSITION FAST BEGINNING OF MEDIUM2GhOCATPOSITION PAST END OF MEDIUM3BhOCASPOSITION PAST END OF MEDIUM3BhOCADPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOCADPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOCADPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOCADPOWER ON ARESET, OR BUS DEVICE RESET OCCURRED42hOCADPOWER ONARESONERD42hOCADPOWER ONARESONERD42hOCADREGURREDRESONERD42hOCADRESONERDR				
SANOONDTLPWRSOMOPERATOR REQUEST OR STATE CHANGE INPUT (UNSPECIFIED)SANOSADTWOPERATOR SELECTED WRITE PROTECT61hOLSOUT OF FOCUS4EhOONDTLPWRSOMCOVERLAPPED COMMANDS ATTEMPTED2DhOONTOVERLAPPED COMMANDS ATTEMPTED2DhOONTPAPER JAM1AhOCHDTLPWRSOMCPARAMETER NOT SUPPORTED2EhOONDTLPWRSOMCPARAMETER VALUE INVALID2EhOONDTLPWRSOMCPARAMETER VALUE INVALID2AhOONDTLPWRSOMCPARAMETER VALUE INVALID2AhOONDTLPWRSOMCPARAMETER VALUE INVALID2AhOONDTLPWRSOMCPARAMETER VALUE INVALID3BhOCHSPOSITION FAST BEGINNING OF MEDIUM3BhOCHSPOSITION FAST END OF MEDIUM3BhOCHSPOSITION FAST END OF MEDIUM3BhOCHDPOWER-ON OR SELF. OR BUS DEVICE RESET OCCURRED42hOONDTLWRSOMPOWER-ON OR SELF. OR BUS DEVICE RESET OCCURRED42hOONDTLWRSOMPOWER ON OR SELF. OR BUS DEVICE RESET OCCURRED44hOONDLRAM FAILURE (SHOULD USE 40 NN)15hOONDTLWRSOMRAM PAST END OF MEDIUM38hOAHSREAD PAST END OF MEDIUM40hODHDKREAD PAST END OF MEDIUM41hOTHDPARAMETER SET, OR BUS DEVICE RESET OCCURRED42hOONDREAD PAST END OF MEDIUM </td <td></td> <td></td> <td></td> <td></td>				
SAHO3HDTWOOPERATOR SELECTED WRITE PERMITSAHO2HDTOUT OF FOCUS4EHO0HDTLPWRSOMCOVERVRITE ERROR ON UPDATE IN PLACE3BHOSHTOVERVRITE ERROR ON UPDATE IN PLACE3BHOSHTPAPER JAM1AHO0HDTLPWRSOMCPARAMETER NOT SUPPORTED26HO2HDTLPWRSOMCPARAMETER VALUE INVALID26HO2HDTLPWRSOMCPARAMETER VALUE INVALID26HO2HDTLPWRSOMCPARAMETER VALUE INVALID26HO2HDTPOSITION FAST BEGINNING OF MEDIUM38HOCHSPOSITION PAST BEGINNING OF MEDIUM38HO2HTPOSITION PAST BEGINNING OF MEDIUM38HO3HO3HO4HPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42HO0HDTLWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42HO0HDPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42HO0HDPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42HO0HDPARAMETER VALUE (SHOULD USE 40 NN)15HO2HTWRSOMRAANDOM POSITIONING ERROR28HO4HSREAD PAST END OF MEDIUM49HO4HSREAD PAST END OF MEDIUM40HO4HSREAD PAST END OF MEDIUM41HO1HDREAD PAST END OF MEDIUM42HO0HDRAMETER VALUE (SHOULD USE 40 NN)43HO4HSREAD PAST END OF MEDIUM <td></td> <td></td> <td></td> <td></td>				
SANO2hDTWOOPERATOR SELECTED WRITE PROTECT61hO2hSOUT OF FOCUS4EhO0hDT LPWRSOMCOVERLAPPED COMMANDS ATTEMPTED2DhO0hTOVERLAPPED COMMANDS ATTEMPTED2BhO5hLOVERLAPPED COMMANDS ATTEMPTED2BhO5hLOVERLAPPED COMMANDS ATTEMPTED2BhO5hCPARAMETER LIST LENGTH ERROR2BhO5hDTLPWRSOMCPARAMETER VALUE INVALID2AhO0hOTL WSOMCPARAMETERS CHANGEDO3hO0hDTL W SOPERIPHERAL DEVICE WRITE FAULT50hO2hTPOSITION PAST BEGINNING OF MEDIUM3BhOChSPOSITION PAST BEGINNING OF MEDIUM3BhO2hDTPOSITION PAST END OF MEDIUM3BhO2hDT WR OPOSITION PAST END OF MEDIUM1ShO2hDT WR OPOSITIONING ERROR DETECTED BY READ OF MEDIUM1ShO2hDT WR OPOSITIONING ERROR DETECTED BY READ OF MEDIUM1ShO3hDRANDOM POSITIONING ERROR2BhO4hSREAD PAST EBGINNING OF MEDIUM1ShO3hSREAD PAST EBGINNING OF MEDIUM1ShO3hSRECORD NOT FOUND1AhO1hDT WR ORECORD NOT FOUND1AhO3hRRECOVERED DATA - DATA AUTO-REALLOCATED1AhO4hSRECOVERED DATA - DATA AUTO-REALLOCATED1AhO3hRRECOVERED DATA WITH REGATIVE HEAD OFFSET1Ah				
4 EffODOVERLAPPED COMMANDS ATTEMPTED2Dh00hTPAPER JAM1Ah00hDTLPWRSOMCPARAMETER LIST LENGTH ERNOR26h01hDTLPWRSOMCPARAMETER NOT SUPPORTED26h02hDTLPWRSOMCPARAMETER VALUE INVALID2Ah00hDTL WSOMCPARAMETER VALUE INVALID2Ah00hDTL WSOMCPARAMETER VALUE INVALID38h0ChSPOSITION PAST EROR RELATED TO TIMING38h0ChSPOSITION PAST END OF MEDIUM38h0ChSPOSITION PAST END OF MEDIUM38h0ChSPOSITION PAST END OF MEDIUM29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDRAMDOM POSITIONING ERROR38h03hSREAD PAST END OF MEDIUM38h04hSREAD PAST EDINING OF MEDIUM38h09hSRECORED ENTITY NOT FOUND14h01hDT WR ORECORED DATA - DATA AUTO-REALLOCATED14h02hD WR ORECOVERED DATA - RECOMMEND REASIGNMENT18h05hD WR ORECOVERED DATA WITH RETRIES18h05hD WR ORECOVERED DATA WITH REAR CORRECTION &				
2DhOOhTOVERWRITE ERROR ON UPDATE IN PLACE3BhOShLPARAMETER LIST LENGTH ERROR26hOIhDTLPWRSOMCPARAMETER NOT SUPPORTED26hOIADTLPWRSOMCPARAMETER VALUE INVALID26hO2hDTLWRSOMCPARAMETER VALUE INVALID26hO2hDTLWRSOMCPARAMETER VALUE INVALID26hO2hTPOSITION PAST BEGINNING OF MEDIUM38hOChSPOSITION PAST BEGINNING OF MEDIUM38hOChSPOSITION PAST BEGINNING OF MEDIUM38hOChSPOSITION PAST END OF MEDIUM38hOChSPOSITION PAST END OF MEDIUM38hOChSPOSITION PAST END OF MEDIUM38hOChSPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOOhDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)16hOhDTLWRSOMRAMDOM POSITIONING ERROR38hOAhSREAD PAST BEGINNING OF MEDIUM38hOAhSREAD PAST BEGINNING OF MEDIUM38hOAhSREAD PAST END OF MEDIUM <t< td=""><td></td><td>02h</td><td></td><td></td></t<>		02h		
3Bh       OSh       L       PAPER JAM         1Ah       OOh       DTLPWRSOMC       PARAMETER LIST LENGTH ERROR         26h       O1h       DTLPWRSOMC       PARAMETER VALUE INVALID         26h       O1h       DTLPWRSOMC       PARAMETER VALUE INVALID         26h       O1h       DTLPWRSOMC       PARAMETERS CHANGED         26h       O1h       DTLPWRSOMC       PARAMETERS CHANGED         26h       O1h       DTLWRSOMC       PORTION PAST END OF MEDIUM         38h       OCh       S       POSITION PAST END OF MEDIUM         38h       OCh       DT WR O       POSITION PAST END OF MEDIUM         29h       OOh       DTLPWRSOMC       POWER ON, RESET, OR BUS DEVICE RESET OCCURRED         29h       OOh       DTLPWRSOMC       POWER ON, RESET, OR BUS DEVICE RESET OCCURRED         24h       OOh       D       PRIMARY DEFECT LIST NOT FOUND         24h       OOh       D       PRIMARY DEFECT LIST NOT FOUND         38h       OAh       S       READ PAST END OF MEDIUM				
1Ah00hDTLPWRSOMCPARAMETERLISTLENGTHERROR26h02hDTLPWRSOMCPARAMETERNOT SUPORTED28h02hDTLWRSOMCPARAMETERNOT LU28h00hDTLWSOMCPARAMETERNUALID28h00hDTLWSOMCPARAMETERNUALID38h00hDTLWSOMCPERIPHERALDEVICEWRITE38h00hDTWPOSITIONPAST BEGINNING OF MEDIUM38h00hSPOSITIONPAST BEGINNING OF MEDIUM29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)10h0PRIMARY DEFECT LIST NOT FOUND40h00hDREAD PAST BEGINNING OF MEDIUM38h0AhSREAD PAST BEGONT38h0AhSREAD PAST BEGONT38h0AhSREAD PAST BEGONT38h0AhSREAD PAST BEGONT38h0AhSREAD PAST BEGONT38h0AhSREAD PAST BEGONT				
26h01hDTLPWRSOMCPARAMETER NOT SUPPORTED26h02hDTLPWRSOMCPARAMETERS CHANGED03h00hDTL W SOPERIPHERAL DEVICE WRITE FAULT38h02hTPOSITION PAST ERO RELATED TO TIMING38h02hTPOSITION PAST BEGINNING OF MEDIUM38h02hDT WR 0POSITION PAST ERO OF MEDIUM29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED29h00hDTLWRSOMCPOWER ON OR SELF-IEST FAILURE (SHOULD USE 40 NN)10h0PRIMARY DEFECT LIST NOT FOUND11h01hDRANDOM POSITIONING ERROR38h04hSREAD PAST END OF MEDIUM38h09hSREAD PAST END OF MEDIUM38h09hSREAD PAST END OF MEDIUM14h01hDT WR 0RECORD DT FOUND14h00hDL WR 0RECOVERED DATA - NECOMMEND REWRITE17h05hD WR 0RECOVERED DATA - MECOMMEND REWRITE17h05hD WR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h06hD WR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h06hD WR 0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h06hD WR 0RECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED18h06hD WR 0R				
SchDitDitPRAMETERVALUEINVALID2AhOChDTLWRSOMCPARAMETERSCHANGED03hOChDTLWRSOMCPERIPHERALDEVICEWRITE50hO2hTPOSITIONPAST BEGINNING OF MEDIUM3BhOChSPOSITIONPAST BEGINNING OF MEDIUM3BhOChSPOSITION PAST END OF MEDIUM3BhOChSPOSITION PAST END OF MEDIUM29hOChDTWR OPOSITION PAST END OF MEDIUM29hOChDPOWER-ON, RESET, OR BUS DEVICE RESET OCCURRED42hOChDPOWER-ON, RESET, OR BUS DEVICE RESET OCCURRED42hOChDRAM FAILURE (SHOULD USE 40 NN)1ChOIhDRAM FAILURE (SHOULD USE 40 NN)1ShOChSREAD PAST BEGINNING OF MEDIUM3BhOAhSREAD PAST END OF MEDIUM3BhOAHS				
2AhOOHDTLWRSOMCPARAMETERS CHANGEDO3hOOHDTLW SOPERIPHERAL DEVICE WRITE FAULTS0hO2HTPOSITION ERROR RELATED TO TIMING3BhOCHSPOSITION PAST EGGINNING OF MEDIUM3BhO2HDTWR OPOSITION PAST END OF MEDIUM15hO2HDTWR OPOSITION PAST END OF MEDIUM29hOOHDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOOHDPRIMARY DEFECT LIST NOT FOUND42hOOHDRAM FAILURE (SHOULD USE 40 NN)16hOHORAMENDA POSITIONING ERROR38hOAHSREAD PAST BEGINNING OF MEDIUM38hOAHSREAD PAST BEGINNING OF MEDIUM38hOAHSRECORD NOT FOUND14hOthDTWR ORECOVERD DATA - RECOMMEND REASIGNMENT14h<				
OshOthDTLW SOPERIPHERAL DEVICE WRITE FAULTSohO2hTPOSITION PAST BEROR RELATED TO TIMINGSBhOChSPOSITION PAST BEGINNING OF MEDIUMSBhOBhSPOSITION PAST END OF MEDIUMSBhOChDTLPWRSOMCPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)15hOchDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)42hOChDPRIMARY DEFECT LIST NOT FOUND40hOChDRAM FAILURE (SHOULD USE 40 NN)15hOchDTL WRSOMRANDOM POSITIONING ERROR38hOAhSREAD PAST BEGINNING OF MEDIUM38hOAhSREAD PAST BEGINNING OF MEDIUM38hOAhSREAD PAST BEGINNING OF MEDIUM38hOAhSRECORDED ENTITY NOT FOUND14hOthDT WR ORECORDED DATA - DATA AUTO-REALLOCATED14hOthDT WR ORECOVERED DATA - RECOMMEND REWRITE18hOShD WR ORECOVERED DATA - RECOMMEND REWRITE18hOShD WR ORECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18hOthDT WR ORECOVERED DATA WITH ERROR CORRECTION APPLIED18hOthDT WR ORECOVERED DATA WITH ERROR CORRECTION APPLIED18hOthDT WR ORECOVERED DATA WITH AUTO FREAD OFFSET17hO5hD WR ORECOVERED DATA WITH REGRINCE CORRECTION APPLIED18hOthDT WR ORECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h				
SBhOChSPOSITION PAST BEGINNING OF MEDIUM3BhOBhSPOSITION PAST END OF MEDIUM3BhOChDTUPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42hOOhDPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED40hOOhDRAM FAILURE (SHOULD USE 40 NN)16hOhDRAMPON POSITIONING ERROR3BhOAhSREAD PAST END OF MEDIUM3BhOAhSREAD PAST END OF MEDIUM11hO1hDT WR ORECORD NOT FOUND14hO1hDT WR ORECORED DATA - DATA AUTO-REALLOCATED14hO1hDT WR ORECOVERED DATA - ATA AUTO-REALLOCATED18hOShD WR ORECOVERED DATA - NECOMMEND REWRITE17hOShD WR ORECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18hO3hRRECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18hO4hRRECOVERED DATA WITH ERROR CORRECTION APPLIED18hO4hRRECOVERED DATA WITH ERROR CORRECTION APPLIED18hO4hRRECOVERED DATA WITH HERRIES AND/OR CIRC APPLIED18hO4hRRECOVERED DATA WITH NOT FOUND18hO4hRRECOVERED DATA WITH DOT CCC18hO4hRRECOVERED	03h	00h		
SBhOBhSPOSITION PAST END OF MEDIUM15h02hDTWR 0POSITIONING ERROR DETECTED BY READ OF MEDIUM29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)16h01h0RAM FAILURE (SHOULD USE 40 NN)40h00hDRAM FAILURE (SHOULD USE 40 NN)15h00hDTLWRSOM3Bh04hSREAD PAST BEGINNING OF MEDIUM3Bh09hSREAD PAST BEGINNING OF MEDIUM14h01hDTWSO14h00hDTLWRSOM14h00hDTLWR 014h00hDTLWR 018h02hDWR 018h05hDWR 018h05hDWR 018h03hRRECOVERED DATA18h06hDWR 018h02hWR 018h03hR18h04hR18h03hR18h04hR18h04hR18h04h18h04h18h04h18h04h19hWR 018covERED DATA18h04h18h04h18h04h19hRECOVERED DATA18h04h19hWR 019hRECOVERED DATA19h04h<		: -		
15h02hDTWR 0POSITIONING ERROR DETECTED BY READ OF MEDIUM29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED16h01hD0PRIMARY DEFECT LIST NOT FOUND40h00hDRAM FAILURE (SHOULD USE 40 NN)15h00hDTL WRSOMRANDOM POSITIONING ERROR38h0AhSREAD PAST END OF MEDIUM38h09hSREAD PAST END OF MEDIUM11h01hDT W SOREAD RAST END OF MEDIUM14h00hDTL WRSORECORDE DENTITY NOT FOUND14h00hDTL WRSORECOVERED DATA - DATA AUTO-REALLOCATED18h02hD WR 0RECOVERED DATA - ACCOMMEND REASIGNMENT18h06hD WR 0RECOVERED DATA - RECOMMEND REWSIDES SECTOR ID18h03hRRECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h01hD WR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h01hD WR 0RECOVERED DATA WITH HEROR CORRECTION & PPLIED18h01hD WR 0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NO ERROR18h04hRRECOVERED DATA WITH NO ERROR18h04hRRECOVERED DATA WITH NO ERROR <td></td> <td></td> <td></td> <td></td>				
29h00hDTLPWRSOMCPOWER ON, RESET, OR BUS DEVICE RESET OCCURRED42h00hDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)10h01hDRAMFAILURE (SHOULD USE 40 NN)40h00hDRAM FAILURE (SHOULD USE 40 NN)15h00hDTL WRSOMRANDOM POSITIONING ERROR38h04hSREAD PAST BEGINNING OF MEDIUM38h09hSREAD PAST END OF MEDIUM11h01hDT WSORECORDED ENTITY NOT FOUND14h01hDT WR 0RECORED DATA - DATA AUTO-REALLOCATED18h02hD WR 0RECOVERED DATA - RECOMMEND REASSIGNMENT18h06hD WR 0RECOVERED DATA - RECOMMEND REASSIGNMENT18h06hD WR 0RECOVERED DATA - RECOMMEND REWRITE17h05hD WR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h01hD WR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h04hRRECOVERED DATA WITH HEROR CORRECTION & APPLIED18h04hRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h03hDT WR 0RECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED17h04hRRECOVERED DATA WITH RETRIES17h04hWR 0RECOVERED DATA WITH RETRIES17h04hRRECOVERED DATA WITH RETRIES17h04hRRECOVERED DATA WITH RETRIES17h04hR				
42h00hDPOWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)1Ch01hDOPRIMARY DEFECT LIST NOT FOUND1Sh00hDRAM FAILURE (SHOULD USE 40 NN)1Sh00hDRAADOM POSITIONING ERROR3Bh09hSREAD PAST BEGINNING OF MEDIUM11h01hDTWSOREAD PAST ERDINING OF MEDIUM14h00hDTL WRSORECORD NOT FOUND14h00hDTL WRSORECORDED ENTITY NOT FOUND18h02hDWRRECOVERED DATA - DATA AUTO-REALLOCATED18h05hDWRRECOVERED DATA - RECOMMEND REASSIGNMENT18h06hDWRRECOVERED DATA - RECOMMEND REWRITE17h05hDWRRECOVERED DATA WISING PREVIOUS SECTOR ID18h03hRRECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h04hRRECOVERED DATA WITH HEROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h03hDTWRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NO17h05hDWRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NETRIES17h04hWRRECOVERED DATA WITH HERTIES AND/OR CIRC APPLIED17h <td></td> <td></td> <td></td> <td>POWER ON RESET OF BUS DEVICE RESET OCCURRED</td>				POWER ON RESET OF BUS DEVICE RESET OCCURRED
1Ch01hD0PRIMARY DEFECT LIST NOT FOUND40h00hDRAM FAILURE (SHOULD USE 40 NN)15h00hDTL WRSOMRANDOM POSITIONING ERROR38h03hSREAD PAST BEGINNING OF MEDIUM38h09hSREAD PAST END OF MEDIUM38h09hSREAD PAST END OF MEDIUM16hDT W SORECORD NOT FOUND16h01hDT W RORECORDED ENTITY NOT FOUND18h02hD WR 0RECOVERED DATA - DATA AUTO-REALLOCATED18h05hD WR 0RECOVERED DATA - RECOMMEND REASSIGNMENT18h06hD WR 0RECOVERED DATA - RECOMMEND REWRITE17h05hD WR 0RECOVERED DATA WITH CIRC18h03hRRECOVERED DATA WITH CIRC18h04hRRECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h04hRRECOVERED DATA WITH L-EC17h03hDT WR 0RECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hDT WR 0RECOVERED DATA WITH RETRIES17h04hWR 0RECOVERED DATA WITH RETRIES17				POWER-ON, RESELF-TEST FATLURE (SHOULD USE 40 NN)
40h00hDRAM FAILURE (SHOULD USE 40 NN)15h00hDTL WRSOMRANDOM POSITIONING ERROR3Bh03hSREAD PAST BEGINNING OF MEDIUM3Bh03hSREAD PAST END OF MEDIUM11h01hDT W SORECORD NOT FOUND14h00hDTL WRSORECORD NOT FOUND18h02hDWR ORECOVERED DATA - DATA AUTO-REALLOCATED18h05hDWR ORECOVERED DATA - RECOMMEND REASSIGNMENT18h06hDWR ORECOVERED DATA - RECOMMEND REWRITE17h05hDWR ORECOVERED DATA WITH CIRC18h03hRRECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h04hRRECOVERED DATA WITH ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH L-EC17h05hDWR ORECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h06hDTWR ORECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hWR ORECOVERED DATA WITH POSITIVE HEAD OFFSET17h04hWR ORECOVERED DATA WITH NO ERROR17h08hDWRECOVERED DATA WITH RETRIES17h04hWR ORECOVERED DATA WITH ORD FOLD17h04hWR ORECOVERED DATA WITH ORD FOLD17h04hWR O </td <td></td> <td></td> <td></td> <td>PRIMARY DEFECT LIST NOT FOUND</td>				PRIMARY DEFECT LIST NOT FOUND
3BhOAhSREADPASTBEGINNINGOFMEDIUM3BhO9hSREADREADPASTEND OFMEDIUM11hO1hDTW SOREADRECORD NOTFOUND14hO1hDTWR ORECORDEDENTITYNOTFOUND14hO0hDTLWRSORECOVEREDDATA-ACCOMMENDREALLOCATED18hO5hDWR ORECOVEREDDATA-RECOMMENDREALLOCATED18hO5hDWR ORECOVEREDDATA-RECOMMENDREWRITE17hO5hDWR ORECOVEREDDATA-RECOMMENDREWRITE18hO6hDWR ORECOVEREDDATAWITHCIRCRETRIESAPPLIED18hO6hDWR ORECOVEREDDATAWITHCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHNEROCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHNEROCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHNEROCIRCAPPLIED18hO6hDWR ORECOVEREDDATAWITHNERO	40h	00h	D	
3Bh09hSREADPASTENDOFMEDIUM11h01hDTW SOREADRETRIESEXHAUSTED14h01hDTWR ORECORD NOTFOUND14h00hDTLWR ORECORDEDENTITYNOTFOUND18h02hDWR ORECOVEREDDATA-DATAAUTO-REALLOCATED18h05hDWR ORECOVEREDDATA-RECOMMENDREWRITE17h05hDWR ORECOVEREDDATA-RECOMMENDREWRITE18h03hRRECOVEREDDATAUSINGPREVIOUSSECTORID18h03hRRECOVEREDDATAWITHCRRECTION & RETRIESAPPLIED18h04hRRECOVEREDDATAWITHERRORCORRECTION APPLIED18h04hRRECOVEREDDATAWITHNOERCOVERED18h04hRRECOVEREDDATAWITHHEADOFFSET17h03hDTWR ORECOVEREDDATAWITHNOERCION APPLIED17h04hRORECOVEREDDATAWITHRETRIESAND/ORCIRC APPLIED17h04hDTWR ORECOVEREDDATAWITH HERRIESAND/ORCIRC APPLIED17h04hWR ORECOVEREDDATAWITH HERRIESAND/ORCIRC APPLIED17h04hDTWR O </td <td></td> <td></td> <td></td> <td></td>				
11h01hDTW SOREADRETRIESEXHAUSTED14h01hDTWR 0RECORD NOT FOUND14h00hDTLWR 0RECOVEREDDATA - DATAAUTO-REALLOCATED18h02hDWR 0RECOVEREDDATA - RECOMMENDREADREWRITE18h05hDWR 0RECOVEREDDATA - RECOMMENDREWRITE18h06hDWR 0RECOVEREDDATA WITH CIRC18h03hRRECOVEREDDATA WITH ERRORCORRECTION & RETRIESAPPLIED18h04hRRECOVEREDDATA WITHERRORCORRECTION & APPLIED18h04hRRECOVEREDDATA WITHLEC17h03hDTWR 0RECOVEREDDATA WITHNO ERROR17h02hDTWR 0RECOVEREDDATA WITH NO ERRORCORRECTION APPLIED17h04hRRECOVEREDDATA WITH POSITIVEHEADOFFSET17h04hWR 0RECOVEREDDATA WITH RETRIESAND/OR CIRC APPLIED17h04hWR 0RECOVEREDDATA WITHOUTECC - DATA AUTO-REALLOCATED17h04hWR 0RECOVEREDDATA WITH HETRIESAND/OR CIRC APPLIED17h04hWR 0RECOVEREDDATA WITHOUTECC - RECOMMEND17h08hDWRECOVEREDDATA WITHOUTECC - RECOMMEND REASSIGNMENT17h04hWR 0RECOVEREDDATA WITHOUTECC - RECOMMEN			-	
14h01hDTWR ORECORD NOT FOUND14h00hDTLWRSORECORDED ENTITY NOT FOUND18h02hDWR ORECOVERED DATA - DATA AUTO-REALLOCATED18h05hDWR ORECOVERED DATA - RECOMMEND REASSIGNMENT18h06hDWR ORECOVERED DATA - RECOMMEND REWRITE17h05hDWR ORECOVERED DATA USING PREVIOUS SECTOR ID18h03hRRECOVERED DATA WITH CIRC18h01hDWR ORECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h04hRRECOVERED DATA WITH ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH NOEAROR CORRECTION APPLIED17h03hDTWR ORECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hWR ORECOVERED DATA WITH POSITIVE HEAD OFFSET17h04hWR ORECOVERED DATA WITH POSITIVE HEAD OFFSET17h04hWR ORECOVERED DATA WITH RETRIES17h06hDWRECOVERED DATA WITHOUT ECC - DATA AUTO-REALLOCATED17h08hDRECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDRECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDRECOVERED ID WITH ERROR38h08hTREPOSITION ERROR38h08hTREPOSITION ERROR39h00hDTLWRSOMC </td <td></td> <td></td> <td></td> <td></td>				
14h00hDTLWRSORECORDEDENTITYNOTFOUND18h02hDWRORECOVEREDDATA-DATAAUTO-REALLOCATED18h05hDWRORECOVEREDDATA-RECOMMENDREASSIGNMENT18h06hDWRORECOVEREDDATA-RECOMMENDREWRITE17h05hDWRORECOVEREDDATAUSINGPREVIOUSSECTORID18h03hRRECOVEREDDATAWITHCIRCRECOVEREDDATAWITHPREVIOUSSECTORID18h04hDWRORECOVEREDDATAWITHERCORECTIONA RETRIESAPPLIED18h04hRRECOVEREDDATAWITHHERORCORRECTIONAPPLIED18h04hRRECOVEREDDATAWITHLECOTATA18h04hRRECOVEREDDATAWITHLECOTATA18h04hRRECOVEREDDATAWITHNCRECOVEREDTATA17h03hDTWRORECOVEREDDATAWITH NORECORRECTIONAPPLIED17h04hDTWRORECOVEREDDATAWITH NORECOTATA17h04hWRORECOVEREDDATAWITH NORECOTATA17h04hWRO<				
18h02hDWR 0RECOVEREDDATA -DATAAUTO-REALLOCATED18h05hDWR 0RECOVEREDDATA -RECOMMENDREASSIGNMENT18h06hDWR 0RECOVEREDDATA -RECOMMENDREWRITE17h05hDWR 0RECOVEREDDATAUSINGPREVIOUSSECTORID18h03hRRECOVEREDDATAWITH CIRCRECOVEREDATAWITH CIRC18h04hDWR 0RECOVEREDDATAWITH ERRORCORRECTION & RETRIESAPPLIED18h04hRRECOVEREDDATAWITH L-ECRECOVEREDDATAWITH NEGATIVEHEAD OFFSET17h03hDTWR 0RECOVEREDDATAWITH NO ERRORCORRECTIONAPPLIED17h04hRRECOVEREDDATAWITH NO ERRORCORRECTIONAPPLIED17h04hWR 0RECOVEREDDATAWITH POSITIVEHEAD OFFSET17h04hWR 0RECOVEREDDATAWITH POSITIVEHEAD OFFSET17h04hWR 0RECOVEREDDATAWITH RETRIESAND/ORCIRC APPLIED17h04hWR 0RECOVEREDDATAWITH NORECOMMENDREASSIGNMENT17h04hWR 0RECOVEREDDATAWITHOUTECC -DATAAUTO-REALLOCATED17h04hWR 0RECOVEREDDATAWITHOUTECC -RECOMENDRECOMEND <td></td> <td></td> <td></td> <td></td>				
18h05hDWR 0RECOVEREDDATA -RECOMMENDREASSIGNMENT18h06hDWR 0RECOVEREDDATA -RECOMMENDREWRITE17h05hDWR 0RECOVEREDDATA WITH CIRC18h03hRRECOVEREDDATA WITH CIRC18h01hDWR 0RECOVEREDDATA WITH ERRORCORRECTION & RETRIES18h00hDTWR 0RECOVEREDDATA WITH ERRORCORRECTION APPLIED18h04hRRECOVEREDDATA WITH L-EC17h03hDTWR 0RECOVEREDDATA WITH NEGATIVEHEAD OFFSET17h04hRRECOVEREDDATA WITH NEGATIVEHEAD OFFSET17h04hWR 0RECOVEREDDATA WITH RETRIESAND/OR CIRC APPLIED17h04hWR 0RECOVEREDDATA WITH RETRIESAND/OR CIRC APPLIED17h06hDWRECOVEREDDATA WITHOUT ECC -DATA AUTO-REALLOCATED17h07hDWRECOVEREDDATA WITHOUT ECC -RECOMMEND REASSIGNMENT17h08hDWRECOVEREDDATA WITHOUT ECC -RECOMMEND REASSIGNMENT17h08hDWRECOVEREDDATA WITHOUT ECC -RECOMMEND REASSIGNMENT17h08hDWRECOVEREDDATA WITHOUT ECC -RECOMMEND REASSIGNMENT17h08hDWRECOVEREDDATA WITHOUT ECC -RECOMMEND REASSIGNMENT17h08h <t< td=""><td></td><td></td><td></td><td></td></t<>				
18h06hDWR 0RECOVEREDDATA- RECOMMENDREWRITE17h05hDWR 0RECOVEREDDATAUSINGPREVIOUSSECTOR ID18h03hRRECOVEREDDATAWITHCIRC18h04hDWR 0RECOVEREDDATAWITHCORRECTION& RETRIESAPPLIED18h04hRRECOVEREDDATAWITHERRORCORRECTIONAPPLIED18h04hRRECOVEREDDATAWITHL-ECTAAPPLIED18h04hRRECOVEREDDATAWITHL-ECTAAPPLIED18h04hRRECOVEREDDATAWITHL-ECTAAPPLIED18h04hRRECOVEREDDATAWITHL-ECTAAPPLIED18h04hRRECOVEREDDATAWITHNCRECOVERETTA17h03hDTWR 0RECOVEREDDATAWITH POSITIVEHEADOFFSET17h04hWR 0RECOVEREDDATAWITH RETRIESAND/ORCIRC APPLIED17h04hWR 0RECOVEREDDATAWITH RETRIESAND/ORCIRC APPLIED17h04hWR 0RECOVEREDDATAWITH HOUTECCDATAAUTO-REALLOCATED17h04hWR 0RECOVEREDDATAWITHOUTECCRECOMMENDRESIGNMENT17h04hW0RECOVERED<				
18h03hRRECOVERED DATA WITH CIRC18h01hDWR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h00hDTWR 0RECOVERED DATA WITH ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH L-EC17h03hDTWR 0RECOVERED DATA WITH NEGATIVE HEAD OFFSET17h04hRRECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h02hDTWR 0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hWR 0RECOVERED DATA WITH POSITIVE HEAD OFFSET17h04hWR 0RECOVERED DATA WITH RETRIES17h06hDWRECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED17h06hDWRECOVERED DATA WITHOUT ECC - DATA AUTO-REALLOCATED17h07hDWRECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDWRECOVERED ID WITH ECC CORRECTION18h08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTLWRSOMCROUNDED PARAMETER36h00hCRPL STATUS CHANGE39h00hDTLWRSOMC30h00hDTLWRSOMC30h00hSCSI TO HOST SYSTEM INTERFACE FAILURE	18h	06h	D WR O	RECOVERED DATA - RECOMMEND REWRITE
18h01hDWR 0RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED18h00hDTWR 0RECOVERED DATA WITH ERROR CORRECTION APPLIED18h04hRRECOVERED DATA WITH L-EC17h03hDTWR 0RECOVERED DATA WITH NEGATIVE HEAD OFFSET17h00hDTWRS0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h02hDTWR 0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h04hDTWRS0RECOVERED DATA WITH POSITIVE HEAD OFFSET17h04hWR 0RECOVERED DATA WITH RETRIES17h04hWR 0RECOVERED DATA WITH RETRIES17h06hDWRECOVERED DATA WITHOUT ECC - DATA AUTO-REALLOCATED17h07hDWRECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDWRECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE16h06hDWRECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE16h06hDRECOVERED ID WITH ECC CORRECTION38h08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h06hDRPL STATUS CHANGE39h06hDTWRSOMC30h06hSCAN HEAD POSITIONING ERROR37h06hSCSI TO HOST SYSTEM INTERFACE FAILURE36h06hSCSI TO HOST SYSTEM INTERFACE FAILURE				
18h00hDTWR 0RECOVEREDDATAWITHERRORCORRECTIONAPPLIED18h04hRRECOVEREDDATAWITHL-EC17h03hDTWR 0RECOVEREDDATAWITHNEGATIVEHEADOFFSET17h00hDTWRS0RECOVEREDDATAWITHNOERRORCORRECTIONAPPLIED17h02hDTWR 0RECOVEREDDATAWITHPOSITIVEHEAD0FFSET17h01hDTWRS0RECOVEREDDATAWITHPOSITIVEHEAD0FFSET17h04hWR 0RECOVEREDDATAWITHPOSITIVEHEAD0FFSET17h04hWR 0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h04hWR 0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h04hWR 0RECOVEREDDATAWITHOUTECCDATAAUTO-REALOCATED17h04hWR 0RECOVEREDDATAWITHOUTECCRECOMMENDREASIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREWRITE16h00hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREWRITE<				
18h04hRRECOVERED DATA WITH L-EC17h03hDTWR 0RECOVERED DATA WITH NEGATIVE HEAD OFFSET17h00hDTWRS0RECOVERED DATA WITH NO ERROR CORRECTION APPLIED17h02hDTWR 0RECOVERED DATA WITH POSITIVE HEAD OFFSET17h01hDTWRS0RECOVERED DATA WITH POSITIVE HEAD OFFSET17h01hDTWRS0RECOVERED DATA WITH RETRIES17h04hWR 0RECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED17h06hDW0RECOVERED DATA WITHOUT ECC - DATA AUTO-REALLOCATED17h07hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE1Eh00hDW0RECOVERED ID WITH ECC CORRECTION38h08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTLWRSOMC39h00hDTLSAVING PARAMETER39h00hSCSI TANUS CHANGE39h00hSCSI PARITY ERROR54h00hPSCSI TO HOST SYSTEM INTERFACE FAILURE				
17h03hDTWR 0RECOVEREDDATAWITHNEGATIVEHEADOFFSET17h00hDTWRS0RECOVEREDDATAWITHNOERRORCORRECTIONAPPLIED17h02hDTWR 0RECOVEREDDATAWITHPOSITIVEHEADOFFSET17h01hDTWR 0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h04hWR 0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h06hDW0RECOVEREDDATAWITHOUTECCDATAAUTO-REALLOCATED17h06hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECCRECOMMENDREWRITE16h00hDW0RECOVEREDDATAWITH CCCORRECTION38h08hTREPOSITIONERRORRONNERFAILURE37h00hDTLWRSOMCROUNDEDPARAMETERSOCHSOCH39h00hDTLWRSOMCSAVINGPARAMETERSNOTSUPPORTED			- · · · · · ·	
17h00hDTWRSORECOVEREDDATAWITHNOERRORCORRECTIONAPPLIED17h02hDTWRWRSORECOVEREDDATAWITHPOSITIVEHEADOFFSET17h01hDTWRSORECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h04hWR0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h06hDW0RECOVEREDDATAWITHOUTECC-DATAAUTO-REALLOCATED17h07hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0<				
17h02hDTWR 0RECOVEREDDATAWITHPOSITIVEHEADOFFSET17h01hDTWRS0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h04hWR 0RECOVEREDDATAWITHRETRIESAND/ORCIRCAPPLIED17h06hDW0RECOVEREDDATAWITHOUTECC-DATAAUTO-REALLOCATED17h07hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE17h08hDW0RECOVEREDDATAWITHOUTECC-RECOMMENDREWRITE18h08hTREPOSITIONRERORROUNDEDPARAMETERSOLSOLSOLREMINERSOL37h00hDTWRSOMCSC				
17h04hWR 0RECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED17h06hDW0RECOVERED DATA WITHOUT ECC - DATA AUTO-REALLOCATED17h07hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REASSIGNMENT17h08hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE16h00hDW0RECOVERED ID WITH ECC CORRECTION38h08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTL WRSOMCROUNDED PARAMETER5Ch00hD0RPL STATUS CHANGE39h00hDTL WRSOMCSAVING PARAMETERS NOT SUPPORTED62h00hSSCAN HEAD POSITIONING ERROR47h00hDTLPWRSOMCSCSI PARITY ERROR54h00hPSCSI TO HOST SYSTEM INTERFACE FAILURE				RECOVERED DATA WITH POSITIVE HEAD OFFSET
17h06hDW0RECOVEREDDATAWITHOUTECCDATAAUTO-REALLOCATED17h07hDW0RECOVEREDDATAWITHOUTECC- RECOMMENDREASSIGNMENT17h08hDW0RECOVEREDDATAWITHOUTECC- RECOMMENDREWRITE16h00hDW0RECOVEREDIDWITHECC- RECOMMENDREWRITE16h00hDW0RECOVEREDIDWITHECC- CORRECTION38h08hTREPOSITIONERROR				
17h08hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE1Eh00hDW0RECOVERED ID WITH ECC CORRECTION3Bh08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTL WRSOMCROUNDED PARAMETER5Ch00hD0RPL STATUS CHANGE39h00hDTL WRSOMCSAVING PARAMETERS NOT SUPPORTED62h00hSSCAN HEAD POSITIONING ERROR47h00hDTLPWRSOMCSCSI PARITY ERROR54h00hPSCSI TO HOST SYSTEM INTERFACE FAILURE				RECUVERED DATA WITH REIHIES AND/OR CIRC APPLIED
17h08hDW0RECOVERED DATA WITHOUT ECC - RECOMMEND REWRITE1Eh00hDW0RECOVERED ID WITH ECC CORRECTION3Bh08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTL WRSOMCROUNDED PARAMETER5Ch00hD0RPL STATUS CHANGE39h00hDTL WRSOMCSAVING PARAMETERS NOT SUPPORTED62h00hSSCAN HEAD POSITIONING ERROR47h00hDTLPWRSOMCSCSI PARITY ERROR54h00hPSCSI TO HOST SYSTEM INTERFACE FAILURE				RECOVERED DATA WITHOUT ECC - DATA AUTU-REALLOCATED
1Eh00hDWORECOVERED IDWITH ECC CORRECTION3Bh08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTLWRSOMC37h00hDO80hD0RPL93h00hDTLWRSOMC39h00hDTLWRSOMC62h00hSSCAN62h00hSSCAN47h00hDTLPWRSOMCSCSI54h00hPSCSI54h00hPSCSI				RECOVERED DATA WITHOUT ECC - RECOMMEND REWSITE
3Bh08hTREPOSITION ERROR36h00hLRIBBON, INK, OR TONER FAILURE37h00hDTL WRSOMCROUNDED PARAMETER5Ch00hD0RPL STATUS CHANGE39h00hDTL WRSOMCSAVING PARAMETERS NOT SUPPORTED62h00hSSCAN HEAD POSITIONING ERROR47h00hDTLPWRSOMCSCSI PARITY ERROR54h00hPSCSI TO HOST SYSTEM INTERFACE FAILURE				
37h       00h       DTL       WRSOMC       ROUNDED       PARÁMETER         5Ch       00h       D       0       RPL       STATUS       CHANGE         39h       00h       DTL       WRSOMC       SAVING       PARAMETERS       NOT       SUPPORTED         62h       00h       S       SCAN       HEAD       POSITIONING       ERROR         47h       00h       DTLPWRSOMC       SCSI       PARITY       ERROR         54h       00h       P       SCSI       TO       HOST       SYSTEM       INTERFACE       FAILURE				
5Ch 00h D 0 RPL STATUS CHANGE 39h 00h DTL WRSOMC SAVING PARAMETERS NOT SUPPORTED 62h 00h S SCAN HEAD POSITIONING ERROR 47h 00h DTLPWRSOMC SCSI PARITY ERROR 54h 00h P SCSI TO HOST SYSTEM INTERFACE FAILURE				
39h OOH DTL WRSOMC SAVING PARAMETERS NOT SUPPORTED 62h OOH S SCAN HEAD POSITIONING ERROR 47h OOH DTLPWRSOMC SCSI PARITY ERROR 54h OOH P SCSI TO HOST SYSTEM INTERFACE FAILURE				
62h 00h S SCAN HEAD POSITIONING ERROR 47h 00h DTLPWRSOMC SCSI PARITY ERROR 54h 00h P SCSI TO HOST SYSTEM INTERFACE FAILURE		-		
47h OOH DTLPWRSOMC SCSI PARITY ERROR 54h OOH P SCSI TO HOST SYSTEM INTERFACE FAILURE				SAVING FAHAMETERS NUT SUFFUHTED
54h 00h P SCSI TO HOST SYSTEM INTERFACE FAILURE				
ion con preimicomo delegi on negelegi iniziane	45h	00h	DTLPWRSOMC	SELECT OR RESELECT FAILURE

Table 71 (concluded)

ASC ASCQ	DTLPWRSOMC	DESCRIPTION
ASC ASCQ 3Bh 00h 00h 03h 3Bh 04h 09h 03h 5Ch 01h 1Bh 00h 5Ch 01h 1Bh 00h 3Bh 03h 3Bh 02h 3Bh 02h 3Bh 02h 3Bh 02h 3Bh 02h 3Bh 02h 3Bh 02h 3Bh 00h 5Ch 01h 5Sh 00h 3Bh 00h 5Sh 00h 5Bh 01h 3Bh 00h 5Bh 01h 5Ch 01h 11h 00h 61h 01h 57h 00h 11h 00h 01h 00h 03h 00h 03h 00h 03h 00h 03h 00h	TL T WR 0 D D DTLPWRSOMC T L T T T DTLPWRSOMC DTL PWRSOMC	SEQUENTIAL POSITIONING ERROR SETMARK DETECTED SLEW FAILURE SPINDLE SERVO FAILURE SPINDLES NOT SYNCHRONIZED SYNCHRONOUS DATA TRANSFER ERROR SYSTEM RESOURCE FAILURE TAPE LENGTH ERROR TAPE OR ELECTRONIC VERTICAL FORMS UNIT NOT READY TAPE POSITION ERROR AT BEGINNING-OF-MEDIUM TAPE POSITION ERROR AT BEGINNING-OF-MEDIUM TARGET OPERATING CONDITIONS HAVE CHANGED THRESHOLD CONDITION MET THRESHOLD PARAMETERS NOT SUPPORTED TOO MANY WINDOWS SPECIFIED TRACK FOLLOWING ERROR TRACK FOLLOWING ERROR TRACKING SERVO FAILURE UNABLE TO RECOVER TABLE-OF-CONTENTS UNLOAD TAPE FAILURE UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA
27h 00h 80h XXh THROUGH FFh XX	DT W O \ /	WRITE PROTECTED Vendor-specific.
XXh 80h THROUGH XXh FFh	\ /	Vendor-specific QUALIFICATION OF STANDARD ASC. ALL CODES NOT SHOWN ARE RESERVED.
NOTE - Ann	ex D contain	s the ASC and ASCQ assignments in numeric order.

124

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

### 8.2.15 SEND DIAGNOSTIC command

The SEND DIAGNOSTIC command (see table 72) requests the target to perform diagnostic operations on itself, on the logical unit, or on both. The only mandatory implementation of this command is the self-test feature with the parameter list length of zero. Except when the self-test bit is one, this command is usually followed by a RECEIVE DIAGNOSTIC RESULTS command.

Bit Byte	7	6	5	4	3	2	1	0
0	Operation code (1Dh)							
1	Logical	unit num	ber	PF	Reserved	SelfTest	DevOfL	UnitOfL
2	Reserved							
3	(MSB)			Papamata	er list le	aath		
4				Fallamete	en 1131 1en	igin		(LSB)
5				Control				

Table 72 - SEND DIAGNOSTIC command

A page format (PF) bit of one specifies that the SEND DIAGNOSTIC parameters conform to the page structure as specified in this standard. The implementation of the PF bit is optional. See 8.3.1 for the definition of diagnostic pages. A PF bit of zero indicates that the SEND DIAGNOSTIC parameters are as specified in SCSI-1 (i.e. all parameters are vendor-specific).

A self-test (SelfTest) bit of one directs the target to complete its default self-test. If the self-test successfully passes, the command shall be terminated with GOOD status; otherwise, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to HARDWARE ERROR.

A self-test bit of zero requests that the target perform the diagnostic operation specified in the parameter list. The diagnostic operation might or might not require a target to return data that contains diagnostic results. If the return of data is not required, the return of GOOD status indicates successful completion of the diagnostic operation. If the return of data is required, the target shall either:

- a) perform the requested diagnostic operation, prepare the data to be returned and indicate completion by returning GOOD status. The initiator issues a RECEIVE DIAGNOSTIC RESULTS command to recover the data;
- b) accept the parameter list, and if no errors are detected in the parameter list, return GOOD status. The requested diagnostic operation and the preparation of the data to be returned are performed upon receipt of a RECEIVE DIAGNOSTIC RESULTS command.

NOTE 92 To insure that the diagnostic command information is not destroyed by a command sent from another initiator, either the SEND DIAGNOSTIC command should be linked to the RECEIVE DIAGNOSTIC RESULTS command or the logical unit should be reserved.

The device off-line (DevOfL) and unit off-line (UnitOfL) bits are generally set by operating system software, while the parameter list is prepared by diagnostic application software. These bits grant permission to perform vendor-specific diagnostic operations on the target that may be visible to attached initiators. Thus, by preventing operations that are not enabled by these bits, the target assists the operating system in protecting its resources.

A UnitOfL bit of one grants permission to the target to perform diagnostic operations that may affect the user accessible medium on the logical unit, e.g. write operations to the user accessible medium, or repositioning of the medium on sequential access devices. The implementation of the UnitOfL bit is optional. A UnitOfL bit of zero prohibits any diagnostic operations that may be detected by subsequent I/O processes.

A DevOfL bit of one grants permission to the target to perform diagnostic operations that may affect all the logical units on a target, e.g. alteration of reservations, log parameters, or sense data. The implementation of the DevOfL bit is optional. A DevOfL bit of zero prohibits diagnostic operations that may be detected by subsequent I/O processes.

The parameter list length field specifies the length in bytes of the parameter list that shall be transferred from the initiator to the target. A parameter list length of zero indicates that no data shall be transferred. This condition shall not be considered an error. If the specified parameter list length results in the truncation of one or more pages (PF bit set to one) the target shall return CHECK CONDITION status with a sense key of ILLEGAL REQUEST and an additional sense code of INVALID FIELD IN CDB.

See note 83 under the RECEIVE DIAGNOSTIC RESULTS command in 8.2.13.

### 8.2.16 TEST UNIT READY command

The TEST UNIT READY command (see table 73) provides a means to check if the logical unit is ready. This is not a request for a self-test. If the logical unit would accept an appropriate medium-access command without returning CHECK CONDITION status, this command shall return a GOOD status. If the logical unit cannot become operational or is in a state such that an initiator action (e.g. START UNIT command) is required to make the unit ready, the target shall return CHECK CONDITION status with a sense key of NOT READY.

Bit Byte	7	6	5	4	3	2	1	0
0		Operation code (00h)						
1	Logical unit number Reserved							
2	Reserved							
3	Reserved							
4	Reserved							
5	Control							

### Table 73 - TEST UNIT READY command

Table 74 defines the preferred responses to the TEST UNIT READY command. Higher-priority responses (e.g. BUSY or RESERVATION CONFLICT) are also permitted.

Table 74 - 1	Preferred	TEST	UNIT	READY	responses
--------------	-----------	------	------	-------	-----------

		· · · · · · · · · · · · · · · · · · ·
Status	Sense key	ASC and ASCQ
GOOD	NO SENSE	NO ADDITIONAL SENSE INFORMATION or other valid additional sense code.
CHECK CONDITION	ILLEGAL REQUEST	LOGICAL UNIT NOT SUPPORTED
CHECK CONDITION	NOT READY	LOGICAL UNIT DOES NOT RESPOND TO SELECTION
CHECK CONDITION	NOT READY	MEDIUM NOT PRESENT
CHECK CONDITION	NOT READY	LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE
CHECK CONDITION	NOT READY	LOGICAL UNIT IS IN PROCESS OF BECOMING READY
CHECK CONDITION	NOT READY	LOGICAL UNIT NOT READY, INITIALIZING COMMAND REQUIRED
CHECK CONDITION	NOT READY	LOGICAL UNIT NOT READY, MANUAL INTERVENTION REQUIRED
CHECK CONDITION	NOT READY	LOGICAL UNIT NOT READY, FORMAT IN PROGRESS

# 8.2.17 WRITE BUFFER command

The WRITE BUFFER command (see table 75) is used in conjunction with the READ BUFFER command as a diagnostic for testing target memory and the SCSI bus integrity. Additional modes are provided for downloading microcode and for downloading and saving microcode.

Table 75 - WRITE BUFFER con
-----------------------------

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (3	Bh)		
1	Logical	unit num	ber	Rese	erved		Mode	
2	<u>,                                     </u>			Buffer II	)			
3	(MSB)							
4				Buffer of	fset			
5								(LSB)
6	(MSB)		_					
7				Parameter	r list le	ngth		
8								(LSB)
9				Control				

This command shall not alter any medium of the target when the data mode or the combined header and data mode is specified.

,

The function of this command and the meaning of fields within the command descriptor block depend on the contents of the mode field. The mode field is defined in table 76.

Mode	Description	Implementation requirements
000b 001b 010b 011b 100b 101b 110b 111b	Write combined header and data Vendor-specific Write data Reserved Download microcode Download microcode and save Reserved Reserved	Optional Vendor-specific Optional Reserved Optional Reserved Reserved

Table 76 - WRITE BUFFER mode field

NOTE 93 Modes 000b and 001b are included for compatibility with CCS products that were designed prior to the generation of this standard. These products restrict the maximum transfer length to 65 535 bytes.

# 8.2.17.1 Combined header and data mode (000b)

In this mode, data to be transferred is preceded by a four-byte header. The four-byte header consists of all reserved bytes. The buffer ID and the buffer offset fields shall be zero. The parameter list length field specifies the maximum number of bytes that shall be transferred during the DATA OUT phase. This number includes four bytes of header, so the data length to be stored in the target's buffer is parameter list length minus four. The initiator should attempt to ensure that the parameter list length is not greater than four plus the buffer capacity (see 8.2.12.1) that is returned in the header of the READ BUFFER command (mode 000b). If the parameter list length exceeds the buffer capacity target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST.

# 8.2.17.2 Vendor-specific mode (001b)

In this mode, the meaning of the buffer ID, buffer offset, and parameter list length fields are not specified by this standard.

# 8.2.17.3 Data mode (010b)

In this mode, the DATA OUT phase contains buffer data. The buffer ID field identifies a specific buffer within the target. The vendor assigns buffer ID codes to buffers within the target. Buffer ID zero shall be supported. If more than one buffer is supported, additional buffer ID codes shall be assigned contiguously, beginning with one. If an unsupported buffer ID code is selected, the target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN CDB.

Data are written to the target buffer starting at the location specified by the buffer offset. The initiator should conform to the offset boundary requirements returned in the READ BUFFER descriptor. If the target is unable to accept the specified buffer offset, it shall return CHECK CONDITION status and it shall set the sense key to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN CDB.

The parameter list length specifies the maximum number of bytes that shall be transferred during the DATA OUT phase to be stored in the specified buffer beginning at the buffer offset. The initiator should attempt to ensure that the parameter list length plus the buffer offset does not exceed the capacity of the specified buffer. (The capacity of the buffer capacity field in the READ BUFFER descriptor.) If the buffer offset and parameter list length fields specify a transfer that would exceed the buffer capacity, the target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN CDB.

128

# 8.2.17.4 Download microcode mode (100b)

In this mode, vendor-specific microcode or control information shall be transferred to the control memory space of the target. After a power-cycle or reset, the device operation shall revert to a vendor-specific condition. The meanings of the buffer ID, buffer offset, and parameter list length fields are not specified by this standard and are not required to be zero-filled. When the microcode download has completed successfully the target shall generate a unit attention condition for all initiators except the one that issued the WRITE BUFFER command (see 7.9). The additional sense code shall be set to MICROCODE HAS BEEN CHANGED.

### 8.2.17.5 Download microcode and save mode (101b)

In this mode, vendor-specific microcode or control information shall be transferred to the target and, if the WRITE BUFFER command is completed successfully, also shall be saved in a non-volatile memory space (semiconductor, disk, or other). The downloaded code shall then be effective after each power-cycle and reset until it is supplanted in another download microcode and save operation. The meanings of the buffer ID, buffer offset, and parameter list length fields are not specified by this standard and are not required to be zero-filled. When the download microcode and save command has completed successfully the target shall generate a unit attention condition (see 7.9) for all initiators except the one that issued the WRITE BUFFER command. When reporting the unit attention condition, the target shall set the additional sense code to MICROCODE HAS BEEN CHANGED.

# 8.3 Parameters for all device types

### 8.3.1 Diagnostic parameters

This subclause describes the diagnostic page structure and the diagnostic pages that are applicable to all SCSI devices. Pages specific to each device type are described in the third subclause of each device-type clause (i.e. 9.3, 10.3, etc.).

A SEND DIAGNOSTIC command with a PF bit of one specifies that the SEND DIAGNOSTIC parameter list consists of zero or more diagnostic pages and that the data returned by the subsequent RECEIVE DIAGNOSTIC RESULTS command shall use the diagnostic page format (see table 77) described in this International Standard.

Bit Byte	7	6	5	4	3	2	1	0
0				Page code	9			
1				Reserved				
2	(MSB)			Page leng	$\frac{1}{2}$			
3				rage renț	jui (ii-0)		_	(LSB)
4				Diagnost	ic paramet	tare		
n			<u>.</u>	bragnost.				-

Table 77 - Diagnostic page format

Each diagnostic page defines a function or operation that the target shall perform. The page contains a page header followed by the analysis data that is formatted according to the page code specified in the previous SEND DIAGNOSTIC command.

Targets that implement diagnostic pages are only required to accept a single diagnostic page per command.

The page code field identifies which diagnostic page is being sent or returned. The page codes are defined in table 78.

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported diagnostics pages Reserved (for all device type pages) See specific device type for definition Vendor-specific pages	8.3.1.1


Table 78 - Diagnostic page codes

The page length field specifies the length in bytes of the diagnostic parameters that follow this field. If the initiator sends a page length that results in the truncation of any parameter, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN PARAMETER LIST.

The diagnostic parameters are defined for each page code. The diagnostic parameters within a page may be defined differently in a SEND DIAGNOSTIC command than in a RECEIVE DIAGNOSTIC RESULTS command.

### 8.3.1.1 Supported diagnostic pages

The supported diagnostics page (see table 79) returns the list of diagnostic pages implemented by the target. This page shall be implemented if the target implements the page format option of the SEND DIAGNOSTIC and RECEIVE DIAGNOSTIC RESULTS commands.

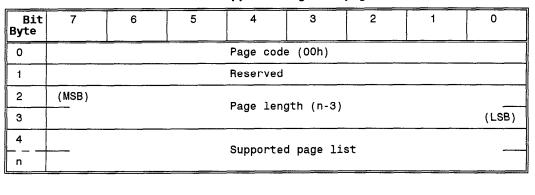



The definition of this page for the SEND DIAGNOSTIC command includes only the first four bytes. If the page length field is not zero, the target shall terminate the SEND DIAGNOSTIC command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN PARAMETER LIST. This page instructs the target to make available the list of all supported diagnostic pages to be returned by a subsequent RECEIVE DIAGNOSTIC RESULTS command.

The definition of this page for the RECEIVE DIAGNOSTIC RESULTS command includes the list of diagnostic pages supported by the target.

The page length field specifies the length in bytes of the following supported page list.

The supported page list field shall contain a list of all diagnostic page codes implemented by the target in ascending order beginning with page code 00h.

130

### 8.3.2 Log parameters

This subclause describes the log page structure and the log pages that are applicable to all SCSI devices. Pages specific to each device type are described in the third subclause of each device-type clause (i.e. 9.3.2, 10.3.2, etc.). The LOG SELECT command supports the ability to send zero or more log pages. The LOG SENSE command returns a single log page specified in the page code field of the command descriptor block (see 8.2.7).

Each log page begins with a four-byte page header followed by zero or more variable-length log parameters defined for that page. The log page format is defined in table 80.

Bit Byte	7	6	5	4	3	2	1	0
0	Rese	rved		Page	code			
1				Reser	ved			
2	(MSB)			Page	length (r			
3				Faye	rength (i			(LSB)
				og parame	ters(s)			
4				Log p	arameter th x)	(First)		
x+3				(Leng		- 10-11-1		
				:				
n-y+1 n				Log p (Leng	arameter th y)	(Last)		

Table 80 -	Log page	format
------------	----------	--------

The page code field identifies which log page is being transferred.

The page length field specifies the length in bytes of the following log parameters. If the initiator sends a page length that results in the truncation of any parameter, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN PARAMETER LIST.

Most log pages contain one or more special data structures called log parameters (see table 81). Log parameters may be data counters that record a count of a particular event (or events) or log parameters may be list parameters (strings) which contain a description of a particular event.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)	I <u></u>	1 <u></u>	Denemetre			- <b>L</b>	<u></u>
1				Parameter	code			(LSB)
2	DU	DS	TSD	ETC	٦	rmc	Reserved	LP
з			• . ,, · · ·	Parameter	length	(n-3)		
4		······		Parameter				
n				Farameter	varue			

Table 81 - Log parameter

Each log parameter begins with a four-byte parameter header followed by one or more bytes of parameter value data

The parameter code field identifies the log parameter is being transferred for that log page.

The DU, DS, TSD, ETC, TMC, and LP fields are collectively referred to as the parameter control byte. These fields are described below.

For cumulative log parameter values (indicated by the PC field of the LOG SELECT and LOG SENSE command descriptor block), the disable update (DU) bit is defined as follows:

- a) A zero value indicates that the target shall update the log parameter value to reflect all events that should be noted by that parameter.
- b) A one value indicates that the target shall not update the log parameter value except in response to a LOG SELECT command that specifies a new value for the parameter.

NOTE 94 When updating cumulative log parameter values, a target may use volatile memory to hold these values until a LOG SELECT or LOG SENSE command is received with an SP bit of one (or a target-defined event occurs). Thus the updated cumulative log parameter values may be lost if a power cycle occurs.

The DU bit is not defined for threshold values (indicated by the PC field of the LOG SENSE command descriptor block) nor for list parameters (indicated by the LP bit). The target shall ignore the value of any DU bits in a LOG SELECT command.

A disable save (DS) bit of zero indicates that the target supports saving for that log parameter. The target shall save the current cumulative or the current threshold parameter value (depending on the value in the PC field of the command descriptor block) in response to a LOG SELECT or LOG SENSE command with an SP bit of one. A DS bit of one indicates that the target does not support saving that log parameter in response to a LOG SELECT or LOG SENSE command with an SP bit of one.

A target save disable (TSD) bit of zero indicates that the target provides a target-defined method for saving log parameters. This implicit saving operation shall be done frequently enough to insure that the cumulative parameter values retain statistical significance (i.e. across power cycles). A TSD bit of one indicates that either the target does not provide a target-defined method for saving log parameters or the target-defined method has been disabled by the initiator.

An enable threshold comparison (ETC) bit of one indicates that a comparison to the threshold value is performed whenever the cumulative value is updated. An ETC bit of zero indicates that a comparison is not performed. The value of the ETC bit is the same for cumulative and threshold parameters.

The threshold met criteria (TMC) field (see table 82) defines the basis for comparison of the cumulative and threshold values. The TMC field is valid only if the ETC bit is one. The value of the TMC field is the same for cumulative and threshold parameters.

Table 82	- 1	Threshol	d met	criteria
----------	-----	----------	-------	----------

Code	Basis for comparison
00b	Every update of the cumulative value
01b	Cumulative value equal threshold value
10b	Cumulative value not equal threshold value
11b	Cumulative value greater than threshold value

If the ETC bit is one and the result of the comparison is true, a unit attention condition shall be generated for all initiators. When reporting the unit attention condition, the target shall set the sense key to UNIT ATTENTION and set the additional sense code to THRESHOLD CONDITION MET.

The list parameter (LP) bit indicates the format of the log parameter. If an initiator attempts to set the value of the LP bit to a value other than the one returned for the same parameter in the LOG SENSE command, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN PARAMETER LIST.

An LP bit of zero indicates that the parameter is a data counter. Data counters are associated with one of more events; the data counter is updated whenever one of these events occurs by incrementing of the counter value. If each data counter has associated with it a target-defined maximum value. Upon reaching this maximum value, the data counter shall not be incremented (i.e. it does not wrap). When a data counter reaches its maximum value, the target shall set the associated DU bit to one. If the data counter is at or reaches its maximum value during the execution of a command, the target shall complete the command. If the command completes correctly (except for the data counter being at its maximum value) and if the RLEC bit of the control mode page (8.3.3.1) is set to one; then the target shall terminate the command with CHECK CONDITION status and set the sense key to RECOVERED ERROR with the additional sense code set to LOG COUNTER AT MAXIMUM.

An LP bit of one indicates that the parameter is a list parameter. List parameters are not counters and thus the ETC and TMC fields shall be set to zero. A list parameter is a string of ASCII graphic codes (i.e. code values 20h through 7Eh).

If more than one list parameter is defined in a single log page, the following rules apply to assigning parameter codes:

- a) The parameter updated last shall have a higher parameter code than the previous parameter, except as defined in rule b).
- b) When the maximum parameter code value supported by the target is reached, the target shall assign the lowest parameter code value to the next log parameter (i.e. wrap-around parameter codes). If the associated command completes correctly (except for the parameter code being at its maximum value) and if the RLEC bit of the control mode page (8.3.3.1) is set to one; then the target shall terminate the command with CHECK CONDITION status and set the sense key to RECOVERED ERROR with the additional sense code set to LOG LIST CODES EXHAUSTED.

NOTE 95 List parameters can be used to store the locations of defective blocks in the following manner. When a defective block is identified, a list parameter is updated to reflect the location and cause of the defect. When the next defect is encountered, the list parameter with the next higher parameter code is updated to record this defect. The size of the page can be made target specific to accommodate memory limitations. It is recommended that one or more data counter parameters be defined for the page to keep track of the number of valid list parameters and the parameter code of the parameter with the oldest recorded defect. This technique can be adapted to record other types of information.

The parameter length field specifies the length in bytes of the following parameter value. If the initiator sends a parameter length value that results in the truncation of the parameter value, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN PARAMETER LIST.

If the initiator sends a log parameter value that is outside the range supported by the target, and rounding is implemented for that parameter, the target may either:

- a) round to an acceptable value and terminate the command as described in 7.5.4; or
- b) terminate the command with CHECK CONDITION status and set the sense key to ILLEGAL REQUEST with th∉ additional sense code set to INVALID FIELD IN PARAMETER LIST.

When any counter in a log page reaches its maximum value, incrementing of all counters in that log page shall cease until reinitialized by the initiator via a LOG SELECT command. If the RLEC bit of the control mode page is one, ther the target shall report the exception condition.

The page code assignments for the log pages are listed in table 83.

Page code	Description	Subclause
01h	Buffer over-run/under-run page	8.3.2.1
03h	Error counter page (read) page	8.3.2.2
04h	Error counter page (read reverse) page	8.3.2.2
05h	Error counter page (verify) page	8.3.2.2
02h	Error counter page (write) page	8.3.2.2
07h	Last n error events page	8.3.2.3
06h	Non-medium error page	8.3.2.4
00h	Supported log pages	8.3.2.5
08h - 2Fh	Reserved	1
3Fh	Reserved	
30h - 3Eh	Vendor-specific pages	

Table 83 - Log	page codes
----------------	------------

### 8.3.2.1 Buffer over-run/under-run page

The buffer over-run/under-run page (page code 01h) defines 24 data counters that may be used to record the number of buffer over-runs or under-runs for the logical unit. A target that implements this page may implement one or more of the defined data counters.

A buffer over-run or under-run can occur when an initiator does not transmit data to or from the target's buffer fast enough to keep up with reading or writing the media. This can be caused by a slow transfer rate across the SCS bus or by a high SCSI bus utilization that prevents reconnection by the target. A buffer over-run condition can occur during a read operation when a buffer full condition prevents continued transfer of data from the media to the buffer A buffer under-run condition can occur during a write operation when a buffer empty condition prevents continued transfer of data to the media from the buffer. Most devices incur a delay at this point while the media is repositioned

Table 84 defines the parameter code field for the buffer over-run/under-run counters.

Bit Byte	7	6	5	4	3	2	1	0			
0	Reserved										
1	Count basis Cause Ty										

Table 84 - Parameter code field for buffer over-run/under-run counters

The parameter code field for buffer over-run/under-run counters is a 16-bit value comprised of eight reserved bits. a three-bit count basis field (see table 85), a four-bit cause field (see table 86), and a one-bit type field. These are concatenated to determine the value of the parameter code for that log parameter. For example, a counter for parameter code value of 0023h specifies a count basis of 001b; a cause of 0001b; and a type of 1b; this counter is incremented once per command that experiences an over-run due to the SCSI bus being busy.

Count basis	Description
000b	Undefined
001b	Per command
010b	Per failed reconnect
011b	Per unit of time
100b - 111b	Reserved

Table 85 - Count basis definition

The count basis field defines the criteria for incrementing the counter. The following criteria are defined:

NOTE 96 The per unit of time count basis is device type specific. Direct-access devices typically use a latency period (i.e. one revolution of the medium) as the unit of time.

The cause field indicates the reason that the over-run or under-run occurred. The following causes are defined in table 86.

Cause	Description
1h 2h	Undefined SCSI bus busy Transfer rate too slow Reserved

Table 86 - Cause field definition

The type field indicates whether the counter records under-runs or over-runs. A value of zero specifies a buffer underrun condition and a value of one specifies a buffer over-run condition.

The counters contain the total number of times buffer over-run or under-run conditions have occurred since the last time the counter was cleared. The counter shall be incremented for each occurrence of an under-run or over-run condition and can be incremented more than once for multiple occurrences during the execution of a single command.

#### 8.3.2.2 Error counter pages

This clause defines the optional error counter pages for write errors (page code 02h), read errors (page code 03h), read reverse errors (page code 04h) and verify errors (page code 05h). The log page format is defined near the beginning of 8.3.2. A page can return one or more log parameters this record events defined by the parameter codes.

Table 87 defines the parameter codes for the error counter pages. Support of each log parameter is optional.

Parameter code	Description
0000h	Errors corrected without substantial delay
0001h	Errors corrected with possible delays
0002h	Total (e.g. rewrites or rereads)
0003h	Total errors corrected
0004h	Total times correction algorithm processed
0005h	Total bytes processed
0006h	Total bytes processed Total uncorrected errors
0007h - 7FFFh	Reserved
8000h - FFFFh	Vendor-specific

Table 87 - Parameter codes for error counter pages

NOTE 97 The exact definition of the error counters is not part of this standard. These counters should not be used to compare products because the products may define errors differently.

#### 8.3.2.3 Last n error events page

Log page (07h) provides for a number of error-event records using the list parameter format of the log page. The number of these error-event records supported, *n*, is device-specific. Each error-event record contains device-specific diagnostic information for a single error encountered by the device. The parameter code associated with error-event record indicates the relative time at which the error occurred. A higher parameter code indicates that the error event occurred later in time.

The content of the parameter value field of each log parameter is an ASCII character string which may describe the error event. The exact contents of the character string is not defined by this standard.

When the last supported parameter code is used by an error-event record, the recording on this page of all subsequent error information shall cease until one or more of the list parameters with the highest parameter codes have been reinitialized. If the RLEC bit of the control mode page (8.3.3.1) is set to one, the target shall return CHECK CONDITION status with the sense key set to RECOVERED ERROR and the additional sense code set to LOG LIST CODES EXHAUSTED. Alternatively, the target may report this condition via asynchronous event notification (see 7.5.5).

#### 8.3.2.4 Non-medium error page

This page (page code 06h) provides for summing the occurrences of recoverable error events other than write, read, or verify failures. No discrimination among the various types of events is provided by parameter code (see table 88). Vendor-specific discrimination may be provided through the vendor-specific parameter codes.

Parameter code	Description
0000h	Non-medium error count
0001h - 7FFFh	Reserved
8000h - FFFFh	Vendor-specific error counts

#### 8.3.2.5 Supported log pages

The supported log page (see table 89) returns the list of log pages implemented by the target. Targets that implement the LOG SENSE command shall implement this log page.

Table 89 -	Supported	log pages
------------	-----------	-----------

Bit Byte	7	6	5	4	3	2	1	0			
0	Reserved Page code (00h)										
1	Reserved										
2	(MSB)										
3	Page length (n-3)										
4											
n				Supported	l page lis	τ					

This page is not defined for the LOG SELECT command. This log page returns the list of supported log pages for the specified logical unit.

The page length field specifies the length in bytes of the following supported page list.

The supported page list field shall contain a list of all log page codes implemented by the target in ascending order beginning with page code 00h.

#### 8.3.3 Mode parameters

This subclause describes the block descriptors and the pages used with MODE SELECT and MODE SENSE commands that are applicable to all SCSI devices. Pages specific to each device type are described in the third subclause of each device-type clause (i.e. 9.3, 10.3, etc.).

The mode parameter list shown in table 90 contains a header, followed by zero or more block descriptors, followed by zero or more variable-length pages. Parameter lists are defined for each device type.

Bit Byte	7	6	5	4	3	2	1	0			
0 - n	Mode parameter header										
0 - n	Block descriptor(s)										
0 - n	Page(s)										

#### Table 90 - Mode parameter list

The six-byte command descriptor block parameter header is defined in table 91.

Table 91 - Mode parameter	header(6)
---------------------------	-----------

Bit Byte	7	6	5	4	3	2	1	0			
0	· /	Mode data length									
1	Medium type										
2		Device-specific parameter									
3				Block des	scriptor :	length					

The ten-byte command descriptor block parameter header is defined in table 92.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)			Nodo dat				
1	<u></u>			Mode data	a rength			(LSB)
2				Medium type				
3				Device-specific parameter				
4				Reserved				
5	***** <u>********************************</u>			Reserved				
6	(MSB)			Dlask da		1		
7				DIOCK Ges	scriptor	rength		(LSB)

#### Table 92 - Mode parameter header(10)

When using the MODE SENSE command, the mode data length field specifies the length in bytes of the following data that is available to be transferred. The mode data length does not include itself. When using the MODE SELECT command, this field is reserved.

NOTE 98 Targets that support more than 256 bytes of block descriptors and pages may need to implement ten-byte mode commands. The mode data length field in the six-byte command descriptor block header limits the returned data to 256 bytes.

Medium types are unique for each device type. Refer to the mode parameters clause of the specific device type for definition of these values. Some device types reserve this field.

The device specific parameter is unique for each device type. Refer to the mode parameters clause of the specific device type for definition of this field. Some device types reserve all or part of this field.

The block descriptor length specifies the length in bytes of all the block descriptors. It is equal to the number of block descriptors times eight, and does not include pages or vendor-specific parameters, if any, that may follow the last block descriptor. A block descriptor length of zero indicates that no block descriptors are included in the mode parameter list. This condition shall not be considered an error.

The mode parameter block descriptor is shown in table 93.

Bit Byte	7	6	5	4	3	2	1	0	
0	Density code								
1	(MSB)								
2				Number o	f blocks			<u> </u>	
3								(LSB)	
4				Reserved					
5	(MSB)								
6				Block le	ngth				
7				<u></u>			<b>1.</b>	(LSB)	

#### Table 93 - Mode parameter block descriptor

138

Block descriptors specify some of the medium characteristics for all or part of a logical unit. Support for block descriptors is optional. Each block descriptor contains a density code field, a number of blocks field, and a block length field. Block descriptor values are always current (i.e. saving is not supported). A unit attention condition (see 7.9) shall be generated when any block descriptor values are changed.

The density code field is unique for each device type. Refer to the mode parameters clause of the specific device type for definition of this field. Some device types reserve all or part of this field.

The number of blocks field specifies the number of logical blocks on the medium to which the density code and block length fields apply. A value of zero indicates that all of the remaining logical blocks of the logical unit shall have the medium characteristics specified.

NOTE 99 There may be implicit association between parameters defined in the pages and block descriptors. For directaccess devices, the block length affects the optimum values (the values that achieve best performance) for the sectors per track, bytes per physical sector, track skew factor, and cylinder skew factor fields in the format parameters page. In this case, the target may change parameters not explicitly sent with the MODE SELECT command. A subsequent MODE SENSE command would reflect these changes.

The number of remaining logical blocks may be unknown for some device types.

The block length specifies the length in bytes of each logical block described by the block descriptor. For sequential access devices, a block length of zero indicates that the logical block size written to the medium is specified by the transfer length field in the command descriptor block (see 10.2.4 and 10.2.14)

The mode page format is defined in table 94.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved		Page code	•			
1	Page length (n-1))							
2				Nodo pop	motone			
n				Mode para	ame cel'S			

#### Table 94 - Mode page format

Each mode page contains a page code, a page length, and a set of mode parameters. The page codes are defined in this subclause and in the mode parameter subclauses of the specific device type.

When using the MODE SENSE command, a parameters savable (PS) bit of one indicates that the mode page can be saved by the target in a non-volatile, vendor-specific location. A PS bit of zero indicates that the supported parameters cannot be saved. When using the MODE SELECT command, the PS bit is reserved.

The page code field identifies the format and parameters defined for that mode page. Some page codes are defined as applying to all device types and other page codes are defined for the specific device type.

When using the MODE SENSE command, if page code 00h (vendor-specific page) is implemented, the target shall return that page last in response to a request to return all pages (page code 3Fh). When using the MODE SELECT command, this page should be sent last.

The page length field specifies the length in bytes of the mode parameters that follow. If the initiator does not set this value to the value that is returned for the page by the MODE SENSE command, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST with the additional sense code set to INVALID FIELD IN PARAMETER LIST. The target is permitted to implement a mode page that is

less than the full page length defined in this standard, provided no field is truncated and the page length field correctly specifies the actual length implemented.

The mode parameters for each page are defined in the following subclauses, or in the mode parameters subclause for the specific device type. Mode parameters not implemented by the target shall be set to zero.

Table 95 defines the mode pages that are applicable to all device types that include the MODE SELECT and MODE SENSE commands.

Page code	Description	Subclause
0Ah 02h 09h 01h 03h - 08h 0Bh - 1Fh 00h 20h - 3Eh 3Fh	Control mode page Disconnect-reconnect page Peripheral device page (See specific device type) (See specific device type) (See specific device type) Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	8.3.3.1 8.3.3.2 8.3.3.3

Table 95 - Mode page codes

#### 8.3.3.1 Control mode page

The control mode page (see table 96) provides controls over several SCSI-2 features that are applicable to all devictypes such as tagged queuing, extended contingent allegiance, asynchronous event notification, and error logging

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved	Reserved Page code (OAh)					
1	Page length (06h)							
2	Reserved						RLEC	
3	Queue algorithm modifier Res					erved	QErr	DQue
4	EECA		Re	served		RAENP	UAAENP	EAENP
5				Reserved				
6	(MSB) Ready AEN holdoff period							
7				neauy AL	N HOLGON	i period		(LSB)

Table 96 - Control mode page

A report log exception condition (RLEC) bit of one specifies that the target shall report log exception conditions a described in 8.3.2. A RLEC bit of zero specifies that the target shall not report log exception conditions.

The queue algorithm modifier field (see table 97) specifies restrictions on the algorithm used for reordering command that are tagged with the SIMPLE QUEUE TAG message.

Value	Definition
0h	Restricted reordering
1h	Unrestricted reordering allowed
2h - 7h	Reserved
8h - Fh	Vendor-specific

Table 97 - Queue algorithm modifier

A value of zero in this field specifies that the target shall order the actual execution sequence of the commands with a SIMPLE QUEUE tag such that data integrity is maintained for that initiator. This means that, if the transmission of new commands is halted at any time, the final value of all data observable on the medium shall have exactly the same value as it would have if the commands had been executed in the same received sequence without tagged queuing. The restricted reordering value shall be the default value.

A value of one in this field specifies that the target may reorder the actual execution sequence of the commands with a SIMPLE QUEUE tag in any manner. Any data integrity exposures related to command sequence order are explicitly handled by the initiator through the selection of appropriate commands and queue tag messages.

A queue error management (QErr) bit of zero specifies that remaining suspended I/O process shall resume after the contingent allegiance condition or extended contingent allegiance condition (see 7.8).

A QErr bit of one specifies all remaining suspended I/O processes shall be aborted after the contingent allegiance condition or extended contingent allegiance condition (see 7.8). A unit attention condition (see 7.9) shall be generated for each initiator that had a suspended I/O process aborted except for the initiator that had the contingent allegiance condition. The target shall set the additional sense code to TAGGED COMMANDS CLEARED BY ANOTHER INITIATOR.

A disable queuing (DQue) bit of zero specifies that tagged queuing shall be enabled if the target supports tagged queuing. A DQue bit of one specifies that tagged queuing shall be disabled. Any queued commands for that I\_T\_x nexus shall be aborted. Any subsequent queue tag message received shall be rejected with a MESSAGE REJECT message and the I/O process shall be executed as an untagged command (see 7.8.1).

An enable extended contingent allegiance (EECA) bit of one specifies that extended contingent allegiance is enabled (see 7.7). An EECA bit of zero specifies that extended contingent allegiance is disabled.

The RAENP, UAAENP, and EAENP bits enable specific events to be reported via the asynchronous event notification protocol. When all three bits are zero, the target shall not create asynchronous event notifications.

A ready AEN permission (RAENP) bit of one specifies that the target may issue an asynchronous event notification upon completing its initialization sequence instead of generating a unit attention condition. A RAENP bit of zero specifies that the target shall not issue an asynchronous event notification upon completing its initialization sequence.

NOTE 100 If the target's default value for the RAENP bit is one and it does not implement saved parameters or include a hardware switch, then it may not be possible to disable the initialization sequence asynchronous event notification.

A unit attention AEN permission (UAAENP) bit of one specifies that the target may issue an asynchronous event notification instead of creating a unit attention condition upon detecting an event that would cause a unit attention condition (other than upon completing an initialization sequence). A UAAENP bit of zero specifies that the target shall not issue an asynchronous event notification instead of creating a unit attention condition.

An error AEN permission (EAENP) bit of one specifies that the target may issue an asynchronous event notification upon detecting a deferred error condition instead of waiting to report the deferred error on the next command. An EAENP bit of zero specifies that the target shall not report deferred error conditions via an asynchronous event notification.

The ready AEN holdoff period field specifies the minimum time in milliseconds after the target starts its initialization sequence that it shall delay before attempting to issue an asynchronous event notification. This value may be rounded up as defined in 7.5.4.

### 8.3.3.2 Disconnect-reconnect page

The disconnect-reconnect page (see table 98) provides the initiator the means to tune the performance of the SCS bus.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	Reserved		Page cod	e (02h)				
1				Page len	gth (OEh)	1. ( a			
2				Buffer f	ull ratio				
3				Buffer empty ratio					
4	(MSB)			Bus inco	+ivi+v li	mi+	·····	<del>.</del>	
5			Bus inactivity limit					(LSB)	
6	(MSB)		Disconnect time límit						
7								(LSB)	
8	(MSB)			Connect time limit					
9				oonneot	CING TIMT			(LSB)	
10	(MSB)			Novimum	burst siz	•			
11				Maximum	51 51 51Z	e		(LSB)	
12				Reserved			DTDC	;	
13	Reserved								
14				Reserved					
15				Reserved		-			

<b>T</b> -1-1-	~~	Discourse at an a summer at a	
rapie	39.	Disconnect-reconnect p	aqe

The buffer full ratio field indicates to the target, on read operations, how full the buffer should be prior to attempting a reselection. Targets that do not implement the requested ratio should round down to the nearest implemented ratio as defined in 7.5.4.

The buffer empty ratio field indicates to the target, on write operations, how empty the buffer should be prior to attempting a reselection. Targets that do not implement the requested ratio should round down to the nearest implemented ratio as defined in 7.5.4.

The buffer full and buffer empty ratios are numerators of a fractional multiplier that has 256 as its denominator. A value of zero indicates that the target determines when to initiate reselection consistent with the disconnect time limit parameter. These parameters are advisory to the target.

NOTE 101 As an example, consider a target with ten 512-byte buffers and a specified buffer full ratio of 3Fh. The formula is: INTEGER((ratio/256)\*number of buffers). Thus INTEGER((3Fh/256)\*10) = 2. The target should attempt to reselect the initiator on read operations whenever two or more buffers are full.

The bus inactivity limit field indicates the maximum time in 100  $\mu$ s increments that the target is permitted to assert the BSY signal without a REQ/ACK handshake. If the bus inactivity limit is exceeded the target shall attempt to disconnect if the initiator has granted the disconnect privilege (see 6.6.7) and it is not restricted by DTDC. This value may be rounded as defined in 7.5.4. A value of zero indicates that there is no bus inactivity limit.

The disconnect time limit field indicates the minimum time in 100  $\mu$ s increments that the target shall wait after releasing the SCSI bus before attempting reselection. This value may be rounded as defined in 7.5.4. A value of zero indicates that there is no disconnect time limit.

The connect time limit field indicates the maximum time in 100  $\mu$ s increments that the target is allowed to use the SCSI bus before disconnecting, if the initiator has granted the disconnect privilege (see 6.6.7) and it is not restricted by DTDC. This value may be rounded as defined in 7.5.4. A value of zero indicates that there is no connect time limit.

The maximum burst size field indicates the maximum amount of data that the target shall transfer during a data phase before disconnecting if the initiator has granted the disconnect privilege. This value is expressed in increments of 512 bytes (e.g. a value of one means 512 bytes, two means 1024 bytes, etc.). A value of zero indicates there is no limit on the amount of data transferred per connection.

The data transfer disconnect control (DTDC) field (see table 99) defines further restrictions on when a disconnect is permitted.

DTDC	Description
00b	Data transfer disconnect control is not used. Disconnect is controlled by the other fields in this page.
01b	A target shall not attempt to disconnect once the data transfer of a command has started until all data the command is to transfer has been transferred. The connect time limit and bus inactivity limit are ignored during the data transfer.
10b	Reserved
11b	A target shall not attempt to disconnect once the data transfer of a command has started, until the command is complete. The connect time limit and bus inactivity limit are ignored once data transfer has started.

Table 99 - Data transfer disconnect control

If DTDC is non-zero and the maximum burst size is non-zero, the target shall return CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to ILLEGAL FIELD IN PARAMETER LIST.

### 8.3.3.3 Peripheral device page

The peripheral device page (see table 100) is used to pass vendor-specific information between an initiator and  $\varepsilon$  peripheral interface below the target (i.e. between the target and the peripheral device). This standard does not define the format of this data, except to provide a standard header.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved		Page code	e (09h)			
1				Page leng	gth (n-1)			
2	(MSB)			Interface	idontiđ	ion		
3				Internace	e Ideurii	Tel		(LSB)
4		······································		Reserved				
5				Reserved				
6				Reserved				
7				Reserved	·`	·····		
8				Vendor-sp	ocific			
n				venuor-sp				

Table 100 - I	Peripheral	device	page
---------------	------------	--------	------

Interface identifier codes are defined in the table 101.

Table 101 - Interface i	identifier codes
-------------------------	------------------

Code value	Interface	ANSI/ISO Reference standard
0000h 0001h 0002h 0003h 0004h 0005h - 7FFFh 8000h - FFFFh	Small computer system interface Storage module interface Enhanced small device interface Intelligent peripheral interface-2 Intelligent peripheral interface-3 Reserved Vendor-specific	X3.131-1994 X3.91M-1987 X3.170A-1991 9318-2-1990 9318-3-1990 9318-4-1992

### 8.3.4 Vital product data parameters

This clause describes the optional vital product data page structure and the vital product data pages (see table 102) that are applicable to all SCSI devices. These pages are optionally returned by the INQUIRY command (8.2.5) and contain vendor-specific product information about a target or logical unit. The vital product data may include vendor identification, product identification, unit serial numbers, device operating definitions, manufacturing data, field replaceable unit information, and other vendor-specific information. This standard defines the structure of the vital product data, but not the contents.

144

Page code	Description	Subclause
82h 01h - 7Fh 81h 00h 80h 83h - BFh C0h - FFh	ASCII implemented operating definition page ASCII information page Implemented operating definition page Supported vital product data pages Unit serial number page Reserved Vendor-specific	8.3.4.1 8.3.4.2 8.3.4.3 8.3.4.3 8.3.4.4 8.3.4.5

Table 102 ·	Vital	product	data	page	codes
-------------	-------	---------	------	------	-------

# 8.3.4.1 ASCII implemented operating definition page

The ASCII implemented operation definition page (see table 103) contains operating definition description data for all operating definitions implemented by the target. The contents of this data is not defined by this standard.

Bit Byte	7	6	5	4	3	2	1	0				
0	Peripheral qualifier Peripheral device type											
1		Page code (82h)										
2		Reserved										
3	Page length (n-3)											
4	ASCII operating definition description length (m-4)											
5												
		ASCII operating definition description data ——										
m+1												
		ver	ndor-spec	ific descr	αε πρτιοη αε	ιτα						

Table 103 - ASCII implemented operating definition

The peripheral qualifier field and the peripheral device type field are as defined in 8.2.5.1.

The page length field specifies the length of the following page data. If the allocation length is less than the length of the data to be returned, the page length shall not be adjusted to reflect the truncation.

The ASCII operating definition description length field specifies the length in bytes of the ASCII operating definition description data that follows. If the allocation length is less than the length of data to be returned, the ASCII operating definition description length shall not be adjusted to reflect the truncation. A value of zero in this field indicates that no ASCII operating definition description data is available.

The ASCII operating definition description data field contains the ASCII operating definition description data for the target or logical unit. The data in this field shall be formatted in lines (or character strings). Each line shall contain only graphic codes (i.e. code values 20h through 7Eh) and shall be terminated with a NULL (00h) character.

# 8.3.4.2 ASCII information page

The ASCII information page (see table 104) returns information for the field replaceable unit code returned in the REQUEST SENSE data (see 8.2.14).

Bit Byte	7	6	5	4	3	2	1	0		
0	Periphe	ral quali	fier		Peripł	neral devi	ce type			
1	Page code (01h - 7Fh)									
2	Reserved									
3				Page length (n-3)						
4		ASCII length (m-4)								
5				ACOTT in	formation					
m				ASCII information						
m+1										
n				vendor-s	pecific i	nformatio.	n			

# Table 104 - ASCII information page

The peripheral qualifier field and the peripheral device type field are defined in 8.2.5.1.

The page code field contains the same value as in the page code field of the INQUIRY command descriptor block (see 8.2.5) and is associated with the field replaceable unit code returned by the REQUEST SENSE command.

NOTE 102 The field replaceable unit field in the sense data provides for 255 possible codes, while the page code field provides for only 127 possible codes. Thus it is not possible to return ASCII information pages for the upper code values.

The page length field specifies the length of the following page data. If the allocation length of the command descriptor block is too small to transfer all of the page, the page length shall not be adjusted to reflect the truncation.

The ASCII length field specifies the length in bytes of the ASCII information that follows. If the allocation length is less than the length of the data to be returned, the ASCII length shall not be adjusted to reflect the truncation. A value of zero in this field indicates that no ASCII information is available for the specified page code.

The ASCII information field contains ASCII information concerning the field replaceable unit identified by the page code. The data in this field shall be formatted in one or more lines (or character strings). Each line shall contain only graphic codes (i.e. code values 20h through 7Eh) and shall be terminated with a NULL (00h) character.

The contents of the vendor-specific information field is not defined in this standard.

# 8.3.4.3 Implemented operating definition page

The implemented operating definition page (see table 105) defines the current operating definition, the default operating definition, and the operating definitions implemented by the target. These operating definition values are specified in the CHANGE DEFINITION command (see 8.2.1).

146

Bit Byte	7	6	5	4	3	2	1	0			
0	Peripheral qualifier Peripheral device type										
1		Page code (81h)									
2		Reserved									
3		Page length (n-3)									
4	Reserved	Reserved Current operating definition									
5	SavImp	SavImp Default operating definition									
6	SavImp	SavImp Supported operating definition list									
n	SavImp	-	Supporte	u operali	.ng uerin.						

Table 105 - Implemented operating definition page

The peripheral qualifier field and the peripheral device type field are defined in 8.2.5.1.

The page length field specifies the length of the following operating definitions. If the allocation length of the command descriptor block is too small to transfer all of the page, the page length shall not be adjusted to reflect the truncation.

For each operating definition, there is an associated save implemented (SavImp) bit. A SavImp bit of zero indicates that the corresponding operating definition parameter cannot be saved. A SavImp bit of one indicates that the corresponding operating definition parameter can be saved.

All returned operating definitions use the codes defined in table 33. The current operating definition field returns the value of the present operating definition. If no operating definition is saved, the default operating definition field returns the value of the operating definition the target uses when power is applied. The supported operating definition list returns one or more operating definitions implemented by the target.

### 8.3.4.4 Supported vital product data pages

The supported vital product data pages are shown in table 106.

Bit Byte	7	6	5	4	3	2	1	0	
0	Periphe	ral qual:	ifier		Perip	heral devi	Lce type		
1		· · · · · · · · · · · · · · · · · · ·		Page coo	de (00h)				
2				Reserved					
3	Page length (n-3)								
4				Support	d page 1:	i e t	·····		
n				Supporte	ed page l:	191			

# Table 106 - Supported vital product data pages

The peripheral qualifier field and the peripheral device type field are defined in 8.2.5.1.

The page code field shall be set to the value of the page code field in the INQUIRY command descriptor block (see 8.2.5).

The page length field specifies the length of the supported page list. If the allocation length is too small to transfer all of the page, the page length shall not be adjusted to reflect the truncation.

The supported page list field shall contain a list of all vital product data page codes implemented for the target or logical unit in ascending order beginning with page code 00h.

### 8.3.4.5 Unit serial number page

This page (see table 107) provides a product serial number for the target or logical unit.

Bit Byte	7	6	5	4	3	2	1	0	
0	Peripher	ral quali	fier		Periph	eral devi	ce type		
1				Page coo	ie (80h)				
2	·			Reserved					
3				Page ler	ngth (n-3)				
4 	Product serial number -								

The peripheral qualifier field and the peripheral device type field are defined in 8.2.5.1.

The page length field specifies the length of the product serial number. If the allocation length is too small to transfer all of the page, the page length shall not be adjusted to reflect the truncation.

The product serial number field contains ASCII data that is vendor-specific. The least significant ASCII character of the serial number shall appear as the last byte of a successful data transfer. If the product serial number is not available, the target shall return ASCII spaces (20h) in this field.

# 9 Direct-access devices

# 9.1 Direct-access device model

Direct-access devices store blocks of data for later retrieval. Each block of data is stored at a unique logical block address. An initiator issues WRITE commands to store the blocks of data (write operations) and READ commands to retrieve the blocks of data (read operations). Other commands issued by the initiator may also cause write and read operations to occur. A write operation causes a block of data to be written on the medium. A read operatior causes a block of data to be read from the medium. A verify operation confirms that a block of data can be read without error from the medium.

Blocks of data are stored by a process that causes localized changes or transitions within the medium. The changes made to the medium to store the blocks of data may be volatile (i.e. not retained through a power cycle) or non volatile (retained through a power cycle). The medium may be divided in parts that are used for data blocks, parts that are reserved for defect management, and parts that are reserved for use by the controller for the management of the device.

### 9.1.1 Removable medium

The medium may be removable (e.g. used in a floppy disk drive) or non-removable (e.g. used in a hard disk drive) Removable medium is contained within a cartridge (or jacket) to prevent damage to the recording surfaces. The combination of medium and cartridge is often called a volume.

A volume has an attribute of being mounted or de-mounted on a suitable transport mechanism. A volume is mounted when the direct-access device is capable of performing write or read operations to the medium. A mounted volume may not be accessible by an initiator if it is reserved by another initiator. A volume is de-mounted at any other time (e.g. during loading, unloading, or storage).

An initiator may check whether a volume is mounted by issuing a TEST UNIT READY command. A volume that is loaded may need a START STOP UNIT command issued to become accessible for write or read operations.

The PREVENT ALLOW MEDIUM REMOVAL command allows an initiator to restrict the demounting of the volume This is useful in maintaining system integrity. If the direct-access device implements cache memory, it must ensure that all logical blocks of the medium contain the most recent data prior to permitting demounting of the volume. I the initiator issues a START STOP UNIT command to eject the cartridge, and the direct-access device is preventec from demounting by the PREVENT ALLOW MEDIUM REMOVAL command, the START STOP unit command is rejected by the direct-access device.

# 9.1.2 Logical blocks

Blocks of data are stored on the medium along with additional information that the controller uses to manage the storage and retrieval. The format of the additional information is unique and is hidden from the initiator during normal read or write operations. This additional information is often used to identify the physical location of the blocks or data and the address of the logical block, and to provide protection against the loss of the user data.

The address of the first logical block is zero. The address of the last logical block is [n-1], where [n] is the number of logical blocks available on the medium. A READ CAPACITY command may be issued to determine the value or [n-1]. If a command is issued that requests access to a logical block not within the capacity of the medium, the command is terminated with CHECK CONDITION.

The number of bytes of data contained in a logical block is known as the block length. Each logical block has a block length associated with it. The block length may be different for each logical block on the medium. However, in a typical device only one block length is used at a time. The block descriptor in the MODE SENSE data describes the block lengths that are used on the medium. A MODE SELECT command can be used to set up extents. Ar

extent is a specified number of logical blocks that have the specified block length. The FORMAT UNIT command is typically required to change the block length of devices that support variable block lengths and make the extents that were setup active.

The location of a logical block on the medium does not have a relationship to the location of any other logical block. However, in a typical device the logical blocks are located in an ascending order. The time to access the logical block at address [x] and then the logical block at address [x+1] need not be less than time to access [x] and then [x+100]. The READ CAPACITY with a PMI bit of one is useful in determining where longer access times occur.

#### 9.1.3 Ready state

A direct-access device is ready when medium access commands can be executed. A device using removable media is usually not ready until a volume is mounted. Such a device, with a volume not mounted, normally returns CHECK CONDITION status and sets the sense key to NOT READY.

Some direct-access devices may be switched from being ready to being not ready by using the START STOP UNIT command. An initiator may need to issue a START UNIT command to bring a device ready.

#### 9.1.4 Initialization

Many direct-access devices require initialization prior to write or read operations. This initialization is usually performed by a FORMAT UNIT command. Parameters related to the geometry and performance characteristics can be set with the MODE SELECT command prior to the format operation. Some devices are initialized by means not specified in this standard. The time at which this occurs is specific to the implementation of the direct-access device.

Devices using a non-volatile medium typically save the parameters and only need to be initialized once. However, some mode parameters may need to be initialized after each power-on and reset. A catastrophic failure of the direct-access device may require the FORMAT UNIT command to be reissued.

Devices that use a volatile medium may need to be initialized at each power-on prior to the execution of read or write operations. Mode parameters may also need initialization.

#### 9.1.5 Medium defects

Any medium has the potential for defects that can cause user data to be lost. Therefore, each logical block may contain information that allows the detection of changes to the user data caused by defects in the medium or other phenomena, and may also allow the data to be reconstructed following the detection of such a change. Some devices provide the initiator control through use of the mode parameters. Some devices allow the initiator to examine and modify the additional information by using the READ LONG and WRITE LONG commands. Some media having a very low probability of defects may not require these structures.

Defects may also be detected and managed during execution of the FORMAT UNIT command. The FORMAT UNIT command defines four sources of defect information. These defects may be reassigned or avoided during the initialization process so that they do not appear in a logical block.

Defects may also be avoided after initialization. The initiator issues a REASSIGN BLOCKS command to request that the specified logical block address be reassigned to a different part of the medium. This operation can be repeated if a new defect appears at a later time. The total number of defects that may be handled in this manner can be specified in the mode parameters.

Defect management on direct-access devices is usually vendor-specific. Devices not using a removable medium typically optimize the defect management for capacity or performance or both. Devices that use a removable medium typically do not support defect management (e.g. some floppy disk drives) or use defect management that is based on the ability to interchange the medium.

#### 9.1.6 Data cache

Some direct-access devices implement cache memory. A cache memory is usually an area of temporary storage in the direct-access device with a fast access time that is used to enhance performance. It exists separately from the blocks of data stored and is normally not directly accessible by the initiator. Use of cache memory for write or read operations typically reduces the access time to a logical block and can increase the overall data throughput.

During read operations, the direct-access device uses the cache memory to store blocks of data that the initiator may request at some future time. The algorithm used to manage the cache memory is not part of this standard. However, parameters are provided to advise the direct-access device about future requests, or to restrict the use of cache memory for a particular request.

During write operations, the direct-access device uses the cache memory to store data that is written to the medium at a later time. This is called a write-back caching algorithm. Thus the command may complete prior to blocks of data being written to the medium. As a result of using a write-back caching algorithm there is a period of time when the data may be lost if a power or a hardware failure occurs. There is also the possibility of an error occurring during the write operation. If an error occurred during the write, it may be reported as a deferred error on a later command. However, the initiator can request write-through caching to prevent these circumstances from arising.

When the cache memory fills up with blocks of data that are being kept for possible future access, new blocks of data that are to be kept must replace those currently in cache memory. The disable page out (DPO) bit is used to control replacement of logical blocks in the cache. For write operations, setting this bit to one advises the direct-access device to not replace existing blocks in the cache memory with the write data. For read operations, setting this bit to one causes blocks of data that are being read to not replace existing ones in the cache memory.

Sometimes the initiator may wish to have the blocks of data read from the medium instead of from the cache memory. The force unit access (FUA) bit is used to indicate that the direct-access device shall access the physical medium. For a write operation, setting FUA to one causes the direct-access device to complete the data write to the physical medium before completing the command. For a read operation, setting FUA to one causes the logical blocks to be retrieved from the physical medium.

When the DPO and FUA bits are both set to one, write and read operations bypass the cache memory.

When a VERIFY command is executed, a forced unit access is implied, since the blocks of data stored on the medium are being verified. Furthermore, a SYNCHRONIZE CACHE operation (see below) is also implied to write unwritten blocks of data still in the cache memory. These blocks of data must be stored on the medium before the verify operation can begin. The DPO bit is provided since the VERIFY command may cause the replacement of blocks in the cache. The above also applies to the WRITE AND VERIFY command.

Commands may be implemented by the direct-access device that allow the initiator to control other behaviour of the cache memory:

- LOCK UNLOCK CACHE controls whether certain logical blocks will be held in the data cache for future use. Locking a logical block prevents its replacement by a future access. Unlocking a logical block exposes it to possible replacement by a future access (see 9.2.2).
- PRE-FETCH causes a set of logical blocks requested by the initiator to be read into the data cache for possible future access. The blocks fetched are subject to later replacement unless they are locked (see 9.2.3).
- SYNCHRONIZE CACHE forces any pending write data in the requested set of logical blocks to be stored in the physical medium. This command can be used to ensure that the data was written and any errors reported (see 9.2.18).
- The MODE SELECT command defines a page for the control of cache behavior and handles certain basic elements of cache replacement algorithms (see 9.3.3.1).

#### 9.1.7 Reservations

The access enabled or access disabled condition determines when an initiator may store or retrieve user data on all or part of the medium. Access may be restricted for read operations, write operations, or both. This attribute may be controlled by an external mechanism or by the RESERVE and RELEASE commands (see 9.2.12 and 9.2.11).

The RESERVE and RELEASE commands define how different types of restricted access may be achieved, and to whom the access is restricted. This subclause describes the interaction of the initiator that requested the reservation, and the other initiators.

An initiator uses reservations to gain a level of exclusivity in access to all or part of the medium for itself or another initiator. It is expected that the reservation will be retained until released. The direct-access device must ensure that the initiator with the reservation is able to access the reserved media within the operating parameters established by that initiator.

The following paragraphs explain, on a command by command basis, the appropriate target response when a reservation exists. Unless otherwise noted, the appropriate response to an initiator that issues a command to a direct-access device that is reserved to another initiator is RESERVATION CONFLICT status.

The CHANGE DEFINITION command is dealt with as follows. If any initiator has an extent reservation on a directaccess device, no other initiator may affect the operating definition of that initiator by use of this command. If the direct-access device allows different operating definitions for each initiator, then there is no conflict; otherwise, a reservation conflict occurs.

The COMPARE, COPY, and COPY AND VERIFY commands are evaluated for reservation conflict as if they were normal write and read operations even when a direct-access device is requested to copy to or from itself. For example, if a COPY is issued to logical unit 0 that requests the direct-access device to copy from logical unit 0 to logical unit 1, access to logical unit 1 must also be evaluated for conflict.

The FORMAT UNIT, PREVENT ALLOW MEDIUM REMOVAL (with a prevent bit of one), REZERO UNIT, and START STOP UNIT commands return a RESERVATION CONFLICT status if any other initiator has an extent reservation on a direct-access device.

The INQUIRY and REQUEST SENSE commands are not affected by any kind of reservation.

The LOG SELECT, LOG SENSE, MODE SENSE, TEST UNIT READY, READ CAPACITY (PMI set to zero), READ BUFFER, WRITE BUFFER, and READ DEFECT DATA commands are not affected by extent reservations.

The SEEK, LOCK UNLOCK CACHE, PRE-FETCH, and SYNCHRONIZE CACHE commands are evaluated for reservation conflict as if they were normal write or read operations.

The MODE SELECT command is dealt with as follows. If an initiator has an extent reservation on a direct-access device, and another initiator attempts one of these commands, a reservation conflict occurs if the command affects the manner in which access of the extent by the first initiator is performed. If the command does not affect access to the extent, or parameters are saved for each initiator, then a conflict does not occur.

The SEND DIAGNOSTIC, RECEIVE DIAGNOSTIC RESULTS commands conflict with an extent reservation only if they affect access to the extent (as with MODE SELECT).

The REASSIGN BLOCKS command may not reassign a block that is in an extent reserved to another initiator.

The SET LIMITS command generates a reservation conflict if the logical blocks specified are within an extent reserved to another initiator.

ALL other commands are that request read or write operations are evaluated for reservation conflict as described in the RESERVE command.

When a system is integrated with more than one initiator, there must be agreement between the initiators as to how media is reserved and released during operations, otherwise, an initiator may be locked out of access to a target in the middle of an operation. For example, initiator 'A' has a write operation in progress to a direct-access device which has data stored in cache memory. Then, initiator 'B' issues a RESERVE command to the direct-access device. As a result, initiator 'A' is locked out of issuing a SYNCHRONIZE CACHE command to ensure the integrity of the data To prevent this from happening, initiator 'A' should issue a RESERVE prior to the write command.

## 9.1.8 Seek and rezero

The SEEK command provides a way for the initiator to position the device in preparation for access to a particular logical block at some later time. Since this positioning action is implicit in other commands, the SEEK command may not be useful with some direct-access devices.

The REZERO UNIT command is provided to bring the direct-access device to a known condition. This standard does not specify the condition. The REZERO UNIT command is used in some devices to position the actuator at cylinder zero. Some devices return GOOD status without attempting any action.

## 9.1.9 Notched drives

A notched (also called partitioned or zoned) drive has areas of the medium in which the drive geometry changes. In the simplest case, the entire medium consists of a single notch. Multiple notches are often used to increase capacity of the drive. The notch page is used to indicate the notch for assignment of values to the parameters in the format device page. By sequencing the notch page through each notch, the format device parameters of each notch are set. This is usually done prior to initialization by the FORMAT UNIT command.

## 9.1.10 Rotational position locking

Rotational position locking is an optional feature implemented in some direct-access devices to allow the synchronization of spindles between a number of devices. The rotational position offset feature allows devices to synchronize spindles at offsets from index. This may be useful in improving performance in systems that implement arrays of devices.

# 9.1.11 Relative addressing

Relative addressing is a technique useful in accessing structured data in a uniform manner. Relative addressing is only allowed when commands are linked. An example of relative addressing and linking for SEARCH DATA commands appropriate to direct-access devices is given in 7.4.3.

The SET LIMITS command is provided to define the limits of a linked chain of relative addressing commands. This gives an additional protection against exceeding a particular set of blocks. The SET LIMITS command has no effect on any other initiator.

# 9.1.12 Error reporting

If any of the following conditions occur during the execution of a command, the target shall return CHECK CONDITION status. The appropriate sense key and additional sense code should be set. The following list illustrates some error conditions and the applicable sense keys. The list does not provide an exhaustive enumeration of all conditions that may cause the CHECK CONDITION status.

<u>Condition</u> Invalid logical block address	<u>Sense key</u> ILLEGAL REQUEST
Unsupported option requested	ILLEGAL REQUEST
Target reset or medium change since last command from this initiator	UNIT ATTENTION

Self diagnostic failed	HARDWARE ERROR
Unrecovered read error	MEDIUM ERROR or HARDWARE ERROR
Recovered read error	RECOVERED ERROR
Overrun or other error that might be resolved by repeating the command	ABORTED COMMAND
Attempt to write on write protected medium	DATA PROTECT

In the case of an invalid logical block address, the sense data information field shall be set to the logical block address of the first invalid address.

In the case of an attempt to read a blank or previously unwritten block, the information field shall be set to the logical block address of the first blank block encountered. The data read up to that block shall be transferred (optical memory and write-once devices only).

In the case of an attempt to write a previously written block when blank checking is enabled, the information field shall be set to the logical block address of the first non-blank block encountered (optical memory and write-once devices only).

#### 9.1.13 Examples

The following examples show some typical variations of the direct-access device. Other variations are possible.

#### 9.1.13.1 Rotating media

The typical application of a direct-access device is a disk drive. The medium is a disk coated with a material in which flux changes may be induced. The disk drive allows direct and random access to the medium. This is done with an actuator that positions the read-write head, and a rotating disk. Data is stored and retrieved through the interaction of the read-write head and the disk.

The disk is typically divided into cylinders. Each cylinder is typically divided into tracks. Each track is typically divided into sectors. A cylinder is a set of tracks that can be accessed without movement of the actuator. A track is a recording path over which the read-write head travels during one rotation of the disk. A sector is a part of a track that contains the stored data blocks.

A logical block is stored in one or more sectors, or a sector may store more than one logical block. A sector is typically made up of a header, data and a trailer. The header contains a preamble used to synchronize read circuits to the data, an address field to identify the sector, flags to use for defect management, and a checksum that validates the header. The data contains the block of data. The trailer contains checksum or error correction information. The checksum or the error correction information allows the correction of data for medium defects.

A disk drive is ready when the disks are rotating at the correct speed and the read-write circuitry is powered and ready to access the disks. Some disks, particularly removable disks, require the user to issue load or start commands to bring the disk drive to the ready state.

A disk drive will typically have to be formatted prior to the initial access. Exceptions to this are drives that are formatted at the factory and some optical drives with pre-formatted media (see 13.1). A disk drive format will typically create the headers for each sector and initialize the data field. The MODE SELECT command is often used at format time to establish the geometry (number of heads and tracks, sectors per track, etc.) and defect management scheme. Disk drives are usually non-volatile.

The defect management scheme of a disk drive is often shielded from the user, though some aspects can be evaluated and controlled by the initiator. The direct-access device will usually reserve some sectors and tracks for recording defect lists and for reassigning defective blocks. The READ LONG and WRITE LONG commands will typically access the user data and checksum portions of the data field so that defects may be induced by the initiator to test the defect detection logic of the direct-access device.

Notches find their most typical use in a rotating disk drive. On a disk, the inner tracks are physically shorter than the outer tracks. As a result, if each track is made to store the same number of data bits, the data is packed more densely on the inner tracks than the outer tracks. By using notches, the outer tracks may be made to contain a different number of sectors than the inner tracks, while balancing the data density. This results in increased capacity

#### 9.1.13.2 Sequential media

Some tape devices are implemented as a direct access device so that they can be used in disk oriented operating system environments. These devices are sometimes referred to as random access tape or floppy tape. These devices might be thought of as a disk drive with one or more long tracks. Access time to a logical block is usually longer than for a disk drive, since the tape must be fast forwarded or rewound to the block. As a result, the SEEk command will often be more useful for a tape than for a disk. The only way an initiator may determine if a direct access device is a tape is by using the medium type code returned by the MODE SENSE command.

#### 9.1.13.3 Memory media

Memory media includes devices that are traditionally used for primary storage within computer systems, such as solic state static or dynamic random access memories (SRAM or DRAM), or magnetic core or bubble memory. These devices are typically non-mechanical, and therefore the entire physical medium may be accessed in virtually the same access time. The data is typically accessed as a bit or byte and this also speeds access time. Memory devices typically store less data than disks or tapes, and are usually volatile when not protected by battery backup.

# 9.2 Commands for direct-access devices.

The commands for direct-access devices shall be as shown in table 108.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY FORMAT UNIT INQUIRY LOCK UNLOCK CACHE LOG SELECT LOG SELECT LOG SENSE MODE SELECT(6) MODE SENSE(10) PRE-FETCH PREVENT ALLOW MEDIUM REMOVAL READ(6) READ BUFFER READ CAPACITY READ DEFECT DATA READ LONG REASSIGN BLOCKS RECEIVE DIAGNOSTIC RESULTS RELEASE REQUEST SENSE RESERVE REZERO UNIT SEARCH DATA EQUAL SEARCH DATA HIGH SEARCH DATA HIGH SEARCH DATA LOW SEEK(10) SEND DIAGNOSTIC SET LIMITS START STOP UNIT SYNCHRONIZE CACHE TEST UNIT READY VERIFY WRITE (6) WRITE AND VERIFY WRITE BUFFER WRITE LONG WRITE SAME Key: M = Command implementation is m	40h 39h 18h 3Ah 04h 12h 36h 4Ch 4Dh 15h 55h 1Ah 55h 1Ah 55h 28h 3Ch 28h 3Ch 28h 3Ch 3Fh 17h 03h 16h 01h 30h 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 28h 3Ch 3Fh 3Ch 28h 3Ch 3Fh 3Ch 3Fh 3Ch 3Fh 3Ch 3Fh 3Ch 3Ch 3Ch 3Ch 3Ch 3Ch 3Ch 3C	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	$\begin{array}{c} 8.2.1\\ 8.2.2\\ 8.2.3\\ 8.2.4\\ 9.2.5\\ 9.2.5\\ 9.2.6\\ 8.2.7\\ 8.2.9\\ 9.2.6\\ 8.2.7\\ 8.2.9\\ 9.2.6\\ 8.2.7\\ 8.2.9\\ 9.2.6\\ 9.2.6\\ 9.2.5\\ 9.2.6\\ 9.2.6\\ 9.2.2.7\\ 9.22.6\\ 9.22.7\\ 9.22.6\\ 9.22.10\\ 8.22.11\\ 9.22.14\\ 9.22.14\\ 9.22.14\\ 9.22.14\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.15\\ 9.22.16\\ 9.22.16\\ 9.22.16\\ 9.22.16\\ 9.22.12\\ 9.22.21\\ 2.16\\ 9.22.22\\ 8.22.22\\ 9.22.22\\ 8.22.27\\ 9.22.22\\ 9.22.22\\ 9.22.22\\ 9.22.22\\ 9.22.24\\ 9.24\\ $
0 = Command implementation is o	ptional.		

Table 108 -	Commands	for	direct-access	devices
-------------	----------	-----	---------------	---------

The following operation codes are vendor-specific: 02h, 05h, 06h, 09h, 0Ch, 0Dh, 0Eh, 0Fh, 10h, 11h, 13h, 14h, 19h, 20h, 21h, 22h, 23h, 24h, 26h, 27h, 29h, 2Ch, 2Dh and C0h through FFh. All remaining operation codes for direct-access devices are reserved for future standardization.

,

#### 9.2.1 FORMAT UNIT command

The FORMAT UNIT command (see table 109) formats the medium into initiator addressable logical blocks per the initiator defined options. In addition, the medium may be certified and control structures may be created for the management of the medium and defects. There is no guarantee that the medium has or has not been altered.

Bit Byte	7	6	5	4	3	2	1	0				
٥		Operation code (04h)										
1	Logical	Logical unit number FmtData CmpLst Defect list format										
2				Vendor-sp	pecific	,						
3	(MSB)			Intonloo								
4	<u></u>	Interleave (LSB)										
5				Control								

Table 109 - FORMAT UNIT command

The simplest mandatory form of the FORMAT UNIT command (with no format data) accomplishes medium formatting with little initiator control over defect management. The target implementation determines the degree of defect management that is to be performed. Two additional mandatory forms of this command increase the initiator's control over defect management. Several optional forms of this command further increase the initiator's control over defect management, by allowing the initiator to specify which defect list(s) are to be used, to specify defect locations (in several formats), to enable target certification, and to specify what to do in the event that defect lists are not accessible.

The FORMAT UNIT command shall be rejected with RESERVATION CONFLICT status if the logical unit is reserved, or any extent reservation, from any initiator, is active in the specified logical unit.

During the format operation, the target shall respond to commands as follows:

- a) In response to all commands except REQUEST SENSE and INQUIRY, the target shall return CHECK CONDITION status unless a reservation conflict exists, in which case RESERVATION CONFLICT status shall be returned.
- b) In response to the INQUIRY command, the target shall respond as commanded.
- c) In response to the REQUEST SENSE command, unless an error has occurred, the target shall return a sense ey of NOT READY and an additional sense code of LOGICAL UNIT NOT READY FORMAT IN PROGRESS, with the sense-key specific bytes set for progress indication (as described in 8.2.14.1). Refer to 8.2.14.2 for a description of deferred error handling that may occur during the format operation.

NOTE 103 It is recommended that MODE SELECT parameters (if any) be set prior to issuing the FORMAT UNIT command.

During the execution of the FORMAT UNIT command, the target may perform a medium defect management algorithm (which can be controlled by the initiator, using optional forms of this command). Four sources of defect location information (hereafter called defects) are defined as follows:

a) Primary defect list (Plist). This is the list of defects, usually supplied by the original manufacturer of the device or medium, that are considered permanent defects. The Plist is located outside of the initiator-accessible logical block space. The Plist is accessible by the target (to reference while formatting), but it is not normally accessible by the initiator except through the READ DEFECT DATA command. Once created, the original Plist shall not be subject to change.

- b) **Target certification list (Clist).** This list includes defects detected by the target during an optional certification process executed during the FORMAT UNIT command. This list shall be added to the Glist.
- c) Data defect list (Dlist). This list of defect descriptors may be supplied to the target by the initiator in the DATA OUT phase of the FORMAT UNIT command. This list shall be added to the Glist. The defect list length in the defect list header may be zero, in which case there is no Dlist.
- d) Grown defect list (Glist). The Glist includes all defects sent by the initiator or detected by the target. The Glist does not include the Plist. If the CmpLst bit is zero, the Glist shall include Dlists provided to the target during the previous and the current FORMAT UNIT commands. The Glist shall also include:
  - a) defects detected by the format operation during medium certification;
  - b) defects previously identified with a REASSIGN BLOCKS command;
  - c) defects previously detected by the target and automatically reallocated.

A format data (FmtData) bit of one indicates that the FORMAT UNIT parameter list (see table 110) shall be transferred during the DATA OUT phase. The DATA OUT phase consists of a defect list header (see table 111), followed by an initialization pattern descriptor, followed by zero or more defect descriptors. Each defect descriptor identifies a location on the medium that the target shall map out of the user-accessible area.

Bit Byte	7	6	5	4	3	2	1	0					
		Defect list header											
		Initialization pattern descriptor (if any)											
	Defect descriptor(s) (if any)												
0			(800	Defect d	escriptor	0 Jongth )							
n			(566	specific <sup>.</sup>	Labie Tor	iength.)							
				•	<u> </u>								
0													
n			(See	spectifc	TAPTE IOL	rengru.)							

Table 110 - FORMAT UNIT parameter list

The defect list header (see table 111) provides several optional format control bits. Targets that implement these bits give the initiator additional control over the use of the four defect sources, and the formatting operation. If the initiator attempts to select any function not implemented by the target, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN PARAMETER LIST.

Table 111 -	Defect	list he	ader
-------------	--------	---------	------

Bit Byte	7	6	5	4	3	2	1	0
0				Reserved				
1	FOV	DPRY	DCRT	STPF	IP	DSP	Immed	vs
2	(MSB)			D-6+ 14				·
3				Defect li	.st lengtr	1		(LSB)

A FmtData bit of zero indicates that a DATA OUT phase shall not occur. The source of defect information is no specified.

A complete list (CmpLst) bit of one indicates that the defect list sent by the initiator is a complete list of defects. An existing defect list except the Plist shall be ignored by the target. As a result, a new Glist is constructed that contains the Dlist (if it is sent by the initiator), and the Clist (if certification is enabled). The target may add any defects i detects during the format operation to this Dlist.

A CmpLst bit of zero indicates that the defect list sent by the initiator is an addition to the existing list of defects. As a result a new Glist is constructed that contains the existing Glist, the Dlist (if it is sent by the initiator), and the Clis (if certification is enabled). The target may add any defects it detects during the format operation to this Dlist.

Table 112 defines the implementation requirements for the FORMAT UNIT command.

		Defect list	Defect list							
FmtData	CmpLst	format	length	Туре	Comments					
0	0	000b	N/A	М	Vendor-specific					
				BLOCK I	FORMAT					
1 1 1	1 1 000b Zero M See notes (1) and (4) 1 0 000b >0 0 See notes (2) and (3)									
			BYTES F	ROM INC	DEX FORMAT					
1 1 1 1	1   1   100b   Zero   0   See notes (1) and (4) 1   0   100b   >0   0   See notes (2) and (3)									
			PHYSIC	AL SECT	OR FORMAT					
1 1 1	1   1   101b   Zero   0   See notes (1) and (4) 1   0   101b   >0   0   See notes (2) and (3)									
			VENDOF	R-SPECIF	FIC FORMAT					
1	0 1	110b 110b								
All re	maining	codes ar	re reserve	ed.						
Key:		mand impl mand impl								
2 A 3 L 4 D 5 A	<ol> <li>No Dlist is transferred to the target during the DATA OUT phase.</li> <li>A Dlist is transferred to the target during the DATA OUT phase. Add the Dlist defects to the new Glist.</li> <li>Use the existing Glist as a defect source. Add existing Glist defects to the new Glist.</li> <li>Discard the existing Glist. Do not add existing Glist defects to the new Glist.</li> </ol>									

Table 112 - FORMAT UNIT defect descriptor format and requirements

The defect list format field specifies which defect descriptor is used if the FmtData bit is one (see table 112).

160

The interleave field specifies the interleave that is used when performing the format operation. This allows the logical blocks to be related in a way that facilitates matching the transfer rate between the initiator and the peripheral. An interleave of zero specifies that the target use its default interleave. An interleave of one specifies that consecutive logical blocks be placed in contiguous ascending order. All other values are vendor-specific.

A format options valid (FOV) bit of zero indicates that the target shall use its default settings for the DPRY, DCRT, STPF, IP and DSP bits (see below). The initiator shall set these bits to zero. If any of these bits are not zero, the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN PARAMETER LIST.

A FOV bit of one indicates that the target shall examine the setting of the DPRY, DCRT, STPF, IP and DSP bits. When the FOV bit is one, the DPRY, DCRT, STPF, IP and DSP bits are defined as follows.

A disable primary (DPRY) bit of zero indicates that the target shall not use portions of the medium identified as defective in the primary defect Plist for initiator addressable logical blocks. If the target cannot locate the Plist or it cannot determine whether a Plist exists, it shall perform the action specified by the STPF bit. A DPRY bit of one indicates that the target shall not use the Plist to identify defective areas of the medium. The Plist is not deleted.

A disable certification (DCRT) bit of zero indicates that the target shall perform a vendor-specific medium certification operation to generate a Clist. A DCRT bit of one indicates that the target shall not perform any vendor-specific medium certification process or format verification operation while executing the FORMAT UNIT command.

The stop format (STPF) bit controls the behaviour of the target when one of the following events occurs:

- a) The target has been requested to use the primary defect list (DPRY is set to zero), or the grown defect list (CmpLst is set to zero) and the target cannot locate the list nor determine whether the list exists.
- b) The target has been requested to use the primary defect list (DPRY is set to zero) or the grown defect list (CmpLst is set to zero), and the target encounters an error while accessing the defect list.

A STPF bit of zero indicates that, if one or both of the above conditions occurs, the target shall continue to execute the FORMAT UNIT command. The target shall return CHECK CONDITION status at the completion of the FORMAT UNIT command. The sense key shall be set to RECOVERED ERROR and the additional sense code shall be set to either DEFECT LIST NOT FOUND if the first condition occurred, or DEFECT LIST ERROR if the second condition occurred.

A STPF bit of one indicates that, if one or both of the above conditions occurs, the target shall terminate the FORMAT UNIT command with CHECK CONDITION status. The sense key shall be set to MEDIUM ERROR and the additional sense code shall be set to either DEFECT LIST NOT FOUND if the first condition occurred, or DEFECT LIST ERROR if the second condition occurred.

NOTE 104 The use of the FmtData bit, the CmpLst bit, and the defect header allow the initiator to control the source of the defect lists used by the FORMAT UNIT command. Setting the defect list length to zero allows the initiator to control the use of Plist and Clist without having to specify a Dlist.

An initialization pattern (IP) bit of one indicates that an initialization pattern descriptor (see 9.2.1.2) is included in the FORMAT UNIT parameter list immediately following the defect list header. An IP bit of zero indicates that an initialization pattern descriptor is not included and that the target shall use its default initialization pattern.

A disable saving parameters (DSP) bit of one specifies that the target shall not save the MODE SELECT savable parameters to non-volatile memory during the format operation. A DSP bit of zero specifies that the target shall save all the MODE SELECT savable parameters for all initiators to non-volatile memory during the format operation. Pages that are not reported as savable are not affected by the DSP bit (i.e. if pages 03h & 04h are not returned with the PS bit set they may be saved even if DSP is cleared).

An immediate (Immed) bit of zero indicates that status shall be returned after the format operation has completed. An Immed bit value of one indicates that the target shall return status as soon as the command descriptor block has been validated, and the entire defect list has been transferred.

The bit designated VS is vendor-specific.

The defect list length field in the defect list header specifies the total length in bytes of the defect descriptors that follow and does not include the initialization pattern descriptor or initialization pattern, if any. The length of the defect descriptors varies with the format of the defect list. The three formats for the defect descriptor(s) field in the defect lists are shown in 9.2.1.1.

## 9.2.1.1 Defect list formats

This clause describes the defect list formats used in the FORMAT UNIT, READ DEFECT DATA and translate page of the SEND DIAGNOSTIC and RECEIVE DIAGNOSTIC RESULTS commands.

NOTE 105 The selected reporting format accounts for variables that impact the information in the returned data. For example, the specific location of a defect, while constant in angular and radial location on the device, may change in reported location a format operation with different geometry parameters is performed. It is the responsibility of the initiator to use a defect list format appropriate for the intended operation with the current or future geometry parameters. If the target is able to detect that the selected defect list format would provide inconsistent results, the target may return CHECK CONDITION status.

Each block format defect descriptor (see table 113) specifies a four-byte defective block address that contains the defect.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)		Det	fective bl	Lock addre	ess		(100)
3								(LSB)

#### Table 113 - Defect descriptor - Block format

The defect list length is equal to four times the number of defect descriptors.

The defect descriptors should be in ascending order. More than one physical or logical block may be affected by each defect descriptor. A target may return CHECK CONDITION if the defect descriptors are not in ascending order.

Each byte from index defect descriptor (see table 114) specifies the location of a defect that is no more than eight bytes long.

Bit Byte	7	6	5	4	3	2	1	0			
0 2	(MSB)	(MSB) Cylinder number of defect (LSB)									
3		Head number of defect									
4	(MSB)			Defect by	/tes from	index		(LSB)			

Table 114 - Defect descriptor - Bytes from index format

The defect list length is equal to eight times the number of defect descriptors.

Each descriptor is comprised of the cylinder number of defect, the head number of defect, and the defect bytes from index to the defect. The defect descriptors shall be in ascending order. The cylinder number of defect is the most significant part of the address and the defect bytes from index is the least significant part of the address. More than one physical or logical block may be affected by each defect. If the defect bytes from index has a value of FFFFFFFFh, this indicates that the entire track shall be considered defective.

Each physical sector defect descriptor (see table 115) specifies the location of a defect that is the length of a sector.

Bit Byte	7	6	5	4	3	2	1	0		
0 2	(MSB)	Cylinder number of defect(LSB								
3				Head num	ber of de	efect				
47	(MSB)									

Table 115 - Defect descriptor - Physical sector format

The defect list length is equal to eight times the number of defect descriptors.

Each descriptor is comprised of a cylinder number of defect, the head number of defect, and the defective sector number. The defect descriptors shall be in ascending order. The cylinder number of defect is the most significant part of the address and the defective sector number is the least significant part of the address. More than one block may be affected by each defect descriptor. A defective sector number of FFFFFFFh indicates that the entire track shall be considered defective.

#### 9.2.1.2 Initialization pattern option

The initialization pattern option specifies that the logical blocks contain the specified initialization pattern. The initialization pattern descriptor (see table 116) is sent to the target as part of the FORMAT UNIT parameter list.

Bit Byte	7	6	5	4	3	2	1	0	
0	IP modifier Reserved								
1	Pattern type								
2	(MSB)								
3		/ Initialization pattern length(LSB							
4	Initialization pattern								
n									

Table 116 - Initialization pat	tern descriptor
--------------------------------	-----------------

NOTE 106 The initialization pattern option is not intended for media analysis or certification. This option may only initialize the initiator accessible area of the media to the specified pattern and may not write to any initiator inaccessible areas of the disk.

The IP modifier field specifies the type and location of a header that modifies the initialization pattern (see table 117)

IP modifier	Description
00b	No header. The target shall not modify the initialization pattern.
01b	The target shall overwrite the initialization pattern to write the logical block address in the first four bytes of the logical block. The logical block address shall be written with the most significant byte first.
10b	The target shall overwrite the initialization pattern to write the logical block address in the first four bytes of each physical block contained within the logical block. The The lowest numbered logical block or part thereof that occurs within the physical block is used. The logical block address shall be written with the most significant byte first.
11b	Reserved.

Table 117 - Initialization pattern modifier

The initialization pattern type field (see table 118) indicates the type of pattern the target shall use to initialize each logical block within the initiator accessible portion of the medium. All bytes within a logical block shall be written with the initialization pattern. The initialization pattern is modified by the IP modifier field as described in table 117.

Table 118	Initialization	pattern	type
-----------	----------------	---------	------

Initialization pattern type	Description
00h 01h 02h - 7Fh 80h - FFh	Use default pattern. (note 1) Repeat the initialization pattern as required to fill the logical block. (note 2) Reserved Vendor-specific
shall termina sense key sha sense code to 2) If the ir shall termina sense key sha	nitialization pattern length is not zero the target the the command with CHECK CONDITION status. The ll be set to ILLEGAL REQUEST and the additional o INVALID FIELD IN PARAMETER LIST. itialization pattern length is zero the target the the command with CHECK CONDITION status. The ll be set to ILLEGAL REQUEST and the additional o INVALID FIELD IN PARAMETER LIST.

The initialization pattern length field indicates the number of bytes contained in the initialization pattern. If the length exceeds the current logical block size the target shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN PARAMETER LIST. The pattern is modified by the IP modifier field.

# 9.2.2 LOCK UNLOCK CACHE command

The LOCK UNLOCK CACHE command (see table 119) requests that the target disallow or allow logical blocks within the specified range to be removed from the cache memory by the target's cache replacement algorithm. Locked logical blocks may be written to the medium when modified, but a copy of the modified logical block shall remain in the cache memory.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (36h)										
1	Logical	unit num	ber		Reserved	ł	Lock	RelAdr				
2	(MSB)											
3				Logical								
4				LUGICAL								
5								(LSB)				
6				Reserved								
7	(MSB)			Number of blocks								
8												
9	Control											

Table 119 - LOCK UNLOCK CACHE command

A lock bit of one indicates that any logical block in the specified range that is currently present in the cache memory shall be locked into cache memory. Only logical blocks that are already present in the cache memory are actually locked. A lock bit of zero indicates that all logical blocks in the specified range that are currently locked into the cache memory shall be unlocked, but not necessarily removed.

A relative address (RelAdr) bit of one indicates that the logical block address field is a two's complement displacement. This negative or positive displacement shall be added to the logical block address last accessed on the logical unit to form the logical block address for this command. This feature is only available when linking commands. The feature requires that a previous command in the linked group have accessed a block of data on the logical unit.

A RelAdr bit of zero indicates that the logical block address field specifies the first logical block of the range of logical blocks to be operated on by this command.

The number of blocks specifies the total number of contiguous logical blocks within the range. A number of blocks field of zero indicates that all remaining logical blocks on the logical unit shall be within the range.

Multiple locks may be in effect from more than one initiator. Locks from different initiators may overlap. An unlock of an overlapped area does not release the lock of another initiator.

#### 9.2.3 PRE-FETCH command

The PRE-FETCH command (see table 120) requests that the target transfer the specified logical blocks to the cache memory. No data shall be transferred to the initiator.

Bit Byte	7	6	5	4	3	2	1	0			
0				Operatio	n code (3	4h)					
1	Logical	Logical unit number Reserved Immed									
2	(MSB)	<u></u>									
3		Logical block address									
4				LOGICAL	JIOCK AUG	ress					
5								(LSB)			
6				Reserved				<u></u>			
7	(MSB)			Transfor	length						
8	Transfer length							(LSB)			
9			*****	Control							

Table	120 -	<b>PRE-FETCH</b>	command
-------	-------	------------------	---------

An immediate (Immed) bit of one indicates that status shall be returned as soon as the command descriptor block has been validated. An Immed bit of zero indicates that status shall be returned after the operation is complete.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The transfer length field specifies the number of contiguous logical blocks of data that shall be transferred to the target's cache memory. A transfer length of zero indicates that the contiguous logical blocks up to and including the last logical block of the logical unit shall be transferred to the target's cache memory. Any other value indicates the number of logical blocks that shall be transferred. The target may elect to not transfer logical blocks that already are contained in the cache memory.

If the Immed bit is zero and the specified logical blocks were successfully transferred to the cache memory, the target shall return CONDITION MET status. If the link bit (see 7.2.7) is one, the target shall return INTERMEDIATE-CONDITION MET status.

If Immed is one, and the unlocked cache memory has sufficient capacity to accept all of the specified logical blocks, the target shall return CONDITION MET status. If the link bit (see 7.2.7) is one, the target shall return INTERMEDIATE-CONDITION MET status.

If immed is one, and the unlocked cache memory does not have sufficient capacity to accept all of the specified logical blocks, the target shall return GOOD status. The target shall transfer to cache memory as many logical blocks as will fit. If the link bit (see 7.2.7) is one, the target shall return INTERMEDIATE status.

# 9.2.4 PREVENT ALLOW MEDIUM REMOVAL command

The PREVENT ALLOW MEDIUM REMOVAL command (see table 121) requests that the target enable or disable the removal of the medium in the logical unit. This mechanism is independent of device reservations and the target shall not allow medium removal if any initiator currently has medium removal prevented.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (1Eh)									
1	Logical	unit num	per	Reserved						
2	Reserved									
3				Reserved						
4	Reserved Pre						Prevent			
5	Control									

# Table 121 - PREVENT ALLOW MEDIUM REMOVAL command

The prevention of medium removal shall begin when any initiator issues a PREVENT ALLOW MEDIUM REMOVAL command with a prevent bit of one (medium removal prevented). The prevention of medium removal for the logical unit shall terminate:

- a) after all initiators that have medium removal prevented issue PREVENT ALLOW MEDIUM REMOVAL commands with a prevent bit of zero, and the target has successfully performed a synchronize cache operation;
- b) upon the receipt of a BUS DEVICE RESET message from any initiator; or
- c) upon a hard RESET condition.

While a prevention of medium removal condition is in effect the target shall inhibit mechanisms that normally allow removal of the medium by an operator.

## 9.2.5 READ(6) command

The READ(6) command (see table 122) requests that the target transfer data to the initiator. The most recent data value written in the addressed logical block shall be returned.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (08h)									
1	Logical unit number (MSB)									
2	Logical block address									
3								(LSB)		
4	Transfer length									
5	Control									

Table	122 -	READ(6	) command
-------	-------	--------	-----------

The cache control bits (see 9.2.6) are not provided for this command. Targets with cache memory may have values for the cache control bits that affect the READ(6) command; however, no default value is defined by this standard. If explicit control is required, the READ(10) command should be used.

The logical block address field specifies the logical block at which the read operation shall begin.

The transfer length field specifies the number of contiguous logical blocks of data to be transferred. A transfer length of zero indicates that 256 logical blocks shall be transferred. Any other value indicates the number of logical blocks that shall be transferred.

# 9.2.6 READ(10) command

The READ(10) command (see table 123) requests that the target transfer data to the initiator. The most recent data value written in the addressed logical block shall be returned.

Bit Byte	7	6	5	4	3	2	1	0		
0				Operatio	n code (2	8h)				
1	Logical unit number DPO FUA Reserved							RelAdr		
2	(MSB)				<u></u>					
3	Logical block address									
4				Logical	ртоск ада	ress				
5								(LSB)		
6				Reserved						
7	(MSB)			Trenefer	1 - n ath					
8	Transfer length							(LSB)		
9				Control			····			

#### Table 123 - READ(10) command

A disable page out (DPO) bit of one indicates that the target shall assign the logical blocks accessed by this command the lowest priority for being fetched into or retained by the cache. A DPO bit of one overrides any retention priority specified in the cache page (see 9.3.3.1). A DPO bit of zero indicates the priority shall be determined by the retention priority fields in the cache page. All other aspects of the algorithm implementing the cache memory replacement strategy are not defined by this standard.

NOTE 107 The DPO bit is used to control replacement of logical blocks in the cache memory when the host has information on the future usage of the logical blocks. If the DPO bit is set to one, the host knows the logical blocks accessed by the command are not likely to be accessed again in the near future and should not be put in the cache memory nor retained by the cache memory. If the DPO bit is zero, the host expects that logical blocks accessed by this command are likely to be accessed again in the near future.

A force unit access (FUA) bit of one indicates that the target shall access the media in performing the command prior to returning GOOD status. Read commands shall access the specified logical blocks from the media (i.e. the data is not directly retrieved from the cache). In the case where the cache contains a more recent version of a logical block than the media, the logical block shall first be written to the media. Write commands shall not return GOOD status until the logical blocks have actually been written on the media (i.e. the data is not write cached).

An FUA bit of zero indicates that the target may satisfy the command by accessing the cache memory. For read operations, any logical blocks that are contained in the cache memory may be transferred to the initiator directly from the cache memory. For write operations, logical blocks may be transferred directly to the cache memory. GOOD status may be returned to the initiator prior to writing the logical blocks to the medium. Any error that occurs after the GOOD status is returned is a deferred error, and information regarding the error is not reported until a subsequent command.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The transfer length field specifies the number of contiguous logical blocks of data that shall be transferred. A transfer length of zero indicates that no logical blocks shall be transferred. This condition shall not be considered an error. Any other value indicates the number of logical blocks that shall be transferred.

#### 9.2.7 READ CAPACITY command

The READ CAPACITY command (see table 124) provides a means for the initiator to request information regarding the capacity of the logical unit.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (2	5h)		
1	Logical	unit num	ber			RelAdr		
2	(MSB)							
3	Logical block address							
4								
5								(LSB)
6				Reserved				
7				Reserved				
8				Reserved	PMI			
9				Control				

#### **Table 124 - READ CAPACITY command**

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale\_2016-08-03 20:34:04 UTC

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The logical block address shall be zero if the PMI bit is zero. If the PMI bit is zero and the logical block address in not zero, the target shall return a CHECK CONDITION status, the sense key shall be set to ILLEGAL REQUEST an the additional sense code set to ILLEGAL FIELD IN CDB.

A partial medium indicator (PMI) bit of zero indicates that the returned logical block address and the block length i bytes are those of the last logical block on the logical unit.

A PMI bit of one indicates that the returned logical block address and block length in bytes are those of the logical block address after which a substantial delay in data transfer will be encountered. This returned logical block address shall be greater than or equal to the logical block address specified by the RelAdr and logical block address field in the command descriptor block.

NOTE 108 This function is intended to assist storage management software in determining whether there is sufficient space on the current track, cylinder, etc., to contain a frequently accessed data structure, such as a file directory or file index, without incurring an access delay.

The READ CAPACITY data (see table 125) shall be sent during the DATA IN phase of the command.

Bit Byte	7	6	5	4	3	2	1	0
0 3	(MSB)	Returned logical block address – (LSE						
4 7	(MSB)	Block length In bytes						(LSB)

# Table 125 - READ CAPACITY data

#### 9.2.8 READ DEFECT DATA command

The READ DEFECT DATA command (see table 126) requests that the target transfer the medium defect data to the initiator.

Bit Byte	7	6	5	4	3	2	1	0		
0				Operation	n code (3	37h)				
1	Logical	unit numi	per	Reserved						
2		Reserved	d	Plist	Glist	Defect	list form	at		
3	Reserved									
4				Reserved						
5				Reserved						
6				Reserved						
7	(MSB)									
8				Allocation length				(LSB)		
9				Control			<u>.</u>			

Table 126 - READ DEFECT DATA command

If the target is unable to access any medium defect data, it shall terminate the command with CHECK CONDITION status. The sense key shall be set to either MEDIUM ERROR, if a medium error occurred, or NO SENSE, if the list does not exist; and the additional sense code shall be set to DEFECT LIST NOT FOUND.

NOTE 109 Some targets may not be able to return medium defect data until after a FORMAT UNIT command has been completed successfully.

A primary defect list (Plist) bit of one request that the target return the primary list of defects. A Plist bit of zero requests that the target not return the primary list of defects.

A grown defect list (Glist) bit of one request that the target return the grown defect list. A Glist bit of zero requests that the target not return the grown defect list.

A Plist bit of one and a Glist bit of one requests that the target return the primary and the grown defect lists. The order in which the lists are returned is vendor-specific. Whether the lists are merged or not is vendor-specific.

A Plist bit of zero and a Glist bit of zero requests that the target return only the defect list header.

The defect list format field is used by the initiator to indicate the preferred format for the defect list. This field is intended for those targets capable of returning more than one format, as defined in the FORMAT UNIT command (see 9.2.1.2, defect list format). A target unable to return the requested format shall return the defect list in its default format (see the defect list format field in the defect list header below).

If the requested defect list format and the returned defect list format are not the same, the target shall transfer the defect data and then terminate the command with CHECK CONDITION status. The sense key shall be set to RECOVERED ERROR and the additional sense code shall be set to DEFECT LIST NOT FOUND.

The READ DEFECT DATA defect list (see table 127) contains a four-byte header, followed by zero or more defect descriptors.

Bit Byte	7	6	5	4	3	2	1	0		
0				Reserved						
1		Reserved Plist Glist Defect list format								
2	(MSB)	(MSB) Defect list length								
3		(LSB)								
		Defect descriptor(s) (if any)								
0		Defect descriptor 0								
n				00001110		rengent)				
0			(500	Defect d specific	escriptor	x length )				
n										

## Table 127 - READ DEFECT DATA defect list

A Plist bit of one indicates that the data returned contains the primary defect list. A Plist bit of zero indicates that the data returned does not contain the primary defect list.

A Glist bit of one indicates that the data returned contains the grown defect list. A Glist bit of zero indicates that the data returned does not contain the grown defect list.

The defect list format field indicates the format of the defect descriptors returned by the target. This field is defined in the FORMAT UNIT command (see 9.2.1.2).

NOTE 110 The use of the block format is not recommended. There is no universal model that sensibly defines the meaning of the logical block address of a defect. In the usual case, a defect that has been reassigned no longer has a logical block address.

Defect descriptors returned in the block format are vendor-specific. Defect descriptors returned in the physical sector format may or may not include defects in areas not accessible to the initiator. Defect descriptors returned in bytesfrom-index format shall comprise a complete list of defects. A complete list of defects may include defects in areas not within the capacity returned in the READ CAPACITY command.

The defect list length field specifies the length in bytes of the defect descriptors that follow. The defect list length is equal to four or eight times the number of defect descriptors, depending on the format of the returned descriptors (see 9.2.1.1).

If the allocation length is insufficient to transfer all of the defect descriptors, the defect list length shall not be adjusted to reflect the truncation. The target shall not create CHECK CONDITION status. The initiator is responsible for comparing the defect list length and the allocation length to ensure that a partial list was not received.

NOTE 111 The initiator may determine the length of the defect list by sending the READ DEFECT DATA command with an allocation length of four. The target will return the defect list header that contains the length of the defect list.

The defect descriptors may or may not be sent in ascending order. The initiator may determine the exact number of defects by dividing the defect list length by the length of a single defect descriptor for the returned format.

# 9.2.9 READ LONG command

The READ LONG command (see table 128) requests that the target transfer data to the initiator. The data passed during the READ LONG command is vendor-specific, but shall include the data bytes and the ECC bytes recorded on the medium. The most recent data written in the addressed logical block shall be returned.

Bit Byte	7	6	5	4	3	2	1	0		
0		Operation code (3Eh)								
1	Logical unit number			Reserved CORR				RelAdr		
2	(MSB)									
3	Logical block address									
4										
5								(LSB)		
6				Reserved						
7	(MSB)			Byte tra	nsfer len	ath				
8				Byte transfer length (LS						
9	Control									

#### Table 128 - READ LONG command

NOTE 112 Any other bytes that can be corrected by ECC should be included (e.g. data synchronization mark within the area covered by ECC). It is not important for the ECC bytes to be at the end of the data bytes; however, they should be in the same order as they are on the media.

A corrected (CORRCT) bit of zero causes a logical block to be read without any correction made by the target. A CORRCT bit of one causes the data to be corrected by ECC before being transferred to the initiator.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The byte transfer length field should specify exactly the number of bytes of data that are available for transfer. If a non-zero byte transfer length does not exactly match the available data length, the target shall terminate the command with CHECK CONDITION status, the sense key shall be set to ILLEGAL REQUEST and an additional sense code set to INVALID FIELD IN CDB. The valid and ILI bits shall be set to one and the information field shall be set to the difference (residue) of the requested length minus the actual length in bytes. Negative values shall be indicated by two's complement notation.

A byte transfer length of zero indicates that no bytes shall be transferred and shall not be considered an error.

# 9.2.10 REASSIGN BLOCKS command

The REASSIGN BLOCKS command (see table 129) requests the target to reassign the defective logical blocks to another area on the medium set aside for this purpose. The target should also record the location of the defective logical blocks to the grown defect list if such a list is supported. More than one physical or logical block may be relocated by each defect descriptor sent by the initiator. This command does not alter the contents or location of the Plist (see 9.2.1, FORMAT UNIT command).

Bit Byte	7	6	5	4	3	2	1	0		
0		Operation code (07h)								
1	Logical	unit num	ber	Reserved						
2	Reserved									
3				Reserved						
4				Reserved						
5	Control									

The initiator transfers a defect list that contains the logical block addresses to be reassigned. The target shall reassign the physical medium used for each logical block address in the list. The data contained in the logical blocks specified in the defect list may be altered, but the data in all other logical blocks on the medium shall be preserved.

NOTE 113 The effect of specifying a logical block to be reassigned that previously has been reassigned is to reassign the block again. Over the life of the medium, a logical block can be assigned to multiple physical addresses until no more spare locations remain on the medium.

The REASSIGN BLOCKS defect list (see table 130) contains a four-byte header followed by one or more defect descriptors. The length of each defect descriptor is four bytes.

Table 130 - REASSIGN B	BLOCKS defect list
------------------------	--------------------

Bit Byte	7	6	5	4	3	2	1	0		
0		Reserved								
1		Reserved								
2	(MSB)	SB) Defect list length (LSB)								
3										
	Defect descriptor(s)									
0	(MSB)		De	fect logi	cal block	address				
3								(LSB)		
	•									
0 3	(MSB)		De	fect logi	cal block	address		(LSB)		

The defect list length field specifies the total length in bytes of the defect descriptors that follow. The defect list length is equal to four times the number of defect descriptors and does not include the defect list header length.

The defect descriptor specifies a four-byte defect logical block address that contains the defect. The defect descriptors shall be in ascending order.

If the logical unit has insufficient capacity to reassign all of the logical blocks specified in the defect descriptors, the command shall terminate with CHECK CONDITION status, the sense key shall be set to HARDWARE ERROR and the additional sense code set to NO DEFECT SPARE LOCATION AVAILABLE.

If the logical unit is unable to successfully complete a REASSIGN BLOCKS command, the command shall terminate with CHECK CONDITION status with the appropriate sense information. The logical block address of the first defect descriptor not reassigned shall be returned in the command-specific information field of the sense data. If information about the first defect descriptor not reassigned is not available, or if all the defects have been reassigned, this field shall be set to FFFFFFFh.

If the REASSIGN BLOCKS command failed due to an unexpected unrecoverable read error that would cause the loss of data in a block not specified in the defect list, the logical block address of the unrecoverable block shall be returned in the information field of the sense data and the valid bit shall be set to one.

NOTE 114 If the REASSIGN BLOCKS command returns CHECK CONDITION status and the sense data command-specific information field contains a valid logical block address, the initiator should remove all defect descriptors from the defect list prior to the one returned in the command-specific information field. If the sense key is MEDIUM ERROR and the valid bit is one (the information field contains the valid block address) the initiator should insert that new defective logical block address into the defect list and reissue the REASSIGN BLOCKS command with the new defect list. Otherwise, the initiator should perform any corrective action indicated by the sense data and then reissue the REASSIGN BLOCKS command with the new defect list.

# 9.2.11 RELEASE command

The RELEASE command (see table 131) is used to release a previously reserved logical unit, or, if the extent release option is implemented, to release previously reserved extents within a logical unit.

Bit Byte	7	6	5	4	3	2	1	0		
0		Operation code (17h)								
1	Logical unit number			3rdPty	y Third party device ID Exte					
2	Reservation identification									
3				Reserved						
4	Reserved									
5	Control									

#### Table 131 - RELEASE command

The RESERVE and RELEASE commands provide the basic mechanism for contention resolution in multiple-initiator systems. A reservation may only be released by the initiator that made it. It is not an error for an initiator to attempt to release a reservation that is not currently valid, or is held by another initiator. In this case, the target shall return GOOD status without altering any other reservation.

NOTE 115 The reservation queuing option in X3.131-1986 has been removed from SCSI-2.

#### 9.2.11.1 Logical unit release

Implementation of logical unit release is mandatory. If the extent bit is zero, this command shall cause the target to terminate all non-third-party logical unit and extent reservations that are active from the initiator to the specified logical unit. The reservation ID field in the command descriptor block is ignored by the target.

## 9.2.11.2 Extent release

Implementation of extent release is optional. If the extent bit is one and the extent release option is not implemented, then the RELEASE command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. This option shall be implemented if the extent reservation option (see 9.2.12.2) is implemented.

If the extent bit is one and the extent release option is implemented, this command shall cause any reservation from the requesting initiator with a matching reservation identification to be terminated. Other reservations from the requesting initiator shall remain in effect.

#### 9.2.11.3 Third-party release

Implementation of third-party release is mandatory. Third-party release allows an initiator to release a logical unit or extents within a logical unit that were previously reserved using third-party reservation (see 9.2.12.3). Third-party release shall be implemented and is intended for use in multiple-initiator systems that use the COPY command.

If the third-party (3rdPty) bit is zero, then a third-party release is not requested. If the 3rdPty bit is one then the target shall release the specified logical unit or extents, but only if the reservation was made using a third-party reservation by the initiator that is requesting the release for the same SCSI device as specified in the third-party device ID field.

If the 3rdPty bit is one the target shall not modify the mode parameters for commands received from the third-party device even if the target implements the transfer of mode parameters with a third-party RESERVE command.

NOTE 116 If a target implements independent storage of mode parameters for each initiator, a third-party RESERVE command copies the current mode parameters for the initiator that sent the RESERVE command to the current mode parameters for the initiator specified as the third-party device (usually a copy master device). A unit attention condition notifies the third-party of the changed mode parameters due to the reservation. A successful third-party RELEASE command does not return the third-party devices' current mode parameters back to their previous values. The third-party device can issue MODE SENSE and MODE SELECT commands to query and modify the mode parameters.

176

# 9.2.12 RESERVE command

The RESERVE command (see table 132) is used to reserve a logical unit or, if the extent reservation option is implemented, extents within a logical unit.

Bit Byte	7	6	5	4	3	2	1	0		
0		Operation code (16h)								
1	Logical	. unit nur	nber	3rdPty	Third party device ID			Extent		
2		Reservation identification								
з	(MSB)									
4	Extent list length (LSB							(LSB)		
5	Control									

Table	132	RESERVE	command
-------	-----	---------	---------

The RESERVE and RELEASE commands provide the basic mechanism for contention resolution in multiple-initiator systems. The third-party reservation allows logical units or extents to be reserved for another specified SCSI device.

NOTE 117 The reservation queuing option in X3.131-1986 has been removed from SCSI-2.

#### 9.2.12.1 Logical unit reservation

Implementation of logical unit reservation is mandatory. If the extent bit is zero, this command shall request that the entire logical unit be reserved for the exclusive use of the initiator until the reservation is superseded by another valid RESERVE command from the initiator that made the reservation or until released by a RELEASE command from the same initiator that made the reservation, by a BUS DEVICE RESET message from any initiator, by a hard RESET condition, or by a power on cycle. A logical unit reservation shall not be granted if the logical unit or any extent is reserved by another initiator. It shall be permissible for an initiator to reserve a logical unit that is currently reserved by that initiator. If the extent bit is zero, the reservation identification and the extent list length shall be ignored.

If the logical unit, or any extent within the logical unit is reserved for another initiator, the target shall return RESERVATION CONFLICT status.

If, after honouring the reservation, any other initiator attempts to perform any command on the reserved logical unit other than an INQUIRY, REQUEST SENSE, PREVENT ALLOW MEDIUM REMOVAL (with a prevent bit of zero), or a RELEASE command the command shall be rejected with RESERVATION CONFLICT status.

#### 9.2.12.2 Extent reservation

Implementation of extent reservation is optional. The reservation identification field provides a means for an initiator to identify each extent reservation. This allows an initiator in a multiple tasking environment, to have multiple reservations outstanding. The reservation identification is used in the RELEASE command to specify which reservation is to be released. It is also used in superseding RESERVE commands to specify which reservation is to be superseded.

If the extent reservation option is implemented, then the extent release option (see 9.2.11.2) shall also be implemented. These options permit multiple extents within the logical unit to be reserved, each with a separate reservation type.

If the extent bit is one, and the extent reservation option is implemented, then the target shall process the reservation request as follows:

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resule.2016-06-03 20:34:04 UTC

- a) The extent list shall be checked for the number of extents in the reservation request. If the extent list length is zero, no current reservations shall be changed, no new reservations shall be created, and this condition shall not be treated as an error. If the extent list contains more extents than are supported on the logical unit, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. If the extent list contains more extents than are currently available on the logical unit, then the target shall return a RESERVATION CONFLICT status.
- b) The extent list shall be checked for valid extent logical block addresses. If any logical block address is invalid for this logical unit, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. The extent list shall be checked for invalid extent overlaps (as defined by reservation type) with other extent descriptors in the extent list and if invalid overlaps are found, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.
- c) If the requested reservation does not conflict with an existing reservation, the extents specified shall be reserved until superseded by another valid RESERVE command from the initiator that made the reservation or until released by a RELEASE command from the same initiator, by a BUS DEVICE RESET message from any initiator, or by a hard RESET condition. If either of the last two conditions occur, the next command from each initiator shall be terminated with CHECK CONDITION status and the sense key shall be set to UNIT ATTENTION.
- d) If the reservation request conflicts with an existing reservation, then the target shall return a RESERVATION CONFLICT status.

If the extent bit is one, and the extent reservation option is not implemented, then the RESERVE command shall be rejected with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

The size of the extent list shall be defined by the extent list length field. The extent list shall consist of zero or more descriptors as shown in table 133. Each extent descriptor defines an extent beginning at the specified logical block address for the specified number of blocks. If the number of blocks is zero, the extent shall begin at the specified logical block address and continue through the last logical block address on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0			
0		Reserved RelAdr Re									
1	(MSB)										
3			Number of blocks – (LSE								
4	(MSB)	······		l oni col	hlask od	dn					
7		Logical block address (LS									

Table 133 - Data format of extent descriptors

The reservation type field shall define the type of reservation in effect for the extent. The types of reservation are defined in table 134.

Table	134 -	Reservation	types
-------	-------	-------------	-------

Reservation type	Description
00b	Read shared
01b	Write exclusive
10b	Read exclusive
11b	Exclusive access

a) Read exclusive. While this reservation is active, no other initiator shall be permitted read operations to the indicated extent. This reservation shall not inhibit write operations from any initiator or conflict with a write

178

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS exclusive reservation; however, read exclusive, exclusive access, and read shared reservations that overlap this extent shall conflict with this reservation.

- b) Write exclusive. While this reservation is active, no other initiator shall be permitted write operations to the indicated extent. This reservation shall not inhibit read operations from any initiator or conflict with a read exclusive reservation from any initiator. This reservation shall conflict with write exclusive, exclusive access, and read shared reservations that overlap this extent.
- c) **Exclusive access.** While this reservation is active, no other initiator shall be permitted any access to the indicated extent. All reservation types that overlap this extent shall conflict with this reservation.
- d) Read shared. While this reservation is active, no write operations shall be permitted by any initiator to the indicated extent. This reservation shall not inhibit read operations from any initiator or conflict with a read shared reservation. Read exclusive, write exclusive, and exclusive access reservations that overlap with this extent shall conflict with this reservation.

If the relative address bit is one, the logical block address in the extent descriptor shall be treated as a two's complement displacement. This displacement shall be added to the logical block address last accessed on the logical unit to form the logical block address for this extent. This feature is only available when linking commands and requires that a previous command in the linked group has accessed a logical block on the logical unit; if not, the RESERVE command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

If an initiator attempts a command to a logical block that has been reserved and that access is prohibited by the reservation, the command shall not be performed and the command shall be terminated with a RESERVATION CONFLICT status. If a reservation conflict precludes any part of the command, none of the command shall be performed. COPY commands shall be terminated with CHECK CONDITION status and the sense key shall be set to DATA PROTECT if any part of the copy operation is prohibited by an active reservation. If any extent in a logical unit is reserved in any way, by any initiator, a FORMAT UNIT command shall be rejected with a RESERVATION CONFLICT status.

#### 9.2.12.3 Third-party reservation

Implementation of third-party reservation is mandatory. The third-party reservation for the RESERVE command allows an initiator to reserve a logical unit or extents within a logical unit for another SCSI device. This is intended for use in multiple-initiator systems that use the COPY command. Third-party reservation is required.

If the third-party (3rdPty) bit is zero, then a third-party reservation is not requested. If the 3rdPty bit is one then the target shall reserve the specified logical unit or extents for the SCSI device specified in the third-party device ID field. The target shall preserve the reservation until it is superseded by another valid RESERVE command from the initiator that made the reservation or until it is released by the same initiator, by a BUS DEVICE reset message from any initiator, or a hard reset condition. The target shall ignore any attempt to release the reservation made by any other initiator.

If independent sets of parameters are implemented, a third party reservation shall cause the target to transfer the set of parameters in effect for the initiator of the RESERVE command to the parameters used for commands from the third party device. Any subsequent command issued by the third-party device is executed according to the mode parameters in effect for the initiator that sent the RESERVE command.

NOTE 118 This transfer of the mode parameters is applicable to target devices which store mode information independently for different initiators. This mechanism allows an initiator to set the mode parameters of a target for the use of a copy master (i.e. the third-party device). The third-party copy master may subsequently issue a MODE SELECT command to modify the mode parameters.

#### 9.2.12.4 Superseding reservations

Implementation of superseding reservations is mandatory. An initiator that holds a current reservation (unit or extent) may modify that reservation by issuing another RESERVE command (unit or extent) to the same logical unit. The superseding RESERVE command shall release the previous reservation state (unit or extent) when the new reservation request is granted. If the superseding reservation is for an extent reservation and the current reservation is also an extent reservation, the current extent reservation identification value is used for the superseding reservation. The current reservation shall not be modified if the superseding reservation request cannot be granted. If the superseding reservation servation request cannot be granted because of conflicts with a previous reservation (other than the reservation being superseded), then the target shall return RESERVATION CONFLICT status.

NOTE 119 Superseding reservations allow the SCSI device ID to be changed on a reservation using the third-party reservation option. This capability is necessary for certain situations when using COMPARE, COPY, and COPY AND VERIFY commands.

## 9.2.13 REZERO UNIT command

The REZERO UNIT command (see table 135) requests that the target set the logical unit to a specific state. See vendor specifications for details.

Bit Byte	7	6	5	4	3	2	1	0			
0		Operation code (01h)									
1	Logical unit number Reserved										
2	Reserved										
3				Reserve	d		······································				
4	Reserved										
5	Control										

# Table 135 - REZERO UNIT command

## 9.2.14 SEARCH DATA commands

The SEARCH DATA commands (see table 136) search one or more logical blocks for equality or inequality to a data pattern. The concept of records within a logical block is used to allow multiple records within a logical block to be searched.

Bit Byte	7	6	5	4	3	2	1	0				
0	Operation code (31h 30h 32h)											
1	Logical	unit num	ber	Invert	Reserved SpnDat			RelAdr				
2	(MSB)											
3				Logical H								
4				LUGIUAI								
5								(LSB)				
6				Reserved								
7	(MSB)			Number of	umber of blocks to search							
8				Number of		(LSB)						
9				Control								

#### Table 136 - SEARCH DATA commands

The invert bit determines whether the search condition is to be inverted. See 9.2.14.1 through 9.2.14.3 for a description of the search conditions for the individual SEARCH DATA commands.

A spanned data (SpnDat) bit of zero indicates that each record shall be wholly contained within a single block. Any space at the end of a block that is smaller than the record length is ignored by the SEARCH DATA commands. A SpnDat bit of one indicates that records span block boundaries (i.e. record may start in one block and end in the next or a subsequent block.

The number of blocks to search field specifies the maximum number of contiguous logical blocks to be searched. A value of zero indicates that no logical blocks shall be searched. This condition shall not be considered an error. Any other value indicates the maximum number of logical blocks that shall be searched.

A link bit (see 7.2.7) of zero indicates a non-linked command and if the search is satisfied, the command shall be terminated with a CONDITION MET status. A REQUEST SENSE command can then be issued to determine the logical block address and record offset of the matching record. If the search is not satisfied and no error occurs, the command shall be terminated with GOOD status.

A link bit (see 7.2.7) of one indicates a command is linked to the SEARCH DATA command and if the search is satisfied, INTERMEDIATE-CONDITION MET status is returned and the next command is executed. If the RelAdr bit in the next command is one, the logical block address of the next command is used as a displacement from the logical block address at which the search was satisfied. If a linked search is not satisfied, the command is terminated with CHECK CONDITION status. A REQUEST SENSE command may then be issued.

A REQUEST SENSE command following a satisfied SEARCH DATA command shall:

- a) return a sense key of EQUAL if the search was satisfied by an exact match. If the search was satisfied by an inequality then a sense key of NO SENSE shall be returned.
- b) return the valid bit set to one.
- c) return the logical block address of the logical block containing the first matching record in the information field.
- d) return the record offset of the matching record in the command-specific information field.

A REQUEST SENSE command following a SEARCH DATA command that is not satisfied shall:

a) return a sense key of NO SENSE, if no errors occurred during the command execution.

b) return the valid bit set to zero.

The SEARCH DATA parameter list (see table 137) contains a fourteen-byte header, followed by one or more search argument descriptors.

Bit Byte	7	6	5	4	3	2	1	0			
0	(MSB)			Logical	record le	nath					
3				Logical	lecold Ie	ingen		(LSB)			
4	(MSB)		First record offset								
7											
8	(MSB)		Number of records								
11											
12	(MSB)		Search argument length								
13				Search a	rgument I	ength		(LSB)			
			S	earch argu	ment desc	riptor(s)					
0	(MSB)			Displace	mont						
3				Displace	merre			(LSB)			
4	(MSB)	<u> </u>		Pattorn	longth						
5			Pattern length								
6			Pattern								
n											

#### Table 137 - SEARCH DATA parameter list

The logical record length field specifies the record length in bytes.

The first record offset field specifies the number of bytes that shall be ignored in the first logical block before the search begins. If the value of the first record offset field shall is larger than the logical block length the target shall terminate the command with a CHECK CONDITION status, set the sense key to ILLEGAL REQUEST and set the additional sense code to INVALID FIELD IN PARAMETERS LIST. Subsequent logical blocks shall be searched beginning with the first byte in the logical block. This permits one or more records to be skipped initially.

The number of records field specifies the maximum number of records that shall be searched by this command. An search shall terminate when the search pattern is found or when the number of records is exhausted or when the number of blocks to search is exhausted.

The search argument length field specifies the length in bytes of all the search argument descriptors that follow.

NOTE 120 Since the pattern length can vary, there is no fixed multiple of the search argument descriptor to determine the search argument length.

The search argument descriptors specify one or more search conditions to execute within a single record in order to satisfy the search. Each search argument descriptor is made up of a displacement field, a pattern length field, and a pattern field.

The displacement field specifies the displacement in bytes of the first byte of the data to be compared from the start of the logical record.

The pattern length field specifies the length in bytes of the pattern that follows.

The pattern field specifies the data to compare to the logical record.

#### 9.2.14.1 SEARCH DATA EQUAL command

The SEARCH DATA EQUAL command (see table 136, operation code 31h) shall be satisfied by the first logical record searched that contains data that satisfies all of the search argument descriptor(s). If the invert bit in the command descriptor block is zero, the search argument descriptor(s) shall be satisfied by data in the logical record being equal to the data in the pattern. If the invert bit is one, the search argument descriptor(s) shall be satisfied by data in the logical record being equal logical record being not equal to the data in the pattern. (See 9.2.14.)

#### 9.2.14.2 SEARCH DATA HIGH command

The SEARCH DATA HIGH command (see table 136, operation code 30h) shall be satisfied by the first logical record searched that contains data that satisfies all of the search argument descriptor(s). If the invert bit in the command descriptor block is zero, the search argument descriptor(s) shall be satisfied by data in the logical record being greater than the data in the pattern. If the invert bit is one, the search argument descriptor(s) shall be satisfied by data in the statisfied by data in the logical record being data in the logical record being less than or equal to the data in the pattern. (See 9.2.14.)

# 9.2.14.3 SEARCH DATA LOW command

The SEARCH DATA LOW command (see table 136, operation code 32h) shall be satisfied by the first logical record searched that contains data that satisfies all of the search argument descriptor(s). If the invert bit in the command descriptor block is zero, the search argument descriptor(s) shall be satisfied by data in the logical record being less than the data in the pattern. If the invert bit is one, the search argument descriptor(s) shall be satisfied by data in the satisfied by data in the logical record being less than the logical record being greater than or equal to the data in the pattern. (See 9.2.14.)

# 9.2.15 SEEK(6) and SEEK(10) commands

The SEEK(6) (see table 138) and SEEK(10) (see table 139) commands request that the logical unit seek to the specified logical block address.

Bit Byte	7	1	0							
0				Operation	n code (O	Bh)				
1	Logical									
2										
3								(LSB)		
4										
5	Control									

#### Table 138 - SEEK(6) command

Bit Byte	7	6	5	4	3	2	1	0		
0				Operatio	n code (2	Bh)				
1	Logical	unit num	ıber	Reserved						
2	(MSB)									
3	Logical block address									
4				LUGICAL	Logical block address					
5								(LSB)		
6				Reserved			_			
7				Reserved						
8		·····		Reserved						
9				Control						

# Table 139 - SEEK(10) command

# 9.2.16 SET LIMITS command

The SET LIMITS command (see table 140) defines the range within which subsequent linked commands may operate. A second SET LIMITS command may not be linked to a chain of commands in which a SET LIMITS command has already been issued.

Bit Byte	7	6	5	4	3	2	1	0				
0	Operation code (33h)											
1	Logical	unit num	ber		RdInh	WrInh						
2	(MSB)											
З				Logical	block add	<b>2</b> 055						
4				LUGICAL								
5						(LSB)						
6				Reserved								
7	(MSB)			Number o	fblocks							
8				Number, 0		(LSB)						
9	Control											

Table	140 -	SET	LIMITS	command
-------	-------	-----	--------	---------

The read inhibit (RdInh) bit of one indicates that read operations within the range shall be inhibited.

A write inhibit (WrInh) bit of one indicates that write operations within the range shall be inhibited.

The logical block address field specifies the starting address for the range.

The number of blocks field specifies the number of logical blocks within the range. A number of blocks of zero indicates that the range shall extend to the last logical block on the logical unit.

184

Any attempt to access outside of the restricted range or any attempt to perform an inhibited operation within the restricted range shall not be performed. The command shall be terminated with CHECK CONDITION status and the sense key shall be set to DATA PROTECT. A second SET LIMITS command within a linked list of commands shall be rejected with CHECK CONDITION status and the sense key shall be set to DATA PROTECT.

# 9.2.17 START STOP UNIT command

The START STOP UNIT command (see table 141) requests that the target enable or disable the logical unit for media access operations.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (1Bh)										
1	Logical unit number Reserved In											
2				Reserved								
3				Reserved								
4				Reserved LoEj S								
5				Control								

# Table 141 - START STOP UNIT command

An immediate (Immed) bit of one indicates that status shall be returned as soon as the command descriptor block has been validated. An Immed bit of zero indicates that status shall be returned after the operation is completed.

A load eject (LoEj) bit of zero requests that no action be taken regarding loading or ejecting the medium. A LoEj bit of one requests that the medium shall be unloaded if the start bit is zero. A LoEj bit of one requests that the medium is to be loaded if the start bit is one.

A start bit of one requests the logical unit be made ready for use. A start bit of zero requests that the logical unit be stopped (media cannot be accessed by the initiator).

Targets that contain cache memory shall implicitly perform a SYNCHRONIZE CACHE command for the entire medium prior to executing the STOP UNIT command.

#### 9.2.18 SYNCHRONIZE CACHE command

The SYNCHRONIZE CACHE command (see table 142) ensures that logical blocks in the cache memory, within the specified range, have their most recent data value recorded on the physical medium. If a more recent data value fo a logical block within the specified range exists in the cache memory than on the physical medium, then the logical block from the cache memory shall be written to the physical medium. Logical blocks are not necessarily removed from the cache memory as a result of the synchronize cache operation.

Bit Byte	7	6	5	4	3	2	1	0		
0				Operati	on code (	35h)				
1	Logical	unit num	ber		Reserve	ed	Immed	RelAdr		
2	(MSB)									
3	Logical block address									
4				LOUICAI	DIOCK AU	uress				
5								(LSB)		
6			<u></u>	Reserved	đ					
7	(MSB)			Numbon	of blocks					
8				Number		(LSB)				
9	Control									

#### Table 142 - SYNCHRONIZE CACHE command

An immediate (Immed) bit of one indicates that the target shall return status as soon as the command descriptor block has been validated. An Immed bit of zero indicates that the status shall not be returned until the operation has been completed. If the Immed bit is one and the target does not support it then the command shall terminate with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code shall be set to INVALID FIELD IN CDB.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The number of blocks field specifies the total number of contiguous logical blocks within the range. A number o blocks of zero indicates that all remaining logical blocks on the logical unit shall be within the range.

A logical block within the specified range that is not in cache memory is not considered an error.

## 9.2.19 VERIFY command

The VERIFY command (see table 143) requests that the target verify the data written on the medium.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (2Fh)									
1	Logic	al unit r	number	DPO	Reserved	Reserved	BytChk	RelAdr		
2	(MSB)									
3	Logical block address									
4				LUGICAL	DICCK addi	633				
5										
6	Reserved									
7	(MSB)									
8				Verification length				(LSB)		
9				Control						

Table	143 -	VERIFY	command
-------	-------	--------	---------

If the MODE SELECT command is implemented, and the verify error recovery parameters page is also implemented, then the current settings in that page specifies the verification error criteria. If the verify error recovery parameters page is not implemented, then the verification criteria is vendor-specific.

A byte check (BytChk) bit of zero causes a medium verification to be performed with no data comparison. A BytChk bit of one causes a byte-by-byte compare of data written on the medium and the data transferred from the initiator. If the compare is unsuccessful for any reason, the target shall return CHECK CONDITION status with the sense key set to MISCOMPARE.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The verification length field specifies the number of contiguous logical blocks of data that shall be verified. A transfer length of zero indicates that no logical blocks shall be verified. This condition shall not be considered as an error. Any other value indicates the number of logical blocks that shall be verified.

See 9.2.6 for a description of the cache control bit (DPO).

#### 9.2.20 WRITE(6) command

The WRITE(6) command (see table 144) requests that the target write the data transferred by the initiator to the medium.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (OAh)								
1	Logical unit number (MSB)								
2	Logical block address								
3	(LSB)							(LSB)	
4	Transfer length								
5	Control								

#### Table 144 - WRITE(6) command

The cache control bits (see 9.2.6) are not provided for this command. Targets with cache memory may have values for the cache control bits which may affect the WRITE(6) command, however no default value is defined by this standard. If explicit control is required, the WRITE(10) command should be used.

The logical block address field specifies the logical block at which the write operation shall begin.

The transfer length field specifies the number of contiguous logical blocks of data to transferred. A transfer length of zero indicates that 256 logical blocks shall be transferred. Any other value indicates the number of logical blocks that shall be transferred.

## 9.2.21 WRITE(10) command

The WRITE(10) command (see table 145) requests that the target write the data transferred by the initiator to the medium.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (2Ah)									
1	Logical	unit num	ber	DPO	FUA	Reserved	Reserved	RelAdr		
2	(MSB)									
3										
4				LUGICAL	Logical block address					
5					(LSB)					
6				Reserved						
7	(MSB)			Thomaton	longth					
8				Transfer length				(LSB)		
9				Control						

#### Table 145 - WRITE(10) command

See READ(10) command (9.2.6) for a definition of the cache control bits (DPO and FUA).

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The transfer length field specifies the number of contiguous logical blocks of data that shall be transferred. A transfer length of zero indicates that no logical blocks shall be transferred. This condition shall not be considered an error and no data shall be written. Any other value indicates the number of logical blocks that shall be transferred.

# 9.2.22 WRITE AND VERIFY command

The WRITE AND VERIFY command (see table 146) requests that the target write the data transferred from the initiator to the medium and then verify that the data is correctly written. The data is only transferred once from the initiator to the target.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (21	Eh)		
1	Logica	al unit r	number	DPO	Reserved	Reserved	BytChk	RelAdr
2	(MSB)							
3	Logical block address							
4				233				
5								(LSB)
6				Reserved				
7	(MSB)			Transfer	longth			
8				Tansfer	rengti			(LSB)
9				Control				

**Table 146 - WRITE AND VERIFY command** 

If the MODE SELECT command is implemented, and the verify error recovery page is also implemented (see 9.3.3.8), then the current settings in that page along with the AWRE bit from the read-write error recovery page specify the verification error criteria. If these pages are not implemented, then the verification criteria is vendor-specific.

A byte check (BytChk) bit of zero requests a medium verification to be performed with no data comparison. A BytChk bit of one requests a byte-by-byte compare of data written on the medium and the data transferred from the initiator. If the compare is unsuccessful for any reason, the target shall return CHECK CONDITION status with the sense key set to MISCOMPARE.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

See WRITE(10) command (see 9.2.21) for a definition of the transfer length field.

See 9.2.6 for a description of the cache control bit (DPO).

NOTE 121 The WRITE AND VERIFY command specifically states that the data are not to be transferred twice (i.e. once for the write pass, and once for the verify pass) when performing a byte compare. If there is a need for two transfers to occur (e.g. to ensure the integrity of the path to the media), then the initiator should issue a WRITE command with a LINK bit of one followed by a VERIFY command with a BytCmp bit of one, transferring the same data on each command.

### 9.2.23 WRITE LONG command

The WRITE LONG command (see table 147) requests that the target write the data transferred by the initiator to the medium. The data passed during the WRITE LONG command is implementation specific, but shall include the data bytes and the ECC bytes.

Bit Byte	7	6	5	4	3	2	1	0	
0				Operatio	on code (3	Fh)			
1	Logical	unit num	ber		Reserved				
2	(MSB)			· · · · · · · · · · · · · · · · · · ·					
3				Logical	block add	nose			
4				LUYICAI	DIUCK AUG	1 8 3 3			
5								(LSB)	
6				Reserved					
7	(MSB)			Byte tra	nsfer len	ath			
8								(LSB)	
9				Control			······································		

Table 147 - WRITE LONG command

NOTE 122 Any other bytes that can be corrected by ECC should be included (e.g. a data synchronization mark within the area covered by ECC). The READ LONG command is usually issued before issuing a WRITE LONG command. The WRITE LONG data should be the same length and in the same order as the data returned by the READ LONG command.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The byte transfer length field should specify the number of bytes of data that the target would return for the READ LONG command. If a non-zero byte transfer length does not exactly match the data length the target would return for the READ LONG command, then the target shall terminate the command with CHECK CONDITION status and a sense key of ILLEGAL REQUEST and an additional sense code of INVALID FIELD IN CDB. The ILI and valid bits shall be set to one and the information field shall be set to the difference (residue) of the requested length minus the actual length in bytes. Negative values shall be indicated by two's complement notation. A transfer length of zero indicates that no bytes shall be transferred and shall not be considered an error.

# 9.2.24 WRITE SAME command

The WRITE SAME command (see table 148) requests that the target write the single block of data transferred by the initiator to the medium multiple times.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (·	41h)		
1	Logical	unit num	ber	Res	erved	PBdata	LBdata	RelAdr
2	(MSB)							
3				Logical				
4				LUGICAL				
5								(LSB)
6				Reserved				
7	(MSB)			Number o	fblooko			
8				Mulliber, 0	DIOCKS			(LSB)
9				Control				

Table	148 -	WRITE SAME	command
Iavie	170 -		

NOTE 123 This command is useful if large areas of the medium need to be written, prepared for certification, or otherwise initialized without the initiator having to transfer all the data.

A logical block data (LBdata) bit of one requests that the target replace the first four bytes of the data to be written to the current logical block with the logical block address of the block currently being written.

A physical block data (PBdata) bit of one requests that the target replace the first eight bytes of the data to be written to the current physical sector with the physical address of the sector currently being written using the physical sector format (see 9.2.1.1).

If PBdata and LBdata are one the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

See 9.2.2 for a definition of the RelAdr bit and the logical block address field.

The number of blocks field specifies the number of contiguous logical blocks to be written. A number of blocks field of zero requests that all the remaining logical blocks on the medium be written.

# 9.3 Parameters for direct-access devices

## 9.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with direct-access devices.

The diagnostic page codes for direct-access devices are defined in table 149.

Page code	Description	Subclause
00h 40h 01h - 3Fh 41h - 7Fh 80h - FFh	Supported diagnostic pages Translate address page Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1 9.3.1.1

Table 149 - Diagnostic page codes

## 9.3.1.1 Translate address page - SEND DIAGNOSTIC

The translate address page allows the initiator to translate a logical block address, physical sector address or physical bytes from index address into any one of the other formats. The address to be translated is passed to the target with the SEND DIAGNOSTIC command and the results are returned to the initiator by the RECEIVE DIAGNOSTIC RESULTS command. The format of the translate address page - SEND DIAGNOSTIC is shown in table 150. The translated address is returned in the translate address page - RECEIVE DIAGNOSTIC RESULTS (see 9.3.1.2).

Bit Byte	7	6	5	4	3	2	1	0		
0				Page cod	le (40h)					
1		Reserved								
2	(MSB)	(MSB)								
3				Page len	gth (000A	n)		(LSB)		
4			Reserve	d	· · · · · · · · · · · · · · · · · · ·	Sup	plied for	mat		
5			Reserve	d		Tra	nslate fo	rmat		
6 13				Address	to transl	ate				

Table 150 - Translate address page - SEND DIAGNOSTIC

The supplied format field specifies the format of address to translate field. Valid values for this field are defined in the FORMAT UNIT command (see 9.2.1). If the target does not support the requested format it shall terminate the SEND DIAGNOSTIC command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and an additional sense code shall be set to INVALID FIELD IN PARAMETER LIST.

The translate format field specifies which format the initiator would like the address to be translated to. Valid values for this field are defined in the FORMAT UNIT command (see 9.2.1). If the target does not support the requested format it shall terminate the command with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and an additional sense code shall be set to INVALID FIELD IN PARAMETER LIST.

The address to translate field contains a single address the initiator is requesting the target to translate. The format of this field depends on the value in the supplied format field. The formats are described in 9.2.1.1. If the logical block format is specified the block address shall be in the first four bytes of the field with the remaining bytes set to zero.

# 9.3.1.2 Translate address page - RECEIVE DIAGNOSTIC

The translate address page allows the initiator to translate a logical block address, physical sector address, or physical bytes from index address into any one of the other formats. The address to be translated is passed to the target with the SEND DIAGNOSTIC command and the results are returned to the initiator by the RECEIVE DIAGNOSTIC RESULTS command. The translated address is returned in the translate address page - RECEIVE DIAGNOSTIC (see table 151).

Bit Byte	7	6	5	4	3	2	1	0			
0	Page code (40h)										
1		Reserved									
2	(MSB)	Page length									
3		Page length(LSB)									
4	Reserved Supplied format										
5	RAREA	ALTSEC	ALTTRK	Rese	erved	Trai	nslated fo	ormat			
				Translated	d address	es					
6 13				Translate	ed addres	s 1					
		•									
n 7				Translate	d address	s x (if re	equired)				

Table 151 - Translate address page - RECEIVE DIAGNOSTIC

The translate address page contains a four byte page header which specifies the page code and length followed by two bytes which describe the translated address followed by zero or more translated address(s).

The page length field contains the number of parameter bytes which follow.

The supplied format field contains the value from the SEND DIAGNOSTIC command supplied format field (see 9.3.1.1).

A reserved area (RAREA) bit of one indicates that all or part of the translated address falls within a reserved area of the medium (e.g. speed tolerance gap, alternate sector, vendor reserved area, etc.). If the entire translated address falls within a reserved area the target may not return a translated address. An RAREA bit of zero indicates that no part of the translated address falls within a reserved area of the medium.

An alternate sector (ALTSEC) bit of one indicates that the translated address is physically located in an alternate sector of the medium. If the target cannot determine if all or part of the translated address is located in an alternate sector it shall set this bit to zero. An ALTSEC bit of zero indicates that no part of the translated address is located in an alternate in an alternate sector of the medium or that the target is unable to determine this information.

An alternate track (ALTTRK) bit of one indicates that part or all of the translated address is located on an alternate track of the medium or the target cannot determine if all or part of the translated address is located on an alternate track. An ALTTRK bit of zero indicates that no part of the translated address is located on an alternate track of the medium.

The translated format field contains the value from the SEND DIAGNOSTIC command translate format field (see 9.3.1.1).

The translated address field contains the address(s) the target translated from the address supplied by the initiator in the SEND DIAGNOSTIC command. This field shall be in the format specified in the translate format field. The different formats are described in 9.2.1.1. If the logical block format is specified the block address shall be in the first four bytes of the field and the remaining bytes shall be set to zero.

If the returned data is in the logical block or physical sector format and the address to be translated covers more than one address after it has been translated (e.g. accounting for speed tolerance or multiple physical sectors within a single logical block or multiple logical blocks within a single physical sector) the target shall return all possible addresses which are contained in the area specified by the address to be translated.

If the returned data is in bytes from index format the target shall return a pair of translated values for each of the possible addresses which are contained in the area specified by the address to translate field. Of the pair of translated values returned, the first indicates the starting location and the second the ending location of the area.

## 9.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with direct-access devices.

The log page codes for direct-access devices are defined in table 152.

Page code	Description	Subclause
01h 03h 05h 02h 07h 06h 00h 04h 08h - 2Fh 3Fh 30h - 3Eh	Buffer over-run/under-run page Error counter page (read) page Error counter page (verify) page Error counter page (write) page Last n error events page Non-medium error page Supported log pages Reserved Reserved Reserved Vendor-specific pages	8.3.2.1 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.3 8.3.2.3 8.3.2.4 8.3.2.5

Table 152 - Log page codes

# 9.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with direct-access devices.

The mode parameter list, including the mode parameter header and mode block descriptor are described in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). Table 153 defines this field for direct-access devices.

Code value	Medium type							
00h 01h 02h	Default medium type (currently mounted medium type) Flexible disk, single-sided; unspecified medium Flexible disk, double-sided; unspecified medium							
	Flexible disks Diameter Bit density Track density Number ANSI reference mm (in) Bits/radian /mm (/in) of sides standard							
1Ah	200         (8,0)         6         631         1,9         (48)         1         ANSI X3.73-1980           200         (8,0)         6         631         1,9         (48)         2         (Note 1)           200         (8,0)         13         262         1,9         (48)         1         None           200         (8,0)         13         262         1,9         (48)         1         None           200         (8,0)         13         262         1,9         (48)         2         ANSI X3.121-1984           130         (5,25)         3         979         1,9         (48)         2         ANSI X3.125-1985           130         (5,25)         7         958         1,9         (48)         2         ANSI X3.125-1985           130         (5,25)         7         958         3,8         (96)         2         ANSI X3.126-1986           130         (5,25)         13         262         3,8         (96)         2         ISO         DIS8630-1985           130         (5,25)         13         262         3,8         (96)         2         ISO         DIS8630-1985           90         (3							
	Direct-access magnetic tapes Width Density ANSI reference mm (in) Tracks ftpmm (ftpi) standard							
40h 44h	6,3 (0,25)12394 (10 000)Note 16,3 (0,25)24394 (10 000)Note 1							
	values 80h - FFh are vendor-specific. All remaining code values eserved.							
NOTE 1 Se	ee annex c for additional standards information.							

Table 153 - Direct-access medium-type codes

The device specific parameter field (see table 154) is contained in the mode parameter header (see 8.3.3).

Table 154 - Device specific parameter

Bit	7	6	5	4	3	2	1	0
	WP	Rese	erved	DPOFUA		Resei		

When used with the MODE SELECT command the write protect (WP) bit is not defined.

When used with the MODE SENSE command a WP bit of zero indicates that the medium is write enabled. A WP bit of one indicates that the medium is write protected.

When used with the MODE SELECT command, the DPOFUA bit is not used and the field is reserved.

When used with the MODE SENSE command, a DPOFUA bit of one indicates that the target supports the DPO and FUA bits (see 9.2.6). When used with the MODE SENSE command, a DPOFUA bit of zero indicates that the target does not support the DPO and FUA bits.

The density code field is contained in the mode parameter block descriptor (see 7.3.3). This field is reserved for direct-access devices.

The mode page codes for direct-access devices are shown in table 155.

08h Caching page 0Ah Control mode page 02h Disconnect-reconnect page 05h Flexible disk page	Subclause
03hFormat device page0BhMedium types supported page0ChNotch and partition page09hPeripheral device page01hRead-write error recovery page04hRigid disk geometry page07hVerify error recovery page06hReserved00hVendor-specific (does not require page format)20h3EhVendor-specific (page format required)	9.3.3.1 8.3.3.1 8.3.3.2 9.3.3.2 9.3.3.3 9.3.3.4 9.3.3.5 8.3.3.3 9.3.3.5 9.3.3.6 9.3.3.7 9.3.3.8

Table 155 - Mode page codes

For direct-access devices, if the notch page is not supported, or if the active notch field in the notch page is zero then each page descriptor specifies mode parameters for the target to use for subsequent operations on the specified logical unit. If the notch page is supported, and the active notch is not zero, then each page descriptor specifies parameters for the target to use for subsequent operations on the disk notch specified by the current value of the active notch field on the specified logical unit.

# 9.3.3.1 Caching page

The caching parameters page (see table 156) defines the parameters that affect the use of the cache.

Bit Byte							1	0		
0	PS Reserved Page code (08h)									
1	Page length (OAh)									
2	Reserved WCE MF RCD									
3	Deman	d read ret	ention p	riority	Writ	e retent:	ion prior	ity		
4	(MSB)									
5	Disable pre-fetch transfer length									
6	(MSB)			Minimum p	re-fetch					
7					e-recon			(LSB)		
8	(MSB)			Maximum pr	co-fotch					
9				Maxingm bi	e-recon			(LSB)		
10	(MSB)		Λ	Javimum pr	re-fetch d	eiling				
11			n	Maximum pi	errecont	erring		(LSB)		

Table 156 - Caching page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-

specific location. If the PS is set to one in MODE SENSE data then the page shall be savable by issuing a MODE SELECT command with SP set to one.

A write cache enable (WCE) bit of zero specifies that the target shall return GOOD status for a WRITE command after successfully writing all of the data to the medium. A WCE bit of one specifies that the target may return GOOD status for a WRITE command after successfully receiving the data and prior to having successfully written it to the medium.

A multiplication factor (MF) bit of zero specifies that the target shall interpret the minimum and maximum pre-fetch fields in terms of the number of logical blocks for each of the respective types of pre-fetch. An MF bit of one specifies that the target shall interpret the minimum and maximum pre-fetch fields to be specified in terms of a scaler number which, when multiplied by the number of logical blocks to be transferred for the current command, yields the number of logical blocks for pre-fetch.

A read cache disable (RCD) bit of zero specifies that the target may return data requested by a READ command by accessing either the cache or media. A RCD bit of one specifies that the target shall transfer all of the data requested by a READ command from the medium (i.e. data cannot be transferred from the cache).

The demand read retention priority field (see table 157) advises the target on the retention priority to assign data read into the cache that has also been transferred from the target to the initiator.

Value	Description
Oh	Indicates the target should not distinguish between retaining the indicated data and data placed into the cache memory by other means (e.g. pre-fetch).
1h	Demand read retention priority: Data put into the cache via a READ command should be replaced sooner (has lower priority) than data placed into the cache by other means (e.g. pre-fetch).
	Write retention priority: Data put into the cache during a WRITE or WRITE AND VERIFY command should be replaced sooner (has lower priority) than data placed into the cache by other means (e.g. pre-fetch).
Fh	Demand read retention priority: Data put into the cache via a READ command should not be replaced if there is other data in the cache that was placed into the cache by other means (e.g. pre-fetch) and it may be replaced (i.e. it is not locked).
	Write retention priority: Data put into the cache during a WRITE or WRITE AND VERIFY command should not be replaced if there is other data in the cache that was placed into the cache by other means (e.g. pre-fetch) and it may be replaced (i.e. it is not locked).
2h - Eh	Reserved

Table 157 - Demand read and write retention priority

The write retention priority field (see table 157) advises the target on the retention priority to assign data written into the cache that has also been transferred from the cache memory to the medium.

An anticipatory pre-fetch occurs when data is placed in the cache that has not been requested. This usually happens in conjunction with the reading of data that has been requested. All the following parameters give an indication to the target how it should manage the cache based on the last READ command. An anticipatory pre-fetch may occur based on other information. All the remaining caching parameters are only recommendations to the target and should not cause a CHECK CONDITION to occur if the target cannot satisfy the request.

The disable pre-fetch transfer length field specifies the selective disabling of anticipatory pre-fetch on long transfer lengths. The value in this field is compared to the number of blocks requested by the current READ command. If the number of blocks is greater than the disable pre-fetch transfer length, then an anticipatory pre-fetch is not done for the command. Otherwise the target should attempt an anticipatory pre-fetch. If the pre-fetch disable transfer length is set to zero, then all anticipatory pre-fetching is disabled for any request for data, including those for zerc logical blocks.

The minimum pre-fetch field indicates either a number of blocks or a scaler multiplier of the transfer length, depending upon the setting of the MF bit. In either case, the resulting number of blocks is the number to pre-fetch regardless of the delays it might cause in executing subsequent commands.

The pre-fetching operation begins at the logical block immediately after the last logical block of the previous READ command. Pre-fetching shall always halt before the end of the media. Errors that occur during the pre-fetching operation shall not be reported to the initiator unless that target cannot, as a result of the error, execute subsequent commands correctly. In this case the error may be reported either immediately as an error for the current READ command, or as a deferred error, at the discretion of the target and according to the rules for reporting deferred errors.

If pre-fetch has read more than the amount of data indicated by the minimum pre-fetch then pre-fetching should be terminated whenever another command is ready to execute. This consideration is ignored when the minimum pre-fetch is equal to the maximum pre-fetch.

The maximum pre-fetch field indicates either a number of blocks or a scaler multiplier of the transfer length depending upon the setting of the MF bit. In either case, the resulting number of blocks is the number to pre-fetch if there are no delays in executing subsequent commands.

The maximum pre-fetch field contains the maximum amount of data to pre-fetch into the cache as a result of one READ command. It is used in conjunction with the disable pre-fetch transfer length and maximum pre-fetch ceiling parameters to trade off pre-fetching new data with displacing old data already stored in the cache.

The maximum pre-fetch ceiling field specifies an upper limit on the number of logical blocks computed as the maximum pre-fetch. If this number of blocks is greater than the maximum pre-fetch, then the number of logical blocks to pre-fetch shall be truncated to the value stored in the maximum pre-fetch ceiling field.

NOTE 124 If the MF bit is one the maximum pre-fetch ceiling field is useful in limiting the amount of data to be pre-fetched.

198

## 9.3.3.2 Flexible disk page

The flexible disk page (see table 158) contains parameters for control and reporting of flexible disk drive parameters.

Bit	7	6	5	4	3	2	1	0			
Byte	·	0									
0	PS	PS Reserved Page code (05h)									
1	Page length in bytes (1Eh)										
2	(MSB)										
3			(LSB)								
4											
5											
6	(MSB)										
7				ta bytes p				(LSB)			
8	(MSB)		1	Number of	cylinder	s					
9			·					(LSB)			
10	(MSB)		Starting	g cylinde:	r-write p	recompensa	ation	(LSB)			
11			Starting cylinder-write precompensation								
12	(MSB)		rrent								
13				(LSB)							
14	(MSB)			(LSB)							
15		Drive step rate									
16		Drive step pulse width									
17	(MSB)	3) Head settle delay									
18	Motor on delay										
19		·		Motor off							
20 21	TRDY	SSN	MO		Reserv	und					
21	TRUT	Reserv			nesei	SPC	<u></u>				
22				Vrite comp	ensation						
23				lead load		<u> </u>					
24				Head unloa							
26		Pin 3			uozuy	Pir	1.2				
27		Pin 4				Pir					
28								- <u></u>			
29			N	Aedium rot	ation rat	te		(LSB)			
30			 F	Reserved				()			
31				Reserved		<u></u>		- <u></u>			
<u> </u>											

Table 158 - Flexible disk page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

NOTE 125 This page is mainly intended for defining parameters of flexible disk drives, but may be used for other devices, if applicable.

The transfer rate indicates the data rate of the peripheral device. See table 159 for examples of common transfer rates,

Value	Transfer rate
00FAh	250 kbit/s transfer rate
012Ch	300 kbit/s transfer rate
01F4h	500 kbit/s tranfer rate
03E8h	1 mbit/s transfer rate
07D0h	2 mbit/s transfer rate
1388h	5 mbit/s transfer rate

Table 159 - Examples of transfer rates

The number of heads field specifies the number of heads used for reading and writing data on the medium. Heads used exclusively for servo information are excluded.

The sectors per track field specifies the number of sectors per revolution per head.

The data bytes per sector field specifies the number of bytes of data per sector that an initiator can read or write.

The number of cylinders field specifies the number of cylinders used for data storage.

The starting cylinder for write precompensation field specifies the cylinder at which write precompensation is to begin. Cylinders are numbered starting with zero. If the starting cylinder for write precompensation is equal to the value in the number of cylinders field, write precompensation shall be disabled by the target.

The starting cylinder for reduced write current field specifies cylinder at which write current is reduced. Cylinders are numbered starting with zero. If the starting cylinder for reduced write current is equal to the value in the number of cylinders field, reduced write current shall be disabled by the target.

The drive step rate field specifies the step rate in units of 100  $\mu$ s. This value may be rounded as defined in 7.5.4. A value of zero requests the target to set its default value.

The drive step pulse width field specifies the width of the step pulse in microseconds. This value may be rounded as defined in 7.5.4. A value of zero requests the target to set its default value.

The head settle delay field specifies the head settle time in units of 100  $\mu$ s. This value may be rounded as defined in 7.5.4. A value of zero requests the target to set its default value.

If a true ready signal is not available, the motor on delay field specifies in tenths of a second the time that the target shall wait before attempting to access the medium after the motor on signal is asserted. If a true ready signal is available, the motor on delay field specifies in tenths of a second the time that the target shall wait for drive ready status before aborting an attempt to access the medium. This value may be rounded as defined in 7.5.4.

The motor off delay field specifies in tenths of a second the time that the target shall wait before releasing the motor on signal after an idle condition exists. A value of FFh indicates that the motor on signal shall not be released. The START STOP UNIT command is not affected by this parameter. This value may be rounded as defined in 7.5.4.

A true ready (TRDY) bit of one specifies that a signal is provided that indicates the medium is ready to be accessed.

A start sector number (SSN) bit of one specifies that sectors are numbered starting with one. An SSN bit of zero specifies that sectors are numbered starting with zero.

A motor on (MO) bit of one specifies that pin 16 (motor on) shall remain released. This bit shall be set to one when using high capacity (192 tracks per inch) drives and their pre-formatted diskettes. An MO bit of zero indicates that pin 16 (motor on) shall be asserted.

The step pulse per cylinder (SPC) field is used to specify the number of additional step pulses required per cylinder. Non-zero values allow a drive to read a diskette formatted on a drive with a lower number of tracks per inch. For example, a value of one allows a 96 track-per-inch drive to access tracks on a diskette that was formatted for 48 tracks per inch.

The write compensation field is used to specify the amount of write compensation to be used starting at the cylinder specified in the starting cylinder for write precompensation field. The correlation of any values used in this field to actual write precompensation time values is vendor-specific. If a zero is specified in this field the target shall use its default write precompensation value. This value may be rounded as defined in 7.5.4.

The head load delay field specifies the head loading time in milliseconds. This value may be rounded as defined in 7.5.4. A value of zero requests the target to set its default value.

The head unload delay field specifies the head unloading time in milliseconds. This value may be rounded as defined in 7.5.4. A value of zero requests the target to set its default value.

The Pin 34 field defines the usage of pin 34 of the flexible disk drive interface. This use of this pin varies among vendors and drives. The settings allow the initiator to select how pin 34 shall be used by the interface. See table 160.

Table 160 - Pin 34 field

Bit 7 6 5 4	Description of pin 34 use
P 0 0 0 P 0 0 1 P 0 1 0	Open Ready Disk changed
NOTES 1 P is a po 2 All unde	plarity bit, where O is active low and 1 is active high. Fined values are reserved.

The pin 4 field defines the usage of pin 4 of the flexible disk drive interface. This use of this pin varies among drive vendors and drives. The settings allow the initiator to specify how pin 4 shall be used by the interface. See table 161.

Table 161 - Pin 4 fie
-----------------------

Bit 7 6 5 4	Description of pin 4 use
P 0 0 0 P 0 0 1 P 0 1 0 P 0 0 0	Open In use Eject Head load
NOTES 1 P is a p 2 All unde	plarity bit, where 0 is active low and 1 is active high. fined values are reserved.

The pin 1 field defines the usage of pin 1 of the flexible disk drive interface. This use of this pin varies among vendors and drives. The settings allow the initiator to specify how pin 1 shall be used by the interface. See table 162.

Bit 7 6 5 4	Description of pin 34 use
P 0 0 0 P 0 0 1	Open Disk change reset
NOTES 1 P is a po 2 All undef	plarity bit, where 0 is active low and 1 is active high. Fined values are reserved.

Table 162 - Pin 34 field

The medium rotation rate field specifies the speed at which the medium rotates. The unit of measure is rotations pe minute (e.g. 2 400 rpm). This field cannot be changed by a MODE SELECT command.

# 9.3.3.3 Format device page

The format device page (see table 163) contains parameters which specify the medium format.

	Table 163 - Format device page										
Bit Byte	7	6	5	4	3	2	1	0			
0	PS	5 Reserved Page code (03h)									
1	Page length (16h)										
2	(MSB)	Tracks per zone									
3			(LSB)								
4	(MSB)										
5			(LSB)								
6	(MSB)		Alternate tracks per zero								
7		Alternate tracks per zone									
8	(MSB)		Alter	nate trac	ks per log	nical unit	-				
9		Alternate tracks per logical unit									
10	(MSB)		Sector	rs per tra	ack						
11			(LSB)								
12	(MSB)		Data I	ovtes per	physical	sector					
13		Data bytes per physical sector									
14	(MSB)		Inter:	leave							
15								(LSB)			
16	(MSB)		Track	skew fac <sup>.</sup>	tor						
17								(LSB)			
18	(MSB)		Cylin	der skew <sup>.</sup>	factor						
19								(LSB)			
20	SSEC	HSEC	RMB	SURF		Reser	ved				
21			Reserv	/ed							
23											

Table 163 - Format device page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

NOTE 126 If the initiator changes any of the current physical parameters defined below, the target may not be able to access the media until a FORMAT UNIT command has been successfully completed.

If the defect handling format parameters (tracks per zone, alternate sectors per zone, alternate tracks per zone and alternate tracks per logical unit) requested by the initiator are not supported by the target the target may round these fields to acceptable values as described in 7.5.4.

The tracks per zone field specifies the number of tracks per zone to use in dividing the capacity of the device for the purpose of allocating alternate sectors. A value of zero means that one zone is defined for the entire device. The last zone on the device might not contain the same number of tracks as the previous zone(s).

The alternate sectors per zone field specifies the number of sectors per zone the target shall reserve for defect handling. The target shall de-allocate these sectors from the initiator addressable blocks during the FORMAT UNI command. If the notch page is implemented and the ND bit of the notch page is one and the active notch field c the notch page is zero, then a value of zero indicates that no alternate sectors shall be reserved. Otherwise, a valu of zero indicates that the number of alternate sectors is target specific.

The alternate tracks per zone field specifies the number of tracks per zone the target shall reserve for defect handling. The target shall de-allocate these tracks from the initiator addressable blocks during the FORMAT UNIT commanc If the notch page is implemented and the ND bit of the notch page is one and the active notch field of the notch pag is zero, then a value of zero indicates that no alternate tracks shall be reserved. Otherwise, a value of zero indicate that the number of alternate tracks is target specific.

The alternate tracks per logical unit field specifies the number of tracks per logical unit the target shall reserve fc defect handling. The target shall de-allocate these tracks from the initiator addressable blocks during the FORMA<sup>T</sup> UNIT command. If the notch page is implemented and the ND bit of the notch page is one and the active notch fiele of the notch page is zero, then a value of zero indicates that no alternate tracks shall be reserved. Otherwise, a valu of zero indicates that the number of alternate tracks is target specific.

The sectors per track field specifies the number of physical sectors included within each track. This numbe includes any alternate sectors the target may allocate. A value of zero during MODE SELECT indicates that the targe shall define the number of sectors per track. For devices with a variable number of sectors per track, the value in MODE SELECT shall be zero and the value reported in MODE SENSE for the number of sectors per track is vendor specific.

The data bytes per physical sector field specifies the number of data bytes per physical sector that the target sha use. This value may be different than the logical block size reported in the MODE SELECT data. The target sha return CHECK CONDITION status if it determines that the combination of this field and the sectors per track field exceed the capability of the medium. A value of zero indicates that the data bytes per physical sector is defined by the target.

For MODE SENSE the interleave field returns the same parameter passed in the FORMAT UNIT command, The targe shall report this field as target defined in the corresponding MODE SENSE command. For MODE SELECT this field is ignored.

NOTE 127 It is recommended that this field be marked non-changeable and that initiators send the value returned in MODE SENSE. This allows migration to specifying interleave as a mode parameter instead of in the FORMAT UNIT command.

The track skew factor field specifies the number of physical sectors between the last logical block of one track and the first logical block on the next sequential track of the same cylinder.

The cylinder skew factor field specifies the number of physical sectors between the last logical block of one cylinde and the first logical block on the next sequential cylinder.

The SSEC bit set to one indicates that the target shall use soft sector formatting.

The HSEC bit set to one indicates that the target shall use hard sector formatting. The HSEC bit and the SSEC bi are mutually exclusive in MODE SELECT commands.

The combinations sector formatting supported that are reported in response to a request for default values are defined in table 164.

204

SSEC	HSEC	Description
0	0	Target shall not return this combination
1	0	Target supports soft sector formatting only
0	1	Target supports hard sector formatting only
1	1	Target supports both soft and hard sector formatting

Table 1	64 -	Reporting	of	default	sector	formatting	support
---------	------	-----------	----	---------	--------	------------	---------

The combinations sector formatting supported that are reported in response to a request for changeable values are defined in table 165.

Table 165 - Reporting of changeable sector formatting support

SSEC	HSEC	Description
0	0	Sector formatting not changeable
1	0	Target shall not return this combination
0	1	Target shall not return this combination
1	1	Target supports both soft and hard sector formatting

The removable medium (RMB) bit set to one indicates that the logical unit supports removable media. A RMB bit set to zero indicates that the logical unit does not support removable media. The status of this bit shall be reflected in the INQUIRY command RMB bit.

The surface (SURF) bit set to zero indicates that the target shall allocate progressive addresses to all logical blocks within a cylinder prior to allocating addresses on the next cylinder. A SURF bit set to one indicates that the target shall allocate progressive addresses to all logical blocks on a surface prior to allocating sector addresses on the next surface.

NOTE 128 If the target supports savable parameters, all savable parameters for this initiator, including those in page codes 3, 4, and 5, are saved to non-volatile memory when the save parameters bit (SP) in the command descriptor block is set to one. The savable parameters may also be saved to non-volatile memory during a FORMAT UNIT command (see 9.2.1).

# 9.3.3.4 Medium types supported page

The medium types supported page (see table 166) contains a list of the medium types implemented by the target for logical units.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS Reserved Page code (OBh)								
1	Page length (06h)								
2	Reserved								
3	Reserved								
4	Medium type one supported								
5	Medium type two supported								
6	Medium type three supported								
7	Medium type four supported								

Table 166 -	Medium	types s	supported	page
-------------	--------	---------	-----------	------

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The code values for each medium type supported by the target (up to four maximum), are reported in ascending order. If only the default medium type is supported zero is reported. If less than four medium types are supported the unused entries shall be returned as zero.

## 9.3.3.5 Notch and partition page

The notch page (see table 167) contains parameters for direct-access devices which implement a variable number of blocks per cylinder and support this page. Each clause of the logical unit with a different number of blocks per cylinder is referred to as a notch.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	Reserved		Page code	e (OCh)				
1				Page leng	gth (16h)				
2	ND	LPN		Reserved					
3				Reserved					
4	(MSB)			Maximum r					
5				Maximum		nocones		(LSB)	
6	(MSB)	MSB) Active notch							
7				ACCIVE IN				(LSB)	
8	(MSB)			Starting	boundary				
11				otal ting	boundar y			(LSB)	
12	(MSB)			Ending br	undary				
15				Ending boundary (LSB)					
16	(MSB) Pages notched								
23				ayes not			·	(LSB)	

Table	167 -	Notch	page
-------	-------	-------	------

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

A notched drive (ND) bit of zero indicates that the device is not notched and that all other parameters in this page shall be returned as zero by the target. A ND bit of one indicates that the device is notched. For each supported active notch value this page defines the starting and ending boundaries of the notch.

A logical or physical notch (LPN) bit of zero indicates that the boundaries are based on the physical parameters of the logical unit. The cylinder is considered most significant, the head least significant. A LPN bit of one indicates that the notch boundaries are based on logical blocks of the logical unit.

The maximum number of notches field indicates the maximum number of notches supported by the logical unit. This field shall be reported as unchangeable.

206

The active notch field indicates the notch that this and subsequent MODE SELECT and MODE SENSE commands shall refer to, until the active notch is changed by a later MODE SELECT command. The value of the active notch shall be greater than or equal to 0 and less than or equal to the maximum number of notches. An active notch value of zero indicates that this and subsequent MODE SELECT and MODE SENSE commands refer to the parameters that apply across all notches.

The starting boundary field indicates the beginning of the active notch or, if the active notch is zero, the beginning boundary of the logical unit. If the LPN bit is one, then the four bytes represent a logical block address. If the LPN bit is zero, then the three most significant bytes shall represent the cylinder number and the least significant byte shall represent the head number. This field shall be reported as unchangeable. When used with the MODE SELECT command this field is ignored.

The ending boundary field indicates the ending of the active notch or, if the active notch is zero, the ending of the logical unit. If the LPN bit is one, then the four bytes represent logical block address. If the LPN bit is zero, then the three most significant bytes shall represent the cylinder number and the least significant byte shall represent the head number. This field shall be reported as unchangeable. When used with the MODE SELECT command this field is ignored.

Each notch shall span a set of consecutive logical blocks on the logical unit, the notches shall not overlap, and no logical block shall be excluded from a notch.

The pages notched field is a bit map of the mode page codes that indicates which pages contain parameters that may be different for different notches. The most significant bit of this field corresponds to page code 3Fh and the least significant bit corresponds to page code 00h. If a bit is one, then the corresponding mode page contains parameters that may be different for different notches. If a bit is zero, then the corresponding mode page contains parameters that are constant for all notches. This field shall be reported as unchangeable.

#### 9.3.3.6 Read-write error recovery page

The read-write error recovery page (see table 168) specifies the error recovery parameters the target shall use during any command that performs a read or write operation to the medium (e.g. READ(6), READ(10), WRITE(6), WRITE(10), COPY, COMPARE, WRITE & VERIFY, etc.).

Bit Byte	7	6	5	4	3	2	1	0		
0	PS Reserved Page code (01h)									
1	Page length (OAh)									
2	AWRE	ARRE	ΤВ	RC	EER	PER	DTE	DCR		
3				Read ret	ry count					
4	Correction span									
5				Head offs	set count					
6				Data stro	be offset	t count				
7				Reserved						
8	Write retry count									
9	Reserved									
10	(MSB) Recovery time limit									
11				necovery				(LSB)		

### Table 168 - Read-write error recovery page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor specific location.

An automatic write reallocation enabled (AWRE) bit of one indicates that the target shall enable automatic reallocation to be performed during write operations. The automatic reallocation shall be performed only if the target has the valid data (e.g. original data in the buffer or recovered from the medium). The valid data shall be placed in the reallocated block. Error reporting as required by the error recovery bits (EER, PER, DTE, and DCR) shall be performed only afte completion of the reallocation. The reallocation operation shall report any failures that occur. See the REASSIGN BLOCKS command (9.2.10) for error procedures.

An AWRE bit of zero indicates that the target shall not perform automatic reallocation of defective data blocks durin write operations.

An automatic read reallocation enabled (ARRE) bit of one indicates that the target shall enable automatic reallocation of defective data blocks during read operations. All error recovery actions required by the error recovery bits (TE EER, PER, DTE, and DCR) shall be executed. The automatic reallocation shall then be performed only if the targe successfully recovers the data. The recovered data shall be placed in the reallocated block. Error reporting as required by the error recovery bits shall be performed only after completion of the reallocation. The reallocation process shall present any failures that occur. See the REASSIGN BLOCKS command (9.2.10) for error procedures.

An ARRE bit of zero indicates that the target shall not perform automatic reallocation of defective data blocks during read operations.

A transfer block (TB) bit of one indicates that a data block that is not recovered within the recovery limits specified shall be transferred to the initiator before CHECK CONDITION status is returned. A TB bit of zero indicates that such a data block shall not be transferred to the initiator. The TB bit does not affect the action taken for recovered data

A read continuous (RC) bit of one indicates the target shall transfer the entire requested length of data without adding delays to perform error recovery procedures. This implies that the target may send data that is erroneous o fabricated in order to maintain a continuous flow of data. The target shall assign priority to this bit over conflicting error control bits (EER, DCR, DTE, and PER) within this byte.

NOTE 129 Fabricated data may be data already in the buffer or any other target-specific data. This bit is typically used in image processing, audio, or video applications.

A RC bit of zero indicates that error recovery operations that cause delays are acceptable during the data transfer Data shall not be fabricated.

The individual bit definitions for EER, PER, DTE and DCR are contained in table 169. The combinations of these bit are explained in table 170.

Table 169 - Error recovery bit definitions

EER	PER	DTE	DCR	Description
1	-	-	-	An enable early recovery (EER) bit of one indicates that the target shall use of the most expedient form of error recovery first. This bit only applies to data error recovery and it does not affect positioning retries and the message system error recovery procedures.
0	-	-	-	An EER bit of zero indicates that the target shall use an error recovery procedure that minimizes the risk of mis- detection or mis-correction.
-	1	-	-	A post error (PER) bit of one indicates that the target shall report recovered errors.
-	0	-	-	A PER bit of zero indicates that the target shall not report recovered errors. Error recovery procedures shall be performed within the limits established by the error recovery parameters.
-	-	1	-	A disable transfer on error (DTE) bit of one indicates that the target shall terminate the data phase upon detection of a recovered error.
-	-	0	-	A DTE bit of zero indicates that the target shall not terminate the data phase upon detection of a recovered error.
-	-	-	1	A disable correction (DCR) bit of one indicates that error correction codes shall not be used for data error recovery.
-	-	•	0	A DCR bit of zero allows the use of error correction codes for data error recovery.

NOTE 130 An EER bit of one may imply an increase in the probability of mis-detection or mis-correction. An EER bit of zero typically means that the specified retry limit is exhausted prior to using error correction codes.

EER	PER	DTE	DCR	Description
0	0	0	0	The full number of retries (specified in the read, write or verify retry count field) and error correction are attempted to recover the data (EER and DCR set to 0). A CHECK CONDITION is not reported at the completion of the command for recovered errors (PER set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).
0	0	0	1	Error correction is disabled (DCR set to one) so only the full number of retries (specified in the read, write or verify retry count field) are attempted to recover the data (EER set to 0). A CHECK CONDITION is not reported at the completion of the command for recoverable errors (PER set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).
o	0	1	0	Invalid mode (PER must be set to one if DTE is set to one). 1)
ο	0	1	1	Invalid mode (PER must be set to one if DTE is set to one). 1)
0	1	0	Ο	The full number of retries (specified in the read, write or verify retry count field) and error correction are attempted to recover the data (EER and DCR set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only). A CHECK CONDITION with a sense key of RECOVERED ERROR is reported at the completion of the command for any recoverable error that occurs (PER set to 1). The information field in the sense data shall contain the logical block address of the last recovered error which occurred during the transfer.

Table 170 - (continued)

EER	PER	DTE	DCR	Description
0	1	0	1	Error correction is disabled (DCR set to one) so only the full number of retries (specified in the read, write or verify retry count field) are attempted to recover the data (EER set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only). A CHECK CONDITION with a sense key of RECOVERED ERROR is reported at the completion of the command for any recoverable error that occurs (PER set to 1). The information field in the sense data shall contain the logical block address of the last recovered error which occurred during the transfer.
0	1	1	0	The full number of retries (specified in the read, write or verify retry count field) and error correction are attempted to recover the data (EER and DCR set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted if any error (recoverable or unrecoverable) is detected (DTE set to 1). The information field in the sense data shall contain the logical block address of the block in error. If an unrecoverable data error occurs the data in the block with the error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).
0	1	1	1	Error correction is disabled (DCR set to one) so only the full number of retries (specified in the read, write or verify retry count field) are attempted to recover the data (EER set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted if any error (recoverable or unrecoverable) is detected (DTE set to 1). The information field in the sense data shall contain the logical block address of the block in error. If an unrecoverable data error occurs the data in the block with the error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).
1	O	0	0	The fewest possible retries and error correction are attempted to recover the data (EER set to one and DCR set to 0). A CHECK CONDITION is not reported at the completion of the command for recoverable errors (PER set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).

2

Table 170 - (concluded)

EER	PER	DTE	DCR	Description				
1	0	0	1	Invalid mode (DCR must be set to zero if EER is set to one). 1)				
1	ο	1	0	Invalid mode (PER must be set to one if DTE is set to one). 1)				
1	0	1	1	Invalid mode (PER must be set to one if DTE is set to one). 1)				
1	1	0	0	The fewest possible retries and error correction are attempted to recover the data (EER set to one and DCR set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted only if an unrecoverable error is detected. If an unrecoverable data error occurred, the data in the block with the unrecoverable error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only). A CHECK CONDITION with a sense key of RECOVERED ERROR is reported at the completion of the command for any recoverable error that occurs (PER set to 1). The information field in the sense data shall contain the logical block address of the last recovered error which occurred during the transfer.				
1	1	0	1	Invalid mode (DCR must be set to zero if EER is set to one). 1)				
1	1	1	0	The fewest possible retries and error correction are attempted to recover the data (EER set to one and DCR set to 0). The command terminates with CHECK CONDITION status before the transfer count is exhausted if any error (recoverable or unrecoverable) is detected (DTE set to 1). The information field in the sense data shall contain the logical block address of the block in error. If an unrecoverable data error occurs the data in the block with the error may or may not be transferred to the initiator depending on the setting of the transfer block (TB) bit (read operation only).				
1	1	1	1	Invalid mode (DCR must be set to zero if EER is set to one). 1)				
1	1) If an invalid mode for the error recovery combination is sent by the initiator the target shall return CHECK CONDITION status with the sense key set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST.							

The read and write retry count fields specify the number of times that the target shall attempt its recovery algorithm during read and write operations, respectively. If the retry count field and the recovery time limit field are both specified in a MODE SELECT command, the field that requires the least time for data error recovery actions shall have priority.

The correction span field specifies the size, in bits, of the largest data error burst for which data error correction may be attempted. A correction span of zero specifies that the target shall use its default value or that this field is not supported.

The head offset count field specifies in two's-complement notation an incremental offset position from the track center to which the heads shall be moved. The effect of this field on write operations is unspecified. A head offset count of zero indicates that no offset is specified. A positive value indicates moving in the direction of increasing logical block addresses. A negative value indicates moving in the direction of decreasing logical block addresses. Any value specified in this field does not preclude the target from using positive or negative head

offset during error recovery. However, after any error recovery is completed the target shall return the head offset to the value specified in this field.

NOTE 131 The degree of offset for each incremental value and the number of valid values are device specific. It is recommended that the number of valid values be equal for the positive and negative head offset counts.

The target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST if an unsupported head offset value is specified. The valid bit shall be set to one and the information field shall be set to the positive value of the maximum head offset count that is supported. The target shall set the valid bit to zero if it cannot determine the maximum head offset count supported.

NOTE 132 If the target does not support this field, it returns a zero value in the MODE SENSE command.)

The data strobe offset count field specifies in two's-complement notation an incremental position to which the recovered data strobe shall be adjusted from its nominal setting. The effect of this field on write operations is unspecified. A value of zero indicates that no data strobe offset is specified. A positive value indicates movement in a positive direction as defined by the target. A negative value indicates movement in the negative direction as defined by the target. Any value specified in this field does not preclude the target from using positive or negative data strobe offset during error recovery. However, after any error recovery is completed the target shall return the data strobe offset to the value specified in this field.

NOTE 133 The degree of offset for each incremental value and the number of valid values are device specific. It is recommended that the number of valid values be equal for the positive and negative data strobe offset counts.

The target shall return CHECK CONDITION status and shall set the sense key to ILLEGAL REQUEST if an unsupported data strobe offset count value is specified. The valid bit shall be set to one and the information field shall be set to the positive value of the maximum data strobe offset count that is supported. The target shall set the valid bit to zero if it cannot determine the maximum data strobe offset supported.

NOTE 134 If the target does not support the data strobe offset count field, it returns a zero value in the MODE SENSE command.

The recovery time limit field specifies in increments of one ms the maximum time duration that the target shall use for data error recovery procedures. The target may round this value as described in 7.5.4. The limits in this field specifies the maximum error recovery time allowed for any individual logical block. A recovery time limit of zero specifies that the target shall use its default value.

If both retry count and recovery time limit are specified, the field that specifies the recovery action of least duration shall have priority.

## 9.3.3.7 Rigid disk drive geometry page

The rigid disk drive geometry page (see table 171) specifies parameters for direct-access devices employing a rigid disk drive.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved		Page cod	e (04h)			
1				Page len	gth (16h)			
2	(MSB)			Numbon o	f cylinder			
4				Number o	Cyrridei	3		(LSB)
5				Number of	f heads			-
6	(MSB)	· · · · · · · · · · · · · · · · · · ·	Stanting	ovlindon	white pro		tion	
8			Starting	cylinder-write precompensation				(LSB)
9	(MSB)		Ctonting					
11			Starting	cylinder-reduced write current (				(LSB)
12	(MSB)			Drive ste	n rate		-	
13				Dirve Ste	(LSB)			
14	(MSB)			Londing	vono ovlir	don		
16				Landing zone cylinder				(LSB)
17				Reserved			R	PL
18				Rotationa	l offset			
19				Reserved				
20	(MSB)		<u> </u>	Medium ro	totion no			
21				Meatam PC	ILALIUN PA			(LSB)
22			<u> </u>	Reserved				
23				Reserved				

Table 171 - Rigid disk drive geometry page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

NOTE 135 This page is intended to define drive geometry parameters of rigid disk drives. It may be used for other devices if applicable.

The number of cylinders field defines the number of physical cylinders used for data storage.

The number of heads field defines the physical number of heads used for data storage. Heads used exclusively for servo information are excluded.

The starting cylinder for write precompensation field is the physical cylinder at which write precompensation is to begin. The first cylinder is number zero. If the starting cylinder for write precompensation is equal to the value in the number of cylinders field, write precompensation shall be disabled by the target.

The starting cylinder for reduced write current field is the physical cylinder at which write current is reduced. The first cylinder is number zero. If the starting cylinder for reduced write current is equal to the value in the number of cylinders field, reduced write current shall be disabled by the target.

The drive step rate field indicates the step rate in 100 ns increments. The target shall use the drive step rate, greater than or equal to the drive step rate specified. If the target rounds this field it shall terminate the command as described in 7.5.4. A value of zero requests the target to set its default value.

The landing zone cylinder field indicates two's complement location where the target shall position the disk heads. A negative value indicates that the heads are positioned below cylinder zero by that number of cylinders. A positive value greater than the number of cylinders indicates that the heads are positioned beyond the cylinders used for data storage at the cylinder location specified. A zero indicates that the default should be used.

The rotational position locking (RPL) field is used for spindle synchronization as defined in table 172. See K of the ANSI X3.170A-1991 for further information on synchronized spindles.

RPL	Description
00b	Indicates that spindle synchronization is disabled or not supported
01b	The target operates as a synchronized-spindle slave
10b	The target operates as a synchronized-spindle master
11b	The target operates as a synchronized-spindle master control

Table 172 - Rotational position locking

NOTE 136 The signals and connectors used for rotational position locking are external to the SCSI bus and are not part of this standard.

If a target fails to achieve synchronization it shall create a unit attention condition to all initiators. The sense key shall be set to UNIT ATTENTION and the additional sense code set to RPL STATUS CHANGE.

If subsequent to achieving synchronization the target detects a change of synchronization:

- and, if the logical unit is not presently executing an I/O process for the initiator, the target shall create a unit attention condition. The sense key shall be set to UNIT ATTENTION and the additional sense code set to RPL STATUS CHANGE.
- b) and, if the logical unit is presently executing an I/O process and no other error occurs, then the target shall return CHECK CONDITION status. The sense key shall be set to RECOVERED ERROR if the target is able to complete the I/O process or HARDWARE ERROR if the target is unable to complete the I/O process. The additional sense code is set to RPL STATUS CHANGE.

The rotational offset indicates the amount of rotational skew that the target shall use when synchronized. The rotational skew is applied in the retarded direction (lagging the synchronized spindle master control). The value in the field is the numerator of a fractional multiplier that has 256 as its denominator (e.g. a value of 128 indicates a one-half revolution skew). A value of zero indicates that rotational offset shall not be used. This value may be rounded as defined in 7.5.4. The rotational offset is not used when a target is configured as synchronized-spindle master.

The medium rotation rate indicates the speed at which the medium rotates. The unit of measure is rotations per minute (e.g. 3 600 rpm).

### 9.3.3.8 Verify error recovery page

The verify error recovery page (see table 173) specifies the error recovery parameters the target shall use during the VERIFY command, the verify operation of the WRITE AND VERIFY command and the verify operation of the COPY AND VERIFY command.

Bit Byte	7	6	5	4	3	2	1	0		
0	PS Reserved Page code (07h)									
1	Parameter length (OAh)									
2		Reser	ved		EER	PER	DTE	DCR		
3	Verify retry count									
4	Verify correction span									
5				Reserved						
6				Reserved						
7				Reserved						
8				Reserved						
9	Reserved									
10	(MSB)									
11				covery time limit (LSB)						

Table 173 - Verify error recovery page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The AWRE bit as defined in the read-write error recovery page (see 9.3.3.6) applies to the WRITE AND VERIFY command. The VERIFY and COMPARE commands shall not perform automatic reallocation. The COPY and COPY AND VERIFY commands might or might not perform automatic reallocation depending on the settings of the mode parameters.

The EER, PER, DTE and DCR bits are defined in 9.3.3.6. The combinations of these bits is defined in 93.3.6.

The verify retry count field specifies the number of times that the target shall attempt its recovery algorithm during a verify operation. If the verify retry count and the verify recovery time limit are both specified, the one that requires the least time for data error recovery actions shall have priority.

The verify correction span field specifies the size, in bits, of the largest burst data error for which data error correction may be attempted. If the target does not implement this field, a value of zero is returned in MODE SENSE data.

The verify recovery time limit field specifies in increments of one millisecond the maximum time duration that the target shall use error recovery procedures to recover data for an individual logical block. The target may round this value as described in 7.5.4. If the verify retry count and the verify recovery time limit are both specified, the one that requires the least time for data error recovery actions shall have priority.

NOTE 137 To disable all types of correction and retries the initiator should set the EER bit to zero, the PER, DTE and DCR bits to one and the number of retries and recovery time limit to zero.

# 9.4 Definitions specific to direct-access devices

**9.4.1 cache memory**: A temporary (and often volatile) data storage area outside the user-accessible area. A cache memory is usually faster to access than the medium and thus has the effect of increasing data throughput by reducing the number of accesses to the medium.

**9.4.2 non-volatile medium**: Physical storage medium that retains data written to it for a subsequent read operation through a power-on condition. An example of this is a disk device that stores data as magnetic fields that do not require device power to exist.

**9.4.3 notch**: A notch refers to all or part of the medium having a consistent set of geometry parameters. Notches are used to increase storage capacity by optimizing the number of sectors per track between the inner and outer tracks.

**9.4.4 user-accessible**: The area of the medium that can be read from or written to by READ and WRITE commands.

**9.4.5 volatile medium**: Medium that may not retain data written to it for a subsequent read operation through a power-on condition. An example of this is a silicon memory device that loses data written to it if device power is lost.

# **10 Sequential-access devices**

# 10.1 Sequential-access device model

## 10.1.1 Physical elements

Sequential-access devices (called devices below) optimize their use in storing or retrieving user data in a sequential manner. Since access is sequential, position changes typically take a long time, when compared to direct-access devices.

Sequential-access devices are usually tape devices. The remainder of this description is from the point of view of a tape device; however, other implementations are not precluded.

The recording medium for tape devices consists of various widths and lengths of a flexible substrate coated with a semi-permanent magnetic material. The recording medium may be wound onto single reels or encapsulated into cartridges containing both a supply reel and a take-up reel. Several American National Standards exist covering the construction of reels and cartridges for interchange as well as recording techniques for many of the format or density combinations.

A complete unit composed of the recording medium and its physical carrier (e.g. reel, cartridge, cassette) is called a volume. Volumes have an attribute of being mounted or de-mounted on a suitable transport mechanism

Mounted is the state of a volume when the device is physically capable of executing commands that cause the medium to be moved. A volume is de-mounted when it is being loaded, threaded, unloaded, unthreaded, or when not attached to the device.

Ready is the state of the device when medium access and non-medium access commands can be executed. The device is not ready when no volume is mounted or, from the initiator's perspective, whenever all medium access commands report CHECK CONDITION status and a NOT READY sense key. Some devices may have a separate switch function which places the device in a not ready state even when a volume is mounted.

The write enabled or write protected state determines when an initiator may write information on a volume. This attribute is usually controlled by the user of the volume through manual intervention (e.g. thumbwheel switch).

The recording medium has two physical attributes called beginning-of-medium (BOM) and end-of-medium (EOM). Beginning-of-medium is at the end of the medium that is attached to the take-up reel. End-of-medium is at the end of the medium that is attached to the supply reel. In some cases, the medium is permanently affixed to one or both of the reel hubs.

As shown in figure 18, the entire physical length of medium is not usable for recording data. For most volumes, a length of the medium is reserved before the beginning-of-medium and after the end-of-medium position. This is done to provide sufficient tape wraps onto the reel hub(s) and to ensure that recording starts in an undamaged section of the medium.


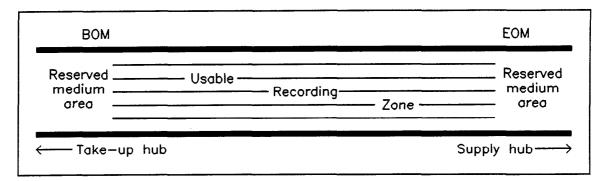


Figure 18 - Typical volume layout

### 10.1.2 Data storage characteristics

The position on the medium where a pattern of recorded signal may be written by one write component is called a track (see figure 19). A device may write or read from one or more tracks at a time, depending on the format.



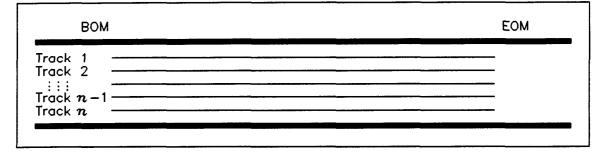


On a new volume, recording of one or more tracks begins after mounting the volume and moving from beginning-of-medium toward end-of-medium. The number of tracks written at one time is called a track group (TrkGrp). For recorded volumes, reading in the forward direction follows the same course of tracks as when writing.

If not all tracks are recorded at the same time, and the device reverses direction when approaching end-ofmedium and begins writing on remaining tracks, the recording method is called serpentine. For serpentine devices that record only one track at a time, each physical track represents one track group (see figure 20).

BC	Μ	EOM
Track 1 Track 2		TrkGrp 1
	←	TrkGrp 1
	<	
rack <b>n</b>	·	TrkGrp n



Some multi-track devices have only one track group, using a parallel storage format that supports the simultaneous recording of all available tracks (see figure 21).

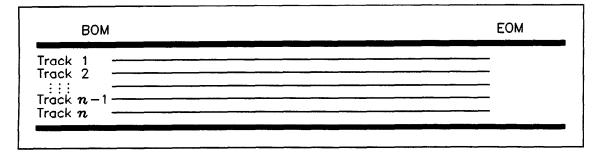

\_\_\_\_\_



The serpentine and parallel recording formats shown in the previous examples define tracks as longitudinal patterns of recorded information. One other storage format used by some devices records tracks diagonally across the medium. This recording technique is known as helical scan (see figure 22).

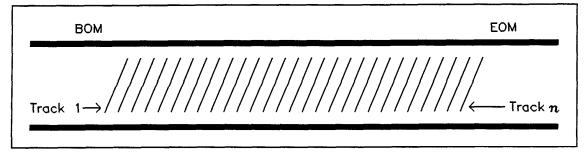


Figure 22 - Helical scan recording example

For most recording formats, an area at beginning-of-medium contains a format identification in the form of a tone burst or some other recognizable pattern. User data is not recorded in this area. The format identification is an attribute of a volume used for interchange purposes and is defined in applicable standards.

When writing, the initiator needs an indication that it is approaching the end of the permissible recording area. This position, called early-warning (EW), is typically reported to the initiator at a position early enough for the device to write any buffered data to the medium while still leaving enough room for additional recorded labels or filemarks. Some American National Standards include physical requirements for a marker placed on the medium to be detected by the device as early-warning (see figure 23).

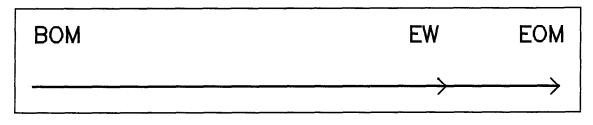


Figure 23 - Early-warning example

For devices which implement large data buffers, the early-warning position defined by a physical marker may be too close to the end of the recording region to permit emptying the data buffer(s). For these devices, a logical

220

concept of early-warning is often used to signal the initiator at an appropriate location prior to the physical marker.

### 10.1.3 Partitions within a volume

Another attribute of a volume is called a partition. Partitions consist of one or more non-overlapped mini-volumes, each with its own beginning and ending points, contained within single physical volume. Each partition (x) within a volume has a defined beginning-of-partition (BOP x), an early-warning position (EW x), and an end-of-partition (EOP x).

All volumes have a minimum of one partition called partition 0, the default data partition. For devices which support only one partition, the beginning-of-partition zero (BOP 0) may be equivalent to the beginning-of-medium and the end-of-partition zero (EOP 0) may be equivalent to the end-of-medium.

When a volume is mounted, it is logically positioned to beginning of the default data partition (BOP 0). When a REWIND command is received in any partition (x), the device positions to the beginning-of-partition (BOP x).

Partitions on a volume do not need to be recorded in any defined order, nor do all partition numbers in a sequence need to be present on a volume. It is sufficient for a device to be able to locate a partition, given its code value, or determine that it does or does not exist on the volume. For interchange, information about which partitions are present on a volume may be stored on the volume in a device-defined area (possibly unavailable to the initiator) or the information may be an intrinsic attribute of the device implementation.

Figure 24 shows a possible partition implementation for a four-track serpentine recording device, assuming that each track group defines a partition.

ВОМ	EOM
IrkGrp1 BOP0	$\longrightarrow$ EWO $\longrightarrow$ EOPO
TrkGrp2 EOP1 ← EW1← TrkGrp3 BOP2 - EW1←	EW2  EOP2
TrkGrp4 EOP3 ← EW3 ←	BOP3

Figure 24 - Partitioning example - one partition per track group

Another possible partition implementation for this four-track serpentine recording device is shown in figure 25, using two track groups to define each partition.

BOM	EOM
TrkGrp1 BOP0	
TrkGrp2 EOP0 ← EW0 ←	
TrkGrp3 BOP1 ───── TrkGrp4 EOP1 ←── EW1←────	

# Figure 25 - Partitioning example - one partition per two track groups

The previous examples show the beginning and ending points for a partition aligned with physical bounds of the medium. This is not a mandatory requirement for partitioning; it is sufficient for a device to be able to locate to and stay in any partition bounded by a BOP x and EOP x. In this case, a recorded mark or some other device-

recognizable attribute could be used to delineate the partitions. Figure 26 shows a possible two-partition implementation for a device with only one track group.

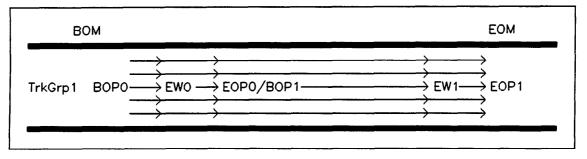


Figure 26 - Partitioning example - two partitions per track group

Three methods are defined in the MODE SENSE and MODE SELECT commands for managing partitions; each method is progressively more difficult to implement and manage:

- a) device-defined fixed locations;
- b) device-defined based on an initiator supplied number of partitions and a device specific allocation algorithm; and,
- c) definition by name and capacity by an initiator.

### 10.1.4 Logical elements within a partition

The area between BOP x and EOP x on a typical recorded volume contains at least two types of initiator accessible elements, data blocks and tape marks. These elements are controlled and transferred between the initiator and the medium using READ, READ REVERSE, WRITE, and WRITE FILEMARKS commands.

A unit of data supplied or requested by an initiator is called a logical block. Logical blocks are stored according to the specifications of the format for the volume and may be recorded as one or more physical blocks on the medium. When the physical block and the logical block are not recorded in a one-to-one relationship, it is the responsibility of the device to perform all blocking, de-blocking, padding, stripping, splitting or rebuilding of the logical data block(s) sent by an initiator.

Filemarks are special recorded elements containing no user data. The filemark format is defined in some American National Standards. Initiators traditionally use filemarks to separate user data from labels and logical groupings of data from each other. Since some format standards do not define an explicit end-of-data (EOD), host software has often used conventions with filemarks to represent an EOD indication. At least one American National Standard specifically defines filemark use for this purpose. In some implementations, the device's EOD definition may be specified the initiator using the MODE SELECT command.

A setmark is another type of special recorded element containing no user data, providing a segmentation scheme hierarchically superior to filemarks. This level of segmentation is useful for some high capacity storage devices to provide concise addressing and fast positioning to specific sets of data within a partition. In some implementations, the detection and reporting of setmarks may be controlled by the initiator using the MODE SELECT command.

Inter-block gaps, the gaps between blocks, filemarks, and setmarks, are introduced on the medium at the time a block or mark is written without explicit action by the initiator. Minimum and maximum lengths for inter-block gaps are defined in some American National Standards. In some devices, the length of inter-block gaps may be selected by the initiator using the MODE SELECT command while in other devices the gaps are fixed and non-changeable.

In addition to blocks, filemarks, and setmarks, erase gaps may be recorded on the medium through use of the ERASE command or device-initiated error recovery actions. Although explicitly recorded on the medium, there is normally no distinction between two contiguous erase gaps. An erase gap may be a length of erased medium or

a recorded pattern not distinguishable as a block or mark. Minimum and maximum lengths for erase gaps are defined in some American National Standards while some devices may have no implementation of an erase gap.

After writing data from BOP *x*, the medium is considered to be a contiguous grouping of blocks, filemarks, setmarks, and gaps. Certain American National Standards define gap lengths which, if exceeded, are to be considered as having reached blank medium. Depending on the format, this blank medium may be treated as an end-of-data indication, an error recovery area, or an unrecoverable medium error causing an interchange error. Unrecorded volumes (new or erased) may exhibit blank medium characteristics if an attempt is made to read or space the volume before data has been written.

A sequential-access device may be capable of supporting fixed or variable length blocks. The concept of fixed or variable mode for writing and reading blocks only indicates the method by which the initiator specifies the size of a logical block for transfer and not the method of recording physical blocks on the medium. However, a device that supports only fixed-length physical blocks may only be capable of supporting logical blocks of the same length. The length of a logical block is always described in bytes. The length of a physical block may or may not be recorded as an exact byte count, depending on the format.

### 10.1.5 Data buffering

A device may contain a temporary storage area capable of holding one or more logical blocks - a data buffer. A device data buffer may include any combination of blocks, filemarks, and setmarks in the process of being written to the medium, or it may contain read-ahead data blocks transferred from the medium.

A device with a data buffer may be capable of operating in either a buffered mode or an unbuffered mode. A device with no data buffer operates only in unbuffered mode. Either term is only applicable to the manner in which the device manages information to be written to the medium. Buffered mode is not applicable during read commands, regardless of whether read data passes through a data buffer.

A device operating in buffered mode may return GOOD status for write operations when all write data has been successfully transferred from the initiator into the device data buffer. For devices operating in unbuffered mode, GOOD status is not returned until all requested data, filemarks, or setmarks are successfully recorded on the medium.

When issuing a buffered WRITE FILEMARKS command with the immediate bit set to one, GOOD status is returned as soon as the command is validated. A WRITE FILEMARKS command with the immediate bit set to zero causes any buffered blocks, filemarks, and setmarks to be written to the medium. Upon successful completion of this process, which is called a synchronize operation, no blocks, filemarks, or setmarks remain in the data buffer which have not been written to the medium. A synchronize operation has no effect on a data buffer which contains only read-ahead data or write data which has already been successfully written to the medium.

Should an unrecoverable write error occur while in buffered mode, the device generates an error condition to the current active command. If no command is active, the error may be reported on the next applicable operation as a deferred error (see 8.2.14.2). For some implementations, asynchronous event notification or extended contingent allegiance may be required. Refer to 7.5.5 and 7.7 for descriptions of asynchronous event notification and extended contingent allegiance protocol.

The READ POSITION command may be used to determine the number and storage space of buffered blocks not written before the unrecoverable error was encountered.

A device with read-ahead data blocks in the data buffer does not report an unrecovered read error until the data block in error is requested by an initiator.

## 10.1.6 Recorded object descriptors (block identifiers)

Some recording formats specify that recorded objects (blocks, filemarks, and setmarks) have identifiers included in the recorded information to help determine write sequence and also to help detect device positioning errors. The identifier values are unique within a partition and may be unique within a volume.

The use of the term block identifier may imply some arithmetic sequence applied to the assignment of recorded objects. The block identifier assignment algorithm may be defined in an applicable format standard.

For some pre-formatted volumes, the identifiers are associated with physical blocks. In variable-length implementations, the identifier can be associated with a physical block when the logical block and the physical block have a one-to-one relationship on the medium.

Some formats may carry both physical and logical block identifiers recorded on the medium. When a logical block is split over more than one physical block, or multiple logical blocks are concatenated to form a physical block, the logical block identifier and the physical block identifier are not the same. Filemarks and setmarks may or may not have recorded identifiers, but if identifiers are used in the format, then each mark is assigned a value even if it is not explicitly recorded.

The READ POSITION and LOCATE commands use four-byte fields to hold these format dependent identifiers. For some implementations, this value may correspond to a real physical location; however, it is sufficient for the device to map the identifier to a value representing the unique recorded object. With this capability, the READ POSITION command may be used to report a device-defined block identifier and the initiator may use this value with a LOCATE command to position to the same location at some future time (provided the volume has not been rewritten in the interim).

## 10.1.7 Direction and position definitions

For sequential-access devices, positioning has the connotation of logically being in, at, before, or after some defined place within a volume. This definition means the position is capable of being repeated under the same circumstances. The orientation of usage for the four words (in, at, before, or after) is in one direction, from BOP  $\lambda$  toward EOP x. All positioning defined below is worded from this perspective. Devices without buffers have some physical position which relates to these logical positions. However, these definitions do not require the medium to have a physical position equivalent to the logical position unless explicitly stated.

The forward direction is defined as logically progressing from BOP x toward EOP x. The reverse direction is defined as logically progressing from EOP x toward BOP x. In serpentine devices, the logical forward or reverse direction has an alternating relationship to the physical motion of the medium.

The concept of being in some position means not being outside a defined region. The definition allows the position to be on the boundary of a defined region. When a volume is first mounted, the logical position is always at the beginning of the default data partition (BOP0). Whenever a volume is mounted and the medium motion is stopped, the position is in some partition. While moving between partitions, there is no stable position.

The concept of being at some position indicates being positioned to a logical or physical extremity of a partition. A sequential-access device may be positioned at beginning-of-medium, at BOP x, at end-of-data (EOD), at EOP x or at end-of-medium (EOM), since these are stable positions at extremities of a partition.

The concept of being before some position indicates that there is some element (data block, filemark, setmark, or other defined point) which may be encountered when moving toward EOP x, if the proper commands are issued. Being positioned before a particular data block means that if the device receives a valid READ command, the data block is transferred to the initiator. This position may also be before EW x and EOP x, since these are defined points within any partition. However, if data has not been written to the end-of-partition, these points may not be accessible by the initiator.

224

The concept of being after some position indicates that there is some element (data block, filemark, setmark, or other defined point) on the BOP x side of the current position which may be encountered if the proper commands are issued. When a READ command for a single data block has been successfully executed, the logical position is after the transferred data block.

### 10.1.8 Error reporting

If any of the following conditions occur during the execution of a command the target shall return CHECK CONDITION status. The appropriate sense key and additional sense code should be set. The following list illustrates some error conditions and the applicable sense keys. The list does not provide an exhaustive enumeration of all conditions that may cause the CHECK CONDITION status.

Condition Invalid logical block address	<u>Sense Key</u> ILLEGAL REQUEST
Unsupported option requested	ILLEGAL REQUEST
Target reset or medium change since last command from this initiator	UNIT ATTENTION
Self diagnostic failed	HARDWARE ERROR
Unrecovered read error	MEDIUM ERROR HARDWARE ERROR
Recovered read or write error	RECOVERED ERROR
Overrun or other error that might be resolved by repeating the command	ABORTED command
Attempt a WRITE, READ, READ REVERSE, VERIFY, or RECOVER BUFFERED DATA command with the fixed bit set to zero and variable block mode is not supported	ILLEGAL REQUEST
Attempt a WRITE, READ, READ REVERSE, VERIFY, or RECOVER BUFFERED DATA command with a fixed bit of zero and requested block length is not supported	ILLEGAL REQUEST
Attempt a WRITE, READ, READ REVERSE, VERIFY, or RECOVER BUFFERED DATA command with a fixed bit of one and MODE SENSE block length set to zero	ILLEGAL REQUEST
Attempt to execute an erase or write-type operation on write protected medium	DATA PROTECT
Deferred write error	MEDIUM ERROR VOLUME OVERFLOW

In the case of an unrecovered read or write error, if the read-write error recovery page (10.3.3.4) is implemented, the current values specify the target error recovery criteria. If this page is not implemented, the error recovery is vendor-specific.

In the case of an unrecovered read error, if the fixed bit is one, the valid bit shall be set to one and the information field shall be set to the requested transfer length minus the actual number of blocks read (not including the unrecovered block). If the fixed bit is zero, the valid bit shall be set to one and the information field shall be set to the requested transfer length. Upon termination, the logical position shall be after the unrecovered block.

In the case of an unrecovered write error, if unbuffered mode is selected and the fixed bit is set to one, the valid bit shall be set to one and the information field shall be set to the requested transfer length minus the actual number of blocks written. If unbuffered mode is selected and the fixed bit is set to zero, the information field shall be set to the requested transfer length.

In the case of an unrecovered write error or a deferred write error, if buffered mode is selected and the fixed bit is one, the valid bit shall be set to one and the information field shall be set to the total number of blocks, filemarks, and setmarks not written (the number of blocks not transferred from the initiator plus the number of blocks, filemarks, and setmarks remaining in the target's buffer). If buffered mode is selected and the fixed bit is zero, the information field shall be set to the total number of bytes, filemarks, and setmarks not written (the number of bytes, filemarks, and setmarks not written (the number of bytes). If buffered mode is selected and the fixed bit is zero, the information field shall be set to the total number of bytes, filemarks, and setmarks not written (the number of bytes not transferred from the initiator plus the number of bytes, filemarks, and setmarks remaining in the target's buffer). In both cases, the value in the information field may exceed the transfer length.

In the case of an unrecovered write error or a deferred write error, if buffered mode 1h is selected, the error shall be reported to the first initiator issuing a command (other than INQUIRY or REQUEST SENSE) or the first initiator responding to asynchronous event notification. If buffered mode 2h is selected, the error shall be reported to the initiator with unwritten data in the buffer.

# 10.2 Command descriptions for sequential-access devices

The commands for sequential-access devices shall be as shown in table 174.

		1	
CHANGE DEFINITION	40h	0	8.2.1
COMPARE	39h	0	8.2.2
COPY	18h	0	8.2.3
COPY AND VERIFY	3Ah	0	8.2.4
ERASE	19h	M	10.2.1
INQUIRY	12h	M	8.2.5
LOAD UNLOAD	1Bh	0	10.2.2
LOCATE	2Bh	0	10.2.3
LOG SELECT	4Ch	0	8.2.6
LOG SENSE	4Dh	0	8.2.7
MODE SELECT(6)	15h	M	8.2.8
MODE SELECT(10)	55h	0	8.2.9
MODE SENSE(6)	1Ah	M	8.2.10
MODE SENSE(10)	5Ah	0	8.2.11
MODE SENSE(1Ó) PREVENT ALLOW MEDIUM REMOVAL	1Eh	0	9.2.4
READ	08h	М	10.2.4
READ BLOCK LIMITS	05h	M	10.2.5
READ BUFFER	3Ch	0	8.2.12
READ POSITION	34h	Ó	10.2.6
READ REVERSE	OFh	0	10.2.7
RECEIVE DIAGNOSTIC RESULTS	1Ch	0	8.2.13
RECOVER BUFFERED DATA	14h	Ó	10.2.8
RELEASE UNIT	17h	M	10.2.9
REQUEST SENSE	03h	M	8.2.14
RESERVE UNIT	16h	M	10.2.10
REWIND	01h	M	10.2.11
SEND DIAGNOSTIC	1Dh	M	8.2.15
SPACE	11h	M	10.2.12
TEST UNIT READY	00h	( M	8.2.16
VERIFY	13h	0	10.2.13
WRITE	0Ah	M	10.2.14
WRITE BUFFER	3Bh	0	8.2.17
WRITE FILEMARKS	10h	M	10.2.15

# Table 174 - Commands for sequential-access devices

The following command codes are vendor-specific: 02h, 06h, 07h, 09h, 0Ch, and 0Eh. All other command codes for sequential-access devices are reserved for future standardization.

## 10.2.1 ERASE command

The ERASE command (see table 175) causes part or all of the medium to be erased beginning at the current position on the logical unit. As used here, erased means either the medium shall be erased or a pattern shall be written on the medium that appears as a gap to the target.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (19h)										
1	Logic	al unit r	number		Reserved		Immed	Long			
2				Reserved							
3				Reserved							
4				Reserved							
5				Control							

Table 175 - ERASE command

An immediate (Immed) bit of zero indicates that the target shall not return status until the erase operation has completed. An Immed bit of one indicates that the target shall return status as soon as the command has been validated. If CHECK CONDITION status is returned for an ERASE command with an Immed bit of one, the erase operation shall not be performed.

A long bit of one indicates that all remaining medium in the current partition shall be erased beginning at the current logical position. If the Immed bit is one, the target shall return status as soon as all buffered commands have completed execution and the command descriptor block of the ERASE command has been validated. The logical position following an ERASE command with a long bit of one is not specified by this standard.

NOTE 138 Some targets may reject an ERASE command with the long bit set to one if the logical unit is not at beginning-of-partition.

A long bit of zero specifies an erase gap defined by the gap size field in the device configuration page (10.3.3.1). If the gap size is zero or the field is not supported, a device defined erase gap operation shall be performed. If the Immed bit is one, the target shall return status as soon as the command descriptor block has been validated. Erase gaps may be used in initiator controlled error recovery or update in place applications.

If the logical unit encounters early-warning during an ERASE command, and any buffered data, filemarks, or setmarks remain to be written, the target action shall be as defined for the early-warning condition of the WRITE command (10.2.14). If the long bit is zero, the erase operation shall terminate with CHECK CONDITION status and return sense data as defined for the WRITE command. Any buffered erases are not reported as part of the information field.

#### 10.2.2 LOAD UNLOAD command

The LOAD UNLOAD command (see table 176) requests that the target enable or disable the logical unit for further operations. This command may also be used to request a retension function. Prior to performing the load or unload operation, the target shall ensure that all buffered data, filemarks, and setmarks have been transferred to the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (1	Bh)		
1	Logica	al unit	number		Res	erved		Immed
2				Reserved				
3				Reserved				
4				Reserved		EOT	Reten	Load
5				Control				

### Table 176 - LOAD UNLOAD command

An immediate (Immed) bit of zero indicates that the target shall not return status until the load or unload operation has completed. An Immed bit of one indicates that the target shall return status as soon as all buffered commands have completed execution and the command descriptor block of the LOAD UNLOAD command has been validated. If CHECK CONDITION status is returned for a LOAD UNLOAD command with an Immed bit of one, the load or unload operation shall not be performed.

NOTE 139 For compatibility with devices implemented prior to this version of the standard, a WRITE FILEMARKS command with an Immed bit of zero should be used to ensure that all buffered data, filemarks, or setmarks have been transferred to the medium prior to issuing a LOAD UNLOAD command with an Immed bit of one.

An end-of-tape (EOT) bit of one indicates that an unload operation (load bit set to zero) shall position the medium at end-of-medium for removal from the device. An EOT bit of zero indicates that an unload operation shall position the medium at beginning-of-medium for removal from the device.

An EOT bit of one and a load bit of one shall cause the target to return CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST in the sense data.

A retension (ReTen) bit of one indicates that the medium on the logical unit shall have the correct tension applied. Implementation of the retension function is device specific.

If the load bit is set to one, the medium in the logical unit shall be loaded and positioned to the beginning-ofpartition zero. If the load bit is zero, the medium in the logical unit shall be positioned for removal at the extreme position along the medium specified by the EOT bit. Following successful completion of an unload operation, the target shall return CHECK CONDITION status with the sense key set to NOT READY for all subsequent mediumaccess commands until a new volume is mounted or a load operation is successfully completed.

When operating in buffered mode 1h or 2h (see 10.3.3), the target shall discard any unwritten buffered data after the LOAD UNLOAD command is validated if the previous command was terminated with CHECK CONDITION status and the device is unable to continue successfully writing.

# 10.2.3 LOCATE command

LOCATE command (see table 177) causes the target to position the logical unit to the specified block address in a specified partition. Upon completion, the logical position shall be before the specified location. Prior to performing the locate operation, the target shall ensure that all buffered data, filemarks, and setmarks have been transferred to the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (2	Bh)		
1	Logic	al unit	number	Res	served	BT	CP	Immed
2	- · · · · · · · · · · · · · · · · · · ·			Reserved				
3	(MSB)							
4	- <u></u>			Block add	droce			
5	<u></u>			DIUCK AUG	11 633			
6								(LSB)
7				Reserved				
8				Partition	ו			
9				Control				



A block address type (BT) bit of one indicates the value in the block address field shall be interpreted as a device-specific value. A BT bit of zero indicates the value in the block address field shall be interpreted as an SCSI logical block address.

A change partition (CP) bit of one indicates that a change to the partition specified in the partition field is to occur prior to positioning to the block specified in the block address field. A CP bit of zero indicates no partition change is to be made and the partition field is to be ignored.

An immediate (Immed) bit of zero indicates that the target shall not return status until the locate operation has completed. An Immed bit of one indicates that the target shall return status as soon as all buffered commands have completed execution and the command descriptor block of the LOCATE command has been validated. If CHECK CONDITION status is returned for a LOCATE command with an Immed bit of one, the locate operation shall not be performed.

The block address field (see 10.1.6) specifies the block address to which the target shall position the medium based on the current setting of the BT bit.

The partition field specifies which partition to select if the CP bit is one. Refer to the sequential-access device model (see 10.1.3) and the medium partition pages (see 10.3.3.2 and 10.3.3.3) for additional information about partitioning.

#### 10.2.4 READ command

The READ command (see table 178) requests that the target transfer one or more block(s) of data to the initiator beginning with the next block on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0			
0		Operation code (08h)									
1	Logica	al unit n	umber		Reserved	l	SILI	Fixed			
2	(MSB)	(MSB)									
3				Transfer	length						
4	(LSB)										
5				Control							

#### Table 178 - READ command

The fixed bit specifies whether fixed-length or variable-length blocks are to be transferred. Refer to the READ BLOCK LIMITS command (see 10.2.5) for additional information about fixed and variable block mode.

If the fixed bit is one, the transfer length specifies the number of fixed-length blocks to be transferred, using the current block length reported in the mode parameters block descriptor (see 8.3.3). If the fixed bit is zero, a variable-length block is requested with the transfer length specifying the maximum number of bytes allocated for the returned data.

A successful READ command with a fixed bit of one shall transfer the requested transfer length times the current block length in bytes to the initiator. A successful READ command with a fixed bit of zero shall transfer the requested transfer length in bytes to the initiator. Upon completion, the logical position shall be after the last block transferred (end-of-partition side).

If the suppress incorrect length indicator (SILI) bit is one and the fixed bit is zero, the target shall:

- a) report CHECK CONDITION status for an incorrect length condition only if the overlength condition exists (see 10.1.8) and the block length field in the mode parameter block descriptor is nonzero (see 8.3.3).
- b) not report CHECK CONDITION status if the only error is the underlength condition (see 10.4), or if the only error is the overlength condition and the block length field of the mode parameters block descriptor is zero.

NOTE 140 Since the residue information normally provided in the information field of the sense data may not be available when the SILI bit is set, other methods for determining the actual block length should be used (e.g. including length information in the data block).

If the SILI bit is one and the fixed bit is one, the target shall terminate the command with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST with an additional sense code of INVALID FIELD IN CDB.

If the SILI bit is zero and an incorrect length block is read, CHECK CONDITION status shall be returned and the ILI and valid bits shall be set to one in the sense data. Upon termination, the logical position shall be after the incorrect length block (end-of-partition side). If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read (not including the incorrect length block). If the fixed bit is zero, the information field shall be set to the requested transfer length minus the actual block length. Targets that do not support negative values shall set the information field to zero if the overlength condition exists (see 10.4).

230

NOTE 141 In the above case with the fixed bit of one, only the position of the incorrect-length logical block can be determined from the sense data. The actual length of the incorrect block is not reported. Other means may be used to determine its actual length (e.g. read it again with the fixed bit set to zero).

A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered an error and the logical position shall not be changed.

If the logical unit encounters a filemark during a READ command, CHECK CONDITION status shall be returned and the filemark and valid bits shall be set to one in the sense data. The sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate. Upon termination, the logical position shall be after the filemark (end-ofpartition side). If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read (not including the filemark). If the fixed bit is zero, the information field shall be set to the requested transfer length.

If the logical unit encounters a setmark during a READ command and the RSmk bit is set to one in the device configuration page (see 10.3.3.1), CHECK CONDITION status shall be returned and the filemark and valid bits shall be set to one in the sense data. The sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate, and the additional sense code shall be set to SETMARK DETECTED. Upon termination, the logical position shall be after the setmark (end-of-partition side). If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read (not including the setmark). If the fixed bit is zero, the information field shall be set to the requested transfer length. The target shall not return CHECK CONDITION when a setmark is encountered if the RSmk bit is set to zero or if this option is not supported.

If the logical unit encounters early-warning during a READ command and the REW bit is set to one in the device configuration page (see 10.3.3.1), CHECK CONDITION status shall be returned upon completion of the current block. The sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate. The EOM and valid bits shall be set to one in the sense data. Upon termination, the logical position shall be after the last block transferred (end-of-partition side). If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read. If the fixed bit is zero, the information field shall be set to the requested transfer length minus the actual block length. The target shall not return CHECK CONDITION status when early-warning is encountered if the REW bit is zero or if the REW option is not supported.

NOTE 142 A REW bit of one is not recommended for most system applications since read data may be present after early-warning.

If the logical unit encounters end-of-data during a READ command, CHECK CONDITION status shall be returned, the sense key shall be set to BLANK CHECK, and the valid bit shall be set to one in the sense data. If end-ofdata is encountered at or after early-warning, the EOM bit shall also be set to one. Upon termination, the logical position shall be after the last recorded logical block (end-of-partition side). If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read. If the fixed bit is zero, the information field shall be set to the requested transfer length.


If the logical unit encounters end-of-partition during a READ command, CHECK CONDITION status shall be returned, the sense key shall be set to MEDIUM ERROR, and the EOM and valid bits shall be set to one in the sense data. The medium position following this condition is not defined. If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks read. If the fixed bit is zero, the information field shall be set to the requested transfer length.


# 10.2.5 READ BLOCK LIMITS command

The READ BLOCK LIMITS command (see table 179) requests that the logical unit's block length limits capability be returned. The READ BLOCK LIMITS data shown in table 180 shall be returned.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (O	5h)		
1	Logica	al unit r	number			Reserved		
2				Reserved				
3				Reserved				
4				Reserved				
5				Control				

## Table 179 - READ BLOCK LIMITS command



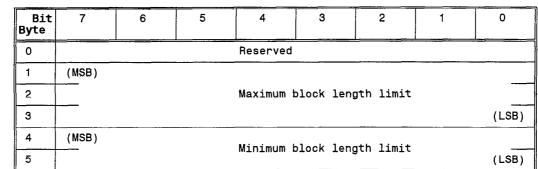

If the maximum block length limit value equals the minimum block length limit value, the logical unit supports the transfer of data in the fixed-block mode only, with the block length equal to the given value. In this case the fixed bit shall be set to one in the WRITE and READ commands.

If the maximum block length limit value is not equal to the minimum block length limit value, the logical unit supports the transfer of data in either fixed-block or variable-block modes, with the block length constrained between the given limits in either mode. The transfer mode is controlled by the fixed bit in the WRITE or READ commands. If the maximum block limit is zero a maximum block length is not specified.

232

# 10.2.6 READ POSITION command

The READ POSITION command (see table 181) reports the current position of the logical unit and any data blocks in the buffer. No medium movement shall occur as a result of the command.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (S	94h)		
1	Logica	al unit I	number		Rese	erved		ВТ
2				Reserved				
3				Reserved			<u> </u>	
4				Reserved				
5				Reserved				
6		<u></u>		Reserved				
7				Reserved	<u> </u>	<u>.</u>		
8				Reserved				
9				Control				

Table 181 - READ POSITION command

A block address type (BT) bit of one requests the target to return its current first block location and last block location as a device-specific value. A BT bit of zero requests the target to return the first block location and the last block location as an SCSI logical block address (relative to a partition).

If the logical unit is not capable of reporting block locations, the BPU bit shall be set to one in the returned data. Support for this option of the READ POSITION command is indicated by a BIS bit set to one in the device configuration page (see 10.3.3.1).

The READ POSITION data shown in table 182 shall be returned.

Bit Byte	7	6	5	4	3	2	1	0
0	BOP	EOP		Reserved BPU F				
1	Partition number							
2				Reserved				
3		Reserved						
4	(MSB)	(MSB) First block location						
7								(LSB)
8	(MSB)				. 1			
11			L	Last block	( Tocation	1		(LSB)
12			F	Reserved				
13	(MSB)				- 3 lu			
15	Number of blocks in buffer (LSB)							(LSB)
16	(MSB)			lumbon of	huton in	huff on		
19			Г 	Number of	bytes in	butter		(LSB)

Table 182 - READ POSITION data format

- - -

A beginning of partition (BOP) bit of one indicates that the logical unit is at the beginning-of-partition in the current partition. A BOP bit of zero indicates that the current logical position is not at the beginning-of-partition.

An end of partition (EOP) bit of one indicates that the logical unit is positioned between early-warning and end-ofpartition in the current partition. An EOP bit of zero indicates that the current logical position is not between early-warning and end-of-partition.

NOTE 143 The BOP and EOP indications are not necessarily a result of a physical tape marker (e.g. reflective marker).

A block position unknown (BPU) bit of one indicates that the first and last block locations are not known or cannot be obtained. A BPU bit of zero indicates that the first and last block location fields contain valid position information.

The partition number field reports the partition number for the current logical position. If the logical unit only supports one partition for the medium, this field shall be set to zero.

The first block location field indicates the block address associated with the current logical position. The value shall indicate the block address of the next data block to be transferred between the initiator and the target if a READ or WRITE command is issued.

The last block location field indicates the block address (see 10.1.6) associated with the next block to be transferred from the buffer to the medium. The value shall indicate the block address of the next data block to be transferred between the buffer and the medium. If the buffer does not contain a whole block of data or is empty, the value reported for the last block location shall be equal to the value reported for the first block location.

NOTE 144 The information provided by the first and last block location fields can be used in conjunction with the LOCATE command to position the medium at the appropriate logical block on another device in the case of unrecoverable errors on the first device.

The number of blocks in buffer field indicates the number of data blocks in the target's buffer that have not been written to the medium.

The number of bytes in buffer field indicates the total number of data bytes in the target's buffer that have not been written to the medium.

#### 10.2.7 READ REVERSE command

The READ REVERSE command (see table 183) requests that the target transfer one or more block(s) of data to the initiator beginning at the current position on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (OFh)										
1	Logica	Logical unit number Reserved SILI Fixed										
2	(MSB)											
3	- <u></u>			Transfer	length							
4	(LSB)											
5	Control											

Table 183 - READ REVERSE command

The execution of this command is similar to the READ command except that medium motion is in the reverse direction. All block(s), and the byte(s) within the block(s), are transferred in the reverse order. The order of bits within each byte shall not be changed. Upon completion of a READ REVERSE command, the logical position shall be before the last block transferred (beginning-of-partition side).

Refer to the READ command (see 10.2.4) for a description of the fixed bit, the SILI bit, the transfer length field, and any associated error conditions.

Filemarks, setmarks, incorrect length blocks, and unrecovered read errors are handled the same as in the READ command, except that upon termination the logical position shall be before the filemark, setmark, incorrect length block, or unrecovered block (beginning-of-partition side).

If the logical unit encounters beginning-of-partition during a READ REVERSE command, CHECK CONDITION status shall be returned and the EOM and valid bits shall be set to one in the sense data. The sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate. If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks transferred. If the fixed bit is zero, the information field shall be set to the requested transfer length transfer length.

# 10.2.8 RECOVER BUFFERED DATA command

The RECOVER BUFFERED DATA command (see table 184) is used to recover data that has been transferred to the target's buffer but has not been successfully written to the medium. It is normally used to recover from error or exception conditions that make it impossible to write the buffered data to the medium. One or more RECOVER BUFFERED DATA commands may be required to recover all unwritten buffered data.

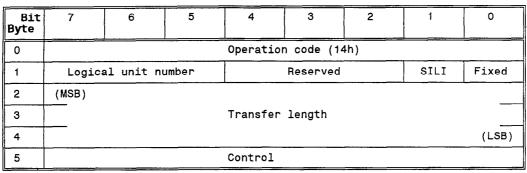


Table 184 - RECOVER BUFFERED DATA command

The execution of this command is similar to the READ command except that the data is transferred from the target's buffer instead of the medium. The order in which block(s) are transferred is defined by the RBO bit in the device configuration page (see 10.3.3.1). If the RBO bit is not implemented, block(s) are transferred in the same order they would have been transferred to the medium.

Refer to the READ command (see 10.2.4) for a description of the fixed bit, the SILI bit, the transfer length field, and any associated error conditions.

If the fixed bit is zero, no more than the requested transfer length shall be transferred to the initiator. If the requested transfer length is smaller than the actual length of the logical block to be recovered, only the requested transfer length shall be transferred to the initiator and the remaining data for the current logical block shall be discarded.

NOTE 145 During recovery operations involving unknown block sizes, the initiator should select the maximum block length supported by the target to ensure that all buffered data will be transferred and set the fixed bit to zero.

If a buffered filemark is encountered during a RECOVER BUFFERED DATA command, CHECK CONDITION status shall be returned, the sense key shall be set to NO SENSE, and the filemark and valid bits shall be set to one in the sense data. Upon termination, the logical position shall be after the filemark. If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks transferred (not including the filemark).

If the fixed bit is zero, the information field shall be set to the requested transfer length.

If a buffered setmark is encountered during a RECOVER BUFFERED DATA command and the RSmk bit is set to one in the device configuration page (see 10.3.3.1), CHECK CONDITION status shall be returned and the filemark and valid bits shall be set to one in the sense data. The sense key shall be set to NO SENSE and the additional sense code shall be set to SETMARK DETECTED. Upon termination, the logical position shall be after the setmark. If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks transferred (not including the setmark). If the fixed bit is zero, the information field shall be set to the requested transfer length. The target shall not return CHECK CONDITION when a setmark is encountered if the RSmk bit is zero or if this option is not supported.

If an attempt is made to recover more logical blocks of data than are contained in the target's buffer, CHECK CONDITION status shall be returned, the sense key shall be set to NO SENSE, and the EOM and valid bits shall

236

be set to one in the sense data. If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks transferred. If the fixed bit is zero, the information field shall be set to the requested transfer length.

### 10.2.9 RELEASE UNIT command

The RELEASE UNIT command (see table 185) is used to release previously reserved logical units for the requesting initiator, or if it is a third-party release, to another specified SCSI device.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (1	7h)		
1	Logical	unit nu	ımber	3rdPty	Third p	arty devi	lce ID	Reserved
2				Reserved				
3				Reserved				
4				Reserved				
5				Control				

Table 185 - RELEASE UNIT command

The RESERVE UNIT and RELEASE UNIT commands provide the basic mechanism for contention resolution in multiple-initiator systems.

If a valid reservation exists for the I\_T\_L nexus, the target shall release the reservation and return GOOD status.

A reservation may only be released by the initiator that made it. It is not an error to attempt to release a reservation that is not currently valid or is held by another initiator. In this case, the target shall return GOOD status without altering any other reservation.

#### 10.2.9.1 Third-party release

Third-party release allows an initiator to release a logical unit that was previously reserved using a third-party reservation (see 10.2.10.1).

If the third party (3rdPty) bit is zero, then a third-party release is not requested. If the 3rdPty bit is one, and if the reservation was made using a third-party reservation by the initiator that is requesting the release for the same SCSI device as specified in the third-party device ID, then the target shall release the reservation.

If the 3rdPty bit is one, the target shall not modify the mode parameters for commands received from the thirdparty device even if the target implements the transfer of mode parameters with a third-party RESERVE UNIT command.

NOTE 146 When a target implements independent storage of mode parameters for each initiator, a third-party RESERVE UNIT command effects a transfer of the current mode parameters. Those set up by the initiator of the RESERVE UNIT are to be set as the mode parameters used for commands from the third-party device (usually a copy master device). A unit attention condition notifies the third-party device of the changed mode parameters. A successful third-party RELEASE UNIT command leaves the transferred parameters intact. The third-party device can issue MODE SENSE and MODE SELECT commands to query and modify the mode parameters.

# 10.2.10 RESERVE UNIT command

The RESERVE UNIT command (see table 186) is used to reserve logical units for the exclusive use of the requesting initiator, or if it is a third-party reservation, to another specified SCSI device.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (1	6h)		
1	Logical	unit num	ber	3rdPty	Third p	arty devi	ce ID	Reserved
2				Reserved				
3				Reserved				
4				Reserved				
5				Control				

Table 186 - RESERVE UNIT command

The RESERVE UNIT and RELEASE UNIT commands provide the basic mechanism for contention resolution in multiple-initiator systems.

This command requests that the entire logical unit be reserved for the exclusive use of the initiator until the reservation is superseded by another valid RESERVE UNIT command from the initiator that made the reservation or until released by a RELEASE UNIT command from the same initiator that made the reservation, by a BUS DEVICE RESET message from any initiator, by a hard reset condition, or by a power on cycle. The reservation shall not be granted if the logical unit is reserved by another initiator. It shall be permissible for an initiator to reserve a logical unit that is currently reserved by that initiator.

If the logical unit is reserved for another initiator, the target shall return RESERVATION CONFLICT status.

If, after honouring the reservation, any other initiator attempts to perform any command on the reserved logical unit other than an INQUIRY, REQUEST SENSE, PREVENT ALLOW MEDIUM REMOVAL (with a prevent bit of zero), or a RELEASE UNIT command, the command shall be rejected with RESERVATION CONFLICT status.

#### 10.2.10.1 Third-party reservation

Third-party reservation allows an initiator to reserve a logical unit for another SCSI device. This is intended for use in multiple-initiator systems that use the COPY command.

If the third-party (3rdPty) bit is zero, a third-party reservation is not requested. If the 3rdPty bit is one the target shall reserve the logical unit for the SCSI device specified in the third-party device ID field. The target shall preserve the reservation until it is superseded by another valid RESERVE UNIT command from the initiator that made the reservation or until it is released by the same initiator, by a BUS DEVICE RESET message from any initiator, or a hard reset condition. The target shall ignore any attempt to release the reservation made by any other initiator.

If independent sets of parameters are implemented, a third party reservation shall cause the target to transfer the set of parameters in effect for the initiator of the RESERVE command to the parameters used for commands from the third-party device. Any subsequent command issued by the third-party device is executed according to the mode parameters in effect for the initiator that sent the RESERVE command.

If independent sets of parameters are implemented, a third party reservation shall cause the target to transfer the set of parameters in effect for the initiator of the RESERVE command to the parameters used for commands from the third party device. Any subsequent command issued by the third-party device is executed according to the mode parameters in effect for the initiator that sent the RESERVE command.

NOTE 147 This transfer of the mode parameters is applicable to target devices which store mode information independently for different initiators. This mechanism allows an initiator to set the mode parameters of a target for the use of a copy master (i.e. the third-party device). The third-party copy master may subsequently issue a MODE SELECT command to modify the mode parameters.

#### 10.2.10.2 Superseding reservations

An initiator that currently has a logical unit reserved may modify the current reservation by issuing another RESERVE UNIT command to the same logical unit. The superseding reservation shall release the current reservation if the superseding reservation request is granted. The current reservation shall not be modified if the superseding reservation request cannot be granted. If the superseding reservation cannot be granted because of conflicts with a previous reservation (other than the current reservation), then the target shall return RESERVATION CONFLICT status.

NOTE 148 Superseding reservations allow the third-party SCSI device ID to be changed during a reservation using the third-party reservation option. This capability is necessary for certain situations when using COMPARE, COPY, and COPY AND VERIFY commands.

#### 10.2.11 REWIND command

The REWIND command (see table 187) causes the target to position the logical unit to the beginning-of-partition in the current partition. Prior to performing the rewind operation, the target shall ensure that all buffered data, filemarks, and setmarks have been transferred to the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code ((	D1h)		
1	Logic	al unit r	number		Res	served		Immed
2				Reserved				
3				Reserved				
4				Reserved				
5				Control				

#### **Table 187 - REWIND command**


An immediate (Immed) bit of zero indicates that the target shall not return status until the rewind operation has completed. An Immed bit of one indicates that the target shall return status as soon as all buffered commands have completed execution and the command descriptor block of the REWIND command has been validated. If CHECK CONDITION status is returned for a REWIND command with an Immed bit of one, the rewind operation shall not be performed.

NOTE 149 For compatibility with devices implemented prior to this standard, it is suggested that a WRITE FILEMARKS command with an Immed bit of zero be used to ensure that all buffered data, filemarks, or setmarks have been transferred to the medium before issuing a REWIND command with an Immed bit of one.

When operating in buffered mode 1h or 2h (see 10.3.3), the target shall discard any unwritten buffered data after the REWIND command is validated if the previous command was terminated with CHECK CONDITION status and the device is unable to continue successfully writing.

#### 10.2.12 SPACE command

The SPACE command (see table 188) provides a variety of positioning functions that are determined by the code and count. Both forward and reverse positioning are provided, although some targets may only support a subse of this command. If an initiator requests an unsupported function, the command shall be terminated with CHECk CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

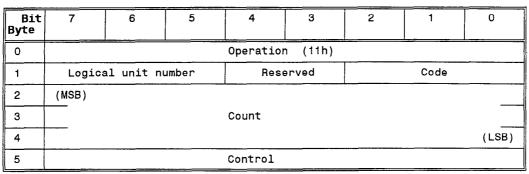

**Table 188 - SPACE command** 

The code field is defined in table 189.

Table 189 - Code field definition

Code	Description	Support
000b 001b 010b 011b 100b 101b 110b - 111b	Blocks Filemarks Sequential filemarks End-of-data Setmarks Sequential setmarks Reserved	Mandatory Mandatory Optional Optional Optional Optional

When spacing over blocks, filemarks, or setmarks, the count field specifies the number of blocks, filemarks, or setmarks to be spaced over in the current partition. A positive value N in the count field shall cause forward positioning (toward end-of-partition) over N blocks, filemarks, or setmarks ending on the end-of-partition side of the last block, filemark, or setmark. A zero value in the count field shall cause no change of logical position. A negative value -N (two's complement notation) in the count field shall cause reverse positioning (toward beginning-of-partition) over N blocks, filemarks, or setmarks ending on the beginning-of-partition side of the last block, filemark, or setmarks. Support of spacing in the reverse direction is optional.

If a filemark is encountered while spacing over blocks, the command shall be terminated. The logical position shall be on the end-of-partition side of the filemark if movement was in the forward direction and on the beginning-of-partition side of the filemark if movement was in the reverse direction. CHECK CONDITION status shall be returned to the initiator, the sense key shall be set to NO SENSE, and the filemark and valid bits shall be set to one in the sense data. The information field shall be set to the requested count minus the actual number of blocks spaced over (not including the filemark).

If a setmark is encountered while spacing over blocks or filemarks and the RSmk bit is set to one in the device configuration page (see 10.3.3.1), the command shall be terminated, CHECK CONDITION status shall be returned to the initiator, and the filemark and valid bits shall be set to one in the sense data. The sense key shall be set to NO SENSE and the additional sense code shall be set to SETMARK DETECTED. The information field shall be set to the requested count minus the actual number of blocks or filemarks spaced over (not including the setmark). The logical position shall be on the end-of-partition side of the setmark if movement was in the forward direction and on the beginning-of-partition side of the setmark if movement was in the reverse direction. The

target shall not return CHECK CONDITION status when a setmark is encountered if the RSmk bit is set to zero or if this option is not supported.

If early-warning is encountered while spacing over blocks, filemarks, or setmarks and the REW bit is set to one in the device configuration page (see 10.3.3.1), CHECK CONDITION status shall be returned, the sense key shall be set to NO SENSE, and the EOM and valid bits shall be set to one in the sense data. The information field shall be set to the requested count minus the actual number of blocks, filemarks, or setmarks spaced over as defined by the code value. If the REW bit is zero or the option is not supported by the target, the target shall not report CHECK CONDITION status at the early-warning point.

NOTE 150 Setting the REW bit is not recommended for most system applications since data may be present after early-warning.

If end-of-data is encountered while spacing over blocks, filemarks, or setmarks, CHECK CONDITION status shall be returned, the sense key shall be set to BLANK CHECK, and the valid bit shall be set to one in the sense data. Additionally, the EOM bit shall be set to one if end-of-data is encountered at or after early-warning. The information field shall be set to the requested count minus the actual number of blocks, filemarks, or setmarks spaced over as defined by the code value.

If the end-of-partition is encountered while spacing forward over blocks, filemarks, or setmarks, CHECK CONDITION status shall be returned, the sense key shall be set to MEDIUM ERROR, the EOM bit shall be set to one, and the valid bit shall be set to one. The information field shall be set to the requested count minus the actual number of blocks, filemarks, or setmarks spaced over as defined by the code value.

If beginning-of-partition is encountered while spacing over blocks, filemarks, or setmarks in the reverse direction, the target shall return CHECK CONDITION status and shall set the sense key to NO SENSE. The EOM and valid bits shall be set to one, and the information field set to the total number of blocks, filemarks, or setmarks not spaced over (the requested number of blocks, filemarks, or setmarks minus the actual number of blocks, filemarks, or setmarks spaced over).

When spacing over sequential filemarks (or setmarks), the count field is interpreted as follows:

- a) A positive value N shall cause forward movement to the first occurrence of N or more consecutive filemarks (or setmarks) being logically positioned after the N<sup>th</sup> filemark (or setmark).
- b) A zero value shall cause no change in the logical position.
- c) A negative value -N (2's complement notation) shall cause reverse movement to the first occurrence of N or more consecutive filemarks (or setmarks) being logically positioned on the beginning-of-partition side of the N<sup>th</sup> filemark (or setmark).

If a setmark is encountered while spacing to sequential filemarks and the RSmk bit is set to one in the device configuration page (see 10.3.3.1), CHECK CONDITION status shall be returned, the filemark bit shall be set to one, and the valid bit shall be set to zero. The sense key shall be set to NO SENSE and the additional sense code shall be set to SETMARK DETECTED. The target shall not return CHECK CONDITION status when a setmark is encountered if the RSmk bit is set to zero or if this option is not supported.

If end-of-partition is encountered while spacing to sequential filemarks or setmarks, CHECK CONDITION status shall be returned, the sense key shall be set to MEDIUM ERROR, the EOM bit shall be set to one, and the valid bit shall be set to zero.

If end-of-data is encountered while spacing to sequential filemarks or setmarks, CHECK CONDITION status shall be returned, the sense key shall be set to BLANK CHECK, and the valid bit shall be set to zero. Additionally, the EOM bit shall be set to one if end-of-data is encountered at or after early-warning.

When spacing to end-of-data, the count field is ignored. Upon successful completion, the medium shall be positioned such that a subsequent write operation would append to the last logically recorded information.

If end-of-partition is encountered while spacing to end-of-data, CHECK CONDITION status shall be returned, the sense key shall be set to MEDIUM ERROR, the EOM bit shall be set to one, and the valid bit shall be set to zero.

### 10.2.13 VERIFY command

The VERIFY command (see table 190) requests that the target verify one or more block(s) beginning with the next block on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (1	3h)		
1	Logica	al unit n	umber	Reser	rved	Immed	BytCmp	Fixed
2	(MSB)	· · · · · · · · · · · · · · · · · · ·						
3				Verificat	tion leng	jth		
4								(LSB)
5				Control				

Table 190 - VERIFY command

An immediate (Immed) bit of zero indicates that the command shall not return status until the verify operation has completed. An Immed bit of one indicates that status shall be returned as soon as the command descriptor block has been validated (but after the data transfer from the initiator, if the BytCmp bit is one).

NOTE 151 In order to ensure that no errors are lost, the initiator should set the Immed bit to zero on the last VERIFY command when issuing a series of VERIFY commands.

A byte compare (BytCmp) bit of zero indicates that the verification shall be simply a medium verification (e.g. CRC, ECC). No data shall be transferred from the initiator to the target.

A BytCmp bit of one indicates that the target shall perform a byte-by-byte compare of the data on the medium and the data transferred from the initiator. Data shall be transferred from the initiator to the target as in a WRITE command. If the BytCmp bit is one and the byte compare option is not supported, the target shall terminate the command with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

The verification length specifies the amount of data to verify, in blocks or bytes, as indicated by the fixed bit. Refer to the READ command (see 10.2.4) for a description of the fixed bit and any associated error conditions. If the BytCmp bit is one and the verification length is zero, no data shall be verified and the current logical position shall not be changed. This condition shall not be considered as an error.

The VERIFY command shall terminate when the verification length has been satisfied, when an incorrect length block is encountered, when a filemark is encountered, when a setmark is encountered (if the RSmk bit is one in the device configuration page, see 10.3.3.1), when end-of-data is encountered, when the end-of-partition is encountered, when early-warning is encountered (if the REW bit is one in the device configuration page, see 10.3.3.1), or when an unrecoverable read error is encountered. The status and sense data for each of these conditions are handled in the same manner as in the READ command (see 10.2.4). Upon successful completion of a VERIFY command, the logical position shall be after the last block verified.

If the data does not compare (BytCmp bit of one), the command shall terminate with CHECK CONDITION status, the valid bit shall be set to one, and the sense key shall be set to MISCOMPARE. If the fixed bit is one, the information field shall be set to the requested verification length minus the actual number of blocks successfully verified. If the fixed bit is zero, the information field shall be set to the requested verification length minus the actual number of bytes successfully verified. This number may be larger than the requested verification length if

the error occurred on a previous VERIFY command with an Immed bit of one. Upon termination, the medium shall be positioned after the block containing the miscompare (end-of-partition side).

### 10.2.14 WRITE command

The WRITE command (see table 191) requests that the target write the data that is transferred from the initiator to the current position on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code ((	)Ah)		
1	Logica	l unit I	number		Res	served		Fixed
2	(MSB)							
3				Transfer	length			
4								(LSB)
5				Control				

Table 191 - WRITE command

The fixed bit specifies whether fixed-length or variable-length blocks are to be transferred. See the READ BLOCK LIMITS command (see 10.2.5) for additional information about fixed and variable block mode.

If the fixed bit is one, the transfer length specifies the number of fixed-length blocks to be transferred, using the current block length reported in the mode parameter block descriptor (see 8.3.3). If the fixed bit is zero, a single block is transferred with the transfer length specifying the block length in bytes.

If the transfer length is zero, no data shall be transferred and the current position on the logical unit shall not be changed. This condition shall not be considered an error.

A WRITE command may be buffered or unbuffered, as indicated by the buffered mode field of the mode parameter header (see 10.3.3). For unbuffered operation (buffered mode 0h), the target shall not return GOOD status until all data block(s) are successfully written to the medium. For buffered operation (buffered mode 1h or 2h), the target may return GOOD status as soon as all data block(s) are successfully transferred to the target's buffer.

NOTE 152 For compatibility with devices implemented prior to this version of this standard, a WRITE FILEMARKS command with the Immed bit set to zero should be issued when completing a buffered write operation to ensure that all buffered data, filemarks, and setmarks are written to the medium.

If the logical unit encounters early-warning during a WRITE command, an attempt to finish writing any data may be made, as determined by the current settings of the REW and SEW bits in the device configuration page (see 10.3.3.1). The command shall terminate with CHECK CONDITION status and the EOM and valid bits shall be set to one in the sense data. If all data that is to be written is successfully transferred to the medium, the sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate. If any data that is to be written cannot be transferred to the medium when early-warning is encountered, the sense key shall be set to VOLUME OVERFLOW.

The information field shall be defined as follows:

- a) If unbuffered mode is reported in the mode parameter header and the fixed bit is set to one, the information field shall be set to the requested transfer length minus the actual number of blocks written.
- b) If unbuffered mode is reported and the fixed bit is set to zero, the information field shall be set to the requested transfer length.

- c) If buffered mode is reported in the mode parameter header and the fixed bit is set to one, the information field shall be set to the total number of blocks, filemarks, and setmarks not written (the number of blocks not transferred from the initiator plus the number of blocks, filemarks, and setmarks remaining in the target's buffer). Note that the value in the information field may exceed the transfer length.
- d) If buffered mode is reported and the fixed bit is set to zero, the information field shall be set to the total number of bytes, filemarks, and setmarks not written (the number of bytes not transferred from the initiator plus the number of bytes, filemarks, and setmarks remaining in the target's buffer).

NOTES

153 The value in the information field may exceed the transfer length.

154 The target should ensure that some additional data can be written to the medium (e.g. labels, filemarks, or setmarks) after the first early-warning indication has been returned to the initiator.

If a WRITE command is received while the logical unit is positioned between early-warning and end-of-partition, the target shall return CHECK CONDITION status after attempting to perform the command. The EOM and valid bits shall be set to one in the sense data. If all data that is to be written is successfully transferred to the medium, the information field shall be set to zero. If any data that is to be written is not transferred to the medium prior to encountering end-of-partition, the sense key shall be set to VOLUME OVERFLOW and the information field shall be defined as follows:

- a) If the fixed bit is one, the information field shall be set to the requested transfer length minus the actual number of blocks written to the medium.
- b) If the fixed bit is zero, the information field shall be set to the requested transfer length.

NOTE 155 In some systems it is important to recognize an error if end-of-partition is encountered during execution of a WRITE command, without regard for whether all data that is to be written is successfully transferred to the medium. By its definition, the VOLUME OVERFLOW sense key may always validly be returned if end-of-partition is encountered while writing, and such usage is recommended. Reporting the MEDIUM ERROR sense key, as was done in some SCSI-1 implementations, may cause confusion as to whether there was really defective medium encountered during execution of the last write command.

#### **10.2.15 WRITE FILEMARKS command**

The WRITE FILEMARKS command (see table 192) requests that the target write the specified number of filemarks or setmarks to the current position on the logical unit.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (1	0h)		
1	Logic	al unit r	number		Reserved	<u> </u>	WSmk	Immed
2	(MSB)							
3				Transfer	length			
4								(LSB)
5				Control				

### Table 192 - WRITE FILEMARKS command

If the Write Setmark (WSmk) bit is one, the transfer length specifies the number of setmarks to be written. If the WSmk bit is zero, the transfer length specifies the number of filemarks to be written.

An immediate (Immed) bit of one indicates that the target shall return status as soon as the command descriptor block has been validated. An Immed bit of one is only valid if buffered mode is reported in the mode parameter header (see 10.3.3).

244

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC An Immed bit of zero indicates that the target shall not return status until the write operation has completed. Any buffered data, filemarks, and setmarks shall be written to the medium prior to completing the command.

NOTE 156 Upon completion of any buffered write operation, the initiator can issue a WRITE FILEMARKS command with the Immed bit set to zero and the transfer length field set to zero to ensure that all buffered data, filemarks, and setmarks are successfully written to the medium.

If the logical unit encounters early-warning during a WRITE FILEMARKS command, an attempt to finish writing any buffered data, filemarks, or setmarks may be made, as determined by the current settings of the REW and SEW bits in the device configuration page (see 10.3.3.1). The command shall terminate with CHECK CONDITION status and the EOM and valid bits shall be set to one in the sense data. If all buffered data, filemarks, and setmarks are successfully transferred to the medium, the sense key shall be set to NO SENSE or RECOVERED ERROR, as appropriate. If any buffered data, filemarks, or setmarks to be written are not transferred to the medium when early-warning is encountered, the sense key shall be set to VOLUME OVERFLOW.

The information field shall be defined as follows:

- a) If unbuffered mode is reported in the mode parameter header, the information field shall be set to the requested transfer length minus the actual number of filemarks or setmarks written.
- b) If buffered mode is reported in the mode parameter header and the buffered data was written in variable block mode (see 10.2.14), the information field shall be set to the total number of bytes, filemarks, and setmarks not written (the number of filemarks or setmarks not transferred from the initiator plus the number of bytes, filemarks and setmarks remaining in the target's buffer). Note that it is possible for the value in the information field to exceed the transfer length.
- c) If buffered mode is reported and the buffered data was written in fixed block mode (see 10.2.14), the information field shall be set to the total number of blocks, filemarks, and setmarks not written (the number filemarks or setmarks not transferred from the initiator plus the number of blocks, filemarks, and setmarks, remaining in the target's buffer). Note that it is possible for the value in the information field to exceed the transfer length.

NOTE 157 The target should ensure that some additional data can be written to the medium (e.g. labels, filemarks, or setmarks) after the first early-warning indication has been returned to the initiator.

If a WRITE FILEMARKS command is received while the logical unit is positioned between early-warning and endof-partition, the target shall return CHECK CONDITION status after attempting to perform the command. The EOM and valid bits shall be set to one in the sense data. If all filemarks or setmarks to be written are successfully transferred to the medium, the information field shall be set to zero. If any filemarks or setmarks to be written are not transferred to the medium prior to encountering end-of-partition, the sense key shall be set to VOLUME OVERFLOW and the information field shall be set to the requested transfer length minus the actual number of filemarks or setmarks written to the medium.

# 10.3 Parameters for sequential-access devices

# 10.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with sequential-access devices

The diagnostic page codes for sequential-access devices are defined in table 193.

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported diagnostic pages Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

Table 193 - Diagnostic page codes

### 10.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with sequential-access devices.

The log page codes for sequential-access devices are defined in table 194.

Table 194	- Loa	page	codes
-----------	-------	------	-------

Page code	Description	Subclause
01h 02h 03h 04h 05h 07h 06h 08h - 2Fh 3Fh 30h - 3Eh	Buffer over-run/under-run page Error counter page (write) page Error counter page (read) page Error counter page (read reverse) page Error counter page (verify) page Last <u>n</u> error events page Non-media error page Supported log pages Reserved Reserved Vendor-specific	8.3.2.1 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.3 8.3.2.4 8.3.2.5

#### 10.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with sequential-access devices.

The mode parameter list, including the mode parameter header and mode block descriptor, are described in 8.3.3.

The medium-type code field in the mode parameter header is reserved for sequential-access devices.

The device-specific parameter byte of the mode parameter header (see 8.3.3) is defined in table 195 for sequential-access devices.

Table 195 -	Device-specific	parameter
-------------	-----------------	-----------

Bit	7	6	5	4	3	2	1	0
	WP	But	ffered mod	de		Spe	eed	

When used with the MODE SENSE command, a write protect (WP) bit of zero indicates that medium is write enabled. A WP bit of one indicates that the medium is write protected. When used with the MODE SELECT command, this field is not defined.

Values for the buffered mode field are defined in table 196.

	Table	196 -	Buffered	modes
--	-------	-------	----------	-------

Code	Description
Oh	The target shall not report GOOD status on write commands until the data blocks are actually written on the medium.
1h	The target may report GOOD status on write commands as soon as as all the data specified in the write command has been transferred to the target's buffer. One or more blocks may be buffered prior to writing the block(s) to the medium.
2h	The target may report GOOD status on write commands as soon as: a) All the data specified in the write command has been successfully transferred to the target's buffer, and b) All buffered data from different initiators has been successfully written to the medium.
3h - 7h	Reserved

Values for the speed field shall be assigned as defined in table 197.

Table 197 - Speed field definition

Code	Description
0h	Default (Use the peripheral device's default speed).
1h	Use the peripheral device's lowest speed.
2h - Fh	Use increasing peripheral device speeds.

For the MODE SELECT command, the density code field of the sequential-access device block descriptor (8.3.3) indicates the density selected by the initiator for use in subsequent read and write operations. For devices capable of automatic density recognition, the density code selected by the initiator may be overridden by the target for a subsequent read operation if the selected value does not match the current recorded density of the medium. If the MODE SELECT command specifies the default density code the device selects the actual density code to be used in a vendor-specific manner. The value is expected to be the principal density code (or an optimal density code).

For the MODE SENSE command, the density code field reflects the current operating density of the device. If a current operating density has not been selected, either because no medium is installed or because the density of the installed medium has not been determined, the density code field should be set to the principal density code value. The principal density code is the highest density code supported, the optimal density code supported, or the most common density code supported. In some devices, the principal density code value returned in

response to a MODE SENSE command may change dynamically to match the most recently selected density. The density code value returned in response to a MODE SENSE command shall be as described below:

- a) Following a UNIT ATTENTION condition for a power on or hard reset condition, while not ready, the target shall report the principal density.
- b) Following a UNIT ATTENTION condition for a not-ready-to-ready transition, the target shall:
  - 1) report the principal density if no attempt has been made by the target to determine the density;
  - 2) report the principal density if the target cannot automatically determine the density from the medium;
  - 3) report the current medium density if the target has determined

the density from the medium.

- c) Following a successful read operation at or after beginning-of-medium, the target shall report a density code value reflecting the recorded density of the medium. For some implementations, the target may automatically determine this value from the medium. For devices not capable of automatic density determination, the principal density is reported if the density code value is not provided by the preceding MODE SELECT command.
- d) Following an unsuccessful read operation or a successful write operation, while at beginning-of-partition, the target shall:
  - 1) report a density code value as described for item b) if a previous MODE SELECT command has not established a density code for the currently mounted volume;
  - 2) report a density code value as provided by the last successful MODE SELECT command for the currently mounted volume.
- e) Following a successful unload operation the target shall report the most recent density code value as determined by items b) through d) above.

Table 198 lists the sequential-access device density codes

248

Table 198	Sequential-access	density codes
-----------	-------------------	---------------

Code value				Descriptio	n				Note
00h 0Eh 15h - 7Eh 7Fh 80h - FFh	Reserve Reserve No chan	d for EČMÁ d		_ECT command density (NO·					7
		Des	criptio	ns for magne	etic tapes				
	Width	mm(in)	Tracks	Density	bpmm(bpi)	Code	Туре	Reference	1
01h 02h 03h 06h 07h 08h 09h 0Ah 0Bh 0Ch 0Dh 11h 12h 13h 14h 15h 16h 17h	12,7 12,7,7 12,7,7 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7,3 12,7,7 12,7	$ \begin{array}{c} (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,25) \\ (0,25) \\ (0,25) \\ (0,25) \\ (0,25) \\ (0,25) \\ (0,25) \\ (0,5) \\ (0,5) \\ (0,5) \\ (0,5) \end{array} $	9 999 4/9 4 18 22 4 4 24 5 8 6 0 1 1 8 8 48	32 63 246 315 126 252 315 1 491 262 63 500 999 394 630 2 034 2 400 1 703 1 789 394 1 673	(800) (1 600) (6 250) (8 000) (3 200) (6 400) (8 000) (37 871) (6 667) (11 600) (12 690) (12 690) (12 690) (12 690) (12 690) (10 000) (16 000) (16 000) (16 000) (43 245) (45 434) (10 000) (42 500) (4	NRZI PE GCR PE IMFM GCR GCR MFM GCR GCR GCR GCR GCR RLL DDS RLL MFM MFM	RRRCRCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCCC	X3.22-1983 X3.39-1986 X3.54-1986 X3.136-1986 X3.157-1987 X3.116-1987 X3.116-1987 X3.158-1987 X3.180-1990 X3.181-1990 X3.56-1986 111319-1992 ECMA TC17 X3.197-1991	$\begin{array}{c} 2\\ 2\\ 2\\ 2\\ 1\\ 4\\ 1\\ 2\\ 4\\ 1\\ 2\\ 4\\ 1\\ 1\\ 6\\ 6\\ 6\\ 6\\ 6\\ 6\\ 8\\ 6\\ 5\\ 5\\ 4\\ 1\\ 1\\ 1\\ 5\\ 5\\ 5\\ 4\\ 4\\ 1\\ 1\\ 1\\ 1\\ 5\\ 5\\ 5\\ 4\\ 4\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\ 1\\$
Code De	scriptio	n					Ту	pe Descripti	on
GCR Gr PE Ph IMFM In MFM Mo DDS DA	oup code ase encod verted ma	odified fre requency mo torage	equency	modulation			(	Reel-to-ro C Cartridge CS Cassette	eel
4 See annex 5 Helical sca 6 This is not a 7 This densit	corded known as QIC D for additiona n an American N	al standards infor ational Standard s defined for the f		CT command and	shall not be return	ed by th	e MODE	SENSE command.	

The mode page codes for sequential-access devices are defined in table 199.

,

Page code	Description	Subclause							
0Ah 10h 02h 11h 12h 13h 14h 09h 01h 00h 03h - 08h 0Bh - 0Fh 15h - 3Eh 3Fh	Control mode page Device configuration page Disconnect-reconnect page Medium partition page(1) Medium partition page(2) Medium partition page(3) Medium partition page(4) Peripheral device page Read-write error recovery page Vendor-specific (does not require page format) Reserved Reserved Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	8.3.3.1 10.3.3.1 8.3.3.2 10.3.3.2 10.3.3.3 10.3.3.3 10.3.3.3 10.3.3.3 10.3.3.4							

Table 199 - Mode page codes

# 10.3.3.1 Device configuration page

The device configuration page (see table 200) is used to specify the appropriate sequential-access device configuration.

Bit Byte	7	6	5	4	3	2	1	0			
0	PS	Reserved		Page code (10h)							
1				Page len	gth (OEh)						
2	Reserved	CAP	CAF		A	ctive form	mat				
3				Active pa	artition						
4				Write bu	ffer full	ratio					
5		Read buffer empty ratio									
6	(MSB) Write delay time										
7				writte de.	(LSB)						
8	DBR	BIS	RSmk	AVC	500	CF	RBO	REW			
9				Gap size			· · · · · · · · · · · · · · · · · · ·				
10	EOD	) defined		EEG	SEW	F	Reserved				
11	(MSB)										
12				Buffer s:	ize at ear	rly warnir	ng				
13	(LSB)										
14				Select da	ata compre	ession alg	gorithm				
15				Reserved							

Table 200 - Device configuration page

A change active partition (CAP) bit of one indicates that the logical partition is to be changed to the one specified by the active partition field. A CAP bit of zero indicates no partition change is specified.

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC A change active format (CAF) bit of one indicates that the active format is to be changed to the value specified in the active format field. A CAF bit of zero indicates no active format change is specified. For some devices, the format may only be changed when the logical unit is at beginning-of-partition.

The active format field indicates which recording format is in use for the selected density code when reading or writing data on a logical unit. The value of the active format field is vendor-specific.

The active partition field indicates the current logical partition number in use on the medium.

The write buffer full ratio, on WRITE commands, indicates to the target how full the buffer shall be before writing data to the medium. A value of zero indicates that the value is not specified.

The read buffer empty ratio, on READ commands, indicates to the target how empty the buffer shall be before retrieving additional data from the medium. A value of zero indicates that the value is not specified.

The write delay time indicates the maximum time, in 100 ms increments, that the target should wait before any buffered data that is to be written, is forced to the medium after the last buffered WRITE command that did not cause the buffer to exceed the buffer full ratio. A value of zero indicates that the target shall never force buffered data to the medium under these conditions.

A data buffer recovery (DBR) bit of one indicates that the target supports data buffer recovery using the RECOVER BUFFERED DATA command. A DBR bit of zero indicates that the target does not support data buffer recovery. This bit is target-defined.

A block identifiers supported (BIS) bit of zero indicates that block IDs are not supported in the format written on the medium. A BIS bit of one indicates that the format on the medium has recorded information about the block IDs relative to a partition. This bit is target-defined.

A report setmarks (RSmk) bit of one indicates that the target shall recognize and report setmarks during appropriate read or space operations. A RSmk bit of zero indicates that the target shall not report setmarks.

The automatic velocity control (AVC) bit of one, indicates that the device shall select the speed (if the device supports more than one speed) based on the data transfer rate that should optimize streaming activity and minimize medium repositioning. An AVC bit of zero indicates the speed chosen should be the device's default speed.

A stop on consecutive filemarks (SOCF) field of 00b indicates that the device shall pre-read data from the medium in buffered mode to the limits of the buffer capacity without regard for filemarks. This implies that the device can differentiate between data blocks and filemarks in the buffer. Values 01b, 10b, and 11b specify that the device shall terminate the pre-read operation if one, two, or three consecutive filemarks are detected, respectively. If the RSmk bit is one, the target shall interpret this field as stop on consecutive setmarks.

A recover buffer order (RBO) bit of one indicates that data blocks shall be returned from the target's buffer on a RECOVERED BUFFERED DATA command in LIFO order (last-in-first-out) from which they were written to the buffer. A RBO bit of zero indicates data blocks shall be returned in FIFO (first-in-first-out) order.

A report early-warning (REW) bit of zero indicates that the target shall not report the early-warning condition for read operations and it shall report early-warning at or before any medium-defined early-warning position during write operations.

A REW bit of one indicates that the target shall return CHECK CONDITION status with the EOM bit set in the sense data when the early-warning position is encountered during read and write operations. If the REW bit is one and the SEW bit is zero, the target shall return CHECK CONDITION status with the sense key set to VOLUME OVERFLOW when early-warning is encountered during write operations.

NOTE 158 A REW bit of one is intended for compatibility with those systems using old tape formats that require an early-warning indication during read operations. Other systems should set this bit to zero to avoid potential data loss when interchanging tapes between peripheral devices.

The GapSize field value determines the size of the inter-block gap when writing data. A value of 00h specifies the device's defined gap size. A value of 01h specifies a device defined gap size sufficiently long to support updatein-place. Values of 02h through 0Fh are multipliers on the device's defined gap size. Values 10h through 7Fh are reserved. Values 80h through FFh are vendor-specific.

The end-of-data (EOD) defined field indicates which format type the logical unit shall use to detect and generate the EOD area. The types of EOD formats are specified in table 201.

	Га	bl	e	20	<b>D1</b>	-	EO	D	fo	rm	at	S
--	----	----	---	----	-----------	---	----	---	----	----	----	---

Value	Description
000b	Logical unit's default EOD definition
001b	Format-defined erased area of medium
010b	As specified in the SOCF field
011b	EOD recognition and generation is not supported
100b - 111b	Reserved

An enable EOD generation (EEG) bit set to one indicates that the logical unit shall generate the appropriate EOD area, as determined by the EOD defined field. A value of zero indicates that EOD generation is disabled.

NOTE 159 Some logical units may not generate EOD at the completion of any write-type operation.

The synchronize at early-warning (SEW) bit set to one indicates that the target shall cause any buffered write data, filemarks, or setmarks to be transferred to the medium when early-warning is encountered. A value of zero indicates that the target shall retain any unwritten buffered data, filemarks, or setmarks in the buffer when early-warning is encountered (see the WRITE command, 10.2.14, and the WRITE FILEMARKS command, 10.2.15).

The buffer size at early-warning field indicates the value, in bytes, to which the target shall reduce its logical buffer size when writing. The target should reduce the buffer size only when the logical unit is positioned between its early-warning and end-of-partition. A value of zero indicates that the implementation of this function is device specific.

NOTE 160 The intent is to prevent the loss of data by limiting the size of the buffer when near the end-of-partition.

The select data compression algorithm field set to 00h indicates that the target shall not use a compression algorithm on any data sent to it prior to writing the data to the medium. A value of 01h indicates that the data to be written shall be compressed using the target's default compression algorithm. Values 02h through 7Fh are reserved. Values 80h through FFh are vendor-specific.

### 10.3.3.2 Medium partition page(1)

The medium partition page(1) (see table 202) is used to specify the first group of medium partitions. Additional groups are specified in medium partition pages(2-4) (see 10.3.3.3).

Bit Byte	7	6	5	4	3	2	1	0		
0	PS	Reserved		Page cod	ə (11h)					
1	Page length									
2	Maximum additional partitions									
3	Additional partitions defined									
4	FDP	SDP	IDP PSUM Reserved							
5				Medium f	ormat rec	ognition				
6				Reserved						
7			<u>_</u>	Reserved						
		<u></u>	Partiti	on size d	escriptor	(s)	· <u>···</u>			
0	(MSB)						1. <u>1. 1. 1</u> .	· · · · · · · · · · · · · · · · · · ·		
1				Partitio	n size			(LSB)		

Table 202 - Medium partition page(1)

The maximum additional partitions field is a target-defined value indicating the maximum number of additional partitions supported by the logical unit. A value of zero indicates that no value is specified.

The additional partitions defined field specifies the number of additional partitions to be defined for a volume when the SDP or IDP bit is set to one. The maximum value allowed is the value returned in the maximum additional partitions field.

A fixed data partitions (FDP) bit of one indicates that the device assigns partitions based on its fixed definition of partitions. Setting this bit to one may only be valid at beginning-of-partition and is mutually exclusive with the SDP and IDP bits.

A select data partitions (SDP) bit of one indicates that the device is to partition the medium into the number of partitions as specified by the additional partitions defined field using partition sizes defined by the device. Setting this bit to one may only be valid at beginning-of-partition and it is mutually exclusive with the FDP and IDP fields.

An initiator-defined partitions (IDP) bit of one indicates that the initiator is defining the number and size of the data partitions using the additional partitions defined field and the partition size descriptors. Setting this bit to one may only be valid at beginning-of-partition and is mutually exclusive with the FDP and SDP fields.

NOTE 161 Since defining partitions may require reformatting the medium for some implementations, an implicit write to the medium may occur as a result of a MODE SELECT command that supplies any of these parameters.

Partition size unit of measure (PSUM) field defines the units in which the partition size descriptors select the partition size. The values 00b, 01b, and 10b define the units as bytes, kilobytes, and megabytes, respectively. The value 11b is reserved.

The medium format recognition field is a target-defined value indicating the device's capability to automatically identify the medium format and partition information when reading an unknown volume.

Values for the medium format recognition field shall be assigned as follows:

- a) 00h Logical unit is incapable of format or partition recognition.
- b) 01h Logical unit is capable of format recognition only.
- c) 02h Logical unit is capable of partition recognition only.
- d) 03h Logical unit is capable of format and partition recognition.
- e) 04h FFh Reserved.

NOTE 162 If a target indicates that it is not capable of medium format recognition, the initiator must supply all necessary parameters for the device to identify the specific format. The value in this field may be different following a medium change.

Partition size descriptors define the size of the respective partitions in the units specified in the PSUM field. Up to 64 partitions may be defined using this page. If additional partitions need to be defined, up to 64 partitions can be defined in each of the medium partition pages(2-4) defined in 10.3.3.3.

#### 10.3.3.3 Medium partition page(2-4)

The medium partition page(2-4) (see table 203) is used to specify additional groups of medium partitions. The first group is specified in the medium partition page(1) (see 10.3.3.2).

Bit Byte	7	6	5	4	3	2	1	0					
0	PS	Reserved	eserved Page code (12h, 13h, 14h)										
1	Page length												
		Partition size descriptor(s)											
0	(MSB)	(MSB) Partition size											
1			(LSB)										

#### Table 203 - Medium partition page(2-4)

The additional page codes defined for partition size definition are 12h, 13h, and 14h. Up to a maximum of 64 partitions can be defined in each of these pages. The partition size is defined by the value of the partition size field. The units of size used by the partition size field is specified in the PSUM field of the medium partition page(1) (see 10.3.3.2).

NOTE 163 Since defining partitions may require reformatting the medium for some implementations, an implicit write to the medium may occur as a result of a MODE SELECT command that supplies these parameters.

#### 10.3.3.4 Read-write error recovery page

The read-write error recovery page (see table 204) specifies the error recovery and reporting parameters that the target shall use when transferring data between the initiator and the medium. These parameters only apply to read-write errors and do not affect message system retries or positioning error recovery procedures.

	Table 204 - Read-write offor records y page										
Bit Byte	7	6	5	4	3	2	1	0			
0	PS Reserved Page code (01h)										
1		•	<u></u>	Page leng	th (OAh)						
2	Reserved Reserved TB Reserved EER PER DTE DCR										
3	Read retry count										
4	Reserved										
5	Reserved										
6		<u> </u>		Reserved							
7				Reserved							
8				Write ret	ry count						
9				Reserved							
10	Reserved										
11				Reserved							
ΝΟΤ	E - The p	parameters	in this	page also	apply to	o verify o	operations	5.			

Table 204 - Read-write error recovery page

A transfer block (TB) bit of one indicates that a data block that is not recoverable within the specified recovery limits shall be transferred to the initiator before CHECK CONDITION status is returned. A TB bit of zero indicates that the unrecoverable data block shall not be transferred to the initiator. Data blocks that can be recovered within the recovery limits are always transferred, regardless of the value of the TB bit.

An enable early recovery (EER) bit of one indicates that the target shall use the most expedient error recovery algorithm (e.g. attempt error correction prior to retries). An EER bit of zero indicates that the target shall use the most deliberate error recovery algorithm, within the limits established by the other error recovery parameters (e.g. attempt to recover the block error-free prior to using error correction).

A post error (PER) bit of one indicates that the target shall return CHECK CONDITION status to report recovered errors. A PER bit of zero indicates that the target shall not report errors recovered within the limits established by the error recovery parameters. If this bit is zero, the DTE bit must also be set to zero.

A disable transfer on error (DTE) bit of one indicates that the target shall terminate the data transfer after a recovered read-write error occurs. All data from the recovered block shall be transferred prior to terminating the read-write operation. A DTE bit of zero indicates that the target shall not terminate the transfer for errors recovered within the limits established by the read-write error recovery parameters.

A disable correction (DCR) bit of one indicates that the target shall not use error correction codes during error recovery. A DCR bit of zero allows the use of error correction codes for error recovery.

The read retry count specifies the number of times that the target should attempt its recovery algorithm during a read operation before an unrecoverable error is reported. A read retry count of zero indicates that the target shall not use its recovery algorithm during read operations.

The write retry count specifies the number of times that the target should attempt its recovery algorithm during a write operation before an unrecoverable error is reported. A write retry count of zero indicates that the target shall not use its recovery algorithm during write operations.

## 10.4 Definitions specific to sequential access devices

**10.4.1 beginning-of-partition**: The position at the beginning of the permissible recording region of a partition. If only one partition is defined, this position is typically equivalent to the beginning-of-medium.

**10.4.2 beginning-of-medium**: The extreme position along the medium in the direction away from the supply reel which can be accessed by the device.

**10.4.3 buffered mode**: A mode of data transfer in write operations which facilitates tape streaming (10.1.5), as reported in the mode parameter header device-specific parameter (10.3.3).

**10.4.4 early-warning**: A physical mark or device computed position near but logically before the end-of-partition (independent of physical direction). See the REW bit in the device configuration page in 10.3.3.1.

**10.4.5 end-of-data**: End of data in a partition is denoted in format-specific manner. See the EOD defined field in the device configuration page in 10.3.3.1.

**10.4.6 end-of-medium**: The extreme position along the medium in the direction away from the take-up reel which can be accessed by the device. This position may be accessed by devices that support the LOAD UNLOAD command with the EOT bit set to one.

10.4.7 end-of-partition: The position at the end of the permissible recording region of a partition.

**10.4.8 filemark**: A special recorded element within a partition, containing no user data, which provides a segmentation scheme.

**10.4.9 overlength**: The incorrect length condition that exists after executing a read command when the length of the actual block read exceeds the requested transfer length in the command descriptor block.

**10.4.10 partition**: The entire usable region of recording and reading paths in a volume or in a portion of a volume, defined in a device-specific manner. If there is more than one partition, they shall be numbered starting with zero (i.e. beginning-of-partition-zero).

**10.4.11 setmark**: A special recorded element within a partition, containing no user data, which provides a segmentation scheme hierarchically superior to filemarks for use in addressing or fast positioning on high capacity storage devices.

10.4.12 spacing: The act of positioning the medium on a sequential access device.

**10.4.13 underlength**: The incorrect length condition that exists after executing a read command when the requested transfer length in the command descriptor block exceeds the length of the actual block read.

10.4.14 volume: A recording medium together with its physical carrier.

# 11 Commands for printer devices

# 11.1 Model for printer devices

This command set includes capability for the printer-controlling device, that is an SCSI target to be is functionally separate from the physical printer device (see figure 27) as well as integrated with it. The physical printer device is connected to the SCSI target via one of several common device-level interfaces. There may be more than one physical printer device attached to the printer controlling device. In such a case, each physical printer device is assigned a separate logical unit number, beginning with zero. The printer-controlling device, printer device-level interface, and the physical printer device are referred to collectively as the printer device.

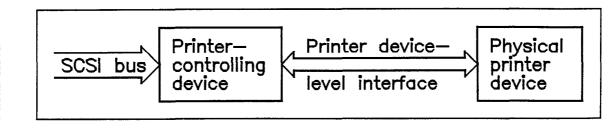


Figure 27 - SCSI printer model

Specific control mechanisms are defined in mode pages for two industry-standard interfaces known as the line printer interface (e.g. the Data Products interface or equivalent) and the EIA RS-232C interface. These mode pages are used to control optional features of these interfaces. No mode page was defined for the popular industry-standard parallel interface because the options requiring controls are embedded in the data.

The printer-controlling device may be integrated within the printer device; it is not required to use one of the industry-standard interfaces referenced above.

The printer device commands are structured on the assumption that specific printer control codes may be embedded in the data transferred by the FORMAT, PRINT, and SLEW AND PRINT commands. The transparent control codes may take the form of escape code sequences. commands for the operation of the target function and some printer controls, which are not convenient to handle in a transparent way, are specified in 11.2.

This standard does not specify which character set is used by the printer device; nor does it specify the meaning of the escape code sequences that may be used.

# 11.2 Commands for printer devices

The commands for printer devices shall be as shown in table 205.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY FORMAT INQUIRY LOG SELECT LOG SENSE MODE SELECT(6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(10) PRINT READ BUFFER RECEIVE DIAGNOSTIC RESULTS RECOVER BUFFERED DATA RELEASE UNIT REQUEST SENSE RESERVE UNIT SEND DIAGNOSTIC SLEW AND PRINT STOP PRINT SYNCHRONIZE BUFFER TEST UNIT READY WRITE BUFFER	40h 39h 18h 3Ah 04h 12h 4Ch 4Dh 15h 55h 1Ah 55h 1Ah 55h 1Ch 1Ch 1Ch 1Ch 1Ch 1Ch 16h 1Dh 0Bh 1Bh 10h 00h 3Bh	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	$\begin{array}{c} 8.2.1\\ 8.2.2\\ 8.2.3\\ 8.2.4\\ 11.2.1\\ 8.2.5\\ 8.2.6\\ 8.2.7\\ 8.2.8\\ 8.2.9\\ 8.2.10\\ 8.2.11\\ 11.2.2\\ 8.2.12\\ 8.2.12\\ 8.2.13\\ 11.2.3\\ 10.2.9\\ 8.2.14\\ 10.2.10\\ 8.2.15\\ 11.2.4\\ 11.2.5\\ 11.2.6\\ 8.2.16\\ 8.2.17\end{array}$
Key: M = command implementation is ma O = command implementation is of	andatory. otional.		

Table 205 - Commands for printer devices

The following operation codes are vendor-specific: 01h, 02h, 05h, 06h, 07h, 08h, 09h, 0Ch, 0Dh, 0Eh, 0Fh, 11h, 13h, 19h, and C0h through FFh. All remaining operation codes for printer devices are reserved for future standardization.

# 11.2.1 FORMAT command

The FORMAT command (see table 206) provides a means for the initiator to specify forms or fonts to printers that support programmable forms or fonts. The format information is peripheral-device specific.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (04h)										
1	Logical unit number Reserved Format type											
2	(MSB)					<u></u>						
3				Transfer	length							
4	(LSB)											
5				Control								

Table	206 -	FORMAT	command
-------	-------	--------	---------

The format type field specifies the type of format information to be transferred from the initiator to the target. This field is defined in table 207.

# Table 207 - Format type

Code	Format type
00b	Set form
01b	Set font
10b	Vendor-specific
11b	Reserved

The transfer length specifies the length in bytes of format information that shall be transferred during the DATA OUT phase. A transfer length of zero indicates that no format information shall be transferred. This condition shall not be considered as error.

# 11.2.2 PRINT command

The PRINT command (see table 208) transfers the specified number of bytes from the initiator to the target to be printed.

Bit Byte	7	6	5	4	3	2	1	0
0	Operation code (OAh)							
1	Logical unit number			Reserved				
2	(MSB)							
3				Transfer	length			
4								(LSB)
5				Control				

## Table 208 - PRINT command

The transfer length specifies the length in bytes of data that shall be transferred during the DATA OUT phase. A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered as error.

## 11.2.3 RECOVER BUFFERED DATA command

The RECOVER BUFFERED DATA command (see table 209) returns to the initiator data that was transferred to the target, but not yet printed.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (14h)								
1	Logical unit number			Reserved					
2	(MSB)								
з				Transfe	• length				
4								(LSB)	
5				Control					

#### Table 209 - RECOVER BUFFERED DATA command

This command is normally used only to recover from error or exception conditions that make it impossible to print the buffered data. The order in which data are transferred from the target to the initiator is the same as when the data were previously transferred using the PRINT command or SLEW AND PRINT command. Data transferred by this command are deleted from the target data buffer. One or more RECOVER BUFFERED DATA commands may be used to return the buffered data that is not printed.

If an attempt is made to recover more data than is contained in the buffer, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to NO SENSE. In addition, the EOM, valid, and ILI bits shall be set to one. The information bytes shall be set to the difference (residue) between the transfer length and the actual number of bytes returned.

The transfer length specifies the maximum length in bytes of data that shall be transferred during the DATA IN phase. A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered as error.

### 11.2.4 SLEW AND PRINT command

The SLEW AND PRINT command (see table 210) transfers the specified number of bytes from the initiator to the target to be printed. This command is provided for printer devices that do not support forms control information embedded within the print data.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	on code (O	Bh)		
1	Logical	unit num	iber			Channel		
2				Slew val	.ue			
3	(MSB)			Transfor	length			
4				Transfer length (LS				
5			· · · · · · · · · · · · · · · · · · ·	Control				

Table 210 - SLEW AND PRINT command

The transfer length specifies the length in bytes of data that shall be transferred during the DATA OUT phase. A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered as error.

If the channel bit is zero, the slew value specifies the number of lines the form shall be advanced before printing. A value of 255 indicates that the form shall be advanced to the first line of the next form before printing. If the channel bit is one, the slew value specifies the forms control channel number to which the form shall be advanced prior to printing the data. If implemented, the printer options page in the MODE SELECT command provides additional control over the usage of the slew value field.

If the channel bit is one, and the channel option is not implemented, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

## 11.2.5 STOP PRINT command

The STOP PRINT command (see table 211) requests that the target halt printing on buffered devices in an orderly fashion.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (1Bh)								
1	Logical unit number				Reserved R				
2				Vendor-s	pecific			·	
3	Reserved								
4	Reserved								
5	Control								

### Table 211 - STOP PRINT command

A retain bit of zero requests that the target data buffer be discarded; otherwise, the data not printed shall be retained. The data not printed may be recovered using the RECOVER BUFFERED DATA command, if implemented by the target. A subsequent SYNCHRONIZE BUFFER command, PRINT command, or SLEW AND PRINT command shall cause the remaining data not already printed to be printed, followed by the data transferred by the subsequent command, if any. The point at which printing is suspended by this command is vendor-specific.

# 11.2.6 SYNCHRONIZE BUFFER command

The SYNCHRONIZE BUFFER command (see table 212) provides a means for an initiator to ensure that the data have been printed successfully prior to releasing the peripheral device. This is useful for applications that handle any error or exception conditions (e.g. end-of-medium) prior to termination of the application.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (10h)								
1	Logical unit number Reserved								
2	Reserved								
3	Reserved								
4	Reserved								
5	Control								

### **Table 212 - SYNCHRONIZE BUFFER command**

When all buffered data are actually printed, the command shall be terminated with a GOOD status. If it is not possible to finish printing all of the buffered data (due to an error or exception condition on the peripheral device), then this command shall be terminated with a CHECK CONDITION status and the appropriate sense key

The printer options page in the MODE SELECT command, if implemented, provides additional control over termination sequences when using this command.

262

# 11.3 Parameters for printer devices

## 11.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with printer devices.

The diagnostic page codes for printer devices are defined in table 213.

Table 213 -	Diagnostic	page codes
-------------	------------	------------

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported diagnostic pages Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

## 11.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with printer devices.

The log page codes for printer devices are defined in table 214.

### Table 214 - Log page codes

Page code	Description	Subclause
01h 07h 06h 00h 02h - 05h 08h - 2Fh 3Fh 30h - 3Eh	Buffer over-run/under-run page Last n error events page Non-medium error page Supported log pages Reserved Reserved Reserved Vendor-specific pages	8.3.2.1 8.3.2.3 8.3.2.4 8.3.2.5

### 11.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with printer devices.

The mode parameter list, including the mode parameter header and mode block descriptor, are described in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). This field is reserved for printer devices.

The device-specific parameter field is contained in the mode parameter header (see 8.3.3). Table 215 defines the device-specific parameter used for printer devices.

Bit	7	6	5	4	3	2	1	0	
	WP	Buffered mode			Reserved				

Table 215 - Pri	nter device-specif	c parameter
-----------------	--------------------	-------------

When using the MODE SELECT command, a buffered mode of zero indicates that the target shall not report a GOOD status on PRINT commands or SLEW AND PRINT commands until the data are actually printed. A buffered mode of one indicates that the target may report a GOOD status on PRINT commands or SLEW AND PRINT commands as soon as the data have been transferred to the SCSI device buffer. The data from one or more commands may be buffered prior to printing. Buffered modes of 2h through 7h are reserved.

When using the MODE SENSE command, the buffered mode field returns the current value of this parameter.

The density code field is contained in the mode parameter block descriptor (see table 93). This field is reserved for printer devices.

The mode page codes for printer devices are shown in table 216.

Page code	Description	Subclause
0Ah 02h 03h 09h 05h 04h 01h 06h - 08h	Control mode page Disconnect-reconnect page Parallel printer interface page Peripheral device page Printer options page Serial printer interface page Reserved Reserved	8.3.3.1 8.3.3.2 11.3.3.1 8.3.3.3 11.3.3.2 11.3.3.3
0Bh - 1Fh 00h 20h - 3Eh 3Fh	Reserved Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	

Table 216 - Mode page codes

### 11.3.3.1 Parallel printer interface page

The parallel printer interface page (see table 217) is intended to support printer devices that use the industrystandard line printer interface.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	Reserved		Page code (03h)					
1	Parameter length (03h)								
2	Parity	select	PIPC	Reserved	VCBP	VCBS	VES	Autofd	
3	Reserved								

Table 217 - Parallel printer interface

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile, vendor-specific location.

The parity select field specifies parity generation on the printer interface is defined in table 218.

Code	Parity select
00b	No parity generation
01b	Even parity
10b	Odd parity
11b	Reserved

Table 218 - Parity select

A paper instruction parity check (PIPC) bit of one indicates that the printer interface Paper Instruction signal is included in parity generation on the printer interface by the target. A PIPC bit of zero indicates that the Paper Instruction signal is not included in parity generation on the printer interface by the target.

NOTES

164 The format of the vertical forms unit (VFU) control byte is specified by the VCBP, VCBS, and VES bits. The VFU control byte is not part of this standard; however, a discussion of it is included here for a better understanding. This VFU control byte (see table, below) includes a control bit (C) to select whether to slew over a number of lines or to skip to a vertical forms unit (VFU) channel number. This bit may be located in two different bit positions and may have either polarity.

165 The number of lines to slew over may be coded as an unsigned four-bit number (NNNN) or an unsigned six-bit number (EENNNN). The upper two bits of the six-bit number (EE) may be positioned contiguously with the lower four bits (NNNN) or they may be separated from the lower four bits by the control bit (C). Furthermore, the upper two bits may or may not be supported.

166 The VFU channel to select is specified by an unsigned four-bit number (NNNN) in the VFU control byte. 167 Pictorially, the control byte is shown in table 219.

Table	219	- VFU	control	byte

VF	U control byte	Description
Bits	76543210	
	0 E E C N N N N 0 0 0 C N N N N 0 C E E N N N N 0 C O O N N N N	Advance (EE)NNNN lines (C = line skip) Skip to VFU channel NNNN (C = VFU channel) Advance (EE)NNNN lines (C = line skip) Skip to VFU channel NNNN (C = VFU channel)
Key:	C = VFU control	bit

A VFU control bit polarity (VCBP) bit of one indicates that the VFU control bit (C) is true for a VFU channel command and false for a line skip command. A VCBP bit of zero indicates the opposite polarity.

A VFU control bit select (VCBS) bit of one indicates that the control bit (C) is in bit position 6 and the EE bits are in bit positions 5 and 4. A VCBS bit of zero indicates that the control bit (C) is in bit position 4 and the EE bits are in bit positions 6 and 5.

A VFU extended skip (VES) bit of one indicates that the EE bits are supported for line skip operations. A VES bit of zero indicates that the EE bits are not supported.

For MODE SELECT, an automatic line feed (Autofd) bit of one specifies that the target assert the printer interface Auto Line Feed signal. An Autofd bit of zero specifies that the target negate the printer interface Auto Line Feed signal. For MODE SENSE, the target shall return the current value of this bit.

### 11.3.3.2 Printer options page

The printer options page (see table 220) supports control and reporting of various target functions and features.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	PS Reserved Page code (05h)						
1	<u></u>			Parameter	length	(0Ah)		
2	EVFU			Font ide	ntificatio	on		
з	Res	erved	Slew	mode	Reser	rved	SCTE	AFC
4	(MSB)			Novimum	ling long			
5	Here Maximu			Maximum .	line leng1	-11		(LSB)
6	EVFU format start character							
7	EVFU format stop character							
8	Line slew options				Form s]	lew optior	ns	
9	Data termination options			s Reserved				
10				Reserved				
11	Reserved							

Table 220 - Printer options

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

An electronic vertical forms unit (EVFU) bit of one indicates that a tape or electronic vertical forms unit is present in the printer device. An EVFU bit of zero indicates that the electronic vertical forms unit should not be used or that the unit is not present in the printer device.

For the MODE SELECT command, the font identification field specifies which font is to be used. For the MODE SENSE command, this field identifies the currently selected font. The font identification codes are defined in tabl∉ 221.

Co	ode	Font identification		
01h	00h - 3Fh - 7Fh	Default font Reserved Vendor-specific font		

Table 221 - Font identification

For the MODE SELECT command, the slew mode field controls the target's behavior when a SLEW AND PRINT command is received with a channel bit of zero (see 11.2.4). For the MODE SENSE command, this field reports the current slew mode. This slew mode is defined in table 222.

Table	222	-	Slew	mode
-------	-----	---	------	------

Code	Slew mode
00b	SLEW AND PRINT commands with a channel bit of zero are supported without any required setup.
01b	SLEW AND PRINT commands with a channel bit of zero are only accepted after the initiator issues a FORMAT command with a format type of set form (to initialize the electronic vertical forms unit).
10b	SLEW AND PRINT commands with a channel bit of zero are always accepted. The target shall use the electronic vertical forms unit if it has previously been initialized or it shall initialize the electronic vertical forms unit for line skipping by sending the EVFU start format character immediately followed by the EVFU stop format character (both are defined below) prior to executing the SLEW AND PRINT command.
11b	Reserved

For the MODE SELECT command, a step count truncate enable (SCTE) bit of one indicates that the target shall assume the printer truncates slew values in SLEW AND PRINT commands, so that the data prints on the first line of the next form. A SCTE bit of zero indicates that the target shall assume the printer continues to slew over forms boundaries in SLEW AND PRINT commands if the slew value exceeds the number of remaining lines on the current form. The target shall return the current value of this field in the MODE SENSE data.

An ASCII forms control (AFC) bit of one indicates that the printer supports ASCII forms control characters. An AFC bit of zero indicates that the printer does not support ASCII forms control characters.

The maximum line length field specifies the maximum transfer length (maximum number of bytes per line) to be accepted in the SLEW AND PRINT command. A value of 0000h in MODE SELECT specifies that the target shall use its default value. In any case, the target shall report its actual value in the MODE SENSE data (not 0000h).

The EVFU format start character field specifies the character code to be used by the target to start the initialization of the electronic vertical forms unit, if slew mode option 10b is selected.

The EVFU format stop character field specifies the character code to be used by the target to stop the initialization of the electronic vertical forms unit, if slew mode option 10b is selected.

The line slew options field specifies the implementation of the line slew (using ASCII forms control characters) in the SLEW AND PRINT command. Code values in this field are defined in table 223.

Table 223 - Line siew

Code	Line slew option
Oh	Not implemented. (SLEW AND PRINT commands cause CHECK CONDITION status with ILLEGAL REQUEST sense key.)
1h	The target shall insert an ASCII carriage return character (ODh) for each line to slew over.
2h	The target shall insert an ASCII line feed character (OAh) for each line to slew over.
Зh	The target shall insert an ASCII carriage return character (ODh) and line feed character (OAh) for each line to slew over.
4h - 7h	Reserved
8h - Fh	Vendor-specific

The form slew options field specifies the implementation of form slewing in the SLEW AND PRINT command. Code values in this field are defined in table 224.

Code	Form slew option
Oh	Not implemented. (SLEW AND PRINT commands cause CHECK CONDITION status with ILLEGAL REQUEST sense key.)
1h	The target shall insert an ASCII form feed character (OCh) to move to the beginning of the next form.
2h	The target shall insert an ASCII carriage return character (ODh) and form feed character (OCh) to move to the beginning of the next form.
3h - 7h	Reserved
8h - Fh	Vendor-specific

Table 224 - Form slew

The data termination options field specifies the termination sequence to be issued to the printer device when a SYNCHRONIZE BUFFER command is received. Code values for this field are defined in table 225.

Table 225 -	- Data	termination	option
-------------	--------	-------------	--------

Code	Line slew option
Oh	Selects the target default implementation (MODE SELECT).
1h	No termination sequence. (The target sends any remaining data in its buffer to the printer device with no termination sequence.)
2h	The target shall print any buffered data followed by an ASCII carriage return character (ODh).
3h	The target shall print any buffered data followed by an ASCII line feed character (OAh).
4h	The target shall print any buffered data followed by an ASCII carriage return, line feed character sequence (ODh, OAh).
5h	The target shall send any buffered data followed by an ASCII form feed character (OCh).
6h	The target shall print any buffered data followed by an ASCII carriage return, form feed character sequence (ODh, OCh).
7h	The target shall issue a zero line slew command to the printer device.
8h - Bh	Reserved
Ch - Fh	Vendor-specific

### 11.3.3.3 Serial printer interface page

The serial printer interface page (see table 226) is intended to support printer devices that use the industrystandard serial interface usually referred to as EIA RS-232C.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved	Page code (O4h)					
1		Parameter length (06h)						
2	Reserved			Stop bit length				
3	Parity selection			Reserved		Bits per character		
4	RTS CTS Res			erved		Pacing pro	otocol	
5	(MSB)	(MSB)						
6	Baud rate							
7								(LSB)

Table 226 - Serial printer interface

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The stop bit length field specifies the length of the stop bit(s) in units of 1/16 bit. The target may round this field as described in 7.5.4. A stop bit length of zero in the MODE SELECT command indicates that the target shall use its default value.

The parity selection field specifies parity generation and checking as defined in table 227.

Code	Parity selection
000b	None
001b	Mark
010b	Space
011b	Dḋd
100b	Even
101b	Reserved
110b	Reserved
111b	Reserved
11	1

Table 227 - P	arity selection
---------------	-----------------

The bits per character field specifies the number of bits in each character. A value of zero in the MODE SELECT command indicates that the target shall use its default character size.

For the MODE SELECT command, a request to send (RTS) bit of one specifies that the target shall insure the Request to Send (RTS) signal in the serial interface follows the line state of the Data Terminal Ready (DTR) signal in the serial interface. A RTS bit of zero specifies that the target shall set the Request to Send (RTS) signal to high whenever the target power is on. For the MODE SENSE command, the target shall report the current value of this field.

For the MODE SELECT command, a clear to send (CTS) bit of one specifies that the target shall delay data transmission to the printer device until the printer device asserts the Clear to Send (CTS) signal in the serial interface. A CTS bit of zero indicates that the target shall ignore the Clear to Send signal. For the MODE SENSE command, the target shall report the current value of this field.

The code values for the pacing protocol field are defined in table 228.

Code	Pacing protocol
0h	None
1h	XON/XOFF
2h	ETX/ACK
3h	DTR
4h - 7h	Reserved
8h - Fh	Vendor-specific

Table	228	-	Pacing	protocol
				P

The baud rate field specifies the baud rate in bits per second. The target may round this value as described in 7.5.4. A baud rate of zero in the MODE SELECT command specifies that the target shall use its default baud rate.

# **12 Processor devices**

## 12.1 Model for processor devices

The SCSI processor device is a target with the characteristics of a primary computing device, typically a personal computer, minicomputer, mainframe computer, or auxiliary computing device or server. Such a primary computing device is often called a host. The processor device receives or provides packets of data as requested by the initiator.

In the SCSI processor device, the target accepts and provides the data packets transferred according to the commands of the initiator. The initiator and the processor device are both assumed to know the rules by which information is exchanged between them, how the information is interpreted by the processor device, and when it is allowable to exchange the information. These rules are not specified by this standard.

The initiator requests that the processor device accept a packet of data by transmitting a SEND command. The initiator requests that the processor device return a packet of data by transmitting a RECEIVE command. A COPY command can also be transmitted to the processor device to request that it serve as a copy manager. The actual data flow can be between the processor device and another SCSI device or can be between two SCSI devices under control of the processor device acting as a copy manager.

If a processor device temporarily has no resource available to manage a data packet from the initiator, has no data packet to provide to the initiator, or has no resources assigned to perform the operation, the device may then choose one of the following responses:

- a) Terminate the command with CHECK CONDITION status and the sense key NOT READY with the appropriate additional sense code for the condition. This is the appropriate response to a TEST UNIT READY command.
- b) Disconnect until the necessary resource or data packet becomes available, and then reconnect to the initiator and resume the operation.
- c) Terminate the command with BUSY status.

More than one logical unit can be implemented by a processor device. Logical units can serve as additional paths to a single resource, and/or each logical unit can serve as a path to different resources within the device. A single logical unit may also serve as a path to multiple resources if the processor device can interpret information within the data packet and route the packet to the appropriate resource. If the logical unit addressed by the initiator does not have an available resource or data packet associated with it, the processor device may choose to treat the logical unit as an invalid logical unit (see 7.5.3) or respond as described in the previous paragraph.

If the processor device determines that an error or unusual condition has occurred while performing an operation specified by the contents of a data packet, the information describing the condition is normally returned as a part of a data packet. If the processor device determines that an error or unusual condition has occurred while executing the SCSI command from the initiator, the command is terminated with a CHECK CONDITION and the failures are identified through a REQUEST SENSE command.

The SCSI processor device is distinguished from a SCSI communications device by the fact that the primary destination of the data packets is within the target device. A SCSI communications device, in contrast, passes the data on to an ultimate destination outside the target through a network. Many types of devices may find it convenient to function as processor devices if no other suitable SCSI device type exists and if the packet exchange protocol dictated by the processor device model meets their functional requirements. Devices requiring totally incompatible protocols and command sets should be examined carefully to ensure that the incompatibilities are based on functional requirements. If they are, they should be treated as vendor-unique device types.

Several examples of processor device implementations are provided to clarify the range of utility of the SCSI processor device.

### 12.1.1 Host-to-host communication, SEND only

A host system, (host A), takes the initiator role and selects a processor device (host B), transmitting a packet to host B using the SEND command. The SEND command contains an operating system call that requests data from the local storage devices attached to host B. After performing the functions required by the data packet, Host B assumes the initiator mode and selects host A as a processor device and uses a SEND command to transmit the requested data back to host A. Host A thus acts as a primary computer and host B acts as a specialized data server computer. Note that the SEND command is sufficient to perform a complete transaction both host A and host B are capable of acting as initiators. This provides the capability of a high bandwidth intercommunication among nearby host processors.

## 12.1.2 Host-to-host communication, SEND and RECEIVE

A host system (host A) takes the initiator role and selects a processor device (host B), transmitting a packet usin the SEND command to host B containing instructions about an operation to be performed. Host A again takes the initiator role and sends the data to be used by host B in the operation. Host A then assumes that a result wi be obtained consistent with rules understood by both devices. Host A generates a RECEIVE command to obtair the result from host B. If the result is not yet ready, host B may disconnect until the calculation is complete and the requested data packet can be returned to host A.

NOTE 168 Host A need not support target mode and host B need not support initiator mode to successfully complete an exchange between the two devices.

#### 12.1.3 Host-to-special-output peripheral

A special co-processor device which can use the processor device command set is a high-performance graphics display terminal. The initiator sends to the display terminal control and data packets that contain the image to be displayed. Only the SEND command is required. A peripheral failure should be indicated through the norma CHECK CONDITION / REQUEST SENSE protocol.

#### 12.1.4 Host-to-special-input peripheral

A second special co-processor device that can use the processor device command set is a data acquisition subsystem. Such subsystems may multiplex and compact streams of data from many sources. A host could control the data acquisition modes and the selection of data streams by transmitting control packets to the processor device using the SEND command. The host could then obtain the acquired data by executing a serie of RECEIVE commands. The data acquisition device could also serve as an initiator, selecting peripheral storage devices and storing the compacted acquired data there for later access directly by the host or through host to host communication protocols. A peripheral failure would be indicated through the normal CHECK CONDITION / REQUEST SENSE protocol.

# 12.2 Commands for processor devices

The commands for processor devices shall be as shown in table 229.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY INQUIRY LOG SELECT LOG SENSE READ BUFFER RECEIVE RECEIVE DIAGNOSTIC RESULTS REQUEST SENSE SEND SEND DIAGNOSTIC TEST UNIT READY WRITE BUFFER	40h 39h 18h 3Ah 12h 4Ch 4Ch 3Ch 08h 1Ch 03h 03h 03h 0Ah 1Dh 00h 3Bh	0000 0000 M 0000 M M 0000 M M 0000 0000 M 0000 0000 0000 0000 00000 00000 000000	$\begin{array}{c} 8.2.1\\ 8.2.2\\ 8.2.3\\ 8.2.4\\ 8.2.5\\ 8.2.6\\ 8.2.7\\ 8.2.12\\ 12.2.1\\ 8.2.13\\ 8.2.14\\ 12.2.2\\ 8.2.15\\ 8.2.16\\ 8.2.17\end{array}$
Key: M = command implementation is ma O = command implementation is op			

Table 229	- Commands	for processor	devices
-----------	------------	---------------	---------

The following operation codes are vendor-specific: 02h, 05h, 06h, 09h, 0Ch, 0Dh, 0Eh, 0Fh, 10h, 11h, 13h, 14h, 19h, C0h through FFh. All remaining operation codes for processor devices are reserved for future standardization.

## 12.2.1 RECEIVE command

The RECEIVE command (see table 230) requests that the target transfer data to the initiator. The contents of the data are not defined by this standard.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	on code (C	08h)		
1	Logical	unit num	ıber			Reserved		
2	(MSB)							
3				Allocati	on length	)		
4								(LSB)
5				Control				

Table 230 - RECEIVE command

## 12.2.2 SEND command

The SEND command (see table 231) requests that the target transfer data from the initiator.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (C	)Ah)		
1	Logical	unit num	nber			Reserved		AEN
2	(MSB)			·····••				
з				Transfer	length			
4								(LSB)
5				Control				

Table 231 - SEND command

An asynchronous event notification (AEN) bit of one indicates that the data to be transferred conforms to AEN data format as defined in table 232. A SEND command with an AEN bit of one shall be only issued to logical unit zero.

# Table 232 - SEND command - AEN data format

Bit Byte	7	6	5	4 3		2 1 0		
0	Res	Reserved LUNTAR Reserved LUNTRN						
1				Rese	rved			
2				Resei	rved			
3				Reser	rved			
4	Sense data byte (0)							
n+4	Sense data byte (n)							

An AEN bit of zero indicates that the data to be transferred are vendor-specific.

The transfer length specifies the length in bytes of data that shall be sent during the DATA OUT phase. A transfer length of zero indicates that no data shall be sent. This condition shall not be considered an error.

A logical unit target (LUNTAR) bit of zero specifies that the asynchronous event occurred on a logical unit. A LUNTAR bit of one specifies that the asynchronous event occurred on a target routine.

If the LUNTAR bit is zero, the logical unit number target routine number (LUNTRN) field specifies the logical unit on which the asynchronous event occurred. If the LUNTAR bit is one, the LUNTRN field specifies on the routine on which the asynchronous event occurred.

The sense data bytes are defined in table 65.

# 12.3 Parameters for processor devices

## 12.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with processor devices.

The diagnostic page codes for processor devices are defined in table 233.

Table 233 - Diagnostic page codes

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	List of supported parameters page Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

## 12.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with processor devices.

The log page codes for processor devices are defined in table 234.

### Table 234 - Log page codes

Page code	Description	Subclause
01h 07h 06h 02h - 05h 08h - 2Fh 30h - 3Eh 3Fh	Buffer over-run/under-run page Last n error events page List of supported parameters page Non-medium error page Reserved Reserved Vendor-specific pages Reserved	8.3.2.1 8.3.2.3 8.3.2.5 8.3.2.4

# 12.4 Definitions specific to processor devices

**12.4.1 host:** A device with the characteristics of a primary computing device, typically a personal computer, workstation, minicomputer, mainframe computer, or auxiliary computing device or server.

**12.4.2 data packet**: The data transferred during the DATA IN phase of a RECEIVE command, or during the DATA OUT phase of a SEND command. A data packet often contains information at the beginning or end of the packet that describes the contents of the packet. A data packet might contain control or status information for the destination device.

12.4.3 resource: A part of the device required to operate on or store the data packet.

# **13 Write-once devices**

# 13.1 Model for write-once devices

The model for the write-once device is a variation on the optical memory model. Most of the aspects of a writeonce device are similar to optical memory devices. The differences are summarized in this clause.

## 13.1.1 Logical blocks

Data may be written to a logical block only once. A subsequent write to a logical block already written may or may not be corrupted, depending on the implementation. Write-once physical media is non-volatile.

The updating of blocks (see 16.1) is discouraged. SCSI write-once devices are intended to be archival in nature. Data at a logical block address is not expected to change once it is written. The update commands are not defined for this device type. Devices are not precluded from implementing the update function by this standard, though devices that require the update function should use the optical memory device type.

Devices may be able to determine the state of a logical block prior to access. These devices can determine whether a block is blank or written. This is useful in detecting previously written blocks, and preventing a destructive overwrite. This is also useful in finding blank areas for later writing. The MEDIUM SCAN command can be used to find blank and written areas prior to WRITE and READ access.

## 13.1.2 Initialization

The FORMAT UNIT command is not defined for write-once devices. Write-once media is shipped pre-formatted by the manufacturer and is ready for use when mounted.

## 13.1.3 Physical medium defects

The raw defect rate is typically higher for optical medium than for magnetic medium. Data is usually recovered through the use of sophisticated error correction algorithms. The level of error correction used for data recovery is often can be selected. However, many write-once devices have a minimum level that is always used and cannot be de-selected through the error recovery mode parameter. Control of the error correction algorithms and level of correction is vendor-specific.

Defect management on write-once devices is usually vendor-specific. However, there are standards for some types of write-once media that specify defect management techniques. These standards, where they exist, may supersede the implementation requirements pertaining to error and defect reporting in this standard.

### 13.1.4 Error reporting

If any of the following conditions occur during the execution of a command the target shall return CHECK CONDITION status. The appropriate sense key and additional sense code should be set. The following list illustrates some error conditions and the applicable sense keys. The list does not provide an exhaustive enumeration of all conditions that may cause the CHECK CONDITION status.

<u>Condition</u> Invalid logical block address	<u>Sense Key</u> ILLEGAL REQUEST
Unsupported option requested	ILLEGAL REQUEST
Target reset or medium change since last command from this initiator	UNIT ATTENTION
Self diagnostic failed	HARDWARE ERROR
Unrecovered read error	MEDIUM ERROR HARDWARE ERROR
Recovered read error	RECOVERED ERROR
Overrun or other error that might be resolved by repeating the command	ABORTED command
Attempt to write on write protected medium	DATA PROTECT
Attempt to read a blank or previously unwritten block	BLANK CHECK
Attempt to write a previously written block and blank checking is enabled	BLANK CHECK

In the case of an invalid logical block address, the sense data information field shall be set to the logical block address of the first invalid address.

In the case of an attempt to read a blank or previously unwritten block, the sense data information field shall be set to the logical block address of the first blank block encountered. The data read up to that block shall be transferred.

In the case of an attempt to write a previously written block and blank checking is enabled, the sense information field shall be set to the logical block address of the first non-blank block encountered.

# 13.2 Commands for write-once devices

The commands for write-once devices shall be as shown in table 235.

,

Table 235 - (	Commands for	write-once	devices
---------------	--------------	------------	---------

. /

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY INQUIRY LOCK UNLOCK CACHE LOG SELECT LOG SELECT(6) MODE SELECT(10) MODE SENSE(10) PRE-FETCH PREVENT ALLOW MEDIUM REMOVAL READ(10) READ(10) READ(12) READ CAPACITY READ DUFFER READ CAPACITY READ LONG REASSIGN BLOCKS RECEIVE DIAGNOSTIC RESULTS RELEASE REQUEST SENSE RESERVE REZERO UNIT SEARCH DATA EQUAL(10) SEARCH DATA EQUAL(12) SEARCH DATA HIGH(12) SEARCH DATA LOW(10) SEARCH DATA LOW(10) SEARCH DATA LOW(12) SEEK(6) SEEK(6) SEEK(6) SEEK(10) SET LIMITS(12) START STOP UNIT SYNCHRONIZE CACHE TEST UNIT READY VERIFY(12) WRITE(6) WRITE(12) WRITE AND VERIFY(10) WRITE AND VERIFY(12) WRITE BUFFER WRITE LONG Key: M = command implementation is ma	40h 39h 18h 32h 36h 40h 35h 155h 155h 155h 155h 155h 155h 155h	0000M0000000000M00MM2M00000M0000M0000M	$\begin{array}{c} 8.2.1\\ 8.2.2\\ 8.2.3\\ 8.2.4\\ 8.2.5\\ 9.2.6\\ 8.2.3\\ 8.2.5\\ 9.2.6\\ 8.2.3\\ 8.2.3\\ 9.2.6\\ 8.2.3\\ 9.2.6\\ 8.2.3\\ 9.2.4\\ 9.2.5\\ 9.2.4\\ 9.2.5\\ 9.2.4\\ 9.2.5\\ 9.2.4\\ 9.2.2\\ 9.2.2\\ 9.2.2.7\\ 9.2.2.7\\ 9.2.2.7\\ 9.2.2.14\\ 9.2.2.7\\ 9.2.2.14\\ 9.2.2.13\\ 9.2.2.14\\ 9.2.2.14\\ 9.2.2.14\\ 16.2.2.8\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.15\\ 9.2.16\\ 16.2.2.20\\ 16.2.2.21\\ 16.2.2.22\\ 16.2.2.21\\ 16.2.2.23\\ 16.2.23\\ 16.2.2$
0 = command implementation is op	tional.		

The following command codes are vendor-specific: 02h, 05h, 06h, 09h, 0Ch, 0Dh, 0Eh, 0Fh, 10h, 11h, 13h, 14h, 19h, 20h, 21h, 22h, 23h, 24h, 26h, 27h, 29h, and C0h through FFh. All remaining command codes for write-once devices are reserved for future standardization.

# 13.3 Parameters for write-once devices

Refer to the parameters for optical memory devices (see 16.3).

# 13.4 Definitions specific to write-once devices

See 16.4.

,

## 14 CD-ROM devices

# 14.1 Model for CD-ROM devices

CD-ROM devices permit reading data from a rotating media. Writing the media is not supported. Data transfer can begin with any of the consecutively numbered logical blocks. Data on CD-ROM devices are addressed the same as usual (magnetic) direct-access devices. Some CD-ROM devices support a separate information stream (e.g. audio and/or video but referred to as audio in this clause) transmitted via a connection other than the SCSI Bus. This device type defines commands for controlling these other information streams.

CD-ROM drives are designed to work with any disc that meets IEC. Many new drives read CD-ROM data discs, digital audio discs, and audio-combined discs (i.e. some tracks are audio, some tracks are data).

### 14.1.1 CD-ROM media organization

The formats written on the CD-ROM and CD-DA (Digital Audio) media require special interfacing considerations.

NOTE 169 This subclause contains a number of terms that have special meanings peculiar to CD-ROM technology or that may be unfamiliar to many readers of this standard. The glossary (see 14.4.) defines these terms.

Discs may contain either audio, data or a mixture of the two. Table 236 gives an example of a of a audiocombined disc to illustrate the relationship between the logical block addresses reported in SCSI and the MSF address encoded on the media. The logical addresses given in the table assume a block length of 2 048, 2 336 or 2 340 bytes. For block lengths of 1 024, 512 or 256 multiply all values given in the SCSI address columns by 2, 4 or 8 respectively.

NOTE 170 The term frame is used in two different ways in the CD-ROM media standard. The intended meaning can only be determined from the context. Whenever possible, this description replaces the larger data unit with the more familiar term sector. The primary exception to this policy is the use of frame when referring to the MSF address. In the MSF context, one frame (F field unit) equals one sector. On a typical two channel CD-DA media, each frame (F field unit) is played in 1/75th of a second.

Table 236 - Exam	iple mixed mo	de CD-ROM	disc lavout
TUDIO EUO - EAUTI	ipio mixea me		aloo layoat

	SCSI add	dress	/ Sul	b-channel	information	<u> </u>	<u></u>		
Block description	Łogical address (deci∎al)	Track relative logical address	Absolute NSF address <sup>1</sup>	Track and index	Track relative MSF address	Sector is info or is pause	Mode audio or data	CD-ROM data mode <sup>2</sup>	
Lead-in <sub>a</sub> rea <sup>3)</sup> Pre-gap <sup>3)</sup>			00/00/00	0/- 1/0	00/02/00	Pause	Audio Data	Null	
1st track data 2nd track data	0 000 <sup>5</sup> ) 6 000 <sup>5</sup> ) 7 500	0 0 1 500	00/02/00 <sup>4</sup> ) 01/22/00 <sup>4</sup> ) 01/42/00	1/1 2/1 2/2	00/00/00 00/00/00 00/20/00	Info Info Info	Data Data Data	L-EC L-EC L-EC	
Post-gap	9 000	3 000	02/02/00	2/3	00/40/00	Pause	Data	Null	
Pause-silence	9 150	- 150 <sup>9)</sup>	02/04/00	3/0	00/02/00 <sup>8</sup>	Pause	Audio	_	
3rd track audio 4th track audio	9 300 <sup>7)</sup> 11 400 <sub>7)</sub> 21 975 <sup>7)</sup>	0 2 250 0	02/04/00 <sup>6)</sup> 02/34/00 04/53/00 <sup>6</sup> )	3/1 3/2 4/1	00/00/00 00/30/00 00/00/00	Info Info Info	Audio Audio Audio		
Pre-gap part 1 Pre-gap part 2	30 000 30 075	-225 <sup>9)</sup> -150	06/40/00 06/41/00	5/0 5/0	00/03/00 00/02/00	Pause Pause	Audio Data	Null	
5th track data	30 225	0	06/43/00	5/1	00/00/00	Info	Data	L-EC	
Last information	263 999 <sup>10)</sup>	233 774	58/39/74	5/1	51/56/74	Info	Data	L-EC	
Post-gap		233 775	58/40/00	5/2	51/57/00	Pause	Data	Null	
Lead-out track	264 000 <sup>11)</sup>	0	58/42/00 <sup>12)</sup>	AA/ <sup>13</sup>	00/00/00	Pause	Audio		
Lead-out track       264 000***       0       58/42/00***       AA/**       00/00/00       Pause       Audio									

The physical format defined by the CD-ROM media standards provides 2 352 bytes per sector. For usual computer data applications, 2 048 bytes are used for user data, 12 bytes for a synchronization field, 4 bytes for a sector address tag field and 288 bytes - the auxiliary field - for L-EC (CD-ROM data mode 1). In less critical applications, the auxiliary field may also be used for user data (CD-ROM data mode 2). A CD-ROM physical sector size is 2 048, 2 336 or 2 340 bytes per sector. These values correspond to user data field only, user data plus auxiliary data, the 4 byte address tag plus user data plus auxiliary data.

Selection among these options is made by setting the density code field of the MODE SELECT block descriptor. The usual selection is 2 048 bytes per physical sector via a density code setting of 1. See the table of CD-ROM density code values in 14.3.3.

This same area of the CD-ROM or CD audio media may store 1/75th of a second of two channel audio information formatted according to the CD-DA specification. (These audio channels are usually the left and right

components of a stereo pair.) An audio only density code value can be used to declare an area of the media to be invalid for data operations.

For data and mixed mode media (those conforming to ISO/IEC 10149), logical block address zero shall be assigned to the block at MSF address 00/02/00. For audio media (those conforming only to IEC 908), logical block address zero should be assigned to the actual starting address of track 1. This may be approximated by using the starting address of track 1 contained in the table of contents (TOC) or by assigning logical block address zero to the block at MSF address 00/02/00.

Logical addressing of CD-ROM information may use any logical block length. When the specified logical block length is an exact divisor or integral multiple of the selected number of bytes per CD-ROM sector, the device sha map (one to one) the bytes transferred from CD-ROM sectors to the bytes of logical blocks. For instance, if 2 048 bytes are transferred from each CD-ROM sector (specified by the CD-ROM density code value), and the logical block length is 512 bytes, then each CD-ROM sector shall map to exactly four logical blocks. This standard does not define the mapping of logical block lengths which do not evenly divide or are not exact multiples of the selected number of bytes per CD-ROM sector.

A track may be viewed as a partition of the CD-ROM address space. A CD-ROM media contains from one to ninety-nine tracks. All information sectors of a track are required to be of the same type (audio or data) and mode. Each change in the type of information on the disc requires a change in track number. A disc containing both audio and data would have at least two tracks, one for audio and one for data.

The tracks of a CD media are numbered consecutively with values between 1 and 99. However, the first information track may have a number greater than 1. Tracks have a minimum length of 300 sectors including any transition area that is part of a track.

The CD-ROM media standards require transition areas between tracks encoded with different types of informatior In addition, transition areas may be used at the beginning or end of any track. For audio tracks the transition areas are called pause areas. For data tracks, transition areas are called pre-gap and post-gap areas. See table 236 for an example. The IEC 908 and ISO/IEC 10149 standards specify minimum time durations for these areas. Maximum time durations are not specified.

Transition areas are formatted and the logical address continues to increment through transition areas. Some media (i.e. discs with only one track) may not have transition areas. The means to determine the location of the transition areas is vendor or application-specific and is addressed by other standards (e.g. ISO 9660).

CD-ROM is a unique SCSI device in the respect that some logical blocks on a disc may not be accessible by all commands. SEEK commands may be issued to any logical block address within the reported capacity of the disc. READ commands cannot be issued to logical blocks that occur in some transition areas, or to logical blocks within an audio track. PLAY commands cannot be issued to logical blocks within a data track.

The blank verify (BlkVfy) option of the verify command (see 16.2.11), for CD-ROM devices, shall verify that the addressed blocks are transition area blocks.

CD-ROM media have lead-in and lead-out areas. These areas are outside of the user-accessible area as reported in the READ CD-ROM CAPACITY data. The lead-in area of the media is designated track zero. The lead-out area is designated track 0AAh. The sub-channel Q in the lead-in track contains a table of contents (TOC) of the disc.

NOTE 171 The READ CD-ROM CAPACITY command returns the logical block address of the last block prior to the lead-out area. This location may be in a transition area and therefore not a valid address for read operations.

The table of contents gives the absolute MSF location of the first information sector of each track. Control information (audio/data, method of audio encoding, etc.) for each track is also given in the TOC. However, the TOC does not distinguish between the different modes of data tracks (i.e. CD-ROM data mode one vs. CD-ROM data mode two).

The MSF locations of the beginning of data tracks in the TOC are required to be accurate, however, the TOC values for audio tracks have a tolerance of plus or minus 75 sectors. Information from the TOC can be used to reply to a READ CD-ROM CAPACITY command. When this is done, the drive implementor should consider the possible tolerances and return a value that allows access to all information sectors.

An index is a partition of a track. Pre-gap areas are encoded with an index value of zero. Pause areas at the beginning of audio tracks are also encoded with an index value of zero. The first information sector of a track has an index value of one. Consecutive values up to 99 are permitted. Index information is not contained in the TOC. Not all sectors are encoded with the index value in the Q-sub-channel data (the requirement is 9 out of 10). A sector without an index value is presumed to have the same index as the preceding sector.

Tracks and indexes are not defined to be any particular length, (except for a minimum track length of 300 sectors.) A CD disc may be created with a single information track that has a single index; or with 99 information tracks, each with 99 indexes.

The sub-channel information which is part of each sector includes a track relative MSF location value giving the distance from the first information sector of the track. On the media, this value decreases during the pre-gap area (sectors with index values of 0) and increases for the rest of the track. The data, returned by the READ SUB-CHANNEL command with MSF bit set to zero, converts this to a track relative logical block address (TRLBA). The TRLBA is continually increasing over the whole track, and pre-gap areas shall return negative values. When the MSF bit in the read sub-channel command is set to one, the MSF track relative location value from the media is reported without change.

### 14.1.2 CD-ROM physical data format

The physical format of CD-ROM and CD-DA media uses a smaller unit of synchronization than the more familiar magnetic or optical recording systems. The basic data stream synchronization unit is a small frame. This is not the same large frame (sector) as referred to in the MSF unit. Each small frame consists of 588 bits. A sector on CD-ROM media consists of 98 small frames.

A CD-ROM small frame consists of:

a) 1 synchronization pattern	(24+3 bits)	
b) 1 byte of sub-channel data	(14+3 bits)	
c) 24 bytes of data	(24 x (14+3) bits)	
d) 8 bytes of CIRC code	(8 x (14+3) bits)	Total: 588 bits.

Data, sub-channel and CIRC bytes are encoded with an eight-to-fourteen bit code; then three merging bits are added. The merging bits are chosen to provide minimum low-frequency signal content and optimize phase lock loop performance.

### 14.1.2.1 Frame format for audio

Each small frame of an audio track on a two-channel CD-DA or CD-ROM media consists of six digitized 16-bit samples of each audio channel. These 24 bytes of data are combined with a synchronization pattern, CIRC bytes and a sub-channel byte to make a frame. Each frame takes approximately 136.05 uS to play. This gives a sampling rate of 44,1 khz for each channel. The sub-channel information creates the higher level sector grouping for audio tracks.

### 14.1.2.2 Sector format for data

The data bytes of 98 small frames comprise the physical unit of data referred to as a sector. (98 small frames times 24 bytes per small frame equal 2 352 bytes of data per sector.)

A sector that contains CD-ROM data mode one data has the following format:

- a) 12 bytes Synchronization field
- b) 4 bytes CD-ROM data header Absolute M field in bcd format Absolute S field in bcd format
  - Absolute F field in bcd format CD-ROM data mode field
- c) 2048 bytes User data field
- d) 4 bytes Error detection code
- e) 8 bytes Zero
- f) 276 bytes Layered error correction code

A sector that contains CD-ROM Data Mode two data has the following format:

a) <sup>:</sup>	12 bytes	Synchronization field
b):	4 bytes	CD-ROM data header
<b>_</b>	-	Absolute M field in bcd format
		Absolute S field in bcd format
		Absolute F field in bcd format
		CD-ROM data mode field
C)	2 336 byte	s User data field (2048 bytes of mode 1 data
'	•	plus 288 bytes of auxiliary data)

NOTE 172 Many drives are capable of returning CD-ROM data mode one data in a CD-ROM data mode two format. This allows the user to investigate the error detection and error correction codes. However data encoded as CD-ROM data mode two cannot be read as CD-ROM data mode one data.

### 14.1.2.3 Sub-channel information formats

The sub-channel byte of each frame is assigned one bit for each of the 8 sub-channels, designated P, Q, R, S, T, U, V, W. Only sub-channels P and Q are defined for CD-ROM media. The other sub-channel bits are zero.

Sub-channel P is a simple flag bit that may be used for audio muting control and track boundary determination.

Sub-channel Q has a higher level of structure. All the sub-channel Q bits of a sector define the sub-channel Q information block. (For audio tracks, decoding the Q sub-channel is the only way to distinguish sector boundaries.)

The sub-channel Q block consists of 98 bits, one bit from each small frame in a sector. Three formats are defined for the sub-channel Q information block. The first format provides location information and is defined as follows:

- a) 2 bits Sub-channel synchronization field
- b) 4 bits ADR field defines the format
- c) 4 bits Control field defines the type
- d) 8 bits Track number (in BCD)
- e) 8 bits Index number (in BCD)
- f) 24 bits Track relative MSF address
- g) 8 bits Reserved (0)
- h) 24 bits Absolute MSF address
- i) 16 bits CRC error detection code

284

This format is required to exist in at least nine out of ten consecutive sectors.

The second and third formats are optional. If used, they must exist in at least one out of 100 consecutive sectors. They include the absolute frame byte of the MSF address to provide location information continuity.

The second format gives the catalogue number of the disc (UPC/EAN bar code number). This information is constant over the whole media.

The third format gives the International Standard Recording Code (ISRC) for each track. The ISRC is defined in ISO 3901. This format is not present on lead-in or lead-out tracks and may change only after the track number changes.

### 14.1.3 CD Audio error reporting

PLAY AUDIO commands with the immediate bit set in the audio control mode return status as soon as the command has been validated (which may involve a seek to the starting address). The playback operation continues and may complete without notification to the initiator. Error termination of audio operations shall be reported to the initiator by returning immediate CHECK CONDITION status to the next command (except for REQUEST SENSE and INQUIRY.) The deferred error sense data (see 8.2.14.2.) is used to indicate that the error is not due to the current command.

The status of the play operation may be determined by issuing a REQUEST SENSE command. The sense key is set to NO SENSE and the audio status (see 14.2.10) is reported in the additional sense code qualifier field.

### 14.1.4 CD-ROM ready condition/not ready condition

The ready condition occurs after a cartridge is inserted and the drive has performed its initialization tasks. These may include reading the table of contents from the media.

A not ready condition may occur for the following reasons:

- a) There is no cartridge inserted.
- b) The drive is unable to load or unload the cartridge.
- c) The drive is unable to recover the table of contents.
- d) The controller cannot select the drive.

## 14.1.5 CD-ROM address reporting formats (MSF bit)

Several CD-ROM specific commands can report addresses either in logical or in MSF format (see table 237). The READ HEADER, READ SUB-CHANNEL and READ TABLE OF CONTENTS commands have this feature.

Bit Byte	7	6	5	4	3	2	1	0	
0				Reserved		· · · · · · · · · · · · · · · · · · ·			
1		M field							
2				S field					
3				F field					

Table 237 - MSF address forma
-------------------------------

An MSF bit of zero requests that the logical block address format be used for the CD-ROM absolute address field or for the offset from the beginning of the current track expressed as a number of logical blocks in a CD-ROM track relative address field. This track relative logical block address (TRLBA) value is reported as a negative value in twos-complement notation for transition areas that have decreasing MSF encoded relative addresses.

An MSF bit of one requests that the MSF format be used for these fields. In certain transition areas, the relative MSF addresses are decreasing positive values. The absolute MSF addresses are always increasing positive values (see entry in 14.4).

. . . . .

The M, S, and F fields are expressed as binary numbers. The values match those on the media, except for the encoding. The ratios of M field units to S field units and S field units to F field units are reported in the mode parameters page (see 14.3.3).

### 14.1.6 Sensing support for CD-audio commands.

If any commands related to audio operations are implemented, then the PLAY AUDIO command shall be implemented to allow a method for the initiator to determine if audio operations are supported. A target responding to a PLAY AUDIO command which has a transfer length of zero, with CHECK CONDITION status, and setting the sense key to ILLEGAL REQUEST does not support audio play operations.

NOTE 173 The PLAY AUDIO command may be implemented without support for any of the other audio operations commands.

### 14.1.7 Error reporting

If any of the following conditions occur during the execution of a command, the target shall return CHECK CONDITION status. The appropriate sense key and additional sense code should be set. The following list illustrates some error conditions and the applicable sense keys. The list does not provide an exhaustive enumeration of all conditions that may cause the CHECK CONDITION status.

<u>Condition</u> Invalid logical block address	<u>Sense Key</u> ILLEGAL REQUEST
Unsupported option requested	ILLEGAL REQUEST
Target reset or medium change since last command from this initiator	UNIT ATTENTION
Self diagnostic failed	HARDWARE ERROR
Unrecovered read error	MEDIUM ERROR HARDWARE ERROR
Recovered read error	RECOVERED ERROR
Overrun or other error that might be resolved by repeating the command	ABORTED command
Attempt to read a blank block	BLANK CHECK
Attempt to play a data block as audio	BLANK CHECK

In the case of an invalid logical block address, the sense data information field shall be set to the logical block address of the first invalid address.

In the case of an attempt to read a blank or previously unwritten block, the sense data information field shall be set to the logical block address of the first blank block encountered. The data read up to that block shall be transferred.

There are other special error situations for CD-ROM devices. In the following cases the sense key shall be set to BLANK CHECK and the additional sense code set to END OF USER AREA ENCOUNTERED ON THIS TRACK: a) a post-gap area is encountered (i.e. a block with CD-ROM Data Mode 0);

286

- b) a pre-gap area is encountered (i.e. a block with index equal to 0);
- c) The information type (data vs. audio) changes.

When not performing audio playback, if the logical block address requested is not within a data track, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to BLANK CHECK and the additional sense code set to ILLEGAL MODE FOR THIS TRACK. This applies to audio-combined and audio media.

# 14.2 Commands for CD-ROM devices

The commands for CD-ROM devices shall be as shown in table 238.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY INQUIRY LOCK/UNLOCK CACHE LOG SELECT LOG SELECT(6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(10) PAUSE/RESUME PLAY AUDIO(12) PLAY AUDIO(12) PLAY AUDIO TRACK/INDEX PLAY AUDIO TRACK/INDEX PLAY AUDIO TRACK/INDEX PLAY AUDIO TRACK/INDEX PLAY TRACK RELATIVE(12) PRE-FETCH PREVENT/ALLOW MEDIUM REMOVAL READ(10) READ(12) READ CD-ROM CAPACITY READ BUFFER READ CD-ROM CAPACITY READ SUB-CHANNEL READ SUB-CHANNEL READ TOC RECEIVE DIAGNOSTIC RESULTS RELEASE REQUEST SENSE RESERVE REZERO UNIT SEARCH DATA EQUAL(10) SEARCH DATA HIGH(12) SEARCH DATA LOW(10) SEARCH DATA LOW(10) SET LIMITS(10) SET LIMITS(	otional.	0000M000000000******	88888988888888888888888888888888888888
* = indicates a PLAY AUDIO comma	ana		

Table 238 - Commands for CD-ROM device

The following command codes are vendor-specific: 02h, 05h, 06h, 09h, 0Ch, 0Dh, 0Eh, 0Fh, 10h, 11h, 13h, 14h, 19h, 20h, 21h, 22h, 23h, 24h, 26h, 27h, 29h, and C0h through FFh. All remaining command codes for CD-ROM devices are reserved for future standardization.

If any of the PLAY AUDIO commands (indicated by an \* in the type column) are implemented, the PLAY AUDIO command shall be implemented by the target.

## 14.2.1 PAUSE RESUME command

The PAUSE RESUME command (see table 239) requests that the device stop or start an audio play operation. This command is used with PLAY AUDIO commands issued while the immediate bit is set to one.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (4	3h)		
1	Logical	unit num	ber	Reserved				
2	Reserved							
3	-			Reserved				
4	Reserved							
5	Reserved							
6				Reserved				
7				Reserved				
8	<u> </u>			Reserved		,		Resume
9				Control				


A resume bit of zero causes the drive to enter the hold track state with the audio output muted after the current block is played. A resume bit of one causes the drive to release the pause and begin play at the block following the last block played.

If an audio play operation cannot be resumed and the resume bit is one, the command is terminated with CHEC CONDITION status. If the resume bit is zero and an audio play operation cannot be paused, (no audio play operation has been requested, or the requested audio play operation has been completed), the command is terminated with CHECK CONDITION status.

It shall not be considered an error to request a pause when a pause is already in effect, or to request a resume when a play operation is in progress.

## 14.2.2 PLAY AUDIO(10) command

The PLAY AUDIO command (see table 240) requests that the target begin an audio playback operation. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.).

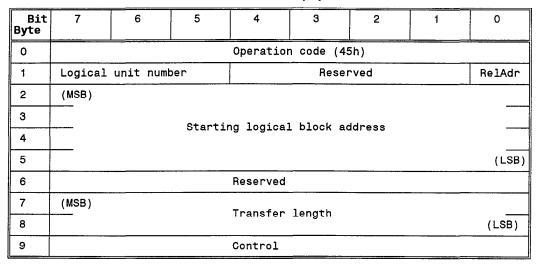



If any commands related to audio operations are implemented then the PLAY AUDIO command shall be implemented to allow a method for the initiator to determine if audio operations are supported. A target responding to a PLAY AUDIO command that has a transfer length of zero with CHECK CONDITION status and setting the sense key to ILLEGAL REQUEST does not support audio play operations.

The logical block address field specifies the logical block at which the audio playback operation shall begin.

The transfer length field specifies the number of contiguous logical blocks that shall be played. A transfer length field of zero indicates that no audio operation shall occur. This condition shall not be considered an error.

If the logical block length is not equal to the sector size, the target may adjust the starting logical block address and the transfer length. In such case, it is recommended that the target start the audio play operation with the beginning of a sector whenever the starting logical address falls within that sector (MSF unit). If the requested transfer length causes the end of an audio play operation to fall within a sector, the target may continue the play operation through the end of that sector.

If the starting address is not found, if the address is not within an audio track, or if a not ready condition exists, the command shall be terminated with CHECK CONDITION status.

If the CD-ROM information type (data vs. audio) changes, the sense key shall be set to BLANK CHECK and the additional sense code set to END OF USER AREA ENCOUNTERED ON THIS TRACK.

If the logical block address requested is not within an audio track, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to BLANK CHECK and the additional sense code set to ILLEGAL MODE FOR THIS TRACK.

## 14.2.3 PLAY AUDIO(12) command

The PLAY AUDIO(12) command (see table 241) requests that the target to begin an audio playback operation. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.). See the PLAY AUDIO(10) command for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (A5h)									
1	Logical	Logical unit number Reserved								
2	(MSB)	(MSB)								
3										
4	Logical block address									
5	(LSB)									
6	(MSB)									
7		Transfer length								
8				Transfer	Tength					
9	 (LSB									
10				Reserv	ed					
11				Control						

## Table 241 - PLAY AUDIO(12) command

## 14.2.4 PLAY AUDIO MSF command

The PLAY AUDIO MSF command (see table 242) requests that the target to begin an audio playback operation. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.).

Bit Byte		6	5	4	3	2	1	0		
0	Operation code (47h)									
1	Logical	unit num	nber		Reserved					
2				Reserved						
3	Starting M									
4		·····		Starting S field						
5				Starting F field						
6	Ending M field									
7	Ending S field									
8	Ending F field									
9				Control	· ······ ·					

## Table 242 - PLAY AUDIO MSF command

The starting M field, the starting S field, and the starting F field specify the absolute MSF address at which the audio play operation shall begin. The ending M field, the ending S field, and the ending F field specify the absolute MSF address where the audio play operation shall end. All contiguous audio sectors between the starting and the ending MSF address shall be played.

A starting MSF address equal to an ending MSF address causes no audio play operation to occur. This shall not be considered an error. If the starting MSF address is less than the ending MSF address, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

If the starting address is not found, if the address is not within an audio track, or if a not ready condition exists, the command shall be terminated with CHECK CONDITION status. See 14.1.7 for a description of error reporting information.

# 14.2.5 PLAY AUDIO TRACK INDEX command

The PLAY AUDIO TRACK INDEX command (see table 243) requests the target to begin an audio play operation. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.).

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (48h)										
1	Logical	unit num	ber	Reserved							
2	Reserved										
3	Reserved										
4	Starting track										
5	Starting index										
6	Reserved										
7	Ending track										
8	Ending index										
9	Control										

Table 243 - PLAY AUDIO TRACK INDEX command

The starting track field specifies the track number of the starting audio track. The starting index field specifies the index number within the track at which the audio play operation shall begin.

The ending track field specifies the track number of the ending audio track. The ending index field specifies the index number within the track after which the audio play operation shall stop. The audio play operation shall terminate at the last block with an index number equal to the ending index. All contiguous audio sectors between the starting and the ending address shall be played.

If the starting address is less than the ending address, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

If the starting address is not found, or if the address is not within an audio track, or if a not ready condition exists, the command shall be terminated with CHECK CONDITION status. See 14.1.7 for a description of error reporting information.

NOTE 174 Valid values for the track and index fields are 1 to 99. A starting index value of one specifies that playback is to start with the first audio sector of the track following the (optional) pause. A last index value of 99 specifies that playback continues through the last sector of the track.

If the ending track is greater than the last information track on the media, the playback shall continue until the last track is complete. If the ending index is greater than the largest index value on the ending track, the playback shall continue until this track is complete; then terminate. These conditions shall not be considered errors.

If the starting index is greater than the largest index value on the starting track, and the stop on track crossing (SOTC) bit of the audio control MODE SELECT parameters page (see 14.3.3.1) is zero, the playback operation shall start at the beginning of the next track. This situation is not an error.

If the starting index is greater than the largest index value on the starting track, and the stop on track crossing (SOTC) bit of the audio control MODE SELECT parameters page (see 14.3.3.1) is one, the playback shall not begin. The target shall return CHECK CONDITION, and the sense key shall be set to ILLEGAL REQUEST.

NOTE 175 The operation of the SOTC bit described above comes about because the user may not be able to determine the largest index value on a track, either from the table of contents or by other means. The SOTC bit one case allows the user to determine the largest index. The SOTC bit zero case allows the user to set up play operations without complete knowledge of the media layout.

## 14.2.6 PLAY AUDIO TRACK RELATIVE(10) command

The PLAY AUDIO TRACK RELATIVE(10) command (see table 244) requests that the device begin an audio playback operation. The starting address is specified as a track relative logical block address within the specified starting track. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.).

Bit Byte	7	6	5	4	3	2	1	0					
0	Operation code (49h)												
1	Logical unit number Reserved												
2	(MSB)												
3													
4		—— Track relative logical block address —											
5													
6				Starting	track								
7	(MSB)	(MSB)											
8	Transfer length – (LSB												
9	Control												

## Table 244 - PLAY AUDIO TRACK RELATIVE(10) command

The starting track field specifies the track number of the starting audio track.

The track relative logical block address (TRLBA) field specifies the two's complement starting logical block address relative to the beginning of the first sector on the track with an index value of one. Negative values indicate a starting location within the audio pause area at the beginning of the requested track.


The transfer length field specifies the number of contiguous logical blocks that shall be output as audio data. A transfer length field of zero indicates that no audio playback operation shall occur. This condition shall not be considered an error. Any other value indicates the number of logical blocks that shall be output.

If the logical block length is not equal to the sector size the target may adjust the starting logical block address and the transfer length. In such case, it is recommended that the target start the audio play operation with the beginning of a sector whenever the starting logical address falls within that sector (MSF unit). If the requested transfer length causes the end of an audio play operation to fall within a sector, the target may continue the play operation through the end of that sector.

If the starting address is not found, or if the address is not within an audio track, or if a not ready condition exists, the command is terminated with CHECK CONDITION status. See 14.1.7 for a description of error reporting information.

## 14.2.7 PLAY AUDIO TRACK RELATIVE(12) command

The PLAY AUDIO TRACK RELATIVE(12) command (see table 245) requests that the device begin an audio playback operation. The command function (Immed and SOTC bits) and the output of audio signals shall be as specified by the settings of the mode parameters (see 14.3.3.1.). See the PLAY AUDIO TRACK RELATIVE(10) command for a description of the fields in this command.

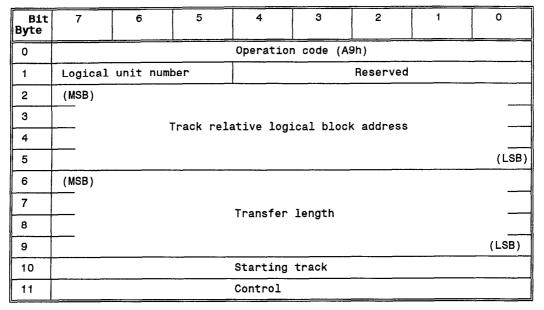

## Table 245 - PLAY AUDIO TRACK RELATIVE(12) command

### 14.2.8 READ CD-ROM CAPACITY command

The READ CD-ROM CAPACITY command (see table 246) provides a means for the initiator to request information regarding the capacity of the logical unit.

Bit Byte	7	6	5	4	3	2	1	0				
0	Operation code (25h)											
1	Logical		RelAdr									
2	(MSB)											
3												
4	Logical block address											
5												
6	Reserved											
7	Reserved											
8	Reserved											
9				Control								

### Table 246 - READ CD-ROM CAPACITY command

294

NOTE 176 This command has the same operation code (25h) as the READ CAPACITY command (see 92.7). The general function is the same but the exact definitions of the returned logical block address is modified to allow returning a possibly inexact value (but one with a known error bound) based on CD-ROM table of contents data. For many CD-ROM devices, this implementation allows a quicker response.

A partial medium indicator (PMI) bit of zero indicates that the information returned in the READ CD-ROM CAPACITY data shall be the logical block address and block length (in bytes) of the last valid logical block of the logical unit for seek operations. The logical block address returned shall be greater than or equal to the last readable or playable block. If greater, this address may be in a transition area beyond the last valid logical block for read or audio play operations. The value returned shall not be not be more than 75 sectors (MSF units) greater than the logical block address of the last readable or playable block. (This value arises because the CD-ROM table of contents lead-out track location has a +/- 75 sector tolerance when the lead-out track is encoded as an audio track.) The logical block address in the command descriptor block shall be set to zero for this option.

A PMI bit of one indicates that the information returned shall be the logical block address and block length (in bytes) of the last logical block address after which a substantial delay in data transfer will be encountered. This logical block address shall be greater than or equal to the logical block address specified in the command descriptor block. On CD-ROM media, this is interpreted as being the last readable or playable logical block of the information area containing or immediately following the specified logical block address.

NOTE 177 This option may take several seconds to complete on CD-ROM media.

See 9.1.10 for a description of the relative address bit (RelAdr).

Eight bytes of READ CD-ROM CAPACITY data (see table 247) shall be sent during the DATA IN phase of the command.

Bit Byte	7	6	5	4	3	2	1	0		
0 3	(MSB)	Logical block address								
4 7	(MSB)	MSB) - Block length								

Table 247 - READ CAPACITY data format

## 14.2.9 READ HEADER command

The READ HEADER command (see table 248) requests that the device return the CD-ROM data block address header of the requested logical block.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (4	4h)		
1	Logical	unit num	ıber		Reserved	1	MSF	Reserved
2	(MSB)							
3				l and a l				
4				Logical	block add	iress		
5						(LSB)		
6				Reserved				
7	(MSB)			Allee#i	on longth			
8				ALLOCALL	on length			(LSB)
9	· · · · ·			Control				

Table 248 - READ HEADER command

See 14.1.5. for a description of the MSF bit.

The logical block address field specifies the logical block at which the read header operation shall begin.

See the READ command for exception handling. If the logical block size is other than the physical block size, it shall be mapped into the appropriate physical block from which the data would have been read.

The READ HEADER data format (see table 249) defines the CD-ROM data block address header of the requested logical block.

Bit Byte	7	6	5	4	3	2	1	0			
0	CD-ROM data mode										
1	Reserved										
2	Reserved										
3	Reserved										
4	(MSB)	(MSB) Absolute CD-ROM address (LSB)									

# Table 249 - READ HEADER data format

The CD-ROM data mode field specifies the CD-ROM data mode of the logical blocks in this sector of data. The values in this field are defined in table 250.

296

CD-ROM	<b>User data field contents</b>	Auxiliary field contents
mode	(2 048 bytes)	(288 bytes)
00h	All bytes zero	All bytes zero
01h	User data	L-EC symbols
02h	User data	User data
03h - FFh	Reserved	Reserved

Table 250 - CD-ROM data mode codes

If the MSF bit is zero, the absolute address field gives the logical block address of the first logical block in the physical sector where the data for the requested logical block address is found. If the MSF bit is one, the absolute address field gives the MSF address of the sector where the data for the requested logical block address is found. (See 14.1.5.)

#### 14.2.10 READ SUB-CHANNEL command

The READ SUB-CHANNEL command (see table 251) requests that the target return the requested sub-channel data plus the state of audio play operations.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (42h)										
1	Logical unit number Reserved MSF Reserved										
2	Reserved SubQ Reserved										
3	Sub-channel data format										
4	Reserved										
5	Reserved										
6		<u></u>		Track I	number						
7	(MSB)										
8	Allocation length (LSB)										
9				Conti	rol						

Table 251 - READ SUB-CHANNEL command

NOTE 178 Sub-channel data returned by this command may be from the last appropriate sector encountered by a current or previous media accessing operation. When there is no current audio play operation, the target may access the media to read the sub-channel data. The target is responsible that the data returned are current and consistent. For example with sub-channel data format 0, the International Standard Recording Code (ISRC) data reported must have been read from the same track as the reported current position data.

See 14.1.5. for a description of the MSF bit.

The sub Q bit set to one requests that the target return the Q sub-channel data. The sub Q bit set to zero requests that no sub-channel data be returned. This shall not be considered an error.

NOTE 179 The other bits in this byte are reserved for future standardization when they may be defined to request other sub-channel data.

The sub-channel data format field specifies the returned sub channel data (see table 252). If this field is 00h, sub-Q channel data is returned. If this field is 01h, 02h or 03h, the requested sub-Q data item is returned.

Format Code	Returned data
00h	Sub-Q channel data
01h	CD-ROM current position
02h	Media catalogue number (UPC/bar code)
03h	Track international standard recording code (ISRC)
04h - EFh	Reserved
F0h - FFh	Vendor-specific

Table 252 - Sub-channel data format codes

The track number field specifies the track from which ISRC data is read. This field must have a value between 01h and 63h (99bcd), and is valid only when the sub-channel data format field is 03h. In this case, the target returns ISRC data for this track.

#### 14.2.10.1 Sub-Q channel data format

The sub-CHANNEL command data formats consist of a four-byte header followed by a sub-channel data block. The header contains the audio status byte and the sub-channel data length field. If the sub Q bit is zero, the target shall not return the sub-channel data block; in this case, the sub-channel data length is 0.

Table 253 defines the sub-Q channel data format.

Bit Byte	7	6	5	4	3	2	1	0			
			Su	b-channel	data hea	ader					
0		Reserved									
1		Audio status									
2	(MSB)	(MSB) Sub-channel data length —									
3											
		Sub-Q channel data block									
4	Sub channel data format code (00h)										
5		ADR Control									
6	Track number										
7	Index number										
8	(MSB)	MSB) Absolute CD-ROM address									
11	<u></u>			Solute ob		633		(LSB)			
12	(MSB)		Track	polativo	CD-ROM	addrass					
15			Track relative CD-ROM address								
16	MCVal			Res	erved			_			
17	(MSB)		Nadia a		numbon /l	IPC /Pap ag	de)				
31		Media catalogue number (UPC/Bar code) (LSB)									
32	TCVal			Res	erved						
33	(MSB)	Theak	intonnoti	onol oton	dand near	ording cod					
47		Hack	TUTELUATI	unai stan		staring cou	e (13nc)	(LSB)			

Table 253 - Sub-Q channel data format

The audio status field indicates the status of audio play operations. The audio status values are defined in table 254. Audio status values greater than zero are returned only to the initiator that requested the last audio play operation. Audio status values 13h and 14h return information on previous audio operations; they are returned only once after the condition has occurred. If another audio play operation is not requested, the audio status returned for subsequent READ SUB-CHANNEL commands is 15h.

Table 254 - A	udio status codes
---------------	-------------------

Status	Description
00h	Audio status byte not supported or not valid
11h	Audio play operation in progress
12h	Audio play operation paused
13h	Audio play operation successfully completed
14h	Audio play operation stopped due to error
15h	No current audio status to return

The sub-channel data length specifies the length in bytes of the following sub-channel data block. A sub-channel data length of zero indicates that no sub-channel data block is included in the returned data.

NOTE 180 Usual values for sub-channel data length are 0, 12, 20, 28 and 44 bytes. Sub-channel data length does not include the sub channel header.

The sub-Q channel data block consists of control data (bytes 4-5), current position data (bytes 6 - 15) and identification data (bytes 16 - 47). The control data and current position data is obtained from the Q sub-channel information of the current block. Identification data may be reported that was obtained from a previous block. If identification data is reported, the data shall be valid for the sector addressed by the current position data.

- a) If an audio play operation is proceeding in the background, position data for the last sector played shall be reported.
- b) In other cases, for instance after a READ command, the target may either report position data for the last sector processed for that operation or may report position data from the sector at the current read head position.

NOTE 181 When the type of information encoded in the Q sub-channel of the current sector is the media catalog number or ISRC; the track, index, and address fields should be extrapolated from the previous sector.

The ADR field gives the type of information encoded in the Q sub-channel of this block, as shown in table 255.

ADR code	Description
0h 1h	Sub-channel Q mode information not supplied Sub-channel Q encodes current position data (i.e. track, index, absolute address, relative address)
2h 3h 4h - Fh	Sub-channel Q encodes media catalogue number Sub-channel Q encodes ISRC Reserved

Table 255 - ADR sub-channel Q field

The control bits are defined in table 256.

Table 256 - Sub-channel Q	control	bits
---------------------------	---------	------

Bit	Equals zero	Equals one
0	Audio without pre-emphasis	Audio with pre-emphasis
1	Digital copy prohibited	Digital copy permitted
2 I	Audio track	Data track
3	Two-channel audio	Four-channel audio

The track number specifies the current track number.

The index number specifies the index number in the current track.

The absolute CD-ROM address field gives the current location relative to the logical beginning of the media. If the MSF bit is zero, this field is a logical block address. If the MSF bit is one, this field is an absolute MSF address. (See 14.1.5.)

The track relative CD-ROM address field gives the current location relative to the logical beginning of the current track. If the MSF bit is zero, this field is a track relative logical block address. (If the current block is in the pregap area of a track, this will be a negative value, expressed as a twos-complement number. See 14.1.5). If the MSF bit is one, this field is the relative MSF address from the Q sub-channel.

300

A media catalogue valid (MCVal) bit of one indicates that the media catalogue number field is valid. A MCVal bit of zero indicates that the media catalogue number field is not valid.

The media catalogue number field contains the identifying number of this media according to the uniform product code values (UPC/EAN bar coding) expressed in ASCII. Non-zero values in this field are controlled by the Uniform Product Code Council 1) and the European Article Number Council 2). A value in this field of all ASCII zeros indicates that the media catalog number is not supplied.

The track code valid (TCVal) bit of one indicates that the track ISRC field is valid. A TCVal bit of zero indicates that the track international standard recording code (ISRC) field is not valid.

The track ISRC field contains the identifying number of this media according to the ISRC standards (DIN-31-621) expressed in ASCII.

- 1) The Uniform Product Code Council is located at 8163 Old Yankee Road, Suite J, Dayton, Ohio 45459.
- 2) The European Article Number Council is located at Rue des Colonies, 54-BTE8, 1000 Brussels, Belgium.

# 14.2.10.2 CD-ROM current position data format

Table 257 defines the CD-ROM current position data format.

Bit Byte	7	6	5	4	3	2	1	0		
	Sub-channel data header									
0		Reserved								
1	• • • • • • • • • • • • • • • • • • •	Audio status								
2	(MSB)	(MSB)								
3		Sub-channel data length (LSB)								
	CD-ROM current position data block									
4	Sub channel data format code (01h)									
5	ADR Control									
6	Track number									
7	Index number									
8	(MSB)		۸b		PON odd					
	Absolute CD-ROM address (LSB)									
12	(MSB)		Tnook	relative		ddnoss				
15			TACK	retative	CD-HOM a	1001 E35		(LSB)		

# Table 257 - CD-ROM current position data format

## 14.2.10.3 Media catalogue number data format

Table 258 defines the media catalogue number data format.

Bit Byte	7	6	5	4	3	2	1	0		
	Sub-channel data header									
0		Reserved								
1	U	Audio status								
2	(MSB)	(MSB)								
3	Sub-channel data length (LSB)									
	Media catalogue number data block									
4	Sub channel data format code (02h)									
5	Reserved									
6		<u> </u>		Rese	rved					
7		Reserved								
8	MCVal		· · · · · · · · · · · · · · · · · · ·	Rese	rved					
9	(MSB)		Nadia act			/Pan and	\ \			
23			Μέστα ζάτ	arogue nu	iber (UPC	/Bar code	)	(LSB)		

### Table 258 - Media catalogue number data format

If media catalogue number data is found, the MCVal bit is set to one. If MCN data is not detected, the MCVal bit is set to zero to indicate the media catalogue number field is invalid.

NOTE 182 Media catalogue number data returned by this command with sub-channel data format field code 02h may be from any block that has UPC bar code Q sub-channel data. (This code is constant anywhere in every applicable disc.)

#### 14.2.10.4 Track international standard recording code data format

Table 259 defines the track international standard recording code data format.

Bit Byte	7	6	5	4	3	2	1	0		
	Sub-channel data header									
0	Reserved									
1	Audio status									
2	(MSB)	(MSB) Sub obcopol data length								
3		Sub-channel data length (LSB)								
	Track ISRC data block									
4	Sub channel data format code (03h)									
5		ADR				Co	ntrol			
6	Track number									
7	Reserved									
8	TCVal	TCVal Reserved								
9	(MSB)	Tnook	intonnati	ional star	adapd pag	ording co	de (ISBC)			
23		TACK	Internati			ording co		(LSB)		

## Table 259 - Track international standard recording code data format

1

If ISRC data is detected, the TCVal bit is set to one. If ISRC data is not detected, the TCVal bit is set to zero to indicate the ISRC field is invalid.

NOTE 183 Track ISRC data returned by this command with sub-channel data format field 03h may be from any block in the specified track that has ISRC data.

## 14.2.11 READ TOC command

The READ TOC command (see table 260) requests that the target transfers data from the table of contents to the initiator.

Bit Byte	7	6	5	4	3	2	1	0	
0			0	peration	code (43h	)			
1	Logical	Logical unit number Reserved MSF Reserve							
2		Reserved							
3	Reserved								
4	Reserved								
5		Reserved							
6				Starting	track				
7	(MSB)								
8	Allocation length (LSB)							(LSB)	
9				Control					

Table 260	- READ TOC	command
-----------	------------	---------

See 14.1.5. for a description of the MSF bit.

The starting track field specifies the starting track number for which the data shall be returned. If this value is zero, the table of contents data shall begin with the first track on the medium. The data are returned in contiguous ascending track number order.

If the starting track field is not valid for the currently installed medium, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN CDB.

NOTE 184 The maximum TOC data length possible on currently available CD-ROM media is 804 bytes, or 100 TOC track descriptors.

The format of the data returned is specified in table 261.

1

Bit Byte	7	6	5	4	3	2	1	0	
0	(MSB)			TOC data	length				
1		TOC data length (LSB)							
2	First track number								
3		Last track number							
	TOC track descriptor(s)								
0				Reserved					
1	ADR Control								
2				Track nur	nber				
3	Reserved								
4	(MSB) Absolute CD-ROM address								
7				ADSOLUTE	UD-HUM at	Juliess		(LSB)	

### Table 261 - READ TOC data format

The TOC data block contains a four-byte header followed by zero or more TOC track descriptors.

The TOC data length specifies the length in bytes of the following TOC data that is available to be transferred during the DATA IN phase. The TOC data length value does not include the TOC data length field itself.

The first track number field indicates the first track number in the table of contents.

The last track number field indicates the last track number in the table of contents before the lead-out track number.

NOTE 185 The first track number is not required to be one. A disc may start at any valid track number. The track numbers between the first track number and the last track number are required to be in contiguous ascending order, except for the lead-out track.

The ADR field gives the type of information encoded in the Q sub-channel of the block where this TOC entry was found. The possible ADR values are defined in 14.2.10.1.

The control field indicates the attributes of the track. The possible control field values are defined in 14.2.10.1.

The track number field indicates the track number for which the data in the TOC track descriptor is valid. A track number of 0AAh indicates that the track descriptor is for the start of the lead-out area.

The absolute CD-ROM address contains the address of the first block with user information for that track number as read from the table of contents. An MSF bit of zero indicates that the absolute CD-ROM address field contains a logical block address. An MSF bit of one indicates the absolute CD-ROM address field contains an MSF address (see 14.1.5).

NOTE 186 The starting logical block address value recovered from the TOC has a tolerance of zero for data tracks and plus or minus 75 CD sectors for audio tracks. This tolerance is multiplied by a factor dependent on the logical block length.

306

# 14.3 Parameters for CD-ROM devices

### 14.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with CD-ROM devices.

The diagnostic page codes for CD-ROM devices are defined in table 262.

Table 262 - Diagnostic page codes

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported diagnostic pages Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

### 14.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with CD-ROM devices.

The log page codes for CD-ROM devices are defined in table 263.

#### Table 263 - Log page codes

Page code	Description	Subclause
01h 03h 07h 06h 02h 04h - 05h 08h - 2Fh 3Fh 00h 30h - 3Eh	Buffer over-run/under-run page Error counter page (read) page Last n error events page Non-medium error page Reserved Reserved Reserved Supported log pages Vendor-specific pages	8.3.2.1 8.3.2.2 8.3.2.3 8.3.2.4 8.3.2.5

### 14.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with CD-ROM devices.

The mode parameter list, including the mode parameter header and mode block descriptor are defined in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). Table 264 defines the medium type values for CD-ROM devices.

Code	Medium type description
00h 01h 02h 03h 04h 05h 05h 06h 07h 08h - 7Fh 80h - FFh	Default (only one type supported) 120 mm CD-ROM data only 120 mm CD-DA audio only 120 mm CD-ROM data and audio combined Reserved 80 mm CD-ROM data only 80 mm CD-DA audio only 80 mm CD-ROM data and audio combined Reserved Vendor-specific

Table 264 - CD-ROM medium type codes

The device-specific parameter field is contained in the mode parameter header (see 8.3.3). Table 265 defines th∉ device-specific parameter field for CD-ROM devices.

Table 265 - CD-ROM devic	ce-specific parameter
--------------------------	-----------------------

Bit	7	6	5	4	3	2	1	0
	Reserved		DPOFUA		Reserve	∋d	EBC	

When used with the MODE SELECT command, the DPOFUA bit is not used and the field is reserved.

When used with the MODE SENSE command, a DPOFUA bit of one indicates that the target supports the DPO and FUA bits (see 9.2.6).

The enable blank check (EBC) bit is reserved.

The density code field is contained in the mode parameter block descriptor (see 8.3.3). Table 266 defines the density code values for CD-ROM devices.

Code	Data types to be transferred
00h	Default density code
01h	User data only (2 048 bytes per physical sector)
02h	(2 048 bytes per physical sector) User data plus auxiliary data field
03h	(2 336 bytes per sectór) 4-byte tag field, user data plus auxiliary data
	(2 340 bytes per sector)
04h	Audio information only (1/75th of a second per logical block)
05h - 7Fh	Reserved
80h - FFh	Vendor-specific

Table	266 -	CD-ROM	density	codes
-------	-------	--------	---------	-------

NOTE 187 The number of bytes per sector specified by this parameter is used with the block length to map CD-ROM sectors to logical block addresses.

The mode page codes for CD-ROM devices are defined in table 267.

Page code	Description	Subclause
08h 0Eh 0Dh 0Ah 02h 09h 01h 03h - 06h 0Ch 07h - 1Fh 07h 00h 20h - 3Eh 3Fh	Caching page CD-ROM audio control page CD-ROM page Control mode page Disconnect-reconnect page Medium types supported page Peripheral device page Read error recovery page Reserved Reserved Reserved Verify error recovery page Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages	9.3.3.1 14.3.3.1 14.3.3.2 8.3.3.1 8.3.3.2 9.3.3.4 8.3.3.3 14.3.3.3 14.3.3.3
Srit	(valid only for the MODE SENSE command)	

Table 267 - Mode page codes

### 14.3.3.1 CD-ROM audio control parameters

The CD-ROM audio control parameters page (see table 268) sets the playback modes and output controls for subsequent PLAY AUDIO commands and any current audio playback operation.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	PS Reserved Page code (OEh)							
1		Parameter length (OEh)							
2			Reserved			Immed	SOTC	Reserved	
3				Reserved			•		
4		Reserved							
5	APRVal Reserved Format of LBAs / Sec.						ec.		
6	(MSB)								
7	Logical blocks per second of audio playback (LSB)						(LSB)		
8		Rese	erved		Output	port 0 cł	nannel se	lection	
9	Output port O volume								
10		Rese	rved		Output	port 1 cł	nannel se	lection	
11		Output port 1 volume							
12	Reserved Output port 2 channel selection								
13	Output port 2 volume								
14	Reserved Output port 3 channel selection								
15				Output po	ort 3 volu	Ime	·····	_	

Table 268	- CD-ROM	audio control	parameters	page
-----------	----------	---------------	------------	------

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

÷

An immediate (Immed) bit of zero indicates the target shall not send completion status until the audio playback operation is terminated.

An Immed bit of one indicates the target shall send completion status as soon as the playback operation has been started.

NOTE 188 It is recommended that a Logical Unit type RESERVE be issued prior to starting audio play operations with an Immed bit of one in any multiple initiator environment.

A stop on track crossing (SOTC) bit of zero indicates the target shall terminate the audio playback operation when the transfer length is satisfied. Multiple tracks shall be played as necessary. Periods of time encoded as audio pause/silence at the beginning of tracks, (index 0) shall also be played.

A stop on track crossing (SOTC) bit of one indicates the target shall terminate the audio playback operation wher the beginning of a following track is encountered.

The audio playback rate valid (APRVal) bit value of one indicates that the format of logical blocks per second field and the logical blocks per second of audio playback field are valid.

The format of logical blocks addresses per second field gives the multiplier to be used with the logical blocks per second of audio playback. This is defined in table 269.

Format of LBAs / Sec value	Multiplier for LBAs / Sec field
0h	1
1h - 7h	Reserved
8h	1/256
9h - Fh	Reserved

Table 269 - Multiplier for LBAs

NOTE 189 This field is provided as a means to return fractional (i.e. non-integral) values in the logical block addresses per second of audio playback. This shall occur when logical block sizes that are not even multiples or divisions of the physical block size are used.

The logical blocks per second of audio playback field gives the relationship between time and the duration of play per logical block address. The value in this field is to be multiplied by the value in format of LBAs per second field.

NOTE 190 The logical blocks per second of audio playback field and its companion format of LBAs per second field may not be supported by most current CD-ROM devices as a modifiable mode select parameter.

The output port channel selection specifies the audio channels from the disc to which this output port should be connected (see table 270). More than one output port may be connected to an audio channel. More than one audio channel may be connected to an output port.

Table	270 -	Output	port	channel	selection

Code
0000b 0001b 0010b 0100b 1000b

310

The channel volume control indicates the relative volume level for this audio output port. A value of zero indicates the output is muted, and a value of FFh indicates maximum volume level.

NOTE 191 If volume controls are implemented, the default volume level should be no more than 25 % of the maximum level as a personal safety consideration.

#### 14.3.3.2 CD-ROM device parameters

The CD-ROM parameters page (see table 271) specifies parameters that affect all CD-ROM data types.

Bit Byte	7	6	5	4	3	2	1	0
0	PS	Reserved		Page co	de (ODh)			
1				Paramet	er length	(06h)		
2	Reserved							
3	Reserved Inactivity timer multiplie							tiplier
4		Nium	hon of	NGE 8	nite pop	MSF - M un	· +	
5		NUII	Del. OI	M3F - 3 U	iitts hei	MOI - M UII	± (	
6		Num	han of		nite non		·+	
7		NUM	net of	MOF - F U	urre hei.	MSF - S un	±	

Table 271 - CD-ROM parameters page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The inactivity timer multiplier specifies the length of time that the drive shall remain in the hold track state after completion of a seek or read operation (see table 272).

NOTE 192 Higher values in this parameter may have an adverse effect on the drive MTBF, in some implementations.

Inactivity timer	Minimum time in	Inactivity timer	Minimum time in
multiplier	hold track state	multiplier	hold track state
0h	Vendor-specific	8h	16s
1h	125 ms	9h	32s
2h	250 ms	An	1 min
3h	500 ms	Bh	2 min
4h	1 s	Ch	4 min
5h	2 s	Dh	8 min
6h	4 s	Eh	16 min
7h	8 s	Fh	32 min

Table 272 - Inactivity timer multiplier values

The number of S units per M unit field gives the ratio of these MSF address values. For media conforming to the CD-ROM and CD-DA standard, this value is 60.

The number of F units per S unit field gives the ratio of these MSF address values. For media conforming to the CD-ROM and CD-DA standard, this value is 75.

#### 14.3.3.3 Read error recovery parameters

The read error recovery parameters page (see table 273) specifies the error recovery parameters the target shall use during any command that performs a data read operation to the media (e.g. READ, READ TOC, etc.).

Bit Byte	7	6	5 4 3 2 1 0					
0	PS	Reserved			Page code	(01h)		
1	Parameter length (06h)							
2	Error recovery parameter							
3	Read retry count							
4	Reserved							
5	Reserved							
6	Reserved							
7	Reserved							

Table 273 - Read error recovery parameters page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The error recovery parameter bits are defined in 9.3.3.6.

NOTE 193 The implementation of error recovery procedures for CD-ROM devices is markedly different from those used for magnetic medium disk drives. At least one level of error correction (i.e. CIRC) is required to transfer the data stream. Therefore, the performance of the drive may differ substantially from what would be expected by sending the same error recovery parameters to a magnetic medium device.

The correlation of the error recovery parameter and the bit settings defined for CD-ROM devices is given in table 274. The interpretation of these bit settings for CD-ROM devices is given in table 275. If the error recovery parameter is set to any other value, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST and the additional sense code set to INVALID FIELD IN PARAMETER LIST.

Error recovery	Bit settings							
parameter	7	6	5	4	3	2	1	0
00h 01h 04h 05h 07h 10h 11h 14h 15h 20h 27h 26h 27h 30h 31h 34h 35h	*************	RRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRR	000000001111111111	0000011110000001111	RRRRRRRRRRRRRRRRRRRRR	00111100110011110011	00001100000000110000	01010101010101010101
NOTE Reser be se	rve et t			ts er(		na.	11	

Table 274 - Error recovery bit settings

# Table 275 - CD-ROM error recovery descriptions

Error recovery description
OOh The maximum error recovery procedures available are used. If an error occurs which is uncorrectable with the error correction codes (ECC) on the media, data transfer is terminated with CHECK CONDITION status. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected. Recovered errors are not reported.
Oth Only retries of the read operation and CIRC are used (layered error correction is not used). Only CIRC unrecovered data errors are reported If a CIRC unrecovered data error occurs, data transfer is terminated with CHECK CONDITION status. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected. Recovered errors are not reported.
04h The maximum error recovery procedures available are used. Recovered data errors are reported. If a recovered data error occurs, data transfer is not terminated. However, when the data transfer has completed CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the last block where a recovered data error was detected.
If a data error occurs that is uncorrectable with the ECC information available on the media, data transfer is terminated and CHECK CONDITION status is reported. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the uncorrectable error was detected.
05h Only retries of the read operation and CIRC are used (layered error correction is not used). Recovered data errors are reported. If a recovered data error occurs, data transfer is not terminated. However, when the data transfer has completed CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the last block where a CIRC recovered data error was detected.
If an unrecovered data error occurs, data transfer is terminated and CHECK CONDITION status is reported. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected.
06h The maximum error recovery procedures are used. Recovered data errors are reported. If a recovered data error occurs data transfer is terminated and CHECK CONDITION status is reported. The block with the recovered error is not transferred. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where the recovered data error was detected.
If a data error occurs that is uncorrectable with the ECC information on the medium, data transfer is terminated with CHECK CONDITION status. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the uncorrectable error was detected.

# Table 275 (continued)

•

Erro	r recove	erv dese	cription
------	----------	----------	----------

LITO	
07h	Only retries of the read operation are used (layer error correction is not used). CIRC recovered data errors are reported. If a CIRC recovered data error occurs, data transfer is terminated with CHECK CONDITION status. The block with the recovered error is not transferred. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where the recovered data error was detected.
	If a CIRC unrecovered data error occurs, data transfer is terminated with CHECK CONDITION status. The block with the error is not transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected.
10h	If data transfer can be maintained, the maximum error recovery procedures available are used. (RC = 1.) If an error occurs which is uncorrectable with the error correction codes (ECC) on the media, or is uncorrectable in time to maintain data transfer, the data transfer is not terminated. However, when the data transfer has completed, CHECK CONDITION status is reported. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the first unrecovered error was detected. Recovered errors are not reported.
11h	If data transfer can be maintained, retries of the read operation and CIRC are used (layered error correction is not used). (RC = 1.) Only CIRC unrecovered data errors are reported. If a CIRC unrecovered data error occurs, data transfer is not terminated. However, when the data transfer has completed, CHECK CONDITION status is reported. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the first unrecovered error was detected. Recovered errors are not reported.
14h	If data transfer can be maintained, the maximum error recovery procedures available are used. (RC = 1.) Recovered data errors are reported. If a recovered data error occurs, data transfer is not terminated. However, when the data transfer has completed, CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where a recovered data error was detected.
	If an data error occurs that is uncorrectable with the ECC information available on the media, or is uncorrectable in time to maintain data transfer, the data transfer is not terminated. However, when the data transfer has completed CHECK CONDITION, status is reported. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the first uncorrectable error was detected. Reporting unrecovered errors takes precedence over reporting recovered errors.

, :

## Table 275 (continued)

Erro	r recovery description
15h	If data transfer can be maintained, retries of the read operation and CIRC are used (layered error correction is not used). (RC = 1.) Recovered data errors are reported. If a recovered data error occurs, data transfer is not terminated. However, when the data transfer has completed CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where a CIRC recovered data error was detected.
	If an unrecovered data error occurs, data transfer is not terminated. However, when the data transfer has completed CHECK CONDITION status is reported. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the first unrecovered error was detected. Reporting unrecovered errors takes precedence over reporting recovered errors.
20h	The maximum error recovery procedures available are used. If an error occurs which is uncorrectable with the error correction codes (ECC) on the media, data transfer is terminated with CHECK CONDITION status. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected. Recovered errors are not reported.
	Only retries of the read operation and CIRC are used (layered error correction is not used). Only CIRC unrecovered data errors are reported. If a CIRC unrecovered data error occurs data transfer is terminated with CHECK CONDITION status. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected. Recovered errors are not reported.
	The maximum error recovery procedures available are used. Recovered data errors are reported. If a recovered data error occurs data transfer is not terminated. However, when the data transfer has completed, CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the last block where a recovered data error was detected.
	If a data error occurs that is uncorrectable with the ECC information available on the media data transfer is terminated and CHECK CONDITION status is reported. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the uncorrectable error was detected.

f

#### Table 275 (concluded)

Error	r recovery description
25h	Only retries of the read operation and CIRC are used (layered error correction is not used). Recovered data errors are reported. If a recovered data error occurs, data transfer is not terminated. However, when the data transfer has completed, CHECK CONDITION status is reported. The sense key is set to RECOVERED ERROR. The information bytes give the address of the last block where a CIRC recovered data error was detected.
	If an unrecovered data error occurs, data transfer is terminated and CHECK CONDITION status is reported. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected.
26h	The maximum error recovery procedures are used. Recovered data errors are reported. If a recovered data error occurs, data transfer is terminated and CHECK CONDITION status is reported. The block with the recovered error is transferred. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where the recovered data error was detected.
	If a data error occurs that is uncorrectable with the ECC information on the media, data transfer is terminated with CHECK CONDITION status. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the uncorrectable error was detected.
27h	Only retries of the read operation are used (layer error correction is not used). CIRC recovered data errors are reported. If a CIRC recovered data error occurs, data transfer is terminated with CHECK CONDITION status. The block with the recovered error is transferred. The sense key is set to RECOVERED ERROR. The information bytes give the address of the block where the recovered data error was detected.
	If a CIRC unrecovered data error occurs, data transfer is terminated with CHECK CONDITION status. The block with the error is transferred. The sense key is set to MEDIUM ERROR. The information bytes give the address of the block where the unrecovered error was detected.
30h	Same as code 10H.
31h	Same as code 11H.
34h	Same as code 14H.
35h	Same as code 15H.

The read retry count field specifies the number of times that the controller shall attempt its read recovery algorithm.

A CIRC recovered data error is defined as a block for which the CIRC based error correction algorithm was unsuccessful for a read attempt, but on a subsequent read operation no error was reported. The number of subsequent read operations is limited to the read retry count. Layered error correction was not used.

A CIRC unrecovered data error is defined as a block for which the CIRC based error correction algorithm was unsuccessful on all read attempts up to the read retry count. Layered error correction was not used.

An L-EC recovered data error is defined as a block for which the CIRC based error correction algorithm was unsuccessful, but the layered error correction was able to correct the block within the read retry count.

An L-EC uncorrectable data error is defined as a block which could not be corrected by layered error correction within the read retry count.

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

### 14.3.3.4 Verify error recovery parameters

The verify error recovery parameters page (see table 276) specifies the error recovery parameter the target shall use during verify operations.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	Reserved			Page code	e (07h)			
1	·	Parameter length (06h)							
2	Error recovery parameter								
3	Verify retry count								
4				Reserved		<u></u>			
5				Reserved					
6	Reserved								
7	Reserved								

Table 276 - Verify error recovery parameters page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The error recovery parameters for verify operations are as defined by the read error recovery parameters (see 14.3.3.3).

# 14.4 Definitions specific to CD-ROM devices

**14.4.1 absolute F field**: The sub-division of the S Field part of the absolute physical address from the beginning of the media. One physical sector. Written on CD-ROM media in binary coded decimal notation. The value is from 00bcd to 74bcd. (See 14.4.12 and 14.4.18.)

**14.4.2 absolute M field**: The most significant part of the absolute physical address from the beginning of the media. Written on CD-ROM media in binary coded decimal notation. The value is from 00bcd to 74bcd. (See 14.4.18.)

**14.4.3 absolute S field**: The intermediate significant part of the absolute physical address from the beginning of the media. Written on CD-ROM media in binary coded decimal notation. The value is from 00bcd to 59bcd. (See 14.4.18.)

**14.4.4 bcd; binary coded decimal**: The number system used on the physical CD-ROM and CD-DA media. Numbers that use this notation have the 'bcd' suffix attached. A byte has two four-bit values each of which can have a value from 0 to 9. The maximum value is 99bcd (99 decimal). Hence the maximum number of tracks is 99bcd.

Example: 00 01 02 03 ... 08 09 10 11 ... 19 20 21 ... 98 99.

**14.4.5 block**: The term block refers to the data in one logical block - the number of bytes defined by the logical block length in the mode block descriptor.

**14.4.6 blocks per sector**: The number of logical blocks read from each CD-ROM physical sector. The value depends on the logical block Length as defined in the mode block descriptor. The value for blocks per sector is:

- 1 if the logical block length is 2 048,
- 2 if the logical block length is 1 024,
- 4 if the logical block length is 512, and
- 8 if the logical block length is 256 bytes.

(Assuming a density code of 1 - 2 048 bytes of data per sector.)

**14.4.7 CD-DA; compact disc - digital audio**: The standardized media for recording digital audio information. The 'Red Book' defines CD-DA media.

**14.4.8 CD-ROM; compact disc - read only memory**: A standardized medium for recording digitized audio and digital data. CD-ROM is used to describe media with digital data rather than discs that encode audio only. The ISO/IEC 10149 standard defines CD-ROM media.

**14.4.9 CD-ROM control field**: A four bit field in the Q sub-channel data indicating the type of information encoded on the current track. Indicates audio versus data and the type of audio encoding, etc. The control field is also found in the table of contents entries.

**14.4.10 CD-ROM data mode:** A byte in the header of CD-ROM data sectors. This indicates if data is present and if layered error correction information is present.

**14.4.11 CIRC; cross interleaved reed-solomon code**: The error detection and correction technique used within small frames of audio or data. The CIRC bytes are present in all CD-ROM data modes. The error correction procedure which uses the CIRC bytes is referred to as the CIRC based algorithm. In most CD-ROM drives, this function is implemented in hardware.

**14.4.12 frame**: A physical sector on CD-ROM media. Also the F field unit of a MSF CD-ROM address. The term frame is also used in the CD-ROM model to describe the amount of data received between synchronization patterns. 98 of these frames make a sector. This sort of frame is referred to as 'small frames' where the meaning is not clear from context.

**14.4.13 hold track state**: When a CD-ROM device enters the hold track state the optical pick-up is maintained at an approximately constant position on the media. This allows a paused operation to be resumed without latency due to seeking. Rotational latency may be incurred, however.

**14.4.14 index**: An index is a subdivision of a CD-ROM track. A track can have from 1 to 99 index numbers. Index numbers within a track are sequential starting with 1.

**14.4.15 lead-in area**: The area on a CD-ROM disc prior to track one. The main channel in the lead-in area contains audio or data null information. This area is coded as track zero but is not addressable via the SCSI command set. The Q sub-channel in this area is coded with the table of contents information.

**14.4.16 lead-out area**: The area on a CD-ROM disc beyond the last information track. The main channel in the lead-out area contains audio or data null information. This area is coded as track AAbcd but is not addressable via the SCSI command set. The READ CD-ROM CAPACITY data is the first logical block address of this area minus one.

**14.4.17 L-EC; layered error correction**: The error correction technique used with CD-ROM data mode one sectors. In such sectors, 276 bytes of the auxiliary data field contain L-EC bytes. The algorithm that uses these bytes to perform error correction is often implemented in the drive firmware.

**14.4.18 MSF address**: The physical address written on CD-ROM discs. Expressed as a sector count relative to either the beginning of the medium (absolute) or to the beginning of the current track (relative). As defined by the CD-DA and CD-ROM standards, each F field unit is one physical sector; each S field unit is 75 F field units; each

M field unit is 60 S field units. Valid contents of F fields are binary values from 0 through 74. Valid contents of S fields are binary values from 0 through 59. Valid contents of M fields are binary values from 0 through 74.

**14.4.19 output port**: A means for connecting the audio signal being played to equipment outside the CD-ROM device.

**14.4.20 pause area**: A transition area at the beginning or end of an audio track encoded with audio silence. This transition area is required where the audio track immediately precedes a data track.

**14.4.21 post-gap area**: A transition area at the end of a data track encoded with null information. This transition area is required where the data track immediately precedes an audio track.

**14.4.22 pre-gap area**: A transition area at the beginning of a data track encoded with null information. This transition area is required where the data track immediately follows an audio track.

**14.4.23 relative F field**: The sub-division of the S field part of the relative physical address from the beginning of the current track. One physical sector. Written on CD-ROM medium in binary coded decimal notation. The value is from 00bcd to 74bcd. (See 14.4.12 and 14.4.18.)

**14.4.24 relative M field**: The most significant part of the relative physical address from the beginning of the current track. Written on CD-ROM media in binary coded decimal notation. The value is from 00bcd to 74bcd. (See 14.4.18.)

**14.4.25 relative S field**: The intermediate significant part of the relative physical address from the beginning of the current track. Written on CD-ROM medium in binary coded decimal notation. The value is from 00bcd to 59bcd. (See 14.4.18.)

**14.4.26 sector**: Refers to the data contained during one frame time. (On CD-DA medium with two channels of audio this is 1/75th of a second). In the CD-ROM standard document the term block is used for this unit. There may be more than one logical block per sector. Similarly, a single logical block may map to multiple sectors.

**14.4.27 sub-channel:** CD-ROM and CD-DA media have a main channel and a sub-channel. The sub-channel area has eight parts called P, Q, R, S, T, U, V, and W. The Q-sub-channel contains information useful to the controller and drive, such as the control field and MSF addresses. The data rate of each sub-channel (P, Q, etc.) is 1/192nd of that of the main channel.

**14.4.28 TOC**: The table of contents has information on the type of disc and the starting address of the tracks. This information is encoded in the Q sub-channel.

**14.4.29 track**: A sub-division of the CD-ROM media. A disc has from one to ninety-nine tracks. The data within a track is always of the same type. A track can be either CD-ROM or CD-Audio. A disc can start at any track number.

**14.4.30 track relative logical address**: An offset from the beginning of the recorded information on a track expressed in units of the logical block length. The value is used to address logical blocks relative to the beginning of a track using the relative MSF address encoded in the CD-ROM Q sub-channel.

**14.4.31 transition area**: Sectors at the beginning or end of tracks coded with null information. Where required by the media standards, these areas have minimum lengths of 1 s or 2 s. The maximum lengths are not specified. Transition areas at the beginning of a track are encoded with index zero. Addresses within transition areas may not be read.

# **15 Scanner devices**

## 15.1 Model for scanner devices

Scanner devices generate a digital representation of two- or three-dimensional objects (e.g. a page of text, a photograph, or a piece of art). This is accomplished by sensing the amount of light reflected from the object and generating the digital data. The digital data can then be sent across the SCSI bus to an initiator for further processing.

There are two types of scanners in use; in one type, the operations and functions of the scanner are fixed; in the other type, the operations and functions are programmable and need to be set up prior to being used for scanning objects.

The scanner device generates the data and transfers it in accordance with the commands received from the initiator. The contents of the data is vendor-specific; therefore, the initiator and the scanner must know how to use the contents of the data.

Scanners generate a digital image of an object in a two dimensional plane. The x-axis dimension is along the cross-scan direction that is perpendicular to the direction in which a scan occurs. The y-axis dimension is along the scan direction, and is parallel to the direction in which a scan occurs. The coordinates are measured from the upper left hand corner of the two dimensional plane. The x-axis measurement increases in a positive manner going from left to right. The left side of the two dimensional plane (i.e. where x equals zero) is called the base element line. The y-axis measurement increases in a positive manner going from top to bottom. The top side of the two dimensional plane (i.e. where x equals zero) is called the base the area in which the scanner can operate, from the scan line and base line to the maximum x and y position. These conventions are adopted to aid in understanding the fields within the command descriptor blocks and parameters used for scanner devices. As such this is a conceptual model and may not accurately reflect the physical device.

The displacements used for positioning windows is independent of the resolution with which a window is scanned. The measurement of displacements is controlled by the scan measurement mode parameters.

In the event of a scanner automatic creation of sub-windows within a defined window (i.e. the auto bit in the DEFINE WINDOW parameters is one), one of the following responses is appropriate:

- a) the initiator may issue a GET WINDOW PARAMETERS command prior to any READ commands;
- b) if the initiator issues a READ command before issuing a GET WINDOW PARAMETERS command, the target shall return CHECK CONDITION status. The ILI and valid bits in the sense data shall be set to one. The initiator should then issue a GET WINDOW PARAMETERS command. This feature is useful when the scanner has the ability to distinguish between image and text data and to define windows accordingly.

It may occur that a scanner device temporarily does not have resources available to manage a data transfer from the initiator or does not have data available to transfer to the initiator. One of the following responses is appropriate in such a case:

- a) A CHECK CONDITION status is returned and the sense key is set to NOT READY with the appropriate additional sense code. This response is applicable to a TEST UNIT READY command.
- b) The target disconnects until the resource or data are available, and then reconnects to resume the operation.
- c) A BUSY status is returned.

If the scanner device determines that an error or exception condition has occurred while executing the SCSI command from the initiator, a CHECK CONDITION status is returned. A REQUEST SENSE command can then be used to determine additional information regarding the error or exception condition.

# 15.2 Commands for scanner devices

The commands for scanner devices shall be as shown in table 277.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY GET DATA BUFFER STATUS GET WINDOW INQUIRY LOG SELECT LOG SELECT (6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(10) OBJECT POSITION READ READ BUFFER RECEIVE DIAGNOSTIC RESULTS RELEASE UNIT REQUEST SENSE RESERVE UNIT SCAN SET WINDOW SEND SEND DIAGNOSTIC TEST UNIT READY WRITE BUFFER	40h 39h 18h 3Ah 25h 12h 4Ch 4Ch 4Ch 15h 55h 1Ah 55h 1Ah 5Ah 3Ch 17h 03h 16h 18h 2Ah 1Dh 00h 3Bh	00000 M00000 M000 M00 M00 M00 M00 M00 M	$\begin{array}{c} 8.2.1\\ 8.2.2\\ 8.2.3\\ 8.2.4\\ 15.2.2\\ 8.2.6\\ 8.2.7\\ 8.2.6\\ 8.2.7\\ 8.2.6\\ 8.2.7\\ 8.2.9\\ 8.2.11\\ 15.2.3\\ 15.2.4\\ 8.2.12\\ 15.2.4\\ 8.2.12\\ 10.2.5\\ 15.2.5\\ 15.2.6\\ 8.2.10\\ 15.2.5\\ 15.2.6\\ 8.2.16\\ 8.2.17\end{array}$
Key: M = command implementation is ma O = command implementation is of	andatory. otional.		

Table 277 - Commands for scann	er devices
--------------------------------	------------

,

All other operation codes for scanner devices are reserved for future standardization.

# 15.2.1 GET DATA BUFFER STATUS command

The GET DATA BUFFER STATUS command (see table 278) provides a means for the initiator to get information about the data buffer. Information is returned only for window identifiers for which a SCAN command has been received (see 15.2.5).

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (3	4h)		
1	Logical	unit num	ber		Reser	ved		Wait
2				Reserved				
3				Reserved				
4				Reserved				
5				Reserved				
6		Reserved						
7	(MSB)			Allocatio	on longth			
8				ALIGCALI	on rengen			(LSB)
9				Control				

Table 278 - GET DATA BUFFER STATUS command

A wait bit of zero indicates that the target shall respond immediately. A wait bit of one indicates that the target shall wait for image data to be available before returning scan status data.

The data buffer status data format is defined in table 279.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)							
1				Data buf	fer statu	s length		
2								(LSB)
3				Reserved				Blook
				Data buf	fer statu	s descrip	tor(s)	
0				Window io	dentifier			
1				Reserved				
2	(MSB)							
3				Available	e data bu	ffer		
4								(LSB)
5	(MSB)							
6				Filled da	ata buffe	•		
7								(LSB)

### Table 279 - Data buffer status format

The data buffer status length indicates the length, in bytes, of the following scan status data that is available to be transferred during the DATA IN phase. The data buffer status length does not include itself. The data buffer status data transferred to the initiator includes zero or more data buffer status descriptors. Each descriptor returns information for the window specified by the window identifier.

The block bit specifies the buffering capabilities of the scanner. A block bit of one indicates that the data buffer is full and all image data must be transferred to the initiator before the scan operation resumes. A block bit of zero indicates that the data buffer is not full and scan operations can continue with the available data buffer space.

The available data buffer field indicates, in bytes, the amount of buffer available for transfers from the initiator. This field is valid only in scanners with the ability to accept data from an initiator for processing.

The filled data buffer field indicates the amount of image data in bytes available for transfer to the initiator.

### 15.2.2 GET WINDOW command

The GET WINDOW command (see table 280) provides a means for the initiator to get information about previously defined windows.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (2	5h)		
1	Logical	unit num	ber		Res	erved		Single
2				Reserved				
3				Reserved				
4				Reserved				
5				Window i	dentifier	•		
6	(MSB)							
7				Transfer	length			
8								(LSB)
9				Control				

#### Table 280 - GET WINDOW command

A single bit of one specifies that a single window descriptor shall be returned for the specified window identifier. A single bit of zero specifies that window descriptors be returned for all window identifiers that were defined by a SET WINDOWS command or by the target, if the automatic bit was set to one.

The GET WINDOW data shall consist of a header (see table 281) followed by one or more window descriptors. Each window descriptor specifies the location, size, and scanning method used for a window.

Table 281 -	Get winde	ow data l	header
-------------	-----------	-----------	--------

Bit Byte	7	6	5	4	3	2	1	0		
0	(MSB)		<u> </u>	Window data length —						
1				William de	ica renge	•		(LSB)		
2				Reserved						
3				Reserved	_					
4				Reserved						
5		Reserved								
6	(MSB)		Window descriptor length -							
7				WINDOW DE	scriptor	Tength		(LSB)		

The window data length specifies the length in bytes of the following data that is available to be transferred. The window data length does not include itself. If the allocation length is not sufficient to return all the get window data, the window data length shall not be adjusted to reflect the truncation data.

The window descriptor length specifies the length in bytes of a single window descriptor. Each descriptor shall be of equal length. The first forty-eight bytes are defined in this standard and the remaining bytes in each descriptor are vendor-specific.

The window descriptors are defined in table 282.

Bit Byte	7	6	5	4	3	2	1	0
0				Window i	dentifier			
1				Reserved				Auto
2	(MSB)	<u></u>		V Avia n	esolution			
3				X-AX15 11	esorucion			(LSB)
4	(MSB)			V-Avis r	esolution			
5				1-4712				(LSB)
6	(MSB)			Y-Avis u	oper left			
9								(LSB)
10	(MSB)			Y-Axis U	oper left			
13				. ///20 4				(LSB)
14	(MSB)			Window w:	idth			
17								(LSB)
18	( <u>MSB</u> )			Window le	enath			
21								(LSB)
22				Brightnes				
23				Threshold	k			
24				Contrast				
25				-	nposition			
26				Bits per	pixel			
27	(MSB)			Halftone	pattern			
28					•		·	(LSB)
29	RIF			Reserved		Pac	dding type	
30	(MSB)			Bit order	ring			
31								(LSB)
32				Compress:				
33				Compress	lon argume	ent		1. J. B. J
34				Reserved				
39								
_40 _				Vendor-sp	ecific pa	arameter ł	oyte(s)	
n				-				

### Table 282 - Window descriptor bytes

The window identifier specifies the window defined by the window descriptor. A window is referenced by the window identifier during data transfers and parameter updates.

When used with the SET WINDOW command, an automatic (auto) bit of one indicates that the target is allowed to create sub-windows within the window specified. An auto bit of zero indicates that the target is not allowed to create sub-windows.

When used with the GET WINDOW command, an auto bit of zero indicates that the window was defined directly by the SET WINDOW command. A value of one indicates that the window was defined by the target. This is a sub-window within a window defined by a SET WINDOW command.

The window identifiers assigned by the target shall be unique and shall not be currently in use. The parameters for the sub-windows may be retrieved using the GET WINDOW command.

The x-axis resolution field specifies the resolution in the scan line direction. The unit of measure is picture elements (pixels) per inch. A value of zero specifies the default resolution.

The *y*-axis resolution field specifies the resolution in the base line direction. The unit of measure is scan lines per inch. A value of zero specifies the default resolution.

The *x*-axis upper left field specifies the *x*-axis coordinate of the upper left corner of the window. This coordinate is measured from the scan line using the target's current measurement unit divisor (see 15.3.3.1).

The *y*-axis upper left field specifies the *y*-axis coordinate of the upper left corner of the window. This coordinate is measured from the base line using target's current measurement unit divisor (see 15.3.3.1).

The window width field specifies the width of window in the scan line direction. The window width is measured using the target's current measurement unit divisor (see 15.3.3.1).

The window length field specifies the length of the window in the base line direction. The window length is measured using the target's current measurement unit divisor (see 15.3.3.1).

The brightness field specifies the level of brightness used to scan the object. A value of zero specifies the default brightness or automatic brightness control, if it is supported. Any other value indicates a relative brightness setting, with 255 being the highest setting, one being the lowest setting, and 128 being the nominal setting.

The threshold field specifies the threshold at which scan data is converted to binary data. A value of zero specifies the default threshold or automatic threshold control if it is supported. Any other value indicates relative threshold setting, with 255 being the highest setting, one being the lowest setting, and 128 being the nominal setting.

The contrast field specifies the level of contrast used to scan the object. A value of zero specifies the default contrast or automatic contrast control, if it is supported. Any other value indicates a relative contrast setting, with 255 being the highest setting, one being the lowest setting, and 128 being the nominal setting.

The halftone field specifies the level of halftone at which the scan data is converted to binary data. The values in this field are vendor-specific. The halftone field is used in conjunction with the image composition field.

The image composition field specifies the type of scan operation requested. The image composition is defined as shown in table 283.

Code	Description
00h	Bi-level black & white
01h	Dithered/halftone black & white
02h	Multi-level black & white (gray scale)
03h	Bi-level RGB colour
04h	Dithered/halftone RGB colour
05h	Multi-level RGB colour
06h - FFh	Reserved

Table 283 - Image composition codes

The bits per pixel field specifies the number of bits used to represent the intensity of a single colour.

A reverse image format (RIF) bit of zero indicates that white pixels are indicated by zeros and black pixels are indicated by ones. A RIF bit of one indicates that white pixels are to be indicated by ones and black pixels are to be indicated by zeros. The RIF bit is applicable only for images represented by one bit per pixel.

The padding type field specifies how the target shall pad the image data transmitted to the initiator if it is not an integral number of bytes. The padding type is defined in table 284.

Code	Description
00h	No padding
01h	Pad with O's to byte boundary
02h	Pad with 1's to byte boundary
03h	Truncate to byte boundary
04h - FFh	Reserved

Table 284 - Padding types

The bit ordering field specifies the order in which data is transferred to the host from the window. The bit ordering specifies the direction of pixels in a scan line, the direction of scan lines within a window and the image data packing within a byte. The values in this field are vendor-specific.

The compression type and compression argument fields specify the compression technique to be applied to the image data (see table 285).

Compression code	Description	Compression argument
00h	No compression	Reserved
01h	CCITT group III, 1 dimensional	Reserved
02h	CCITT group III, 2 dimensional	K factor
03h	CCITT group IV, 2 dimensional	Reserved
04h - 0Fh	Reserved	Reserved
10h	Optical character recognition (OCR)	Vendor-specific
11h - 7Fh	Reserved	Reserved
80h - FFh	Vendor-specific	Vendor-specific

Table 285 -	<b>Compression</b>	types	and	arguments
-------------	--------------------	-------	-----	-----------

### 15.2.3 OBJECT POSITION command

The OBJECT POSITION command (see table 286) provides positioning functions. Absolute as well as relative positioning is provided. A target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST if a positioning function is requested that is not supported.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (31h)									
1	Logical unit number			Rese	rved	Position function				
2	(MSB)									
3				Count						
4								(LSB)		
5				Reserved						
6		<u></u>		Reserved						
7			<u>,</u>	Reserved						
8				Reserved						
9				Control						

#### Table 286 - OBJECT POSITION command

The position function field specifies the requested function (see table 287).

Position function	Description
000b	Unload object
001b	Load object
010b	Absolute positioning
011b	Relative positioning
100b	Rotate object
101b	Reserved
110b	Reserved
111b	Reserved

Table 287 - Position function

- a) Unload Object. This position function specifies that the object shall be positioned for removal. If upon receipt of this command there is no object loaded, the target shall return a GOOD status. This condition shall not be considered as an error. If the target is unable to unload the object (i.e. paper jam or mis-feed condition), the target shall return CHECK CONDITION status and set the sense key sense to MEDIUM ERROR.
- b) Load object. This position function specifies that the object is to be loaded and positioned to the base line. If upon receipt of this command there is a object already loaded, the target shall returns GOOD status. This condition shall not be considered as an error. If an object is not loaded and the target is unable to load an object, the target shall return CHECK CONDITION status and set the EOM bit to one and the sense key to MEDIUM ERROR.
- c) Absolute positioning. This position function specifies that the object is to be positioned at a y-axis displacement from the base line. The y-axis displacement is determined using the count field and the

target's current measurement unit divisor (see 15.3.3.1). A count field of zero positions the object at the base line.

Any other value in the count field shall cause the target to position the object that number of units in the scan line direction. If there is no object loaded or if the specified *y*-axis displacement is not achieved, the target shall return CHECK CONDITION status and set the EOM bit to one and the sense key to MEDIUM ERROR.

d) Relative positioning. This position function specifies that the object is to be positioned at a y-axis displacement relative to the current position. The y-axis displacement is determined using the count field and the target's current measurement unit divisor (see 15.3.3.1). A count field of zero causes no change ir position of the object.

A positive value in the count field shall cause the target to position the object that number of units in the scan line direction. If the scan range is exceeded, the target shall return CHECK CONDITION status. The EOM bit is set to one, the ILI bit is set to one, and the sense key is set to MEDIUM ERROR. The valid bit is set to one and the information bytes are set to the difference (residue) between the requested count and the actual number of units moved.

A negative value (e.g. twos complement notation) in the count field shall cause the target to position the object that number of units toward the base line. If there is no object loaded or if the specified *y*-axis displacement is not achieved, the target shall return CHECK CONDITION status and set the EOM bit to one and the sense key to MEDIUM ERROR. If the base line is encountered, the target shall position the object at the base line and return CHECK CONDITION status. The ILI bit is set to one and the sense key is set to MEDIUM ERROR. The valid bit is set to one and the information bytes are set to the difference (residue) between the requested count and the actual number of units moved.

e) Rotate object. This position function specifies that the object is rotated in an anti-clockwise direction expressed in thousandths of a degree. The count field specifies the number of units that the object is to be moved.

The count field is used with the position function to specify the displacement of the object.

330

# 15.2.4 READ command

The READ command (see table 288) requests that the target transfer data to the initiator.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (28h)								
1	Logical	unit num	ber	Reserved					
2	Data type code								
3				Reserved					
4	(MSB) Data type qualifier								
5				Data typ	e quairi			(LSB)	
6	(MSB)								
7				Transfer	length				
8							_	(LSB)	
9				Control					

Table 288 - READ command

The transfer data type distinguishes between the different types of data that may be transferred between the initiator and the target. The types of transfers are specified in table 289.

Code	Description
00h	Image
01h	Vendor-specific
02h	Halftone mask
03h	Gamma function
04h - 7Fh	Reserved
80h - FFh	Vendor-specific

Table 289 - Data type codes

The data type qualifier field provides a means to differentiate data transfers of the same data type code. The values used in this field are vendor-specific.

The transfer length specifies the number of blocks the target shall transfer to the initiator during the DATA IN phase. The block size is the current block size in the mode parameters block descriptor (see 8.3.3). A transfer length of zero is not considered an error and no data shall be transferred.

If the target transfers less than transfer length blocks, a CHECK CONDITION status shall be returned. The ILI bit is set to one, the valid bit is set to one, and the information bytes are set to the difference (residue) between the requested transfer length and the actual number of blocks transferred.

This command shall be terminated with a status of RESERVATION CONFLICT if any reservation access conflict (see 10.2.10) exists, and no data shall be transferred.

### 15.2.5 SCAN command

The SCAN command (see table 290) requests the target begin a scan operation.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (1Bh)								
1	Logical unit number Reserved								
2	Reserved								
3	Reserved								
4	Transfer length								
5	Control								

The transfer length specifies the length in bytes of the window identifier list that shall be sent during the DATA OUT phase. A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered an error.

The window identifier list consists of zero or more window identifiers, each of which specifies a window to be scanned.

### 15.2.6 SEND command

The SEND command (see table 291) transfers data from the initiator to the target.

Bit Byte	7	6	5	4	3	2	1	0		
0	Operation code (2AĦ́)									
1	Logical	unit num	per		Rese	rved				
2				Data type	e code					
3		Reserved								
4	(MSB)			Doto typ		<u></u>				
5				Data type	(LSB)					
6	(MSB)	<u></u>								
7				Transfer	length					
8								(LSB)		
9				Control				2		

#### Table 291 - SEND command

The data type code and data type qualifier are defined in the READ command (see 15.2.4).

The transfer length specifies the number of blocks the target shall transfer from the initiator during the DATA OUT phase. The block size is the current block size in the mode parameters block descriptor (see 8.3.3). A transfer length of zero is not considered an error and no data shall be transferred.

This command shall be terminated with a status of RESERVATION CONFLICT if any reservation access conflict (see 10.2.10) exists, and no data shall be transferred.

### 15.2.7 SET WINDOW command

The SET WINDOW command (see table 292) provides a means for the initiator to specify one or more windows within the scanning range of the device.

Bit Byte	7	6	5	4	3	2	1	0	
0		Operation code (24H)							
1	Logical	unit num	ber	Reserved					
2	Reserved								
3	Reserved								
4	Reserved								
5				Reserved					
6	(MSB)								
7				Transfer	length				
8								(LSB)	
9				Control					

Table 292 - 3	SET WINDOW	command
---------------	------------	---------

The transfer length specifies the length, in bytes, of the data that shall be sent during the DATA OUT phase. A transfer length of zero indicates that no window parameters data shall be transferred. This condition shall not be considered an error.

The window parameters data shall consist of a header followed by one or more window descriptors. Each window descriptor specifies the location, size, and scanning method used for a window.

The set window data header is defined in table 293.

Bit Byte	7	6	5	4	3	2	1	0	
0		Reserved							
1		Reserved							
2	Reserved								
3		Reserved							
4	Reserved								
5	Reserved								
6	(MSB)			Wéndow do		longth			
7	Window descriptor length (LSB)						(LSB)		

### Table 293 - Set window data header

The window descriptor length specifies the length, in bytes, of a single window descriptor. Each descriptor shall be of equal length. The first 48 bytes are defined in this standard and the remaining bytes in each descriptor are vendor-specific.

See table 282 for the definition of a window descriptor.

# **15.3 Parameters for scanner devices**

### 15.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with scanner devices.

The diagnostic page codes for scanner devices are defined in table 294.

#### Table 294 - Diagnostic page codes

Page code	Description	Subclause
00h 01h - 7Fh 80h - FFh	Supported diagnostic pages Reserved Vendor-specific pages	8.3.1.1

### 15.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with scanner devices.

The log page codes for scanner devices are defined in table 295.

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

Page code	Description	Subclause
01h 03h 07h 06h 00h 08h - 2Fh 3Fh 30h - 3Eh	Buffer over-run/under-run page Error counter page (read) page Last n error events page Non-medium error page Supported log pages Reserved Reserved Vendor-specific pages	8.3.2.1 8.3.2.2 8.3.2.3 8.3.2.4 8.3.2.5

Table 295 - Log page codes

### 15.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with scanner devices.

The mode parameter list, including the mode parameter header and mode block descriptor, is defined in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). This field is reserved for scanners devices.

The device specific parameter field is contained in the mode parameter header (see 8.3.3). This field is reserved for scanner devices.

The density code field is contained in the mode parameter block descriptor (see table 8.3.3). This field is reserved for scanner devices.

The mode page codes for scanner devices are defined in table 296.

Page code	Description	Subclause
0Ah	Control mode page	8.3.3.1
02h	Disconnect-reconnect page	8.3.3.2
03h	Measurement units page	15.3.3.1
09h	Peripheral device page	8.3.3.3
01h	Reserved	
03h - 08h	Reserved	
0Bh - 1Fh	Reserved	
00h	Vendor-specific (does not require page format)	
20h - 3Eh	Vendor-specific (page format required)	
3Fh	Return all pages	
	(valid only for the MODE SENSE command)	

#### 15.3.3.1 Measurement units page

The measurement units page (see table 297) specifies the units of measurement used for calculating the displacement of window and for positioning an object.

The measurement units are independent of the horizontal and vertical scan resolutions.

Bit Byte	7	6	5	4	3	2	1	0		
0	PS Reserved Page code (03h)									
1				Paramete	Parameter length (06h)					
2				Basic measurement unit						
3				Reserved						
4	(MSB)			Meesunem		طخيبة ممع				
5				measurem	ent unit	UIVISOI.		(LSB)		
6	···· , ·			Reserved						
7				Reserved						

### Table 297 - Measurement units page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved for the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The basic measurement unit field is defined in table 298. Targets shall use inches as the default basic measurement unit.

### Table 298 - Basic measurement units

Code	Description
00h	Inch
01h	Millimetre
02h	Point
03h - FFh	Reserved

The measurement unit divisor specifies the number of units needed to equal one basic measurement unit. Targets shall use 1 200 as the default measurement unit divisor. If a value of zero is specified the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

NOTE 194 A target that does not implement this page or only supports default values uses twelve hundredths (1/1200) of an inch as the unit of measure.

### 15.4 Definitions specific to scanner devices

15.4.1 base element line: An x-axis displacement equal to zero.

15.4.2 base line: An y-axis displacement equal to zero.

**15.4.3 beginning-of-medium**: A *x*-axis and *y*-axis of zero displacement. Alternatively this is being positioned at the intersection of the base and scan lines.

15.4.4 end-of-medium: The maximum *x*-axis and *y*-axis displacement.

15.4.5 image: The digital result of a scan.

15.4.6 object: The original or item being scanned.

15.4.7 pixel: Picture-element, which is the smallest photo sight in the array.

15.4.8 platen: The surface on which the target is positioned.

15.4.9 scan: An operation that generates a digital image from the reflected light of an object.

15.4.10 scan line: A y-axis displacement from the base line.

**15.4.11 scanning range**: The total area that a scanner can generate an image from. For two dimensional objects this may correspond to the largest object that can be scanned.

**15.4.12 window:** All or part of the scanning range of a scanner. A window defines the part of the object scanned.

, 1

### 16 Optical memory devices

# 16.1 Model for optical memory devices

An optical memory device is a device that can potentially support a variety of optical media, (e.g. read-only, writeonce, erasable, or reversible). In several respects, an optical memory device is similar to a direct-access device. However, optical memory devices typically offer features that are not available with other devices, including very large capacity removable media.

These devices often require the functions that are not found in direct-access devices such as logical block update, pre-erasure before writing, or scanning for blank medium and twelve-byte command descriptor blocks. This standard has specific device types for write-once and CD-ROM devices that also use optical media, but are not capable of supporting several types of optical media. A device that uses write-once media can be an optical memory device. Devices that use read-only media can be optical memory devices; however, devices using CD-ROM media have certain unique characteristics and should not be implemented as optical memory devices.

A model of optical memory devices is complicated by the nature of one of its potential advantages, that it can support media which has different characteristics. There are three types of optical media in general use, read-only, write-once and reversible. Read-only media are typically used for publishing applications requiring dissemination of large amounts of data, since the data can be replicated on a disk at low cost. Write-once media are used in applications that have large backup or archiving requirements. It is also used in applications that need large amounts of on-line reference information. Reversible media is typically used in applications that need large amounts of temporary storage (e.g. a graphics workstation), and can take advantage of removable media. In some applications, reversible media drives are used in place of direct-access devices.

Reversible media usually need to be reversed (erased, blanked) before new data can be written. In such cases an erase operation is required before data can be written. Some optical memory devices perform this erase operation implicit with each write operation that typically impacts the data throughput. Some devices can perform the erase separately. The ERASE command may be used to erase areas of the medium with a corresponding increase in data throughput on subsequent write operations. Products using optical media should not be implemented as direct-access devices, due to the overhead penalty on performance from the emulation and the lack of support in direct-access devices to take advantage of the sophisticated features available with optical memory devices.

The type of medium supported by the device and the type of medium currently loaded can be determined by examining the MODE SENSE data. One unique feature of optical memory devices is support of media with mixed types (e.g. media with read-only and write-once areas). The INQUIRY command informs the initiator that the target is an optical memory device; the initiator should then determine the medium type from the MODE SENSE data. The initiator needs to be cognizant of medium type since the device's characteristics can change when the media are changed.

Write-once media can have valid data written to a logical block once. This is an important feature where audit trails and permanent archives are needed. Many optical memory devices supporting write-once media have the ability to update a logical block, preserving the previous generation of data. These devices usually provide a means to recover the previous data through use of commands that allow read access to the different generations of data that are stored at the same logical block address.

An important requirement in dealing with optical media is determining which logical blocks contain written data and which are blank. A blank logical block is one that is properly initialized so that data written to it can be recovered. The logical blocks usually have a flag associated with each that indicates whether they have been written or not. Many of the strategies used to manage write once and erasable media depend on being able to determine the boundary between written and blank areas of the medium. The MEDIUM SCAN command is useful in finding blank areas for subsequent write operations.

#### 16.1.1 Defect management

Defect management can be performed on logical blocks by updating in a manner similar to that used by directaccess devices with the REASSIGN BLOCKS command. The advantage of using the updating (which is not supported by direct-access devices) is access to the previous data.

The update operation assigns an alternate physical block to the logical block while simultaneously writing the data to the block. Commands are provided to allow the recovery of previous generations of updated blocks.

Defect management on optical-memory devices is usually vendor-specific. However there are standards for some types of optical-memory media that specify defect management techniques. These standards, where they exist, may supersede the implementation requirements pertaining to error and defect reporting in this standard.

#### 16.1.2 Error reporting

If any of the following conditions occur during the execution of a command the target shall return CHECK CONDITION status. The appropriate sense key and additional sense code should be set. The following list illustrates some error conditions and the applicable sense keys. The list does not provide an exhaustive enumeration of all conditions that may cause the CHECK CONDITION status.

<u>Condition</u> Invalid logical block address	<u>Sense Key</u> ILLEGAL REQUEST
Unsupported option requested	ILLEGAL REQUEST
Target reset or medium change since last command from this initiator	UNIT ATTENTION
Self diagnostic failed	HARDWARE ERROR
Unrecovered read error	MEDIUM ERROR HARDWARE ERROR
Recovered read error	RECOVERED ERROR
Overrun or other error that might be resolved by repeating the command	ABORTED command
Attempt to write on write protected medium	DATA PROTECT
Attempt to read a blank or previously unwritten block	BLANK CHECK
Attempt to write a previously written block and blank checking is enabled	BLANK CHECK
Attempt to write on read-only medium	DATA PROTECT

In the case of an invalid logical block address, the sense data information field shall be set to the logical block address of the first invalid address.

In the case of an attempt to read a blank or previously unwritten block, the sense data information field shall be set to the logical block address of the first blank block encountered. The data read up to that block shall be transferred.

In the case of an attempt to write a previously written block when blank checking is enabled, the sense information field shall be set to the logical block address of the first non-blank block encountered.

# 16.2 Commands for optical memory devices

The commands for optical memory devices shall be as shown in table 299.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION COMPARE COPY COPY AND VERIFY ERASE(10) ERASE(12) FORMAT UNIT INQUIRY LOCK UNLOCK CACHE LOG SELECT LOG SELECT LOG SENSE MEDIUM SCAN MODE SELECT(10) MODE SELECT(10) MODE SENSE(10) PRE-FETCH PREVENT ALLOW MEDIUM REMOVAL READ(6) READ(12) READ BUFFER READ CAPACITY READ DEFECT DATA(10) READ DEFECT DATA(12) READ DEFECT DATA(12) READ DEFECT DATA(12) READ DEFECT DATA(12) READ UPDATED BLOCK REASSIGN BLOCKS RECEIVE DIAGNOSTIC RESULTS REESERVE RESE	40h 39h 18Ah 32Ch 18Ah 32Ch 136h 40h 32Ch 136h 40h 32Ch 136h 40h 336h 155h 155h 155h 155h 155h 155h 155h 155h 1088h 155h 155h 1088h 155h 1088h 155h 1088h 1088h 155h 1088h 1088h 155h 1088h 155h 155h 1088h 155h 1088h 1088h 155h 1088h 1092 1070h 1031h 1031h 1031h 1038h	¤∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞∞	8 8 8 8 8 8 8 8 8 8 8 8 8 8
0 = command implementation is op	otional.		

Table 299	- Commands	for optical	memory of	devices
-----------	------------	-------------	-----------	---------

The following codes are vendor-specific: 20h, 21h, 22h, 23h, and C0h through FFh. All remaining codes for optical memory devices are reserved for future standardization.

### 16.2.1 ERASE(10) command

The ERASE(10) command (see table 300) requests that the target erase the specified number of blocks starting at the specified logical block address on the medium. As used here, erased means either the medium shall be erased, or a pattern shall be written on the medium that appears to the target as no data present. The blocks erased shall be considered blank for purposes of blank checking (see 16.1). The previous data recorded on the medium, if any, shall not be recoverable.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (2Ch)								
1	Logica	al unit n	umber	Rese	erved	ERA	Reserved	RelAdr	
2	(MSB)								
3				olock add	PASS				
4				LUGIUAI					
5								(LSB)	
6				Reserved					
7	(MSB)			longth					
8	´ Transfer length						(LSB)		
9				Control					

Table 30	0 -	ERASE(	(10)	command
----------	-----	--------	------	---------

The erase all (ERA) bit set to one indicates that all remaining blocks on the medium shall be erased. If the ERA bit is set to one and if the number of blocks is not zero, the target shall return CHECK CONDITION, and the sense key shall be set to ILLEGAL REQUEST, with an additional sense code of INVALID FIELD IN CDB.

See 9.2.2 for a description of the RelAdr bit and logical block address field.

The transfer length specifies the number of contiguous logical blocks that shall be erased when the ERA bit is zero. If the ERA bit is zero a transfer length of zero indicates that no blocks shall be erased. This condition shall not be considered an error and no data shall be erased. Any other value indicates the number of logical blocks that shall be erased.

This command shall be terminated with a status of RESERVATION CONFLICT if any reservation access conflict (see 9.2.12) exists and no data shall be erased.

NOTE 195 This command allows the user to separate the erase and write operations. This may increase system performance in certain applications.

### 16.2.2 ERASE(12) command

The ERASE(12) command (see table 301) requests that the target erase the specified number of blocks starting at the specified logical block address on the medium.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	n code (A	Ch)		
1	Logio	al unit r	umber	Rese	erved	ERA	Reserved	RelAdr
2	(MSB)							
3					Jook oda			
4				Logical b	JIUCK AUC	1.622		
5								(LSB)
6	(MSB)							
7				Transfer	longth			
8				ii ansier	Tenăru			
9								(LSB)
10				Reserved				
11				Control				

### Table 301 - ERASE(12) command

See the ERASE(10) command (16.2.1) for a description of the fields in this command.

### 16.2.3 MEDIUM SCAN command

The MEDIUM SCAN command (see table 302) requests that the target scan the medium for a contiguous set of written or blank logical blocks.

Bit Byte	7	6	5	4	3	2	1	0					
0				Operatio	on code (S	38h)							
1	Logical	ogical unit number WBS ASA RSD PRA RelAdr											
2	(MSB)												
3				Logical bi	look oddry								
4			ľ	LUYICAI D.	LUCK AUUN								
5								(LSB)					
6				Reserved	3								
7				Reserved	3								
8				Paramete	er list le	ength	· · · · · · · · · · · · · · · · · · ·						
9		Control											

# Table 302 - MEDIUM SCAN command

A written block search (WBS) bit of zero indicates that the scan is for blank blocks. A WBS bit of one indicates that the scan is for written blocks.

An advanced scan algorithm (ASA) bit of zero indicates that the scan area is scanned in sequential order (as selected by the RSD bit). An ASA bit of one indicates to the target that the written and blank areas within the scan area form contiguous extents (as opposed to scattered blocks). This indication is advisory to the target.

NOTE 196 The purpose of this bit is to allow the target to use a more advanced algorithm (such as a binary search) to locate the requested blocks.

A reverse scan direction (RSD) bit of zero indicates the scan shall begin with the first logical block of the scan area. A RSD bit of one indicates the scan shall begin with the last logical block of the scan area.

A partial results acceptable (PRA) bit of zero indicates that the scan shall not be considered satisfied until a contiguous set of blocks is found within the scan area that is at least equal in size to the number of blocks requested, and meets the other criteria specified in the command descriptor block. A PRA bit of one indicates that the scan may be satisfied by a contiguous set of blocks within the scan area that is less than the number of blocks requested, and meets the other criteria specified in the command descriptor block.

See 9.2.2 for a description of the RelAdr bit and logical block address field.

The parameter list length specifies the length in bytes of the parameter list that shall be transferred during the DATA OUT phase. A parameter list length of zero indicates that the number of blocks requested field has a value of one, and the number of blocks to scan field has a value of zero. This condition shall not be considered an error. The contents of the parameter list are specified in table 303.

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)							
1				Number of	f blocks i	requested		
2				Number 01	DICORG	equested		
3							_	(LSB)
4	(MSB)							
5				Number of	: blocke t	to scan		
6	<u></u>			Number Of	DICCK2 (	LU SUAII		
7								(LSB)

#### Table 303 - MEDIUM SCAN parameter list

A link bit of zero indicates a non-linked command; if the scan is satisfied, the command shall be terminated with a CONDITION MET status. A REQUEST SENSE command can then be issued to determine the starting logical block address of the area that meets the request. If the scan is not satisfied and no error occurs, the command shall be terminated with GOOD status.

A link bit of one indicates that a command is linked to the MEDIUM SCAN command; if the search is satisfied, CONDITION MET status is returned and the next command is executed. If the RelAdr bit in the next command is one, the logical block address of the next command is used as a displacement from the logical block address at which the search was satisfied. If a linked scan is not satisfied, the command is terminated with a CHECK CONDITION status. A REQUEST SENSE command may then be issued.

A REQUEST SENSE command following a satisfied MEDIUM SCAN command shall:

- a) return a sense key of EQUAL if the scan was satisfied by a contiguous set of blocks equal in size to the number of blocks requested. If the PRA bis is one and the scan was satisfied by a contiguous set of blocks less than the number of blocks requested, then a sense key of NO SENSE shall be returned;
- b) return the valid bit set to one;
- c) return the logical block address of the first logical block of the contiguous set of blocks that satisfied the scan criteria in the information bytes;
- d) return the number of contiguous logical blocks meeting the scan criteria in the command specific information bytes.

A REQUEST SENSE command following an unsatisfied MEDIUM SCAN command shall:

- a) return a sense key of NO SENSE if no errors occurred during the command execution;
- b) return the valid bit set to zero.

The number of blocks requested field specifies the number of blocks that meet the specified requirements. The number of blocks requested field, if set to zero, indicates that the scan shall not take place. This shall not be considered an error condition.

The number of blocks to scan field specifies the length in blocks of the area to be scanned on the medium. The number of blocks to scan field, if set to zero, indicates that the scan shall continue for all remaining blocks on the medium or until the scan is satisfied. See 16.1.2 for a description of error reporting.

#### 16.2.4 READ(12) command

The READ(12) command (see table 304) requests that the target transfer data to the initiator from the medium. See the READ(10) command (9.2.6) for a complete description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	code (A	Bh)		
1	Logica	al unit r	number	DPO	FUA	Res	erved	RelAdr
2	(MSB)							
3				landaal b	المعاد مطط			
4				Logical b	TOCK ADDI	ress		
5								(LSB)
6	(MSB)							
7				Transfor	3 on oth			
8				Transfer	Tengtu			
9								(LSB)
10				Reserved				
11				Control				

Table 304 - READ(12) command

# 16.2.5 READ DEFECT DATA(12) command

The READ DEFECT DATA(12) command (see table 305) requests that the target transfer the medium defect data to the initiator. See the READ DEFECT DATA(10) command (9.2.8) for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0
0			· ·	Operation	n code (B	7h)		
1	Logica	al unit n	umber	Plist	Glist	Defect :	list forma	at
2				Reserved	<u></u>	· .		
3				Reserved		· · · · · · · · · · · · · · · · · · ·		
4				Reserved				
5				Reserved				
6	(MSB)							
7				Allocatio	on longth			
8				AIIOCACIO	Ji Tengti			
9								(LSB)
10				Reserved				
11				Control				

Table 305 - READ DEFECT DATA(12) command

The READ DEFECT DATA(12) list header (see table 306) contains an eight byte header, followed by zero or more defect descriptors.

			500 - NEA	DEFECT	DATA(12)	list neave	71	
Bit Byte	7	6	5	4	3	2	1	0
0				Reserved				
1		Reserve	d	Plist	Glist	Defect	list forma	at
2				Reserved				
3	-			Reserved				
4	(MSB)							
5					ot longt	_		
6				Defect 1:	ist iengti	1		
7								(LSB)
			De	fect descr	riptors			
0								
n								

# Table 306 - READ DEFECT DATA(12) list header

,

See the description of the READ DEFECT DATA defect list (see 9.2.1.1) for a description of the fields in this header.

# 16.2.6 READ GENERATION command

The READ GENERATION command (see table 307) requests that the target transfer to the initiator the maximum generation address for the logical block specified.

Bit Byte	7	6	5	4	3	2	1	0			
0				Operatio	n code (2	9h)					
1	Logica	Logical unit number Reserved Re									
2	(MSB)										
3				Logical	block add	Page					
4				LUGICAL	STOCK AUG	1.622					
5								(LSB)			
6				Reserved							
7			-	Reserved							
8				Allocatio	on length						
9				Control							

Table 307 - READ GENERATION command

See 9.2.2 for a description of the RelAdr bit and logical block address field.

The READ GENERATION data is defined in table 308.

### Table 308 - Maximum generation data block

Bit Byte	7	6	5	4	3	2	1	0
0	(MSB)			Jovinum a	nonotion	address		
1			T	Maximum ge	eneration	address		(LSB)
2				Reserved				
3			i	Reserved				

The maximum generation address field defines the maximum generation address available for the logical block address specified.

### 16.2.7 READ UPDATED BLOCK(10) command

The READ UPDATED BLOCK(10) command (see table 309) requests that the target transfer data to the initiator from the specified generation and logical block.

Bit Byte	7	6	5	4	3	2	1	0
0			-	Operation	n code (2	Dh)		
1	Logica	al unit r	umber	DPO	FUA	Rese	erved	RelAdr
2	(MSB)							
3				Logical I	lock add	2055		
4				LUGICAL	JIUCK AUU	1 6 3 5		
5								(LSB)
6	Latest	(MSB)		Generatio	n addraa	_		
7		<u> </u>		Generatio	n auures	5		(LSB)
8				Reserved				
9				Control				

Table 309	- READ	UPDATED	BLOCK(1	10)	command
-----------	--------	---------	---------	-----	---------

See 9.2.6 for a description of the cache control bits (DPO and FUA). See 9.2.2 for a description of the RelAdr bit and logical block address field.

One block of data is transferred during the DATA IN phase.

The latest bit determines the meaning of the generation address field. A latest bit of zero indicates that the generation address is specified relative to the first generation of the block; generation address zero specifies the first generation. Increasing generation addresses specify later generations.

A latest bit of one indicates that the generation address is specified relative to the latest generation of the block; generation address zero specifies the most recent generation. Increasing generation addresses specify earlier generations.

If the requested generation does not exist, the command shall be terminated with CHECK CONDITION status. The sense key shall be set to BLANK CHECK, and the additional sense code shall be set to GENERATION DOES NOT EXIST.

This command shall be terminated with a status of RESERVATION CONFLICT if any reservation access conflict (see 9.2.12) exists and no data shall be transferred.

### 16.2.8 SEARCH DATA(12) commands

The SEARCH DATA(12) commands (see table 310) search one or more logical blocks for equality or inequality to a data pattern. See the SEARCH DATA(10) commands (9.2.14) for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0
0				Operation	code (BC	)h, B1h,	B2h)	
1	Logica	l unit r	number	Invert	Reser	rved	SpnDat	RelAdr
2	(MSB)							
3				Logical b	lock addr	222		
4				LOGICAL		200		
5								(LSB)
6	(MSB)							
7				Transfer	length			
8				11 21131 21	Tendra			
9								(LSB)
10				Reserved				
11				Control				

Table 310 - SEARCH DATA(12) commands

### 16.2.9 SET LIMITS(12) command

The SET LIMITS(12) command (see table 311) defines the range within which subsequent linked commands may operate. See the SET LIMITS(10) command (9.2.16) for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (B3h)										
1	Logical unit number Reserved RdInh							WrInh				
2	(MSB)											
3				Logical	block add	race						
4				LUGICAL	DICCK AGG	1 633						
5								(LSB)				
6	(MSB)											
7				Number o	f blocks							
8					DISCKS							
9								(LSB)				
10				Reserved								
11				Control								

Table 311 - SET LIMITS(12) command

# 16.2.10 UPDATE BLOCK command

7

8

9

The UPDATE BLOCK command (see table 312) requests that the target logically replace data on the medium with the data sent during the DATA OUT phase.

Table 312 - UPDATE BLOCK command										
Bit Byte	7	6	5	4	3	2	1	0		
0				Operatio	n code (3	3Dh)		B		
1	Logical unit number				Reserved			RelAdr		
2	(MSB)			· · · · · · ·						
3				Logical	hlack ada					
4				Logical	DIOCK ADD	iress		<u></u>		
5	<u> </u>							(LSB)		
6				Reserved						

Reserved

Reserved

Control

\_ . . .

See 9.2.2 for a description of the RelAdr bit and logical block address field.

One block of data is transferred during the DATA OUT phase.

NOTE 197 See the MODE Parameters (16.3) for a description of the behaviour of the UPDATE BLOCK command relative to the enable blank check (EBC) bit.

This standard does not define the result of a WRITE command issued to a block previously updated by an UPDATE BLOCK command when blank checking is disabled.

NOTE 198 It is recommended that the target inhibit this behaviour.

A logical block may be updated until the alternate block area is exhausted. The alternate blocks used for the update operation shall not be reported in the READ CAPACITY data. If the alternate block area is exhausted, the command shall be terminated with CHECK CONDITION and the sense key shall be set to MEDIUM ERROR, and the additional sense code set to NO DEFECT SPARE LOCATION AVAILABLE.

If the report updated block read parameter specifies posting of recovered errors for a read operation of a logical block that has had a successful update operation performed, occurs the command shall terminate with a CHECK CONDITION status. The sense key shall be set to RECOVERED ERROR and the additional sense code set to UPDATED BLOCK READ.

### 16.2.11 VERIFY(10) command

The VERIFY command (see table 313) requests that the target verify the data on the medium.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (2Fh)										
1	Logic	al unit r	umber	DPO	Reserved	BlkVfy	BytChk	RelAdr				
2	(MSB)				<u> </u>		<u> </u>					
3												
4	Logical block address											
5								(LSB)				
6				Reserved								
7	(MSB)			Vanifiaa	tion longt							
8	Verification length						(LSB)					
9				Control								

# Table 313 - VERIFY command

If the MODE SELECT command is implemented, and the Verify Error Recovery Parameters page is also implemented, then the current settings in that page define the verification criteria. If the Verify Error Recovery Parameters page is not implemented, then the verification criteria is vendor unique.

A byte check (BytChk) bit of zero causes a medium verification to be performed with no data comparison. A BytChk bit of one causes a byte-by-byte compare of the data written on the medium and the data transferred from the initiator. The data shall be transferred as it would be for a WRITE command. If the compare is unsuccessful, for any reason, the target shall return CHECK CONDITION status and the sense key shall be set to MISCOMPARE.

A blank verify (BlkVfy) bit of one causes a verification that the blocks are blank.

If the BytChk is one when the BlkVfy bit is one, this shall be considered an error. The target shall return CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST, and the additional sense code set to INVALID FIELD IN CDB.

See 9.2.6 for a description of the cache control bits (DPO). See 9.2.2 for a description of the RelAdr bit and logical block address field.

The verification length specifies the number of contiguous logical blocks of data or blanks that shall be verified. A verification length of zero indicates that no logical blocks shall be verified. This condition shall not be considered as an error. Any other value indicates the number of logical blocks that shall be verified.

#### 16.2.12 VERIFY(12) command

The VERIFY(12) command (see table 314) requests that the target verify the data on the medium. See the VERIFY(10) command (16.2.11) for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (AFh)										
1	Logic	al unit n	umber	DPO	Reserved	BlkVfy	BytChk	RelAdr			
2	(MSB)										
3	Logical block address										
4				LUGICAL	DICCK AUG	633					
5								(LSB)			
6	(MSB)										
7				Verifice	tion lengt	·h					
8				Vertitod	cron rengt						
9								(LSB)			
10				Reserved							
11				Control							

### Table 314 - VERIFY(12) command

ŕ

### 16.2.13 WRITE(10) command

The WRITE(10) command (see table 315) requests that the target write the data transferred from the initiator to the medium.

Bit Byte	7	6	5	4	3	2	1	0				
0	<u></u>	Operation code (2Ah)										
1	Logica	al unit r	number	DPO	FUA	EBP	Reserved	RelAdr				
2	(MSB)											
3	Logian] block ofdross											
4				Logical block address								
5								(LSB)				
6				Reserved								
7	(MSB)			Transfor								
8	Transfer length					(LSB)						
9				Control								

### Table 315 - WRITE(10) command

An erase by-pass (EBP) bit of zero indicates that the device will default to the normal write operation. An EBP bit of one indicates that the target is allowed to by-pass the erase operation prior to writing the data. When accessing write-once media, the EBP bit shall be considered reserved.

See 9.2.6 for a description of the cache control bits (DPO and FUA). See 9.2.2 for a description of the RelAdr bit and logical block address field.

The transfer length specifies the number of contiguous logical blocks of data that shall be transferred. A transfer length of zero indicates that no data shall be transferred. This condition shall not be considered an error and no data shall be written. Any other value indicates the number of logical blocks that shall be transferred.

This command shall be terminated with a status of RESERVATION CONFLICT if any reservation access conflict (see 9.2.12) exists, and no data shall be written.

# 16.2.14 WRITE(12) command

The WRITE(12) command (see table 316) requests that the target write the data transferred from the initiator to the medium. See the WRITE(10) command (16.2.13) for a description of the fields in this command.

Bit Byte	7	6	5	4	3	2	1	0				
0		<u> </u>		Operation	n code (A	4h)						
1	Logica	Logical unit number DPO FUA EBP Reserved										
2	(MSB)											
3		Logical block address										
4				LUGICAL I	DIUCK AUU	633						
5								(LSB)				
6	(MSB)											
7				Transfer	length							
8				ITANSIEI	Tengen							
9								(LSB)				
10				Reserved								
11				Control								

Table 316	- WRITE(12)	command
-----------	-------------	---------

# 16.2.15 WRITE AND VERIFY(10) command

The WRITE AND VERIFY(10) command (see table 317) requests that the target write the data transferred from the initiator to the medium and then verify that the data is correctly written.

Table 317 - WRITE	AND VERIFY(	(10)	command
-------------------	-------------	------	---------

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (2Eh)										
1	Logica	al unit n	umber	DPO	Reserved	EBP	BytChk	RelAdr				
2	(MSB)											
3	Logical block address											
4												
5								(LSB)				
6				Reserved								
7	(MSB)			Transfer	longth							
8				mansfer	Tendru			(LSB)				
9				Control								

,

If the MODE SELECT command is implemented, and the Verify Error Recovery Parameters page is also implemented, then the current settings in that page define the verification criteria. If the Verify Error Recovery Parameters page is not implemented, then the verification criteria is vendor unique.

A byte check (BytChk) bit of zero causes a medium verification to be performed with no data comparison. A BytChk bit of one causes a byte-by-byte compare of the data written on the medium and the data transferred from the initiator. The data shall be transferred as it would be for a WRITE command. If the compare is unsuccessful, for any reason, the target shall return CHECK CONDITION status and the sense key shall be set to MISCOMPARE.

An erase by-pass (EBP) bit of zero indicates that the device will default to the normal write operation. An EBP bit of one indicates that the target is allowed to by-pass the erase operation prior to writing the data. When accessing write-once media, the EBP bit shall be considered reserved.

See 9.2.6 for a description of the cache control bits (DPO). See 9.2.2 for a description of the RelAdr bit and logical block address field.

The transfer length specifies the number of contiguous logical blocks of data that shall be transferred. A transfer length of zero indicates that no logical blocks shall be transferred. This condition shall not be considered as an error and no data shall be written. Any other value indicates the number of logical blocks that shall be transferred.

### 16.2.16 WRITE AND VERIFY(12) command

The WRITE AND VERIFY(12) command (see table 318) requests that the target write the data transferred from the initiator to the medium and then verify that the data is correctly written. See the WRITE AND VERIFY(10) command (16.2.15) for a description of the bits in this command.

Bit Byte	7	6	5	4	3	2	1	0				
0		Operation code (AEh)										
1	Logica	l unit r	number	DPO	Reserved	EBP	BytChk	RelAdr				
2	(MSB)											
3		Logical block address										
4				LUGICAL	DIUCK AUDI 6	:55						
5								(LSB)				
6	(MSB)											
7				Transfer	longth							
8				ii allaici	Tendru							
9								(LSB)				
10				Reserved				······				
11				Control				· · · · · · · · · · · · · · · · · · ·				

# Table 318 - WRITE AND VERIFY(12) command

# 16.3 Parameters for optical memory devices

### 16.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with optical memory devices.

The diagnostic page codes for optical memory devices are defined in table 319.

Page code	Description	Subclause
00h 01h - 3Fh 40h 41h - 7Fh 80h - FFh	List of supported parameters page Reserved (for all device type pages) Translate address page Reserved Vendor-specific pages	8.3.1.1 9.3.1

Table 319 - Diagnostic page codes

#### 16.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with optical memory devices.

The log page codes for optical memory devices are defined in table 320.

Table 320 - Log page codes

Page code	Description	Subclause
01h 03h 05h 02h 07h 00h 06h 04h 08h - 2Fh 30h - 3Eh 3Fh	Buffer over-run/under-run page Error counter page (read) page Error counter page (verify) page Error counter page (write) page Last n error events page List of supported parameters page Non-media error page Reserved Reserved Vendor-specific Reserved	8.3.2.1 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.3 8.3.2.3 8.3.2.5 8.3.2.4

### 16.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with optical memory devices.

The mode parameter list, including the mode parameter header and mode block descriptor, are defined in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). Table 321 defines the medium-type code values used for optical memory devices.

Code	Description
00h	Default (only one medium type supported)
01h	Optical read-only medium
02h	Optical write-once medium
03h	Optical reversible or erasable medium
04h	Combination of read-only and write-once medium
05h	Combination of read-only and reversible or erasable medium
06h	Combination of write-once and reversible or erasable medium
07h - 7Fh	RESERVED
80h - FFh	Vendor-specific

Table 321 - Optical memory medium-type codes

The device specific parameter field is contained in the mode parameter header (see 8.3.3). Table 322 defines the device specific parameter values used for optical memory devices.

Table 322 - Optical memory device specific parameter

Bit	7	6	5	4	3	2	1	0
	WP	Reset	rved	DPOFUA		Reserve	ed	EBC

When used with the MODE SELECT command the WP bit is not defined.

When used with the MODE SENSE command, a write protected (WP) bit of zero indicates that the medium is write enabled. A WP bit of one indicates that the medium is write protected. For read-only media the WP bit is reserved.

When used with the MODE SELECT command the DPOFUA bit is reserved.

When used with the MODE SENSE command, a DPOFUA bit of one indicates that the target supports the DPO and FUA bits (see 9.2.6).

For the MODE SELECT command, an enable blank check (EBC) bit of zero advises the target to disable the blank checking operation of the medium during write operations or during an UPDATE BLOCK command. An EBC bit of one enables blank checking. If a non-blank block is found during a write operation, the command shall be terminated with a CHECK CONDITION status and the sense key shall be set to BLANK CHECK. If a blank block is found during an UPDATE BLOCK command, the command shall be terminated with a CHECK CONDITION status and the sense key shall be terminated with a CHECK CONDITION status, and the sense key shall be set to BLANK CHECK. For read-only media, the EBC bit is reserved.

For the MODE SENSE command, an enable blank check (EBC) bit of zero indicates that blank checking of the medium during write operations is disabled. An EBC bit of one indicates that blank checking during write and update operations is enabled. For read-only media, the EBC bit is reserved.

The density code field is contained in the mode parameter block descriptor (see 8.3.3). Table 323 defines the density code values used for optical memory devices.

Density code				Optica.	l media				
00h	Defa	ult der	sity (	currently mo	ounted der	nsity)			
	1	<b>meter</b> (in)	Туре	Sector size	Tracks	Side	es Servo	Reference standard	Notes
01h 02h 03h 04h 05h 06h 07h 08h 09h	89 130 130 130 200 300 356	(3,5) (5,25) (5,25) (5,25) (5,25) (5,25) (5,25) (12,0) (12,0) (14,0)	R/W R/W R/W W-O W-O W-O	512/1 024 512/1 024 512/1 024 512/1 024 512/1 024 512/1 024 1 024 1 024 0r-specific,	12 500 12 500 18 750 30 000 20 000 18 750 56 350 all other	1 2 2 2 2 2 2 2 2 2 2 2	CS SS SS CS	660-D 581-D 607-I 655-D 659-D 457-D 407-D 408-D 456-D	1 1 1,2 1,3 1 1,4 1,4 1
Key:	Туре	Desc	riptio	on	Ser	rvo E	Description	1	
	R/W W-O R/O	Writ	able e once l only		CS		Continuous Sampled ser		
develop aspects on stat 2 RZ m 3 4/15	ment. of t us an odula modu	The p he medi d avail tion. lation.	oroject .a. Ple .abilit	d refers to a may have so ase contact y. resently act:	everal doo the Secre	3B11 p cument staria	project unc s describi at for curr	ler .ng differen rent informa	t tion

Table 323 - Optical memory density codes

The mode page codes for optical memory devices are shown in table 324.

Table 324 - Mode page codes

Page code	Description	Subclause
08h 0Ah 02h 06h 09h 01h 07h 03h - 05h 0Ch - 1Fh 00h 20h - 3Eh 3Fh	Caching page Control mode page Disconnect-reconnect page Medium types supported page Optical memory page Peripheral device page Read-write error recovery page Verify error recovery page Reserved Reserved Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	9.3.3.1 8.5.3.1 8.3.3.2 9.3.3.4 16.3.3.1 8.3.3.3 9.3.3.6 9.3.3.8

### 16.3.3.1 Optical memory page

The optical memory page (see table 325) defines parameters for control of optical memory devices.

Bit Byte	7	6	5	4	3	2	1	0
0	PS Reserved Page code (06h)							
1	-			Paramete	r length	(02h)		
2			Adden -	Reserved				RUBR
3				Reserved				

### Table 325 - Optical memory page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile, vendor-specific location.

A report updated block read (RUBR) bit of zero indicates the target shall not report an error when a command performs a successful read of a block that has been updated. A RUBR bit of one indicates the target shall terminate a command that performs a read of a block that has been updated with CHECK CONDITION status, the sense key set to RECOVERED ERROR, the additional sense code set to UPDATED BLOCK READ, and the data shall be transferred to the initiator. The default state of the RUBR bit for write-once devices (as reported in the INQUIRY command) shall be one.

# 16.4 Definitions specific to write-once and optical memory devices

**16.4.1 blank**: The logical block contains no information detectable by the target, or is written with a pattern that appears to the target as no data present. The logical block is considered ready for a write operation.

**16.4.2 generation**: Indicates a relative revision level of a logical block that has been updated via the UPDATE BLOCK command. A logical block that has never been updated has only one generation associated with it.

**16.4.3 read-only medium**: This is medium that may not be written by the initiator. The media contains data prepared in a manner not defined by this standard.

**16.4.4 update:** To write new data to a logical block without destroying the previous data. After a block has been updated, a normal read returns the most recent generation of the data. Earlier generations are still available after the update.

**16.4.5 write-once medium**: This is medium that may be written only once by the initiator. Logical blocks on write-once media that have not been written are considered blank. Logical blocks on write-once media that have been written may not be written again.

# 17 Medium-changer devices

# 17.1 Medium-changer device model

Medium changer devices mechanize the movement of media to and from primary devices (such as disk or tape drives) and other locations within the range of the medium changer. The medium changer command set is based on a physical model of this functionality.

This command set supports varied physical implementations of the medium changer function. Most of these variations are hidden from the initiator by the high level of function provided by the MOVE MEDIUM and EXCHANGE MEDIUM commands and by the generalized nature of the element addressing scheme. However, initiators may need to be aware of the capabilities of the particular medium changer device. These characteristics and capabilities are conveyed via MODE SENSE pages.

### 17.1.1 Medium-changer elements

The medium-changer command set uses as its address space the set of physical locations and mechanisms within the scope of a medium changer device. The term element is used throughout this clause to refer to one member of the medium changer address space. Each element is a discrete physical entity that may hold zero or one physical unit of media - one disk cartridge, one spool of tape, etc. Element addresses do not extend across multiple physical units of media. Likewise, element addresses are independent of any logical partitioning that the primary device may support within a physical unit of media.

A medium changer is viewed as a set of addressable elements, each of which may contain a unit of media or be used to move a unit of media. Each medium changer element has a unique 16 bit element address. Each element is an instance of one of four classes or element types.

- a) MEDIUM TRANSPORT ELEMENT
- b) STORAGE ELEMENT
- c) IMPORT EXPORT ELEMENT
- d) DATA TRANSFER ELEMENT

Units of media (cartridges, cassettes, caddies, etc.) are referred to only indirectly by this device model. Units of media can be moved to or from any of the elements of the medium changer device. The presence of media at the various elements in a medium changer can be sensed. In order to ensure exclusive access to a unit of media, the element where the unit of media is located (the element address) must be reserved.

Elements of the medium transport, import export and (rarely) data transport types may not provide independent storage for medium. The capabilities of a particular medium changer in this respect can be sensed via the device capabilities page of the mode sense data. The following hypothetical medium changer implementation illustrates one case of an element not providing independent storage for medium. Consider a medium changer which has a carousel style storage for medium. The import export function could be provided by a port which allows operator access to one of the storage elements. In such a device, the MOVE ELEMENT command from storage element to import export element would rotate the carousel to align the addressed storage element to the import export position. In this case the import export element does not provide independent storage but rather access to one of the storage elements.

#### 17.1.1.1 Medium transport elements

Medium transport elements address the functions of the medium changer device that perform the movement of units of media. Where a medium transport element can serve (even temporarily) as a storage location for medium, the location of each unit of media must have a separate element address.

In larger medium changer devices, the medium movement functions may be performed by multiple independent robotics subsystems. Each of these may have a number of medium transport element addresses. The element addresses within each subsystem shall be contiguous. Any of the element addresses within a subsystem may be used interchangeably in the medium transport element address field of MOVE MEDIUM and EXCHANGE MEDIUM commands. An initiator may determine the capabilities of the medium movement facilities of a medium changer device via the transport geometry MODE SENSE page, see 17.3.3.3.

Element address zero is reserved for use in the medium transport element address field of MOVE MEDIUM and EXCHANGE MEDIUM commands to direct the medium changer to use a default or medium changer selected medium transport element.

In some implementations, medium transport elements may be source and/or destination addresses in MOVE MEDIUM and EXCHANGE MEDIUM commands. They may or may not provide independent storage of a unit of media. See the device capabilities MODE SENSE page, see 17.3.3.1.

### 17.1.1.2 Storage elements

Storage elements are locations of units of media while not in some other element type. Medium in storage elements is available for access by medium transport elements.

Storage elements may be source and/or destination addresses in MOVE MEDIUM and EXCHANGE MEDIUM commands.

### 17.1.1.3 Import export elements

Import export elements are locations of units of media which are being inserted into or withdrawn from the medium changer device. Medium in these elements is accessible by both medium transport elements, by the operator, or by another independent medium changer device.

Import export elements may be source and/or destination addresses in MOVE MEDIUM and EXCHANGE MEDIUM commands. They may or may not provide independent storage of a unit of media, see the device capabilities MODE SENSE page, see 17.3.3.

Particular import export elements may be capable of either import actions, export actions, both or neither (if an element is not present).

### 17.1.1.4 Data transfer element

Data transfer elements are locations of the primary devices which are capable of reading or writing the medium. Data transfer elements may also be viewed as medium changer element addresses of units of media loaded in or available for loading in or removal from primary devices such as disk or tape drives. Note that the medium changer function specified in this clause does not control the primary device. That is the responsibility of the system.

Data transfer elements may be source and/or destination addresses in MOVE MEDIUM and EXCHANGE MEDIUM commands. They may or may not provide independent storage of a unit of media, see the device capabilities MODE SENSE page, see 17.3.3.

### 17.1.2 SCSI addressing of medium changer devices

Medium changer devices respond to a SCSI ID / LUN address different from those used by the data transfer element devices. If the data transfer elements served by the medium changer device are SCSI devices, they may be addressed though the same SCSI ID as the changer device but with a different logical unit number or through a different SCSI ID. There is no requirement that communication with the data transfer elements be done with the same SCSI bus as the medium changer device or by an SCSI interface at all. This command set does not

support addressing both the changer and the data transfer elements with the same SCSI ID / LUN because the device at a particular SCSI ID / LUN address must have a single peripheral device type.

The READ ELEMENT STATUS response page for data transfer elements provides the SCSI ID / LUN address of the primary devices serviced by a medium changer device if known to the medium changer device.

#### 17.1.3 Data access operations using a medium changer device

The medium changer device moves units of media among the several elements accessible to it. It is able to report the full/empty status of any of these elements. Data transfer elements represent the interface between the medium changer device and some primary device such as a removable media optical disk drive or tape drive.

In order to access data on a unit of media currently located in a medium changer storage element, a system will have to issue commands to both the medium changer device and to the primary device. The commands to the medium changer may include MOVE MEDIUM or EXCHANGE MEDIUM plus READ ELEMENT STATUS commands. The commands to the primary device may include TEST UNIT READY, INQUIRY, START STOP and LOAD UNLOAD commands in addition to READ and WRITE commands.

#### 17.1.4 Element status maintenance requirements

If the medium changer device chooses to implement the READ ELEMENT STATUS command, the medium changer device must be capable of reporting the various data (i.e. full, error, etc.) required by each page type. The medium changer may maintain this information at all times or regenerate it in response to the READ ELEMENT STATUS command. The INITIALIZE ELEMENT STATUS command can be used to force regeneration of this information.

#### 17.1.5 Volume tags

The read element status descriptor format for all element types includes two sets of fields that contain volume tag information. These optional fields are used to report media identification information that the medium changer has acquired either by reading an external label (e.g. bar code labels), by a SEND VOLUME TAG command or by other means which may be vendor unique. The same volume tag information shall be available to all initiators whether assigned by that initiator, by some other initiator or by the media changer itself.

Volume tag information provides a means to confirm the identity of a unit of media that resides in a medium changer element. This command set does not define any direct addressing of units of media based on these fields. However, commands are defined that provide translation between volume tag information and the element address where that unit of media currently resides.

The medium changer command set definition does not impose the requirement that volume tag information be unique over the units of media within the scope of the changer device.

The following commands support the optional volume tag functionality:

- a) SEND VOLUME TAG either as a translation request or to associate a volume tag with the unit of media currently residing at an element address.
- b) REQUEST VOLUME ELEMENT ADDRESS return the element address currently associated with the volume tag information transferred with the last send volume tag command.
- c) READ ELEMENT STATUS optionally reports volume tag information for all element types.
- d) MOVE MEDIUM and EXCHANGE MEDIUM commands if volume tags are implemented, these commands must retain the association between volume tag information and units of media as they are moved from element to element.

### 17.1.5.1 Volume tag format

Volume tag information consists of a volume identifier field of 32 bytes plus a volume sequence number field of 2 bytes. The volume identifier shall consist of a left justified sequence of ASCII characters. Unused positions shall be blank (20h) filled. In order for the SEND VOLUME TAG translate with template to work the characters '\*' and'?' (2Ah and 3Fh) must not appear in volume identification data and there must be no blanks (20h) within the significant part of the volume identifier. If volume tag information for a particular element is undefined, the volume identifier field shall be zero.

The volume sequence number is a 2 byte integer field. If the volume sequence number is not used this field shal be zero. The volume tag contents are independent of the volume identification information recorded on the media.

NOTE 199 For compatibility with the volume identifier defined by volume and file structure standards, it is recommended that the characters in the significant non-blank portion of the volume identifier field be restricted to the set: '0'..'9', 'A'..'Z', and '\_' (30h .. 39h, 41h .. 5Ah, 5Fh). Specific systems may have differing requirements that may take precedence over this recommendation.

Table 326 defines the fields within the 36 byte primary and alternate volume tag information fields found in READ ELEMENT STATUS descriptors and in the data format for the SEND VOLUME TAG command.

Bit Byte	7	6	5	4	3	2	1	0					
0 31													
32													
33				neder	veu								
34	(MSB)	_	Vo	lume seque	ance numb	ar							
35			¥0.	raile seque		<b>F</b> 1		(LSB)					

Table 326 - Volume tag information format

### 17.1.5.2 Primary and alternate volume tag information

Element status descriptors as reported by the READ ELEMENT STATUS command define a primary volume tag and an alternate volume tag. Alternate volume tag information provides a means for a system to use different volume identification information for each side of double sided media. In such a system, the primary volume tag information refers to the logical medium accessible via a MOVE MEDIUM command without the invert bit set. The alternate volume tag information refers to the other side of the media, i.e. the side that would be accessed via a MOVE MEDIUM command with the invert bit set.

# 17.2 Commands for medium changer devices

The commands for medium changer devices shall be as shown in table 327.

Command name	Operation code	Туре	Subclause
CHANGE DEFINITION EXCHANGE MEDIUM INITIALIZE ELEMENT STATUS INQUIRY LOG SELECT LOG SENSE MODE SELECT(6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(6) MODE SENSE(10) MOVE MEDIUM POSITION TO ELEMENT PREVENT ALLOW MEDIUM REMOVAL READ BUFFER READ ELEMENT STATUS RECEIVE DIAGNOSTIC RESULTS RELEASE REQUEST VOLUME ELEMENT ADDRESS REQUEST SENSE RESERVE REZERO UNIT SEND DIAGNOSTIC SEND VOLUME TAG TEST UNIT READY WRITE BUFFER	40h A6h 07h 12h 40h 155h 155h 55h 55h 28h 155h 308h 17h 803h 16h 10h 10h 800h	000M0000000000000000000000000000000000	$\begin{array}{c} 8.2.1 \\ 17.2.1 \\ 17.2.2 \\ 8.2.5 \\ 8.2.6 \\ 8.2.7 \\ 8.2.8 \\ 8.2.9 \\ 8.2.11 \\ 17.2.3 \\ 17.2.4 \\ 9.2.4 \\ 8.2.12 \\ 17.2.5 \\ 8.2.12 \\ 17.2.6 \\ 17.2.6 \\ 17.2.6 \\ 17.2.7 \\ 8.2.13 \\ 17.2.6 \\ 17.2.8 \\ 9.2.13 \\ 8.2.15 \\ 17.2.9 \\ 8.2.16 \\ 8.2.17 \end{array}$
<pre>Key: M = command implementation is ma 0 = command implementation is op</pre>	andatory. otional.		

Operation codes 0Ch, and C0h through FFh are vendor-specific. All other operation codes are reserved.

### 17.2.1 EXCHANGE MEDIUM command

The EXCHANGE MEDIUM command (see table 328) provides a means to exchange the medium in the source element, with the medium located at a destination element.

Bit Byte	7	6	5	4	3	2	1	0		
0				Operation	n code (A	\6h)				
1	Logical unit number Reserved									
2	(MSB)			Transnor	Transport element address					
3				i i alispoi	c erement			(LSB)		
4	(MSB)			Source a	dross					
5					uui ess			(LSB)		
6	(MSB)			First des		addrase				
7				TISC UE		address		(LSB)		
8	(MSB)			Second de		n address				
9				Second destination address — (LSB)						
10		Reserved Inv2 Inv1						Inv1		
11				Control						

Table 328 - EXCHANGE MEDIUM command

NOTE 200 Support of this command requires that the device have the capability of handling two units of media at the same time or that it emulate this capability.

The medium in the source element is moved to the first destination element and the medium that previously occupied the first destination element is moved to the second destination element. The second destination element may or may not be the same element as the source element. In the case of a simple exchange, the source element and the second destination element are the same.

If this command is received and the source element is empty or the first destination element is empty, or the second destination element (if different from the source element) is full, or the second destination element (if the same as the source element) is empty, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The transport element address specifies the medium transport element that is to be used in executing this command. The default transport element address of zero may be used if this functionality is supported by the medium changer device. If the transport element address specified has not been assigned or has been assigned to an element other than a medium transport element, the target shall return CHECK CONDITION status and the set the sense key to ILLEGAL REQUEST.

The source address, the first destination address, and the second destination address may represent a storage element, an import export element, a data transfer element, or a medium transport element. If the address specified has not been assigned to a specific element of the medium changer, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The device capabilities page (see 17.3.3.) provides a matrix which defines the supported source element type anc first destination element type combinations for EXCHANGE MEDIUM commands when the source element type is the same as second destination element type.

An Inv1 bit of one specifies that the medium shall be inverted prior to depositing the medium into the first destination element.

An Inv2 bit of one specifies that the medium shall be inverted prior to depositing the medium into the second destination element.

If the medium changer does not support medium rotation for handling double sided media, the Inv1 and Inv2 bits should be set to zero. If either of these bits is non-zero, a target which is not capable of medium rotation shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

### **17.2.2 INITIALIZE ELEMENT STATUS command**

The INITIALIZE ELEMENT STATUS command (see table 329) will cause the medium changer to check all elements for medium and any other status relevant to that element. The intent of this command is to enable the initiator to get a quick response from a following READ ELEMENT STATUS command. It may be useful to issue this command after a power failure, or if medium has been changed by an operator, or if configurations have been changed.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (07h)										
1	Logical unit number Reserved										
2				Reserved							
3				Reserved							
4		Reserved									
5		Control									

### Table 329 - INITIALIZE ELEMENT STATUS command

### 17.2.3 MOVE MEDIUM command

The MOVE MEDIUM command (see table 330) requests that the target move a unit of media from a source element to a destination element.

Bit Byte	7	6	5	4	3	2	1	0			
0	Operation code (A5h)										
1	Logical unit number Reserved										
2	(MSB)	· · · · · · · · · · · · · · · · · · ·		Transport	lement	address					
3				ii anspui i	C ETEWEIU	auuress		(LSB)			
4	(MSB)			Source ad	idnoss						
5				Source at	101 622			(LSB)			
6	(MSB)			Destinati	ion addra						
7				Destinati	Lon addre	:55		(LSB)			
8				Reserved							
9	Reserved										
10	Reserved Invert										
11				Control							

The source address specifies the location that the medium is taken from, and the destination address specifies the location that the medium is moved to.

If this command is received and the source element is empty or the destination element (if different from the source element) is full, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The transport element address specifies the medium transport element that is to be used in executing this command. The default medium transport element address of zero may be used if this functionality is supported by the medium changer device. If the address specified has not been assigned or has been assigned to an element other than a medium transport element, the target shall return CHECK CONDITION status and the set the sense key to ILLEGAL REQUEST.

The source address and the destination address may represent a storage element, an import export element, a data transfer element, or a medium transport element. If the address specified has not been assigned to a specific element of the medium changer, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The device capabilities MODE SENSE page provides a matrix with the supported source element or destination element combinations for the MOVE MEDIUM command. See 17.3.3.1

An invert bit of one specifies that the medium shall be inverted or rotated prior to depositing the medium into the destination element. If the medium changer does not support medium rotation for handling double sided media, the invert bit should be set to zero. If this bit is non-zero, a target that is not capable of medium rotation shall return CiHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

# 17.2.4 POSITION TO ELEMENT command

The POSITION TO ELEMENT command (see table 331) will position the transport element specified in front of the destination element specified.

Bit Byte	7	6	5	4	3	2	1	0
0	Operation code (2Bh)							
1	Logical	unit num	ber		R	eserved		
2	(MSB)			Transpor	rt element	address		
3				11 alispoi	C erement	auuress		(LSB)
4	(MSB)	<u></u>		Destinat	ion eleme	nt addres	6	
5				Destinat	TOU STEINS	iit addies	3	(LSB)
6				Reserved	1			
7				Reserved	l			
8				Reserved	l			Invert
9				Control				

Table 331 - POSITION TO ELEMENT	command
---------------------------------	---------

NOTE 201 In this context, in front of is defined to mean positioned so that no further motion of the medium transport element is necessary to execute an appropriate MOVE MEDIUM command between the two elements.

An invert bit value of one requests that the transport element be inverted or rotated before positioning in front of the destination element. A value of zero requests that the orientation be unchanged before positioning in front of the destination element.

### 17.2.5 READ ELEMENT STATUS command

The READ ELEMENT STATUS command (see table 332) requests that the target report the status of its internal elements to the initiator.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (B8h)								
1	Logical	unit num	ber	VolTag		Element t	ype code		
2	(MSB)			Stanting	Starting element address				
3				Starting					
4	(MSB)			Number of	f element				
5	<u> </u>			Number 0	(LSB)				
6				Reserved					
7	(MSB)			······					
8				Allocatio	on length				
9								(LSB)	
10				Reserved					
11				Control					

Table 332 - READ ELEMENT S	STATUS command
----------------------------	----------------

A volume tag (VolTag) bit of one indicates that the target shall report volume tag information if this feature is supported. A value of zero indicates that volume tag information shall not be reported. If the volume tag feature is not supported this field shall be treated as reserved.

The element type code field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be reported. The element type codes are defined in table 333.

Code	Description
0h	All element types reported, (valid in CDB only)
1h	Medium transport element
2h	Storage element
3h	Import export element
4h	Data transfer element
5h - Fh	Reserved

The starting element address specifies the minimum element address to report. Only elements with an element type code permitted by the element type code specification, and an element address greater than or equal to the starting element address shall be reported. Element descriptor blocks are not generated for undefined element addresses.

The number of elements specifies the maximum number of element descriptors to be created by the target for this command. The value specified by this field is not the range of element addresses to be considered for reporting but rather the number of defined elements to report. If the allocation length is not sufficient to transfer all

the element descriptors, the target shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

## 17.2.5.1 Element status data

The data returned by the READ ELEMENT STATUS command is defined in table 334 and 17.2.5.3 through 17.2.5.6. Element status data consists of an eight-byte header, (see table 334) followed by one or more element status pages.

Bit Byte	7	6	5	4	3	2	1	0				
0	(MSB)	B) First element address reported										
1			(LSB)									
2	(MSB)	Number of elements available										
3				(LSB)								
4	Reserved											
5	(MSB)											
6			Byte o	count of	report ava es, n - 7	ailable						
7				(LSB)								
8												
n				Smerre Sta	tus page(:							

Table 334 - Element status data

The first element address reported field indicates the element address of the element with the smallest element address found to meet the CDB request.

The number of elements available field indicates the number of elements meeting the request in the command descriptor block. The status for these elements is returned if sufficient allocation length was specified.

The byte count of report available field indicates the number of bytes of element status page data available for all elements meeting the request in the command descriptor block. This value shall not be adjusted to match the allocation length available.

NOTE 202 - The READ ELEMENT STATUS command can be issued with an allocation length of eight bytes in order to determine the allocation length required to transfer all the element status data specified by the command.

Figure 28 provides an illustration of the element status data structure.

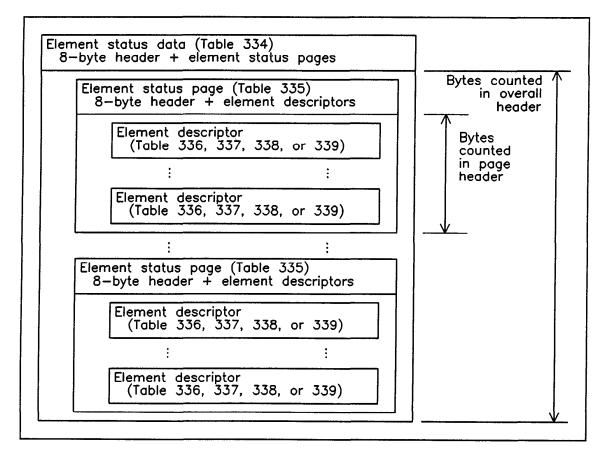


Figure 28 - Illustration of element status data structure

370

,

## 17.2.5.2 Element status page

The element status page is defined in table 335. Each element status page includes an eight-byte header followed by one or more element descriptor blocks. The header includes the element type code, the length of each descriptor block and the number of bytes of element descriptor information that follow the header for this element type.

Bit Byte	7	6	1	0									
0		Element type code											
1	PVolTag	PVolTag AVolTag Reserved											
2	(MSB)	MSB)											
3		Element descriptor length											
4		Reserved											
5	(MSB)												
6		Ву	te count	of descr	iptor dat	a availab.	le						
7		Byte count of descriptor data available (this page, n - 7)											
8		Element descriptor(s)											
n			± ــ	emerre des		· /							

Table	335 -	Element	status	page
-------	-------	---------	--------	------

The element type code field indicates the element type reported by this page.

A primary volume tag (PVolTag) bit of one indicates that the primary volume tag information field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

An alternate volume tag (AVoITag) bit of one indicates that the alternate volume tag information field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

The element descriptor length field indicates the number of bytes in each element descriptor.

The byte count of descriptor data available field indicates the number of bytes of element descriptor data available for elements of this element type meeting the request in the CDB. This value shall not be adjusted to match the allocation length available.

Each element descriptor includes the element address and status flags; it may also contain sense code information as well as other information depending on the element type (see 17.2.5.3 through 17.2.5.6).

### 17.2.5.3 Medium transport element descriptor

Table 336 defines the medium transport element descriptor.

Bit Byte	7	6	5	4	3	2	1	0					
0	(MSB)	(MSB) Element address —											
1			E.	rement au	11.622			(LSB)					
2		Reserved Except Reserved Full											
3				Reserve	d	<u></u>	· · · · · · · · · · · · · · · · · · ·						
4		·····	Addi	tional se	nse code								
5			Addition	al sense (	code qual	ifier							
6													
8		Reserved											
9	SValid	SValid Invert Reserved											
10	(MSB)	(MSB)											
11			Source s	storage ei	Lement ad	aress		(LSB)					
12			Deimanu	velume +	a inform								
47			(Field o	volume ta mitted in	F PVolTag	= 0)							
48			A1++++++++		an inferr								
83			Alternate (Field o	omitted if	AVolTag	= 0)							
84													
87	(Fiel	d moved u	up if volu	Reserve ime tag ir		n field(s	) are omit	ted.)					
88				Mandan									
z-1	 (Fiel	d moved u	up if volu	Vendor-sp ume tag in	ecitic formation	n field(s)	) are omit	ted.)					

Table 336 - Medium transport element descriptor

The element address field gives the address of the medium changer element whose status is reported by this element descriptor block.

An exception (Except) bit of one indicates the element is in an abnormal state. An exception bit of zero indicates the element is in a normal state. If this bit is one, information on the abnormal state may be available in the additional sense code and additional sense code qualifier bytes.

A full bit value of one indicates that the element contains a unit of media. A value of zero indicates that the element does not contain a unit of media.

The additional sense code field may provide specific information on an abnormal element state. The values in this field are as defined for the additional sense code of the REQUEST SENSE data (see 8.2.14.3).

The additional sense code qualifier field may provide more detailed information on an abnormal element state. The values in this field are as defined for the additional sense code qualifier of the REQUEST SENSE data (see 8.2.14.4).

A source valid (SValid) bit value of one indicates that the source storage element address field and the invert bit information are valid. A value of zero indicates that the values in these fields are not valid.

An invert bit value of one indicates that the unit of media now in this element was inverted by MOVE MEDIUM or EXCHANGE MEDIUM operations since it was last in the source storage element. A value of zero indicates that no inversion occurred during the operation.

The source storage element address field provides the address of the last storage element this unit of media was moved. This field is valid only if the SValid bit is one.

The primary and alternate volume tag information fields provide for identifying the unit of media residing in this element (see 17.1.5.). Either or both of these fields may be omitted for all the element descriptor blocks that comprise an element status page as indicated by the PVolTag and AVolTag bits in the element status page header.

## 17.2.5.4 Storage element descriptor

Table 337 defines the storage element descriptor.

Bit Byte	7	6	5	4	3	2	1	0			
0	(MSB)		E.	Lement add	dress						
1			L.	Lement au				(LSB)			
2		Reserved Access Except Reserved									
З	, ,	Reserved									
4		Additional sense code									
5			Addition	nal sense	code qua	lifier					
6	.,			Reserved	4						
8				Nesel vev	A						
9	SValid	Invert			Reser	rved					
10	(MSB)		Sour	rce elemer	nt address						
11			004	Ce eremen		•		(LSB)			
12			Primary	volume 1	tag inform	nation					
47			(Field	omitted :	if PVolTag	g = 0)					
48			Alternat	e volume	tag infor	mation					
83					if PVolTag						
84				Reserved	4						
87	(Fiel	d moved u	up if volu			n field(s	) are omit	ted.)			
88			Ve	endor unio							
z-1	(Fiel	d moved u				n field(s	) are omit	ted.)			

### Table 337 - Storage element descriptor

An access bit value of one indicates that access to the element by a medium transport element is allowed. An access bit of zero indicates that access to the element by the medium transport element is denied.

The source storage element address field provides the address of the last storage element this unit of media was moved from. This element address value may or may not be the same as this element. This field is valid only if the SValid bit is one.

For fields not defined in this subclause, see 17.2.5.3.

### 17.2.5.5 Import export element descriptor

Table 338 defines the import export element descriptor.

Bit Byte	7	6	5	4	3	2	1	0				
0	(MSB)			Element a	addross							
1				Liement, a	1001 235			(LSB)				
2	Res	erved	InEnab	ExEnab	Access	Except	ImpExp	Full				
3		Reserved										
4			Ado	ditional s	sense code	)						
5			Additio	onal sense	e code qua	alifier						
6		Provincial Statement										
8												
9	SValid	Invert			Reser	ved						
10	(MSB)		Source		alamont a	ddnooo						
11			3001-06	storage	element a	luuress		(LSB)				
12			Dnimer		tag infor	motion	<u>.</u>					
47					if PVolTa							
48			Altoppo		e tag info	nmotion						
83					if PVolTa							
84				Reserve								
87	(Fiel	d moved u	up if volu			field(s)	are omit	ted.)				
88				Vandar								
z-1	(Fiel	d moved u	up if volu	Vendor u ume tag in	nique formatior	field(s)	are omit	ted.)				

Table 338 - Import export el	ement descriptor
------------------------------	------------------

An import enable (InEnab) bit of one indicates that the import export element supports movement of media into the scope of the medium changer device. An InEnab bit of zero indicates that this element does not support import actions.

An export enable (ExEnab) bit of one indicates that the import export element supports movement of media out o the scope of the medium changer device. An ExEnab bit of zero indicates that this element does not support export actions.

An access bit of one indicates that access to the import export element by a medium transport element is allowed. An access bit of zero indicates access to the import export element by medium transport elements is denied.

NOTE 203 An example of when access would be denied is when the operator has exclusive access to the import export element.

An import export (ImpExp) bit of one indicates the unit of media in the import export element was placed there by an operator. An ImpExp bit of zero indicates the unit of media in the import export element was placed there by the medium transport element.

For fields not defined in this clause, see 17.2.5.3.

#### 17.2.5.6 Data transfer element descriptor

Table 339 defines the data transfer element descriptor.

Bit Byte	7	6	5	4	3	2	1	0					
0	(MSB)	(MSB) Element address											
1		(LSB)											
2		Reserved Access Except Reserved Full											
3				Reserved	d								
4			Addi	itional se	ense code								
5			Additior	nal sense	code quai	lifier							
6	Not bus I	Reserved	[D valid [	U valid F	Reserved	Logica	al unit nu	ımber					
7			SC	SI bus ac	dress								
8				Reserve	ed								
9	SValid	Invert			Reser	ved							
10	(MSB)		Source sto										
11				haye eren	nent auure			(LSB)					
12			Primary	(volumo t	ag infor	ation							
47			(Field	omitted i	ag inform If PVolTag	1 = 0)							
48			Alternat		tag infor	mation							
83			(Field	omitted i	if PVolTag	1 = 0)							
84				Pasanyas									
87	(Fie:												
88				Vondon un	, i quo								
z-1	(Fiel	ld moved u	ıp if volu	Vendor un me tag in	formation	field(s)	are omit	ted.)					

Table 339 - Data transfer element descriptor

An access bit value of one indicates access to the data transfer element by the medium transport element is allowed. A value of zero indicates access to the data transfer element by a medium transport element is denied.

NOTE 204 Access to the data transfer element by medium transport elements might be denied if a data transfer operation was under way. Note that a one value in this bit may not be sufficient to ensure a successful operation. This bit can only reflect the best information available to the medium changer device, which may not accurately reflect the state of the primary (data transfer) device.

A not this bus (not bus) bit value of one indicates that the SCSI bus address and logical unit number values are not valid for the SCSI bus used to select the medium changer device. A not bus bit value of zero indicates that the SCSI address and logical unit values, if valid, are on the same bus as the medium changer device.

An ID Valid bit value of one indicates that the SCSI bus address field contains valid information. An LU Valid bit value of one indicates that the logical unit number field contains valid information.

The SCSI bus address field, if valid, provides the SCSI address (binary representation) of the primary device served by the medium changer at this element address.

The logical unit number field, if valid, provides the logical unit number within the SCSI bus device of the primary device served by the medium changer at this element address.

For fields not defined in this clause, see 17.2.5.3.

## 17.2.6 REQUEST VOLUME ELEMENT ADDRESS command

The REQUEST VOLUME ELEMENT ADDRESS command (see table 340) is used to transfer the results of a SEND VOLUME TAG command. Multiple REQUEST VOLUME ELEMENT ADDRESS commands may be used to recover the results of a single SEND VOLUME TAG command with the translate option.

Bit Byte	7	6	5	4	3	2	1	0			
0		Operation code (B5h)									
1	Logical	unit n	umber	VolTag		Element t	ype code				
2	(MSB)			Element a	ddnocc						
3				ETemett s	aaness			(LSB)			
4	(MSB)			Number of	i alamant	-					
5				Number 0		(LSB)					
6				Reserved							
7	(MSB)										
8				Allocatio	on length						
9								(LSB)			
10				Reserved							
11				Control							

### Table 340 - REQUEST VOLUME ELEMENT ADDRESS command

For each SEND VOLUME TAG command, the target shall be able to report multiple elements that match a volume tag template in element address order. Once information for a given element address has been reported only higher element addresses will be reported by subsequent REQUEST VOLUME ELEMENT ADDRESS commands.

NOTE 205 In order to ensure the successful completion of a SEND VOLUME TAG, REQUEST VOLUME ELEMENT ADDRESS sequence in a multi-initiator environment, it may be necessary to reserve the medium changer device. To do this, issue a unit RESERVE command prior to the SEND VOLUME TAG command and delay issuing the RELEASE until after the last REQUEST VOLUME ELEMENT ADDRESS. A volume tag (VolTag) bit of one indicates that the target shall report volume tag information. A value of zero indicates that volume tag information shall not be reported. This is provided for compatibility with the READ ELEMENT STATUS command.

The element type code field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be reported. The codes for this field are defined in 17.2.5. This acts as a qualification of the element(s) determined by SEND VOLUME TAG to match the template specified.

The element address field gives a medium changer element address whose interpretation depends on the send action code received with the last SEND VOLUME TAG command. This code is echoed in the volume element address return format transferred by this command. When the last send action code was a translate, (code values 0h .. 7h), the element address field gives the minimum element address to be reported by this command. When the send action code is other than translate, (i.e. assert, replace, and undefined, code values 8h .. Dh), the element address field gives the particular element whose volume tag information was modified.

The number of elements specifies the maximum number of elements and volume tags to be reported by the target for this command. The value specified by this field is not the range of element addresses to be considered for reporting but rather the number of elements to report of those that match the last send volume tag translate template. If the allocation length is not sufficient to transfer all the element descriptors, the target shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

The data returned by this command consists of a header as defined by table 341, plus one or more element type specific pages in the same format as defined by the READ ELEMENT STATUS command.

Bit Byte	7	6	5	4	3	2	1	0				
0	(MSB)		Finst	alamont	addross n	nonted						
1			First element address reported									
2	(MSB)		Numi		ments per	antod						
3			Number of elements reported									
4		Reserved	ł		Send	d action o	code					
5	(MSB)											
6			Byte o	count of a	report ava es, x - 7	ilable						
7						)		(LSB)				
8 to			E1/	mont stat								
×			Element status page(s)									

Table 341 - Volume element address header format

The send action code field gives the function performed by the last SEND VOLUME TAG command as defined in 17.2.9. This command reports the results of this send action code operation.

For fields not defined in this subclause, see 17.2.5.1.

# 17.2.7 RELEASE command

The RELEASE command (see table 342) is used to release previously reserved units, or, if the element release option is implemented, previously reserved elements within units. It is not an error for an initiator to attempt to release a reservation that is not currently active. In this case, the target shall return GOOD status without altering any other reservation.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (1	7h)		
1	Logical	unit num	ıber	3rdPty	Third p	oarty devi	ce ID	Element
2				Reservat	ion ident	ification		
3				Reserved				
4				Reserved				
5				Control				

# Table 342 - RELEASE command

## 17.2.7.1 Logical unit release

If the element bit is zero, this command shall cause the target to terminate all non-third party unit and element reservations that are active from the initiator to the specified logical unit.

# 17.2.7.2 Element release (optional)

If the element bit is one and the element release option is not implemented, the RELEASE command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. This option shall be implemented if the element reservation option (see 17.2.8.1) is implemented.

If the element bit is one and the element release option is implemented, this command shall cause any reservation from the requesting initiator with a matching reservation identification to be terminated. Other reservations from the requesting initiator shall remain in effect.

### 17.2.7.3 Third party release

The third-party release option of the RELEASE command allows an initiator to release a unit or elements within a unit that were previously reserved using third-party reservation (see 17.2.8.3). Third-party release shall be implemented if third-party reserve is implemented.

If the third-party (3rdPty) bit is zero, the third-party release option is not requested. If the 3rdPty bit is one and the target implements the third-party release option, the target shall release the specified unit or elements, but only if the reservation was made using the third-party reservation option by the initiator that is requesting the release for the same SCSI device as specified in the third-party device ID field.

If the 3rdPty bit is one and the target does not implement the third-party release option, the target shall terminat∉ the command with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

## 17.2.8 RESERVE command

The RESERVE command (see table 343) is used to reserve units or, if the element reservation option is implemented, elements within units for the use of the initiator. The third-party reservation allows units or elements to be reserved for another specified SCSI device. The RESERVE and RELEASE commands provide the basic mechanism for contention resolution in multiple-initiator systems.

Bit Byte	7	6	5	4	3	2	1	0		
0				Operatio	n code (1	6h)				
1	Logical	unit num	nber	3rdPty	Third p	oarty devi	.ce ID	Element		
2		Reservation identification								
3	(MSB)			Element .	list long	1+5				
4				Liement.	LISC LENÇ	j ch		(LSB)		
5				Control						

## Table 343 - RESERVE command

## 17.2.8.1 Logical unit reservation

If the element bit is zero, this command shall request that the entire unit be reserved for the exclusive use of the initiator until the reservation is superseded by another valid RESERVE command from the initiator that made the reservation or until released by a RELEASE command from the same initiator that made the reservation, by a BUS DEVICE RESET message from any initiator, by a hard RESET condition, or by a power off/on cycle. A unit reservation shall not be granted if the unit or any element is reserved by another initiator. It shall be permissible for an initiator to reserve a unit that is currently reserved by that initiator. If the element bit is zero, the reservation identification and the element list length shall be ignored.

If the unit, or any element within the unit, is reserved for another initiator, the target shall respond by returning RESERVATION CONFLICT status.

If, after honouring the reservation, any other initiator attempts to perform any command on the reserved unit other than an INQUIRY, REQUEST SENSE, ALLOW MEDIUM REMOVAL, RESERVE, or a RELEASE command, the command shall be rejected with RESERVATION CONFLICT status.

### 17.2.8.2 Element reservation (optional)

The reservation identification provides a means for an initiator to identify each element reservation. This allows an initiator in a multiple-tasking environment, to have multiple reservations outstanding. The reservation identification is used in the RELEASE command to specify which reservation is to be released. It is also used in superseding RESERVE commands to specify which reservation is to be superseded.

If the element reservation option is implemented, the element release option (see 17.2.7.2) shall also be implemented. These options permit multiple elements within the unit to be reserved, each with a separate reservation identification.

If the element bit is one, and the element reservation option is implemented, the target shall process the reservation request as follows:

a) The element list shall be checked for valid element addresses. If any element address is invalid for this unit, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST. The element list shall be checked for invalid element overlaps with other element descriptors in the element list and if invalid overlaps are found, the command shall be terminated with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

- b) If the requested reservation does not conflict with any active or previously requested reservation, the elements specified shall be reserved until superseded by another valid RESERVE command from the initiator that made the reservation, or until released by a RELEASE command from the same initiator, by a BUS DEVICE RESET message from any initiator, or by a hard RESET condition. If either of the last two conditions occur, the next command from each initiator shall be terminated with CHECK CONDITION status and the sense key shall be set to UNIT ATTENTION.
- c) If the reservation request conflicts with a reservation already active the target shall return RESERVATION CONFLICT status.

If the element bit is one, and the element reservation option is not implemented, the RESERVE command shall be terminated with CHECK CONDITION status. The sense key shall be set to ILLEGAL REQUEST.

The size of the element list shall be defined by the element list length parameter. The element list shall consist of zero or more descriptors as shown in table 344. Each element list descriptor defines a series of elements beginning at the specified element address for the specified number of elements. If the number of elements is zero, the element list shall begin at the specified element address and continue through the last element address on the unit.

Bit Byte	7	6	5	4	3	2	1	0		
01										
2	(MSB)	<u> </u>								
3			Number of elements							
4	(MSB)			Element	dduooo					
5				crewent a	address			(LSB		

# Table 344 - Data format of element list descriptors

If an initiator issues a command to an element that has been reserved by a different initiator, the command shall not be performed and the command shall be terminated with a RESERVATION CONFLICT status. If a reservation conflict precludes any part of the command, none of the command shall be performed.

# 17.2.8.3 Third party reservation

The third-party reservation option of the RESERVE command allows an initiator to reserve a unit or elements within a unit for another SCSI device.

If the third-party (3rdPty) bit is zero, the third-party reservation option is not requested. If the 3rdPty bit is one and the third-party reservation option is implemented, the RESERVE command shall reserve the specified unit or elements for the SCSI device specified in the third-party device ID field. The target shall preserve the reservation until it is superseded by another valid RESERVE command from the initiator that made the reservation or until it is released by the same initiator, by a BUS DEVICE RESET message from any initiator, or a hard RESET condition. The target shall ignore any attempt to release the reservation made by any other initiator.

If the 3rdPty bit is one and the third-party reservation option is not implemented, the target shall reject the RESERVE command with CHECK CONDITION status and the sense key shall be set to ILLEGAL REQUEST.

380

## 17.2.8.4 Superseding reservations

An initiator that holds a current reservation may modify that reservation by issuing another RESERVE command to the same unit and, if the element bit is one, using the same reservation identification. The superseding RESERVE command shall release the previous reservation in place when the new reservation request is granted. The current reservation shall not be modified if the new reservation request cannot be granted. If the superseding reservation cannot be granted because of conflicts with a previous active reservation (other than the reservation being superseded), the target shall return RESERVATION CONFLICT status.

NOTE 206 Superseding reservations are principally intended to allow the SCSI device ID to be changed on a reservation using the third-party reservation option.

### 17.2.9 SEND VOLUME TAG command

The SEND VOLUME TAG command (see table 345) transfers a volume tag template to be searched for or new volume tag information for one or more media changer elements. The function of the command is conveyed by the send action code field. The REQUEST VOLUME ELEMENT ADDRESS command is used to transfer the results of a translate search operation.

Bit Byte	7	6	5	4	3	2	1	0	
0	Operation code (B6h)								
1	Logical unit number Reserved Element type code								
2	(MSB) Element address								
3				CTement a	auur ess			(LSB)	
4	Reserved								
5	Reserved Send action code								
6				Reserved					
7				Reserved					
8	(MSB)		Pa	ramator li	st lengt	h			
9	Parameter list length							(LSB)	
10	Reserved								
11	Control								

### Table 345 - SEND VOLUME TAG command

The element type code field specifies an element type specification as defined in 17.2.5. If the send action code indicates a translate operation, this field indicates the element types to be searched. If this is a zero, all element types are candidates for a translate operation. If the send action code does not indicate a translate, this field shall be treated as reserved.

The send action code field gives the function to be performed by this command as listed in table 346.

Description
Translate - search all defined volume tags
Translate - search only primary volume tags Translate - search only alternate volume tags
Translate - search only alternate volume tags
Reserved
Translate - search all defined tags - ignore sequence numbers
Translate - search primary tags - ignore sequence numbers
Translate - search alternate tags - ignore sequence numbers
Reserved
Assert - as the primary volume tag - if tag now undefined
Assert - as the alternate volume tag - if tag now undefined
Replace - the primary volume tag - current tag ignored
Replace - the alternate volume tag - current tag ignored
Undefined - the primary volume tag - current tag ignored
Undefined - the alternate volume tag - current tag ignored
Reserved
Vendor-specific

Table 346 - Send volume tag action codes

Translate operations request that the target search the volume tag information available to it for elements whose volume tag information matches the template given by the command parameters. The resulting information is reported via the REQUEST VOLUME ELEMENT ADDRESS command.

Assert operations define volume tag information for a single element. A CHECK CONDITION with ILLEGAL REQUEST is reported if the subject element already has defined volume tag information; in this case, the original volume tag information shall remain unaltered.

Replace operations define volume tag information for a single element. Any previously defined volume tag information is overwritten.

Undefined operations cause previously defined volume tag information for the specified element to be cleared. It shall not be considered an error to undefined volume tag information that was not previously defined.

A medium changer device that implements volume tag information may choose to not implement the facilities that modify the volume tag information. With such an implementation a request for the assert, replace or undefined functions would cause the SEND VOLUME TAG command to be terminated with CHECK CONDITION and a sense key of ILLEGAL REQUEST.

The element address field gives a medium changer element address whose interpretation depends on the send action code received with this command. When the send action code is a translate, (code values 0h .. 7h), the element address field gives the starting element to be examined for satisfaction of the search criteria. When the send action code is other than translate, (i.e. assert, replace, and undefined, code values 8h .. Dh), the element address field gives the particular element whose volume tag information is to be modified.

The volume tag information used for translate, assert and replace functions is defined in table 347. No parameters are necessary for undefined operations.

Bit Byte	7	6	5	4	3	2	1	0		
0 31	Volume identification template field									
32 33										
34 35	(MSB) Minimum volume sequence number									
36 37										
38 39	(MSB)		Maxim	um volume	sequence	number		(LSB)		

### Table 347 - Send volume tag parameters format

The volume identification template field specifies a search template for translate functions and the exact value of the new volume identification information for other SEND VOLUME TAG command functions.

As a search template, this field may contain the wildcard characters '\*' and '?' (2Ah and 3Fh). '\*' will match any string of characters, when it appears in a template the remainder of the template is not used. '?' will match any single character.

For a function other than translate, this field may not contain the '\*' or '?' wildcard characters.

The minimum volume sequence number field specifies the new sequence number for the assert and replace functions. For a translate, this specifies the least value that will meet the search specification.

The maximum volume sequence number field specifies the greatest value that will meet the search specification. This field is ignored on functions other than translate.

# 17.3 Parameters for medium changer devices

### 17.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with medium changer devices.

The diagnostic page codes for medium changer devices are defined in table 348.

Table 348 -	Diagnostic	pade	codes
-------------	------------	------	-------

Page code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported diagnostic pages Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

### 17.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with medium changer devices.

The log page codes for medium changer devices are defined in table 349.

Page code	Description	Subclause
00h 06h 07h 01h - 05h 08h - 2Fh 3Fh 30h - 3Eh	Supported log pages Non-medium error page Last n error events page Reserved Reserved Reserved Vendor-specific pages	8.3.2.5 8.3.2.4 8.3.2.3

Table 349 - Log page codes

## 17.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with medium changer devices.

The mode parameter list, including the mode parameter header and mode block descriptor, are defined in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). This field is reserved for medium changer devices.

The device specific parameter field is contained in the mode parameter header (see 8.3.3). This field is reserved for medium changer devices.

The density code field is contained in the mode parameter block descriptor (see 8.3.3). This field is reserved for medium changer devices.

The mode page codes for medium changer devices are shown in table 350.

# Table 350 - Mode page codes

Page code	Description	Subclause
1Fh 1Dh 1Eh 01h - 1Ch 00h 20h - 3Eh 3Fh	Device capabilities Element address assignment Transport geometry parameters Reserved Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	17.3.3.1 17.3.3.2 17.3.3.3

# 17.3.3.1 Device capabilities page

The device capabilities page (see table 351) defines characteristics of the element types on this medium changer implementation. This information may be employed by the initiator to determine functions permitted by the MOVE MEDIUM and EXCHANGE MEDIUM commands.

Bit Byte	7	6	5	4	3	2	1	0		
0	PS	PS Reserved Page code (1Fh)								
1		Parameter length (12h)								
2		Res	served		StorDT	StorI/E	StorST	StorMT		
3				Reserved	<u> </u>					
4		Res	served		MT->DT	MT->I/E	MT->ST	MT->MT		
5	Reserved				ST->DT	ST->I/E	ST->ST	ST->MT		
6		Reserved				I/E->I/E	I/E->ST	I/E->MT		
7		Res	served		DT->DT	DT->I/E	DT->ST	DT->MT		
8				Reserved	<u> </u>					
11				neserveu						
12		Res	erved		MT<>DT	MT<>I/E	MT<>ST	MT<>MT		
13		Reserved			ST<>DT	ST<>I/E	ST<>ST	ST<>MT		
14		Reserved			I/E<>DT	I/E<>I/E	I/E<>ST	I/E<>MT		
15		Reserved				DT<>I/E	DT<>ST	DT<>MT		

Table 351 - Device capabilities page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile, vendor-specific location.

In the field names on this page, the following element type abbreviations are used:

- MT a medium transport element,
- ST a storage element,
- I/E an import export element, and
- DT a data transfer element.

In the descriptions, XX and YY are any of the element type abbreviations.

A StorXX bit value of one indicated that the defined elements of type XX may provide independent storage for a unit of media. A value of zero indicates that elements of type XX provide virtual sources or destinations, that the location of the unit of media is provided by an element of some other type. The value of StorST is one by the definition of that type. See 17.1.1.

An XX->YY bit value of one indicates that the medium changer device supports all MOVE MEDIUM commands where the source is element type XX, the destination is element type YY and these element addresses are otherwise valid. An XX->YY bit value of zero indicates that these MOVE MEDIUM commands may or may not be valid depending on the particular elements requested. Those which are not valid will be rejected with ILLEGAL REQUEST.

An XX<>YY bit value of one indicates that the medium changer device supports all EXCHANGE MEDIUM commands where the source is element type XX, destination 1 is element type YY, destination 2 is the same type as the source element type and these element addresses are otherwise valid. An XX<>YY bit value of zero indicates that these EXCHANGE MEDIUM commands may or may not be valid depending on the particular elements requested. Those which are not valid will be rejected with ILLEGAL REQUEST.

## 17.3.3.2 Element address assignment page

The element address assignment page (see table 352) is used to assign addresses to the elements of the medium changer (MODE SELECT) and to report those assignments (MODE SENSE). This page also defines the number of each type of element present.

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	Reserved		Page code	Page code (1Dh)				
1				Paramete	r length	(12h)			
2	(MSB)			Medium tu	Medium transport element address				
3								(LSB)	
4	(MSB)			Number of	Number of medium transport elements				
5					mearam		CICINCIICO	(LSB)	
6	(MSB)			First storage element address					
7								(LSB)	
8	(MSB)			Number of storage elements					
9								(LSB)	
10	(MSB)			First im	ort expo	rt elemen <sup>.</sup>	t address		
11								(LSB)	
12	(MSB)			Number of	f import (	export el	ements		
13								(LSB)	
14	(MSB)			First dat	ta transfe	er elemen <sup>.</sup>	t address		
15								(LSB)	
16	(MSB)			Number of data transfer elements					
17								(LSB)	
18				Reserved					
19									

Table 352 - Element address assignment page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The first medium transport element address field identifies the first medium transport element contained in the medium changer (other than the default medium transport address of zero). The number of medium transport elements field defines the total number of medium transport elements contained in the medium changer. If the number of medium transport elements field in a MODE SELECT command is greater than the default value

386

returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The first storage element address field identifies the first medium storage element contained in the medium changer. The number of storage elements field defines the total number of medium storage elements contained in the medium changer. If the number of medium storage elements field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

The first import export element address field identifies the first medium portal that is accessible both by the medium transport devices and also by an operator from outside the medium changer. The number of import export elements field defines the total number of import export elements contained in the medium changer and accessible to the medium transport elements. If the number of import export elements field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

NOTE 207 The number of import export elements may be zero.

The first data transfer element address field identifies the first data transfer element contained in the medium changer. The data transfer elements may be either read/write or read-only devices. The number of data transfer field defines the total number of data transfer elements contained within the medium changer and accessible to the medium transport elements. If the number of data transfer elements field in a MODE SELECT command is greater than the default value returned in the MODE SENSE parameter data, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

Each element in the medium changer must have a unique address. If the address ranges defined for any of the element types overlap, the target shall return CHECK CONDITION status and set the sense key to ILLEGAL REQUEST.

# 17.3.3.3 Transport geometry parameters page

The transport geometry parameters page (see table 353) defines whether each medium transport element is a member of a set of elements that share a common robotics subsystem and whether the element is capable of media rotation. One transport geometry descriptor is transferred for each medium transport element, beginning with the first medium transport element. (Other than the default transport element address of zero.)

Bit Byte	7	6	5	4	3	2	1	0	
0	PS	PS Reserved Page code (1Eh)							
1	Parameter length								
			Tr	ransport	geometry d	escriptor	`(s)		
0	Reserved Rotate							Rotate	
1		Member number in transport element set							

 Table 353 - Transport geometry parameters page

The parameters savable (PS) bit is only used with the MODE SENSE command. This bit is reserved with the MODE SELECT command. A PS bit of one indicates that the target is capable of saving the page in a non-volatile vendor-specific location.

The parameter length specifies the number of bytes of transport geometry descriptors that follow. The geometry of each medium transport element is defined using a two-byte field as defined below.

A rotate bit of one indicates that the medium transport element supports media rotation for handling double-sided media. A rotate bit of zero indicates that the medium transport element does not support media rotation.

The member number in set indicates the position of this element in a set of medium transport elements that share a common robotics subsystem. The first element in a set has a member number of zero.

NOTE 208 This page reports information about the way transport elements are physically clustered in a system. The model for this is a medium changer device with more than one independent robotics subsystem, where each of these supports multiple transport elements. The elements that are supported by a particular robotics subsystem form a set. This sort of information is helpful for optimization and error recovery in such a large system. (Recall that in the model for this device type, see 17.1, the individual transport element is addressed not the robotics subsystem. An element is defined to be a place where a unit of media may be at any point in time.)

# 17.4 Definitions specific to medium changer devices

**17.4.1 data transfer element**: A component of a medium changer used to access the data stored on a unit of media. The address in medium changer element space of a primary device.

**17.4.2 element**: An addressable physical component of a medium changer device that can serve as the location of a unit of media.

**17.4.3 import export element**: A location within a medium changer device that can be accessed by both the medium transport elements and by the operator.

**17.4.4 medium transport element**: A component of a medium changer device that is used to move units of media.

**17.4.5 media rotation**: The process of changing the orientation of a unit of media. In particular this refers to inverting a two sided media cartridge so that a data transport element that can access only one side at a time can access data on the other side.

**17.4.6 primary device**: A device for reading or writing data on medium. These devices would typically implement the direct access, sequential access, optical memory device or CD-ROM command sets in this standard. Examples are magnetic disk drives, cartridge tape drives, optical disk drives and CD-ROM drives. Use in a medium changer environment implies that the device supports removable media.

17.4.7 storage element: A component of a medium changer device used for inactive storage of a unit of media.

# **18 Communications devices**

# **18.1 Communications device model**

A communications device provides a facility to send and receive information over some medium (usually an electrical or fiber-optic cable) using a defined protocol to one or more other systems that support the same protocol. The media and protocols are often specified in national or international standards, although some are proprietary. Within this subclause, the protocol used on the external medium is called the external protocol.

The SCSI communications device model assumes that information to control the external protocol is embedded within the data transferred by the SEND and GET MESSAGE commands. The structure of the data transferred by these commands is not defined by this standard. Vendor-unique MODE pages may be defined to provide additional control over the external protocol.

The SCSI communications device is a target with the characteristics of a network access device, typically attached to a local area network (LAN), public telecommunications network, private telecommunications network, or packet switching network, etc., with no theoretical limits. Such a communications device is often called a network node. The communications device transmits or receives packets of data as requested by the initiator. The contents and meaning of the data packets is not defined by this standard. The bytes in the data packets may or may not contain addressing, path selection, or path control information identifying separate data streams. Additional information may be provided by the stream selection identifier found in the ten and twelve byte SEND MESSAGE and GET MESSAGE commands.

In the SCSI communications device, the target accepts and provides the data packets transferred in accordance with commands received from the initiator. There is an assumption that the initiator and the communications device know the rules by which information is exchanged between them, how the information is to be interpreted by the communications device, and when it is allowable to exchange the information. These rules are not specified by this standard.

The initiator requests that the communications device accept a packet of data by transmitting a SEND MESSAGE command. The initiator requests that the communications device return a packet of data by transmitting a GET MESSAGE command. The communications device also supports commands related to configuration of the network access device and network management of the particular environment. MODE SENSE and MODE SELECT are examples of these configuration commands.

If a communications device temporarily has no resource available to handle a data packet from the initiator, or has no data packet to provide to the initiator, or has no resources assigned to perform the operation, the device may then choose one of the following responses:

- a) Terminate the command with CHECK CONDITION status. The sense key shall be set to NOT READY and the appropriate additional sense code for the condition.
- b) Disconnect until the necessary resource or data packet becomes available, and then reconnect to the initiator and resume the operation.
- c) Terminate the command with BUSY status.

More than one logical unit can be implemented by a communications device. Logical units can serve as multiple paths to a single network access device, and/or each logical unit can serve as a discrete path to differen resources within the device. A single logical unit may also serve as a path to multiple resources if the communications device can interpret information within the data packet and route the packet to the appropriate resource. If the logical unit addressed by the initiator does not have an available resource or data packet associated with it, the communications device may choose to treat the logical unit as an invalid logical unit (see 7.5.3) or respond as described in the previous paragraph.

If the communications device determines that an error or unusual condition has occurred while performing an operation specified by the contents of a data packet, the information describing the condition is normally returned

390

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resels.2016.08-03 20:34:04 UTC as a part of a data packet from another network device. If the communications device determines that an error or unusual condition has occurred while either executing the SCSI command from the initiator, or during a network medium access transaction, the command is terminated with a CHECK CONDITION. The failures are identified through a REQUEST SENSE command.

The SCSI communications device is distinguished from an SCSI processor device by the fact that the primary destination of the data packets transferred to the communications device is not the target device itself, but another network node. A SCSI communications device passes the data on to an ultimate destination outside the target through a network. In contrast, the SCSI processor device is itself the primary destination of the data packets. Devices requiring protocols and command sets that are totally incompatible with the communications device protocols should be examined carefully to be sure that the incompatibilities are based on functional requirements.

#### 18.1.1 Implementation examples

Several examples of communications device implementations are provided to clarify the range of utility of this device type.

### 18.1.1.1 Host-to-host communications

In this example of host to host communications, only the SEND MESSAGE command is used.

A communications device (comm A) is attached to a network (net A), and another communications device (comm B) is attached to a network (net B). Comm A takes the initiator role and selects a communications device (comm B), transmitting a packet to comm B using the SEND MESSAGE command. After transmitting the packet on the attached network medium (net B), the action required by the SEND MESSAGE command, comm B assumes the initiator mode and selects comm A as a communications device, and uses a SEND MESSAGE command to transmit a packet on the network (net A) attached to comm A.

Note 209 The SEND MESSAGE command is sufficient to perform complete transactions between communications devices if comm A and comm B act as initiators. This provides the function of a network bridge or gateway for high bandwidth intercommunication among nearby host processors.

### 18.1.1.2 Host-to-device communications

In this example of host to device communications, the SEND MESSAGE and GET MESSAGE commands are used.

A host system, host A, takes the initiator role and selects a communications device (comm A) attached to a network (net A), transmitting a packet on network net A to some other network node(s) using the SEND MESSAGE command to comm A. Host A then assumes that a result will be obtained by the other network node(s) consistent with rules understood by all involved network devices. Host A generates a GET MESSAGE command to obtain packets from other network nodes. If there are no packets that need handling pending at comm A, comm A may disconnect until a packet arrives. Comm A can then complete the transaction, reconnect to host A and the requested data packet can be returned to host A. Note that Host A need not support target mode and Comm A need not support initiator mode to successfully complete an exchange between the two devices. The host system (host A) can be replaced by a communications device that is capable of acting as an initiator.

# 18.1.1.3 Multiple role communications

In this example of multiple role communications, the SEND MESSAGE and GET MESSAGE commands are used. The device acts as both a host and a communications device, depending on its needs and the requests made in the network.

A communications device (comm A) is attached to a network (net A), and another communications device (comm B) is attached to a network (net B). Comm A takes the initiator role and selects a communications device (comm B). Comm A transmits a packet for network net B using the SEND MESSAGE command to comm B. Comm A then requests data packets from net B by issuing a GET MESSAGE command to the comm B device. Following these actions, comm B assumes the initiator role and transmits a packet using the SEND MESSAGE command to the comm B device. Following these actions, comm B assumes the initiator role and transmits a packet using the SEND MESSAGE command to comm A for transmission to network node(s) located on net A. Comm B then requests data packets from net A by issuing a GET MESSAGE command to comm A.

# 18.2 Command descriptions for communications devices

The commands for communications devices shall be as shown in table 354.

Command name	Operation code	Туре	Subclause				
CHANGE DEFINITION GET MESSAGE(6) GET MESSAGE(10) GET MESSAGE(12) INQUIRY LOG SELECT LOG SENSE MODE SELECT(6) MODE SELECT(10) MODE SENSE(6) MODE SENSE(6) MODE SENSE(10) READ BUFFER RECEIVE DIAGNOSTIC RESULTS REQUEST SENSE SEND DIAGNOSTIC SEND MESSAGE(6) SEND MESSAGE(10) SEND MESSAGE(12) TEST UNIT READY WRITE BUFFER	40h 08h 28h A8h 12h 4Ch 4Dh 15h 55h 1Ah 55h 1Ch 03h 1Ch 03h 1Ch 03h 1Dh 0Ah 2Ah AAh 00h 3Bh	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0	$\begin{array}{c} 8.2.1\\ 8.2.17\\ 18.2.2\\ 18.2.3\\ 8.2.5\\ 8.2.5\\ 8.2.6\\ 8.2.7\\ 8.2.8\\ 8.2.9\\ 8.2.11\\ 8.2.12\\ 8.2.13\\ 8.2.13\\ 8.2.15\\ 18.2.4\\ 18.2.5\\ 18.2.5\\ 18.2.6\\ 8.2.16\\ 8.2.17\end{array}$				
Key: M = command implementation is mandatory. 0 = command implementation is optional.							

Table 354 - Commands for communications devices

All other operation codes for communications devices are reserved for future standardization.

392

# 18.2.1 GET MESSAGE(6) command

The GET MESSAGE(6) command (see table 355) transfers data from the target to the initiator.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (O	8h)		
1	Logical unit number					Reserved		
2	(MSB)		<u></u>					
3				Allocati	on length			
4								(LSB)
5				Control				

Table 355 - GET MESSAGE(6) command

# 18.2.2 GET MESSAGE(10) command

The GET MESSAGE(10) command (see table 356) transfers data from the target to the initiator.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (2	8h)		
1	Logical	unit num	nber			Reserved		
2				Reserved				
3				Reserved				
4	(MSB)			0 <b>+</b>	election			
5				Stream S	etection			(LSB)
6				Reserved				
7	(MSB)			Allocation length				
8				ALLOCALI	on rength			(LSB)
9				Control	·			

# Table 356 - GET MESSAGE(10) command

The stream selection field specifies a further level of addressing for the data, so that it can be accessed by the target from the appropriate data stream.

## 18.2.3 GET MESSAGE(12) command

The GET MESSAGE(12) command (see table 357) transfers data from the target to the initiator.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	on code (A	8h)		
1	Logical	unit nu	mber			Reserved		
2		<u> </u>		Reserved				
3				Reserved				
4	(MSB)			Ctroop	election	· · · · · · · · · · · · · · · · · · ·		
5				Stream s	election			(LSB)
6	(MSB)							
7				A11000ti	on length.			
8				ATTOCACT	.on rength			
9								(LSB)
10				Reserved				
11				Control				

Table 357 - GET MESSAGE(12) command

The stream selection field specifies a further level of addressing for the data, so that it can be accessed by the target from the appropriate data stream.

## 18.2.4 SEND MESSAGE(6) command

The SEND MESSAGE(6) command (see table 358) transfers data from the initiator to the target.

Table 358 - SEND MESSAGE(6) command

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	n code (C	)Ah)		
1	Logical	unit num	ber			Reserved		
2	(MSB)							
З				Transfer	length			
4								(LSB)
5				Control				

The transfer length specifies the length in bytes of data that shall be sent during the DATA OUT phase. A transfe length of zero indicates that no data shall be sent. This condition shall not be considered an error.

# 18.2.5 SEND MESSAGE(10) command

The SEND MESSAGE(10) command (see table 359) transfers data from the initiator to the target.

Bit Byte	7	6	5	4	3	2	1	0
0				Operatio	on code (2	?Ah)		
1	Logical	unit num	ber			Reserved		
2				Reserved	1			
3				Reserved	1			
4	(MSB)			Ctnoom a	election			
5				Scream	Serection			(LSB)
6				Reserved	ł			
7	(MSB)			Transfer length				
8				i ransi er	Tengtu			(LSB)
9				Control				

Table 359 - SEND MESSAGE(10) command

The stream selection field specifies a further level of addressing for the data, so that it can be directed by the target to the appropriate data stream.

Please refer to the SEND MESSAGE(6) command for a description of the fields in this command.

# 18.2.6 SEND MESSAGE(12) command

The SEND MESSAGE(12) command (see table 360) transfers data from the initiator to the target.

								······
Bit Byte	7	6	5	4	3	2	1	0
0		······		Operatio	n code (	AAh)		
1	Logical	unit num	ber			Reserved		
2				Reserved				
3				Reserved				
4	(MSB)			0+=====	-1			
5				Stream s	election			(LSB)
6	(MSB)							
7				Transfor	longth			
8				Transfer	тепдти			
9								(LSB)
10				Reserved				
11				Control				

# Table 360 - SEND MESSAGE(12) command

The stream selection field specifies a further level of addressing for the data, so that it can be directed by the target to the appropriate data stream.

Please refer to the SEND MESSAGE(6) command for a description of the fields in this command.

# 18.3 Parameters for communication devices

### 18.3.1 Diagnostic parameters

This subclause defines the descriptors and pages for diagnostic parameters used with communication devices.

The diagnostic page codes for communication devices are defined in table 361.

Page Code	Description	Subclause
00h 01h - 3Fh 40h - 7Fh 80h - FFh	Supported log pages Reserved (for all device type pages) Reserved Vendor-specific pages	8.3.1.1

Table 361 - Diagnostic page codes

# 18.3.2 Log parameters

This subclause defines the descriptors and pages for log parameters used with communication devices.

The log page codes for communication devices are defined in table 362.

Page code	Description	Subclause
01h 02h 03h 05h 05h 07h 06h 00h 08h - 2Fh 30h - 3Eh 3Fh	Buffer over-run/under-run page Error counter page (write) page Error counter page (read) page Error counter page (read reverse) page Error counter page (verify) page Last n error events page Non-medium error page Supported log pages Reserved Vendor-specific pages Reserved	8.3.2.1 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.2 8.3.2.3 8.3.2.4 8.3.2.5

Table 362 - Log page codes

### 18.3.3 Mode parameters

This subclause defines the descriptors and pages for mode parameters used with communication devices.

The mode parameter list, including the mode parameter header and mode block descriptor, are defined in 8.3.3.

The medium-type code field is contained in the mode parameter header (see 8.3.3). This field is reserved for communications devices.

The device specific parameter field is contained in the mode parameter header (see 8.3.3). This field is reserved for communications devices.

The density code field is contained in the mode parameter block descriptor (see 8.3.3). This field is reserved for communications devices.

The mode page codes for communications devices are shown in table 363.

Page code	Description	Subclause
0Ah 02h 09h 01h 03h - 08h 0Bh - 1Fh 00h 20h - 3Eh 3Fh	Control mode page Disconnect-reconnect page Peripheral device page Reserved Reserved Vendor-specific (does not require page format) Vendor-specific (page format required) Return all pages (valid only for the MODE SENSE command)	8.3.3.1 8.3.3.2 8.3.3.3

Table 363 - Mode page codes

# 18.4 Definitions specific to communications devices

**18.4.1 communications device:** An SCSI device whose principal function is to communicate with one or more other systems, usually over distances that exceed the maximum cable length defined for SCSI.

**18.4.2 external medium**: The medium used by the communications device to send or receive information to or from one or more communications devices. The other communications devices may or may not use an SCSI interface.

**18.4.3 external protocol:** The protocol(s) used by the communications device to transfer information over the external medium. The external protocol(s) are not defined by this standard.

398

# Annex A

#### (informative)

# SCSI signal sequence example

This annex is included to provide an example of the signal sequencing of an I/O process that includes most of the SCSI bus phases (see figure 29). In this example, the target does not disconnect from the SCSI bus prior to completing the I/O process.

In a typical system, the computer's host adapter acts as the initiator and the peripheral device's controller acts as the target. In general, this standard does not attempt to distinguish between a computer and its host adapter. These functions may be separate or merged. The term initiator encompasses both. The term target refers to the controller portion of the peripheral device, which may be separate (bridge controller) from the peripheral device or merged with it (embedded controller). The term SCSI device refers to a device that may be connected to the SCSI bus. An SCSI device may act in the initiator role, the target role, or both roles.

The following notes apply to figure A.1.

### DATA BUS NOTES

- 1) DB(7) is the most significant bit.
- 2) DB(7) is the highest priority arbitration bit.
- 3) DB(P) is the data parity bit (odd). Parity is not valid during the ARBITRATION phase.

## **BUS PHASE NOTES**

- 1) **BUS FREE phase.** BUS FREE phase begins when the SEL and BSY signals are both continuously false for a bus settle delay. It ends when the BSY signal becomes true. (In the SCSI-1 single-initiator option, BUS FREE phase could also end when the SEL signal became true.)
- 2) **ARBITRATION phase.** This phase is documented as mandatory in SCSI-2. In SCSI-1, this phase was optional.

At least one bus free delay after first detecting BUS FREE phase, but no more than a bus set delay after the bus was last free, the initiator asserts the BSY signal and its assigned SCSI device ID bit on the DATA BUS. The initiator waits an arbitration delay, then examines the DATA BUS. If a higher priority SCSI device ID bit is true, the initiator loses arbitration and may release the BSY signal and its SCSI ID bit. Otherwise, the initiator wins arbitration and asserts the SEL signal. All SCSI devices must release the BSY signal and their SCSI ID bit within a bus clear delay after the SEL signal becomes true (even if they have not yet examined the DATA BUS). The winning SCSI device waits at least a bus clear delay plus a bus settle delay after asserting the SEL signal before changing any signals on the bus.

3) **SELECTION phase.** The I/O signal is false during this phase to distinguish it from the RESELECTION phase.

NON-ARBITRATING SYSTEMS (only permitted in SCSI-1): In such systems, the initiator waits at least a bus clear delay after detecting BUS FREE phase, then it asserts the target's SCSI ID bit and, optionally, the initiator's SCSI ID bit on the DATA BUS. After at least two deskew delays, the initiator asserts the SEL signal.

ARBITRATING SYSTEMS: In such systems, the SCSI device that won arbitration has both the BSY and SEL signals asserted. After at least a bus clear delay plus a bus settle delay, it places both the target's and the initiator's SCSI ID bits on the DATA BUS. At least two deskew delays later, it releases the BSY signal.

ALL SYSTEMS: The target determines that it is selected when the SEL signal and its SCSI ID bit are true and the BSY and I/O signals are false for at least a bus settle delay. The target then asserts the BSY signal within a selection abort time after it last determined that it was still being selected. (The target is not required to respond to a selection within a selection abort time; but it must ensure that it will not assert the BSY signal more than a selection abort time after the initiator aborts a selection attempt.)

At least two deskew delays after the initiator detects the BSY signal is true, it releases the SEL signal.

- 4) MESSAGE OUT phase. During this phase the initiator sends an IDENTIFY message to the target. The target asserts the C/D and MSG signals and negates the I/O signal for the message transfer. After detecting the assertion of the REQ signal, the initiator negates the ATN signal before asserting the ACK signal. (Refer to the handshake procedure for the command phase.)
- 5) **COMMAND phase.** The target asserts the C/D signal and negates the I/O and MSG signals for all of the bytes transferred during this phase. The direction of transfer is from the initiator to the target.

HANDSHAKE PROCEDURE: The target asserts the REQ signal. Upon detecting the REQ signal is true, the initiator drives the DATA BUS to the desired value, waits at least one deskew delay plus a cable skew delay and then asserts the ACK signal. The initiator continues to drive the DATA BUS until the REQ signal is false.

When the ACK signal is true at the target, the target reads the DATA BUS and then negates the REQ signal.

When the REQ signal becomes false at the initiator, the initiator may change or release the DATA BUS and negate the ACK signal.

The target may continue to request command bytes by asserting the REQ signal again. The number of command bytes is determined by the group code (most significant 3 bits) that is contained in the first command byte.

6) **DATA IN phase.** The target asserts the I/O signal and negates the C/D and MSG signal for all of the bytes transferred during this phase. The direction of transfer is from the target to the initiator.

HANDSHAKE PROCEDURE: The target first drives the DATA BUS to their desired values, waits at least one deskew delay plus a cable skew delay, and then asserts the REQ signal. The target continues to drive the DATA BUS until the ACK signal is true.

When the REQ signal is true at the initiator, the initiator reads the DATA BUS and then asserts the ACK signal.

When the ACK signal is true at the target, the target may change or release the DATA BUS and negate the REQ signal.


When the REQ signal is false at the initiator, the initiator negates the ACK signal. After the ACK signal is false, the target may continue the transfer by driving the DATA BUS and asserting the REQ signal as described above.

- 7) DATA OUT phase (not shown in the figure). The target negates the C/D, I/O, and MSG signals for all of the bytes transferred during this phase. The direction of transfer is from the initiator to the target. (Refer to the handshake procedure for the command phase.)
- 8) **STATUS phase.** The target asserts the C/D and I/O signals and negates the MSG signal for the byte transferred during this phase. The direction of transfer is from the target to the initiator. (Refer to the handshake procedure for the DATA IN phase.)

400

- 9) **MESSAGE IN phase.** The target asserts the C/D, I/O, and MSG signals during the byte transferred during this phase. Typically, a command COMPLETE message would be sent at this point. The direction of transfer is from the target to the initiator. (Refer to the handshake procedure for the DATA IN phase.)
- 10) **BUS FREE phase.** The target returns to BUS FREE phase by releasing the BSY signal. Both the target and the initiator release all bus signals within a bus clear delay after the BSY signal is continuously false for a bus settle delay.

,

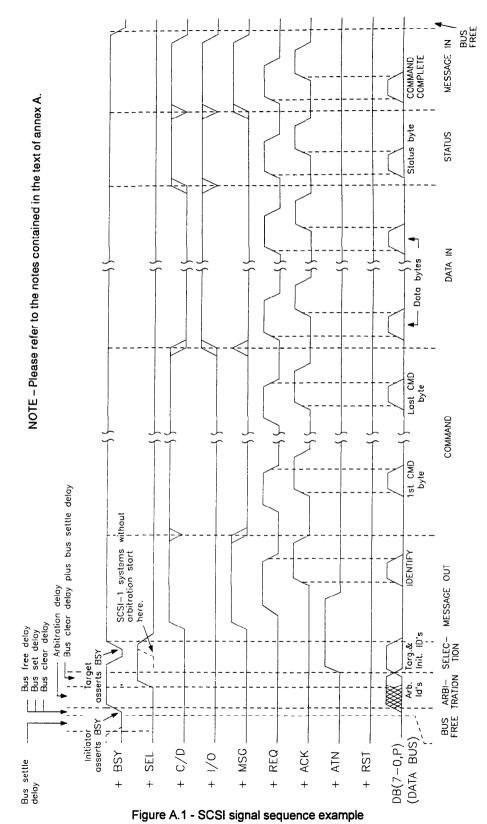

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC 41

402

# Annex B (informative)

### Fast SCSI skew time

This annex is included to explain the skew budget for the fast SCSI option which is defined in Clause 4.

Synchronous transfer rates using a transfer period between 100 ns and 200 ns are known as the fast SCSI option. Fast data transfer times have been tested using the following skew budget (see table B.1) with the differential alternative using transceivers with 25 m of 0,080 42 mm<sup>2</sup> (28 AWG) twisted pair cable as specified in 5.2.3. The transceivers were subjected to a maximum temperature difference of 25° C and a maximum of 200 mV of V<sup>CC</sup> difference.

•		
	Description	

Table B.1 - Fast SCSI jitter budget

Parameter label		Description	Jitter budget +/- ns
Transmitting Device	a b c d e	clock offset transmitting logic skew foil delay transmitter propogation delay skew foil delay	5 3 1 6 1
Connector Cable	f  g h i j	drop cable propogation delay external cable - skew between pairs distortion due to cable impedance distortion due to intersymbol interferance bias distortion	1 5 1 2 2
Connector Receiving Device	k l m n o	drop cable propogation delay foil delay receiver propogation delay skew foil delay logic setup/hold	1 1 9 1 5
		total jitter budget	44

Mapping the above jitter or skew budget to the SCSI format in 5.7 and 5.8 is done in Table B.2.

# Table B.2 - Mapping of jitter to SCSI

SCSI timing parameter	Calculation	Value (ns)
Fast cable skew delay Fast deskew delay Fast hold time Fast assertion period Fast negation period	g SUM(hn) o (note 2) (note 2)	5 20 (note 1) 10 (note 1) 30 30
Notes 1) Value is rounded up 2) The fast assertion period are derived mesurements and rep with a satisfactory	from isolated present a minir	pulse

The maximum driver skew allowed was 6 ns ( $t_{PLH}$  min. -  $t_{PHL}$  max.) and the maximum receiver skew tested was 9 ns ( $t_{PLH}$  min. -  $t_{PHL}$  max.). Values greater than these could be used if other numbers could be reduced -- the sum is what is important.

Fast data transfer timing parameters were not tested for the single-ended transceiver option prior to publication of this standard.

404

# Annex C

### (informative)

#### Other SCSI standardization activities

This annex provides information on other formal standardization activities related to SCSI.

# C.1 SCSI-3 standards projects

Accredited Standards Committee X3 has approved several SCSI-3 projects to enhance and restructure the SCSI-2 standard as shown in figure C.1. These projects (except fibre channel) are assigned to the X3T10 Technical Committee which developed this standard and the SCSI-1 standard. Please contact the Chairman of X3T10 for further information concerning these projects.

# C.2 Digital data exchange for color electronic prepress systems

Accredited Standards Committee IT8 has developed several standards pertaining to the exchange of digital data between color electronic prepress systems. These devices are used for high quality color printing. At least one of the IT8 projects involves transferring such data over SCSI. Please contact the Secretariat of IT8 for further information concerning their projects.

### C.3 Fibre channel

Accredited Standards Committee X3 has approved a project to develop a fibre optic channel physical layer for the Intelligent Peripheral Interface (IPI), SCSI, and the High Performance Parallel Interface (HIPPI). This project is assigned to the X3T11 Technical Committee. Please contact the Chairman of X3T11 for further information concerning this project.

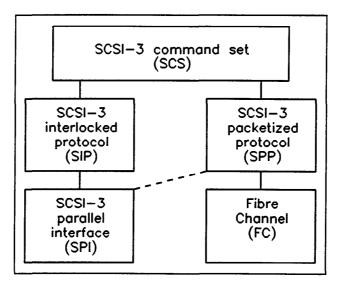


Figure C.1 - SCSI-3 standards structure

### Annex D

(informative)

# Numeric order codes

This annex contains SCSI-2 additional sense codes and operation codes in numeric order as a reference. In the event of a conflict with between the codes in this annex and the body of this standard, the codes in the body should be regarded as correct.

Table D.1 is a numerical order listing of the additional sense codes and the additional sense code qualifiers.

Table D.1	- ASC	and ASCQ	assignments
-----------	-------	----------	-------------

	T - SEQUENT L - PRINTE P - PROCE .W - WRIT .R - REA .S - SC O - C	ACCESS DEVICE TIAL ACCESS DEVICE ER DEVICE ESSOR DEVICE TE ONCE READ MULTIPLE DEVICE AD ONLY (CD-ROM) DEVICE CANNER DEVICE OFTICAL MEMORY DEVICE MEDIA CHANGER DEVICE - COMMUNICATION DEVICE
ASC ASCQ D	TLPWRSOMC	DESCRIPTION
00         01           00         02           00         03           00         04           00         05           00         06           00         11           00         12           00         13           00         14           00         15           01         00           03         00           03         01           03         02           04         01           04         02           04         04           05         00           06         00           07         00           08         01	V O VR OM TL W SO T TLPWRSOMC TLPWRSOMC TLPWRSOMC TL WRSOMC TL WRSOMC T WR O WR O WR O	NO ADDITIONAL SENSE INFORMATION FILEMARK DETECTED END-OF-PARTITION/MEDIUM DETECTED SETMARK DETECTED BEGINNING-OF-PARTITION/MEDIUM DETECTED END-OF-DATA DETECTED I/O PROCESS TERMINATED AUDIO PLAY OPERATION IN PROGRESS AUDIO PLAY OPERATION SUCCESSFULLY COMPLETED AUDIO PLAY OPERATION SUCCESSFULLY COMPLETED AUDIO PLAY OPERATION STOPPED DUE TO ERROR NO CURRENT AUDIO STATUS TO RETURN NO INDEX/SECTOR SIGNAL NO SEEK COMPLETE PERIPHERAL DEVICE WRITE FAULT NO WRITE CURRENT EXCESSIVE WRITE ERRORS LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE LOGICAL UNIT NOT READY, INITIALIZING COMMAND REQUIRED LOGICAL UNIT NOT READY, FORMAT IN PROGRESS LOGICAL UNIT NOT READY, FORMAT IN PROGRESS LOGICAL UNIT NOT READY, FORMAT IN PROGRESS LOGICAL UNIT DOES NOT RESPOND TO SELECTION REFERENCE POSITION FOUND MULTIPLE PERIPHERAL DEVICES SELECTED LOGICAL UNIT COMMUNICATION FAILURE LOGICAL UNIT COMMUNICATION FAILURE LOGICAL UNIT COMMUNICATION FAILURE FOCUS SERVO FAILURE FOCUS SERVO FAILURE FOCUS SERVO FAILURE

# Table D.1 (continued)

D - DIRECT ACCESS DEVICE .T - SEQUENTIAL ACCESS DEVICE . L - PRINTER DEVICE . P - PROCESSOR DEVICE	
W - WRITE ONCE READ MULTIPLE DEVICE	
R - READ ONLY (CD-ROM) DEVICE S - SCANNER DEVICE	
O - OPTICAL MEMORY DEVICE M - MEDIA CHANGER DEVICE	
C - COMMUNICATION DEVICE	
ASC ASCQ DTLPWRSOMC DESCRIPTION	
OA OO DTLPWRSOMC ERROR LOG OVERFLOW OB OO	
OC OO T S WRITE ERROR OC O1 D W O WRITE ERROR RECOVERED WITH AUTO OC O2 D W O WRITE ERROR - AUTO REALLOCATION OD OO OE OO	
0F 00 10 00 D W 0 ID CRC OR ECC ERROR 11 00 DT WRSO UNRECOVERED READ ERROR 11 01 DT W SO READ RETRIES EXHAUSTED	
11 02 DT W SO ERROR TOO LONG TO CORRECT 11 03 DT W SO MULTIPLE READ ERRORS	
11 04 D W O UNRECOVERED READ ERROR - AUTO R	EALLOCATÉ FAILED
11 05 WR O L-EC UNCORRECTABLE ERROR 11 06 WR O CIRC UNRECOVERED ERROR	
11 07 W O DATA RESYNCHRONIZATION ERROR	
11 09 T NO GAP FOUND 11 0A DT 0 MISCORRECTED ERROR	
11 OB D W O UNRECOVERED READ ERROR - RECOMM	
11 OC D W O UNRECOVERED READ ERROR - RECOMM 12 OO D W O ADDRESS MARK NOT FOUND FOR ID F	IELD
13 00 D W O ADDRESS MARK NOT FOUND FOR DATA 14 00 DTL WRSO RECORDED ENTITY NOT FOUND	FIELD
14 01 DT WR O RECORD NOT FOUND	
14 03 T END-OF-DATA NOT FOUND	
14 04 T BLOCK SEQUENCE ERROR 15 00 DTL WRSOM RANDOM POSITIONING ERROR	
15 01 DTL WRSOM MECHANICAL POSITIONING ERROR 15 02 DT WR 0 POSITIONING ERROR DETECTED BY R	FAD OF MEDIUM
16 00 DW O DATA SYNCHRONIZATION MARK ERROR	
17 00 DT WRSO RECOVERED DATA WITH NO ERROR CO 17 01 DT WRSO RECOVERED DATA WITH RETRIES	
17 02 DT WR O RECOVERED DATA WITH POSITIVE HE	
17 04 WR O RECOVERED DATA WITH RETRIES AND 17 05 D WR O RECOVERED DATA USING PREVIOUS SI	/OR CIRC APPLIED
17 06 D W O RECOVERED DATA WITHOUT ECC - DA	TA AUTO-REALLOCATED
17 07 D W O RECOVERED DATA WITHOUT ECC - REC 17 08 D W O RECOVERED DATA WITHOUT ECC - REC	COMMEND REWRITE
18 00 DT WR 0 RECOVERED DATA WITH ERROR CORREC 18 01 D WR 0 RECOVERED DATA WITH ERROR CORREC	
18 02 D WR O RECOVERED DATA - DATA AUTO-REALI 18 03 R RECOVERED DATA WITH CIRC	
18 04 R RECOVERED DATA WITH LEC	OTONMENT
18 05 D WR O RECOVERED DATA - RECOMMEND REAS 18 06 D WR O RECOVERED DATA - RECOMMEND REWR	

### Table D.1 (continued)

-		
	.T - SEQUEN .L - PRINT .P - PROC .W - WRI .R - RE .S - S 0 -	ACCESS DEVICE ITIAL ACCESS DEVICE ER DEVICE EESSOR DEVICE TE ONCE READ MULTIPLE DEVICE AD ONLY (CD-ROM) DEVICE ICANNER DEVICE OPTICAL MEMORY DEVICE MEDIA CHANGER DEVICE - COMMUNICATION DEVICE
ASC ASCQ	DTLPWRSOMC	DESCRIPTION
19       00         19       01         19       02         19       03         1A       00         1B       00         1C       01         1C       02         1D       00         1E       00         1E       00	D 0 D 0 D 0 DTLPWRSOMC DTLPWRSOMC D 0 D 0 D 0 D 0 D 0 D 0 D 0 D 0 D 0 D 0	DEFECT LIST ERROR DEFECT LIST NOT AVAILABLE DEFECT LIST ERROR IN PRIMARY LIST DEFECT LIST ERROR IN GROWN LIST PARAMETER LIST LENGTH ERROR SYNCHRONOUS DATA TRANSFER ERROR DEFECT LIST NOT FOUND PRIMARY DEFECT LIST NOT FOUND GROWN DEFECT LIST NOT FOUND MISCOMPARE DURING VERIFY OPERATION RECOVERED ID WITH ECC
1F 00 20 00 21 00 21 01 22 00	DTLPWRSOMC DT WR OM M D	INVALID COMMAND OPERATION CODE LOGICAL BLOCK ADDRESS OUT OF RANGE INVALID ELEMENT ADDRESS ILLEGAL FUNCTION (SHOULD USE 20 00, 24 00, OR 26 00)
23 00 24 00 25 00 26 01 26 02 26 03 27 00 28 00 28 01 29 00 2A 01 2A 01 2A 02 2B 00 2C 01 2C 02 2C 01 2C 02 2D 00 2E 00	DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLWRSOMC DTL WRSOMC DTL WRSOMC DTL WRSOMC DTL WRSOMC DTL WRSOMC S S T	INVALID FIELD IN CDB LOGICAL UNIT NOT SUPPORTED INVALID FIELD IN PARAMETER LIST PARAMETER NOT SUPPORTED PARAMETER VALUE INVALID THRESHOLD PARAMETERS NOT SUPPORTED WRITE PROTECTED NOT READY TO READY TRANSITION(MEDIUM MAY HAVE CHANGED) IMPORT OR EXPORT ELEMENT ACCESSED POWER ON, RESET, OR BUS DEVICE RESET OCCURRED PARAMETERS CHANGED LOG PARAMETERS CHANGED LOG PARAMETERS CHANGED COPY CANNOT EXECUTE SINCE HOST CANNOT DISCONNECT COMMAND SEQUENCE ERROR TOO MANY WINDOWS SPECIFIED INVALID COMBINATION OF WINDOWS SPECIFIED OVERWRITE ERROR ON UPDATE IN PLACE
2F 00 30 00 30 01 30 02 30 03 31 00 31 01 32 00 32 01 33 00 34 00 35 00	DTLPWRSOMC DT WR OM DT WR O DT WR O DT W O D U O D W O D W O T	COMMANDS CLEARED BY ANOTHER INITIATOR INCOMPATIBLE MEDIUM INSTALLED CANNOT READ MEDIUM - UNKNOWN FORMAT CANNOT READ MEDIUM - INCOMPATIBLE FORMAT CLEANING CARTRIDGE INSTALLED MEDIUM FORMAT CORRUPTED FORMAT COMMAND FAILED NO DEFECT SPARE LOCATION AVAILABLE DEFECT LIST UPDATE FAILURE TAPE LENGTH ERROR
36 00	L	RIBBON, INK, OR TONER FAILURE

· ·

# Table D.1 (continued)

l <del>i</del>		
	.T - SEQUEI .L - PRIN P - PRO .W - WR .R - RI .S - S O - . M	ACCESS DEVICE NTIAL ACCESS DEVICE TER DEVICE CESSOR DEVICE ITE ONCE READ MULTIPLE DEVICE EAD ONLY (CD-ROM) DEVICE SCANNER DEVICE OPTICAL MEMORY DEVICE - MEDIA CHANGER DEVICE - COMMUNICATION DEVICE
ASC ASCQ	DTLPWRSOMC	DESCRIPTION
37 00 38 00	DTL WRSOMC	ROUNDED PARAMETER
39         00           3A         00           3B         01           3B         02           3B         03           3B         04           3B         04           3B         06           3B         08           3B         08           3B         08           3B         08           3B         08           3B         08           3B         00           3B         00	DTL WRSOMC DTL WRSOM TL T L L L L L T S S S S S M M	SAVING PARAMETERS NOT SUPPORTED MEDIUM NOT PRESENT SEQUENTIAL POSITIONING ERROR TAPE POSITION ERROR AT BEGINNING-OF-MEDIUM TAPE POSITION ERROR AT END-OF-MEDIUM TAPE OR ELECTRONIC VERTICAL FORMS UNIT NOT READY SLEW FAILURE PAPER JAM FAILED TO SENSE TOP-OF-FORM REPOSITION ERROR READ PAST END OF MEDIUM READ PAST BEGINNING OF MEDIUM POSITION PAST EDO OF MEDIUM POSITION PAST BEGINNING OF MEDIUM MEDIUM DESTINATION ELEMENT FULL MEDIUM SOURCE ELEMENT EMPTY
3D       00         3E       00         3F       01         3F       02         3F       03         40       00         40       NN         41       00         42       00         43       00         44       00         45       00         47       00         48       00         48       00         44       00         45       00         46       00         47       00         48       00         44       00         45       00         46       00         47       00         48       00         44       00         45       00         46       00         47       00         48       00         40       00         40       00         40       00         40       00         40       00         40       00 <tr td="">         40</tr>	DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC D DTLPWRSOMC D D DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC DTLPWRSOMC	INVALID BITS IN IDENTIFY MESSAGE LOGICAL UNIT HAS NOT SELF-CONFIGURED YET TARGET OPERATING CONDITIONS HAVE CHANGED MICROCODE HAS BEEN CHANGED CHANGED OPERATING DEFINITION INQUIRY DATA HAS CHANGED RAM FAILURE (SHOULD USE 40 NN) DIAGNOSTIC FAILURE ON COMPONENT NN (80H-FFH) DATA PATH FAILURE (SHOULD USE 40 NN) POWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN) MESSAGE ERROR INTERNAL TARGET FAILURE SELECT OR RESELECT FAILURE UNSUCCESSFUL SOFT RESET SCSI PARITY ERROR INITIATOR DETECTED ERROR MESSAGE RECEIVED INVALID MESSAGE ERROR COMMAND PHASE ERROR DATA PHASE ERROR LOGICAL UNIT FAILED SELF-CONFIGURATION OVERLAPPED COMMANDS ATTEMPTED
4F 00 50 00 50 01 50 02 51 00 52 00	T T T T O T	WRITE APPEND ERROR WRITE APPEND POSITION ERROR POSITION ERROR RELATED TO TIMING ERASE FAILURE CARTRIDGE FAULT

# Table D.1 (continued)

 (continue)	ч <i>)</i>	
	.T - SEQUEN .L - PRINT .P - PROC .W - WRI .R - RE .S - S O - M -	ACCESS DEVICE ITIAL ACCESS DEVICE ER DEVICE ESSOR DEVICE TE ONCE READ MULTIPLE DEVICE AD ONLY (CD-ROM) DEVICE CANNER DEVICE OPTICAL MEMORY DEVICE MEDIA CHANGER DEVICE - COMMUNICATION DEVICE
ASC ASCQ	DTLPWRSOMC	DESCRIPTION
53 00 53 01 53 02 54 00 55 00	DTL WRSOM T DT WR OM P P	MEDIA LOAD OR EJECT FAILED UNLOAD TAPE FAILURE MEDIUM REMOVAL PREVENTED SCSI TO HOST SYSTEM INTERFACE FAILURE SYSTEM RESOURCE FAILURE
56       00         57       00         58       00         59       50         5A       01         5A       03         5B       02         5B       01         5B       02         5B       02         5C       01         5C       02         5C       02         5D       00         5C       02         5D       00         5C       02         5D       00	R O DTLPWRSOM DT WR OM DT W O DT W O DTLPWRSOM DTLPWRSOM DTLPWRSOM D O D O D O D O D O	UNABLE TO RECOVER TABLE-OF-CONTENTS GENERATION DOES NOT EXIST UPDATED BLOCK READ OPERATOR REQUEST OR STATE CHANGE INPUT (UNSPECIFIED) OPERATOR MEDIUM REMOVAL REQUEST OPERATOR SELECTED WRITE PROTECT OPERATOR SELECTED WRITE PERMIT LOG EXCEPTION THRESHOLD CONDITION MET LOG COUNTER AT MAXIMUM LOG LIST CODES EXHAUSTED RPL STATUS CHANGE SPINDLES SYNCHRONIZED SPINDLES NOT SYNCHRONIZED
5E         00           60         00           61         01           61         02           62         00           63         00           64         00           65         00           66         00           67         00           68         00           68         00           68         00           68         00           68         00           66         00           67         00           68         00           67         00           68         00           67         00           68         00           69         00           60         60           60         60           61         00           62         00           64         00	S S S S S R R	LAMP FAILURE VIDEO ACQUISITION ERROR UNABLE TO ACQUIRE VIDEO OUT OF FOCUS SCAN HEAD POSITIONING ERROR END OF USER AREA ENCOUNTERED ON THIS TRACK ILLEGAL MODE FOR THIS TRACK

; \*

Table D.1 (concluded)

D - DIRECT ACCESS DEVICE .T - SEQUENTIAL ACCESS DEVICE . L - PRINTER DEVICE . P - PROCESSOR DEVICE W - WRITE ONCE READ MULTIPLE DEVICE R - READ ONLY (CD-ROM) DEVICE S - SCANNER DEVICE O - OPTICAL MEMORY DEVICE M - MEDIA CHANGER DEVICE C - COMMUNICATION DEVICE
ASC ASCQ DTLPWRSOMC DESCRIPTION
70       00         71       00         72       00         73       00         74       00         75       00         76       00         77       00         78       00         79       00         7A       00         7B       00         7F       00         7F       00
80 xxh \ THROUGH > Vendor-specific. FF xxh /
xxh 80 \ THROUGH > Vendor-specific QUALIFICATION OF STANDARD ASC. xxh FF /
ALL CODES NOT SHOWN OR BLANK ARE RESERVED.

Table D.2 is a numerical order listing of the command operation codes.

Table D.2 - SCSI-2 Operation Codes

D - DIRECT ACCESS DEVICE       Device column         .T - SEQUENTIAL ACCESS DEVICE       M = Mandatory         .L - PRINTER DEVICE       0 = Optional         .P - PROCESSOR DEVICE       V = Vendor-sp         .W - WRITE ONCE READ MULTIPLE DEVICE       R = Reserved         .R - READ ONLY (CD-ROM) DEVICE       R = Reserved         .O - OPTICAL MEMORY DEVICE       .O - OPTICAL MEMORY DEVICE         .O - OPTICAL MEMORY DEVICE       .O - OPTICAL MEMORY DEVICE         .O - OPTICAL MEMORY DEVICE       .O - COMMUNICATION DEVICE         .O - OPTLPWRSOMC Description       .OO MMMMMMMMM TEST UNIT READY         01 M       REWIND         01 0 V 00 00 REZERO UNIT       .OZ VVVVV V         03 MMMMMMMMM REQUEST SENSE       .O4 O FORMAT         04 M       O FORMAT UNIT         05 VMVVV V       READ BLOCK LIMITS         06 VVVVV V	/
00 MMMMMMMMM TEST UNIT READY 01 M REWIND 01 0 V 00 00 REZERO UNIT 02 VVVVV V 03 MMMMMMMMM REQUEST SENSE 04 0 FORMAT 04 M 0 FORMAT UNIT 05 VMVVVV V READ BLOCK LIMITS	
01 M REWIND 01 0 V 00 00 REZERO UNIT 02 VVVVV V 03 MMMMMMMM REQUEST SENSE 04 0 FORMAT 04 M 0 FORMAT UNIT 05 VMVVVV V READ BLOCK LIMITS	
07       0       INITIALIZE ELEMENT STATUS         07       0VV 0       0V       REASSIGN BLOCKS         08       M       GET MESSAGE(06)         08       0       RECEIVE         09       VVVVV V       PRINT         0A       M       SEND MESSAGE(06)         0A       M       SEND(06)         0A       M       SEND(06)         0A       M       SEND(06)         0B       0       OV         0B       0       OV         0B       0       OV         0B       0       OV         0C       VVVVV         0D       VVVVV         0D       VVVVV         0F       VVVVV         0A       SPACE         12       MMMMMMMMIMI INQUIRY         13       VOVVV         14       VO	
18 00000000 COPY 19 VMVVVV ERASE 1A OMO 000000 MODE SENSE(06) 1B 0 LOAD UNLOAD 1B 0 SCAN 1B 0 STOP PRINT 1B 0 STOP START UNIT	

# Table D.2 (continued)

,

.T - SEQUEN . L - PRINT . P - PROC . W - WRI . R - RE . S - S O - M - C	ACCESS DEVICE ITIAL ACCESS DEVICE ER DEVICE ESSOR DEVICE TE ONCE READ MULTIPLE DEVICE AD ONLY (CD-ROM) DEVICE CANNER DEVICE OPTICAL MEMORY DEVICE - MEDIA CHANGER DEVICE - COMMUNICATION DEVICE	Device column key M = Mandatory O = Optional V = Vendor-specific R = Reserved
OP DTLPWRSOMC	Description	
1D MMMMMMMMM 1E 00 00 00	RECEIVE DIAGNOSTIC RESULTS SEND DIAGNOSTIC PREVENT ALLOW MEDIUM REMOVAL	
$\begin{array}{cccccccccccccccccccccccccccccccccccc$		

# Table D.2 (continued)

.т	- SEQUEN - PRINT P - PROC .W - WRJ .R - RE . S - S O -	ACCESS DEVICE ITIAL ACCESS DEVICE ER DEVICE ESSOR DEVICE TE ONCE READ MULTIPLE DEVICE AD ONLY (CD-ROM) DEVICE CANNER DEVICE OPTICAL MEMORY DEVICE MEDIA CHANGER DEVICE - COMMUNICATION DEVICE	Device column key M = Mandatory O = Optional V = Vendor-specific R = Reserved
	PWRSOMC	Description	
40 000 41 0 42 43 44 45 46	0	CHANGE DEFINITION WRITE SAME READ SUB-CHANNEL READ TOC READ HEADER PLAY AUDIO(10)	
47 48 49 4A	0 0 0	PLAY AUDIO MSF PLAY AUDIO TRACK INDEX PLAY TRACK RELATIVE(10)	
4B 4C 000	0000000	PAUSE RESUME LOG SELECT LOG SENSE	
	000000	MODE SELECT(10)	
	000000	MODE SENSE(10)	

Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

# Table D.2 (concluded)

I			
.T - SE . L - F . P - W - W - S	EQUE PRIN PRO WR NR NR N N N C	ACCESS DEVICE NTIAL ACCESS DEVICE TER DEVICE CESSOR DEVICE ITE ONCE READ MULTIPLE DEVICE EAD ONLY (CD-ROM) DEVICE SCANNER DEVICE OPTICAL MEMORY DEVICE - MEDIA CHANGER DEVICE - COMMUNICATION DEVICE Description	Device column key M = Mandatory O = Optional V = Vendor-specific R = Reserved
A0 A1 A2 A3 A4		I	
A5	М	MOVE MEDIUM	
A5 0	0	PLAY AUDIO(12) EXCHANGE MEDIUM	
A6 A7	0	EXCHANGE MEDIUM	
A8	0	GET MESSAGE(12)	
A8 00	0	READ(12)	
A9 0	~	PLAY TRACK RELATIVE(12)	
AA AA O	0	SEND MESSAGE(12) WRITE(12)	
	0	WHITE(12)	
AC	0	ERASE(12)	
AD			
AE O		WRITE AND VERIFY(12)	
AF 00 B0 00	-	VERIFY(12) SEARCH DATA HIGH(12)	
B0 00 B1 00		SEARCH DATA EQUAL(12)	
B2 00		SEARCH DATA LOW(12)	
B3 00	0	SET LIMITS(12)	
B4 B5			
85 85 86	0	REQUEST VOLUME ELEMENT ADDRESS	
B6	0	SEND VOLUME TAG	
	0	READ DEFECT DATA(12)	
B8 B8	0	READ ELEMENT STATUS	
B0 B9	0	HEAD EELMENT STATUS	
BA			
BB			
BC			
BD BE			
BF			
L			

, ÷

# Annex E

(informative)

# Vendor identification

This annex contains the list of SCSI-2 vendor identifications (see table E.1) as of the date of this document. The purpose of this list is to help avoid redundant usage of vendor identifications. Technical Committee X3T10 of Accredited Standards Committee X3 maintains an informal list of vendor identifications currently in use. Please contact the chairman of X3T10 prior to using a new vendor identification to avoid conflicts.

Table E	.1	<ul> <li>Vendor</li> </ul>	identification	list
---------	----	----------------------------	----------------	------

ID	Organization
3M ACL ADAPTEC ADSI AMCODYNE ANAMATIC ANCOT ANRITSU APPLE ARCHIVE ASACA ASTE ASTE ASTE ASTE ATARI ATARI ATARI ATARI ATARI ATTO ATX AVR BALLARD BERGSWD BEZIER BULL CalComp CALIPER CAST CDC CDP CHEROKEE CHINON CIE&YED CIPHER	3M Company Automated Cartridge Librarys, Inc. Adaptec Adaptive Data Systems, Inc. (a Western Digital subsidiary) Amcodyne Anamartic Limited (England) ANCOT Corp. Anritsu Corporation Apple Computer, Inc. Archive ASACA Corporation Aspen Peripherals AST Research Alcatel STK A/S AT&T Atari Corporation ATTO Technology Inc. Alphatronix Advanced Vision Research Ballard Synergy Corp. Berg Software Design Bezier Systems, Inc. Bull Peripherals Corp. CalComp, A Lockheed Company Caliper (California Peripheral Corp.) Advanced Storage Tech Control Data or MPI Columbia Data Products Cherokee Data Systems Chinon YE Data, C.Itoh Electric Corp. Cipher Data Products

Table E.1 - (continued)

ID	Organization
Ciprico	Ciprico, Inc.
CMD	CMD Technology
CNGR SFW COGITO	Congruent Software, Inc. Cogito
COMPORT	Comport Corp.
COMPSIG	Computer Signal Corporation
CONNER	Conner Peripherals
CPU TECH	CPU Technology, Inc
CREO	CREO Products Inc.
CROSFLD	Crosfield Electronics
CSM, INC	Computer SM, Inc.
DATABOOK	Cygnet Systems, Inc. Databook, Inc.
DATACOPY	Datacopy Corp.
DATAPT	Datapoint Corp.
DEC	Digital Equipment
DELPHI	Delphi Data Div. of Sparks Industries, Inc.
DENON	Denon/Nippon Columbia
DEST DGC	DEST Corp. Data General Corp.
DIGIDATA	Digi-Data Corporation
DILOG	Distributed Logic Corp.
DISC	Document Imaging Systems Corp.
DPT	Distributed Processing Technology
DSM	Deterner Steuerungs- und Maschinenbau GmbH & Co.
	Data Technology Qume
DXIMAGIN EMULEX	DX Imaging Emulex
EPSON	Epson
EXABYTE	Exabyte Corp.
FILENET	FileNet Corp.
FUJI	Fuji Electric Co., Ltd. (Japan)
	Fujitsu
FUTURED Gen Dyn	General Dynamics
GIGATAPE	GIGATAPE GmbH
GIGATRND	GigaTrend Incorporated
Goidelic	Goidelic Precision, Inc.
GOULD	Gould
HITACHI	Hitachi America Ltd or Nissei Sangyo America Ltd
HONEYWEL HP	Honeywell Inc. Hewlett Packard
IBM	International Business Machines
ICL	ICL
IDE	International Data Engineering, Inc.
IGR	Intergraph Corp.
IMPLTD	Integrated Micro Products Ltd.
IMPRIMIS INSITE	Imprimis Technology Inc. Insite Peripherals
INSTE	I/O Concepts, Inc.
IOMEGA	Iomega

Table E.1 - (continued)

ID	Organization
ISi	Information Storage inc.
ĪTC	International Tapetronics Corporation
JVC	JVC Information Products Co.
KENNEDY	Kennedy Company
KODAK	Eastman Kodak
KONAN	Konan
KONICA	Konica Japan
LAPINE	Lapine Technology
LASERDRV	LaserDrive Limited
LASERGR	Lasergraphics, Inc.
LMS	Laser Magnetic Storage International Company
MATSHITA	Matsushita
MAXTOR	Maxtor Corp.
MaxOptix	Maxoptix Corp.
MDI	Micro Design International, Inc.
MELA	Mitsubishi Electronics America
MELCO	Mitsubishi Electric (Japan)
MEMREL	Memrel Corporation
MEMTECH	MemTech Technology
MICROBTX	Microbotics Inc.
MICROP	Micropolis
MICROTEK	Microtek Storage Corp
MINSCRIB	Miniscribe NITCUNT Flootnic Co. 154
MITSUMI	MITSUMI Electric Co., Ltd.
MOTOROLA	Motorola Manufactor Technologica Inc.
MST	Morning Star Technologies, Inc. North Atlantic Industries
NAI	National Instruments
NatInst NatSemi	National Semiconductor Corp.
NCL	NCL America
NCR	NCR Corporation
NEC	NEC
NISCA	NISCA Inc.
NKK	NKK Corp.
NT	Northern Telecom
OCE	Oce Graphics
OMI	Optical Media International
OMNIS	OMNIS Company (FRANCE)
OPTIMEM	Cipher/Optimem
OPTOTECH	Optotech
ORCA	Orca Technology
OSI	Optical Storage International
OTL	OTL Engineering
PASCOsci	Pasco Scientific
PERTEC	Pertec Peripherals Corporation
PFTI	Performance Technology Inc.
PIONEER	Pioneer Electronic Corp.
PRAIRIE	PrairieTek BroSoft Architocts
PRESOFT	PreSoft Architects Preston Scientific
PRESTON PRIAM	Preston Scientific Priam
PRIMAGEX	Primagraphics Ltd

Table E.1 - (concluded)

ID	Organization
PTI	Peripheral Technology Inc.
QUALSTAR	Qualstar
QUANTEL	Quantel Ltd.
QUANTUM	Quantum Corp.
R-BYTE	R-Byte Inc.
RACALREC	Racal Recorders
RADSTONE	Radstone Technology
RGI	Raster Graphics, Inc.
RICOH	Ricoh
RODIME	Rodime
RTI	Reference Technology
SANKYO	Sankyo Seiki
SANYO	SANYÒ Electric Co., Ltd.
SCREEN	Dainippon Screen Mfg. Co., Ltd. Secondo
SEAGATE SEQUOIA	Seagate Sequoia Advanced Technologies, Inc.
Shinko	Shinko Electric Co., Ltd.
SIEMENS	Siemens
SII	Seiko Instruments Inc.
SMS	Scientific Micro Systems/OMTI
SNYSIDE	Sunnyside Computing Inc.
SONIC	Sonic Solutions
SONY	Sony Corporation Japan
SPECTRA	Spectra Logic, a Division of Western Automation Labs, Inc.
SPERRY	Sperry ( <u>n</u> ow Unisys Corp.)
STK	Storage Technology_Corporation
SUMITOMO	Sumitomo Electric Industries, Ltd.
SUN	Sun Microsystems, Inc.
SyQuest	SyQuest Technology, Inc.
SYSGEN	Sysgen Thermetitten England
T-MITTON TALARIS	Transmitton England Talaris Systems, Inc.
TALLGRAS	Tallgrass Technologies
TANDBERG	Tandberg Data A/S
TANDON	Tandon
TEAC	TEAC Japan
TECOLOTE	Techolote Designs
TEGRA	Tegra Varityper
Tek	Tektronix
TI-DSG	Texas Instruments
TOSHIBA	Toshiba Japan
ULTRA	UltraStor Corporation
UNISYS	Unisys
USDC VERBATIM	US Design Corp.
VERBAILM	Verbatim Corporation Vermont Research Corp.
WangDAT	WangDAT
WANGTEK	Wangtek
WDIGTL	Western Digital
WEARNES	Wearnes Technology Corporation
XEBEC	Xebec Corporation

# Index

3rdPtv bit	
ABORT 3, 35, 37, 39, 41,	
ABORT TAG	
absolute CD-ROM address field	
access bit	
active format field	
active I/O process	
active notch field	
active partition field	
actual retry count field	
additional length field	
additional partitions defined field	
additional sense code field	
additional sense code qualifier	
ADDRESS MARK NOT FOUND FOR DATA FIELD	
ADDRESS MARK NOT FOUND FOR ID FIELD	
address to translate field	
ADR field	
advanced scan algorithm	
AEN	
AENC bit	
AFC	,
allocation length . 64, 68-70, 87, 96, 99, 103, 104, 106, 109-113,	
	325, 345, 346, 368, 369, 371, 376, 377, 393, 394
allocation length field	
alternate sector	
alternate sectors per zone field	
alternate track	
alternate tracks per logical unit field	
alternate tracks per logical unit field	
alternate tracks per logical unit field	
alternate tracks per logical unit field	204 202-204 
alternate tracks per logical unit field	204 202-204 362, 371-375, 382 371 193
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit	204 202-204 362, 371-375, 382 371 193 194
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field	204 202-204 362, 371-375, 382 371 193 194 87, 98
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         arbitration delay	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399
alternate tracks per logical unit field	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399 32, 33, 35, 36, 39-41, 56, 81, 399
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         arbitration delay	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399 32, 33, 35, 36, 39-41, 56, 81, 399
alternate tracks per logical unit field	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399 32, 33, 35, 36, 39-41, 56, 81, 399 208
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         arbitration delay         ARBITRATION phase         ARRE bit	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         arbitration delay         ARBITRATION phase         ARRE bit         ASA	204 202-204 362, 371-375, 382 371 193 194 87, 98 309, 310 xxx, 34, 35, 40, 399 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 xvii, xxiii, 98, 115, 121-124, 126, 406-411
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII Implemented Operating Definition Page	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208 342, 343 208 208 208 208 208 208 208 208 209 209 209 209 209 209 209 209 209 209
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII information field	204 202-204 362, 371-375, 382 371 193 193 87, 98 309, 310 208 87, 98 309, 310 208 208 208 208 208 208 208 208 208 20
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field	204 202-204 362, 371-375, 382 371 371 371 393 393 394 309, 310 309, 310 309, 310 32, 33, 35, 36, 39-41, 56, 81, 399 342, 343 342, 343 343 344, 345 346, 406-411 346 346 346 347 346 347 347 347 347 347 347 347 347 347 347
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII information field	204 202-204 362, 371-375, 382 371 371 371 393 393 394 309, 310 309, 310 309, 310 32, 33, 35, 36, 39-41, 56, 81, 399 342, 343 342, 343 343 344, 345 346, 406-411 346 346 346 347 346 347 347 347 347 347 347 347 347 347 347
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field         ASCQ	204 202-204 362, 371-375, 382 371 371 371 371 393 393 394 309, 310 309, 310 32, 33, 35, 36, 39-41, 56, 81, 399 342, 343 342, 343 343 342, 343 342, 343 344, 344 344, 345 346, 406-411 346 345 346, 346, 406-411 346 345 346, 346, 346, 346, 346, 346, 346, 346,
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII information field         ASCII operating definition description data field         ASCQ         assertion period	204 202-204 362, 371-375, 382 371 371 371 371 371 371 371 371 371 371
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification	204 202-204 362, 371-375, 382 371 371 371 371 393 393 394 309, 310 309, 310 309, 310 32, 33, 35, 36, 39-41, 56, 81, 399 342, 343 342, 343 343, 35, 37, 43, 44, 403 58, 76-78, 99, 117, 136, 140-142, 223, 226, 274
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 205 194 194 87, 98 309, 310 205 309, 310 205 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 208 208 208 208 208 208 208 208 208
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII information field         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification         xxx, 5, 26, 53, attention condition	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 309, 310 208 309, 310 208 208 208 208 208 208 208 208 208 20
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII information field         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification         xxx, 5, 26, 53, attention condition         AUDIO PLAY OPERATION IN PROGRESS	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 267 144, 145 146 145 267 144, 145 146 267 267 267 267 267 267 267 267 267 26
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification         xxx, 5, 26, 53, attention condition         AUDIO PLAY OPERATION IN PROGRESS         AUDIO PLAY OPERATION PAUSED	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 309, 310 208 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 267 144, 145 146 145 267 244 267 244 34, 35, 37, 43, 44, 403 58, 76-78, 99, 117, 136, 140-142, 223, 226, 274 96, 102, 104, 119, 129, 133, 139, 141, 176, 215, 237, 248 121, 299, 406
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASC         ASCII forms control         ASCII information field         ASCQ         assertion period         asynchronous event notification         asynchronous event notification         XXX, 5, 26, 53, attention condition         AUDIO PLAY OPERATION IN PROGRESS         AUDIO PLAY OPERATION STOPPED DUE TO ERROR	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 267 144, 145 267 144, 145 267 144, 145 267 267 267 267 267 267 267 267 267 267
alternate tracks per logical unit field         alternate tracks per zone         alternate volume tag         alternate volume tag information field         ALTSEC bit         ALTRK bit         ANSI-approved version field         APRVal         arbitration delay         ARBITRATION phase         ASA         ASC         ASCII forms control         ASCII implemented Operating Definition Page         ASCII operating definition description data field         ASCQ         assertion period         asynchronous event notification         xxx, 5, 26, 53, attention condition         AUDIO PLAY OPERATION IN PROGRESS         AUDIO PLAY OPERATION PAUSED	204 202-204 362, 371-375, 382 371 193 193 194 87, 98 309, 310 208 309, 310 208 32, 33, 35, 36, 39-41, 56, 81, 399 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 208 342, 343 267 144, 145 267 144, 145 267 144, 145 267 267 267 267 267 267 267 267 267 267

audio playback rate valid	
audio status field	
auto bit	264 26
autoro	26
automatic read reallocation	20
automatic velocity control	
automatic velocity control	
available data buffer field	
AVC	250, 25
AVolTag	
AWG	5, 8, 40
AWRE bit	
basic measurement unit field	
baud rate field	
beginning of partition	
BEGINNING-OF-PARTITION/MEDIUM DETECTED	
BIS	
bit ordering field	
bit pointer field	۱۱ ، · · · · · · · · · · · · · · · · · ·
bits per character field	27
bits per pixel field	32
BLANK CHECK	277 286 287 289 308 339 347 350 35
blank verify	
BikVfy	
block address type	
block descriptor xviii, 104, 105, 107, 115, 137-139, 150, 194, 195, 2	230, 243, 246, 247, 263, 264, 281, 307, 308
	318 310 331 333 335 355 356 384 30
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39 
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39 137, 13 9
block descriptor length block device logical block address field block device number of blocks field	318, 319, 331, 333, 335, 355, 356, 384, 39 137, 13 9 9
block descriptor length block device logical block address field block device number of blocks field block identifiers supported	318, 319, 331, 333, 335, 355, 356, 384, 39 
block descriptor length block device logical block address field block device number of blocks field block identifiers supported block length field	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length block device logical block address field block device number of blocks field block identifiers supported block length field block length in bytes	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39         137, 13         9         9         93, 115, 139, 23         170, 230, 24         121, 40         221-225, 233, 23         23, 23         111         2221-225, 233, 23         111         2229, 23         110, 111, 12         111
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39         137, 13         9         93, 115, 139, 23         170, 230, 24         121, 40         221-225, 233, 23         23, 23, 23         111         221-225, 233, 23         111         121, 40         221-225, 233, 23         111 <t< td=""></t<>
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39
block descriptor length	318, 319, 331, 333, 335, 355, 356, 384, 39

3USY status	39(
BytChk bit	35∠
byte check	35∠
byte count of descriptor data available field	371
byte count of report available field	365
byte transfer length field	190
C/D bit	116
cable skew delay	405
Caching Page	357
CAF	
CANNOT READ MEDIUM - INCOMPATIBLE FORMAT	
CANNOT READ MEDIUM - INCOMPATIBLE FORMAT	
CARTRIDGE FAULT	
zat bit xvii, 89, 92,	
ause field	
CD-ROM Audio Control Page	
CD-ROM devices	
CD-ROM Page	
hange active format	251
change active partition	250
CHANGE DEFINITION command	
hange partition	
CHANGED OPERATING DEFINITION	
channel bit	
hannel volume control	
CHECK CONDITION status 3, 45, 47, 49, 57, 67, 71, 75-77, 83, 85, 88, 90-93, 95, 96, 100-105, 107, 108, 1	10
111, 113, 116-118, 125, 126, 128, 130, 131, 133, 134, 136, 139, 143, 151, 154, 158, 159, 161, 162, 1	
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2	31,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2 235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3	31, 39,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2 235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3 343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3	31, 39, 390
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2 235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3 343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3 CIRC UNRECOVERED ERROR	31, 39, 390 407
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2 235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3 343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3 CIRC UNRECOVERED ERROR	31, 39, 390 407 408
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2 235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3 343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3 CIRC UNRECOVERED ERROR	31, 39, 390 407 408 80
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         3, 39, 52, 53, 55, 56, 71, 75, blear to send	31, 39, 390 407 408 80 270
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         3, 39, 52, 53, 55, 56, 71, 75, 91         Stear to send         CompLst bit	31, 39, 390 407 408 80 270 161
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         343, 347, 100, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2	31, 39, 390 407 408 80 270 161 46,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         3, 39, 52, 53, 55, 56, 71, 75, 91         Stear to send         CompLst bit	31, 39, 390 407 408 80 270 161 46,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 91ear to send         CompLst bit       159-1         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 356         command code       69,	31, 39, 390 407 408 80 270 161 46, 397 70
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 355, 356, 368, 371, 372, 377, 381, 384, 350, 350, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 350, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 350, 355, 356, 368, 371, 372, 377, 381, 384, 350, 351, 350, 355, 356, 368, 371, 372, 377, 381, 384, 350, 350, 350, 355, 356, 368, 371, 372, 377, 381, 384, 350, 350, 355,	31, 39, 390 407 408 80 270 161 46, 397 70
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 91ear to send         CompLst bit       159-1         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 356         command code       69,	31, 39, 390 407 408 80 270 161 46, 397 70 401
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         121, 4         CLEANING CARTRIDGE INSTALLED         121, 4         CLEAR QUEUE         339, 52, 53, 55, 56, 71, 75, 91         159-1 <td>31, 39, 390 407 408 80 270 161 46, 397 70 401 298</td>	31, 39, 390 407 408 80 270 161 46, 397 70 401 298
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 90         CompLst bit       159-1         Code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69,         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command data       116, 2         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1	31, 39, 390 407 408 80 270 161 46, 397 70 401 298 31,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 94         CompLst bit       159-1         Code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69,         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command data       116, 2         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 3	31, 39, 390 407 408 80 270 161 46, 397 70 401 298 31, 369
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 50         CorpLst bit       159-1         CorpLst bit       159-1         CorpLst bit       159-1         CorpLst bit       159-1         Corplust bit       159-1         CorpLst bit       159-1         Corplust bit       169, 200, 20, 203, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 32         Corplust bit       169, 200, 203, 247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 32         Corplust bit       169, 203, 203, 247, 273, 78, 81, 87, 42         Corplust bit       160	31, 39, 390, 407, 408, 270, 161, 46, 70, 401, 298, 31, 369, 409, 409, 409, 409, 409, 409, 409, 40
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 4         CompLst bit       159-1         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69,         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command descriptor block       xviii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 5         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         COMMAND PHASE ERROR       121, 4	31, 39, 390 399, 390 407 408 80 270 161 46, 397 70 401 298 31, 369 409 409
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 94         CompLst bit       159-1         CompLst bit       159-1         CompLst bit       159-1         CompLst bit       159-1         Command code       69, 247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 32         Command data       116, 2         Command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 32         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 42         Command queue       3, 4, 61, 64, 72, 78	31, 39, 3907 407 408 270 407 408 270 161, 397 401 298 31, 98 409 409 409 -81
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 94         Ichear to send       159-1         CompLst bit       159-1         Icode field       247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         Command code       69, 200, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         Command data       116, 2         Icommand data       116, 2         Icommand descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         Icommand descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         Icommand descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         Icommand descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         Icommand descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         Icommand gueue <td< td=""><td>31, 39, 3907 408 270 408 270 466, 77 409 31, 369 409 409 409 409 409 409 408</td></td<>	31, 39, 3907 408 270 408 270 466, 77 409 31, 369 409 409 409 409 409 409 408
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 94         CompLst bit       159-1         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69,         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command data       116, 2         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 5         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command queue       3, 46, 64, 72, 78, 113, 117, 126, 121, 400, 4         command queue       3, 46, 164, 72, 78, 113, 117, 127, 78         command queue       3, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command dueue       3, 46, 47, 78, 113, 117, 127, 78 </td <td>31, 39, 3907 408 270 408 270 406, 77 4098 31, 399 409 409 409 409 409 409 409 409 409 4</td>	31, 39, 3907 408 270 408 270 406, 77 4098 31, 399 409 409 409 409 409 409 409 409 409 4
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 350, 351, 354, 359, 355, 556, 71, 75, 351, 351, 351, 351, 364, 362, 364, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 350, 3247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 350, 364, 382, 356, 356, 368, 371, 372, 377, 381, 384, 350, 339, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 450, 460, 470, 400, 400, 400, 400, 400, 400, 40	31, 39, 3907 39, 408 800 2701 46, 370 408 2016 46, 370 409 31, 369 9409 -81 408 119 181
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAN QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 159-160         chear to send       159-1         compLst bit       159-1         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command data       116, 2         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 32         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 42         COMMAND PHASE ERROR       121, 4         command queue       3, 4, 61, 64, 72, 78, 113, 117, 12, 400, 42         command queue       3, 4, 61, 64, 72, 78, 113, 117, 12, 400, 42         command queue	33, 339, 339, 339, 339, 339, 339, 339,
170-179, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR         CLEANING CARTRIDGE INSTALLED         DLEAR QUEUE         Schear to send         CompLst bit         CompLst bit         CompLst bit         Command code         Command code         Command data         Command descriptor block         COMMAND phase         COMMAND PHASE ERROR         COMMAND SEQUENCE ERROR         Command queue         Sommand queue         Sommand sequence         Sommand queue         Sommand sequence         Sommand queue         Sommand queue         Sommand sequence         Sommand queue         Sommand sequence         Sommand queue         Sommand	31, 39, 390 3907 408 2761 46, 397 401 298 309 409 409 409 409 409 409 409 409 409 4
170-179, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         LEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 94         compLst bit       159-7         code field       xviii, xx, 69, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 5         command code       69,         COMMAND COMPLETE       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command data       116, 2         command descriptor block       xviii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 5         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command queue       3, 4, 61, 64, 72, 78         COMMAND SEQUENCE ERROR       121, 4         command-specific information field       91, 115, 175, 175, 175, 175, 175, 175, 17	31, 39, 390 3907 408 2761 46, 397 401 298 409 409 409 409 409 409 409 409 409 409
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAN QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 19         code field       3, 39, 52, 53, 55, 56, 71, 75, 19         code field       247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 50         command code       69, 204, 201, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         command descriptor block       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 5         COMMAND Phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         COMMAND SEQUENCE ERROR       121, 4         COMMAND SEQUENCE ERROR       121, 4         command-specific information field       91, 115, 175, 175, 175, 175, 175, 175, 17	331,       39,         339,       3907         408       2761         446,       377         4018       31,         369,       369         4018       369         4018       369         4018       369         119       181         408       90         172       172
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAR QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 90, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         CompLst bit       159-1         roode field       247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 3         command code       69, 00, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         command code       69, 00, 96, 104, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         command data       116, 2         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 3         COMMAND phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command queue       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command queue       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         command queue       58, 64, 72, 78, 113, 117, 1         command specific in	33, 39, 39, 39, 39, 39, 39, 39, 39, 39,
170-173, 175, 176, 178, 179, 181, 182, 185, 186, 187, 189-192, 204, 208-211, 213, 215, 218, 225, 227-2         235, 236, 239-245, 251, 255, 260-262, 271, 276, 285-289, 291-293, 305, 312-317, 321, 329-331, 336, 3         343, 347, 350, 351, 354, 356, 358, 364-366, 378, 379, 380, 387, 3         CIRC UNRECOVERED ERROR       121, 4         CLEANING CARTRIDGE INSTALLED       121, 4         CLEAN QUEUE       3, 39, 52, 53, 55, 56, 71, 75, 19         code field       3, 39, 52, 53, 55, 56, 71, 75, 19         code field       247, 263, 264, 281, 307, 308, 335, 355, 356, 368, 371, 372, 377, 381, 384, 50         command code       69, 204, 201, 107, 108, 112, 114, 115, 130-132, 134, 139, 146, 148, 194, 195, 240, 2         command descriptor block       3, 39, 49, 50, 52, 56, 59, 71, 73, 74, 78, 81, 87, 4         command descriptor block       xvii, 3, 48, 51, 64, 68-71, 73, 75, 81, 91-94, 99, 109, 113, 115, 116, 119, 128, 1         132, 137-139, 146-148, 162, 166, 170, 176, 183, 185, 186, 205, 227-229, 239, 242, 244, 256, 295, 343, 5         COMMAND Phase       39, 46, 48, 58, 71, 73, 78, 118, 121, 400, 4         COMMAND SEQUENCE ERROR       121, 4         COMMAND SEQUENCE ERROR       121, 4         command-specific information field       91, 115, 175, 175, 175, 175, 175, 175, 17	31, 39, 3907 39, 3907 408 27616, 77 4018 31, 3699 409 - 81 408 390 17343 143

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC i '

contingent allegiance xxx, 3, 55, 56, 58, 61, 64, 72, 75, 76, 78-80, 83, 85, 87, 112, 140, 141, 223
contrast field
control xvii, xviii, xx, xxi, xxxi, 3, 6, 32, 36, 40, 42, 43, 64, 68, 69, 71, 73, 76, 79-81, 86, 88, 89, 95, 96, 101-104,
106, 107, 109, 112, 125-127, 129, 132-134, 136, 140, 143, 151, 152, 158, 159, 161, 165-169, 171, 173-175,
177, 180, 181, 183, 184-191, 196, 199, 208, 215, 227-230, 232, 233, 235-240, 242-244, 249, 251, 257,
259-262, 264-267, 271, 272, 273-276, 282, 284, 285, 288-294, 296-298, 300, 302, 303, 305, 306, 309, 311,
319, 320, 323, 325, 327, 329, 331, 332, 333, 335, 341, 342, 344-354, 357, 360, 364-368, 376, 378, 379,
381, 390, 393-397, 416
control field
Control Mode Page
COPY ABORTED
COPY AND VERIFY command
COPY CANNOT EXECUTE SINCE HOST CANNOT DISCONNECT
COPY command
COPY function code field
CORRCT bit
correct
count basis field
count field
CP
CTS
current I/O process
current operating definition field
cylinder skew factor field
data buffer recovery
data buffer status descriptor
data bytes per physical sector field
data bytes per sector field
data defect list xviii, 159, 171, 172, 346
data defect list
DATA IN phase
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409
DATA IN phase
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 143
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DC bit       92-94
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer element       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       209, 255
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       229, 255         DCR bit       209, 255
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer element       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       209, 255
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       229, 255         DCR bit       209, 255
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       209, 255         DCRT bit       161         default operating definition field       147
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       121, 409         DATA SYNCHRONIZATION MARK ERROR       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer element       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer field       331         DBD bit       106         DBR       250, 251         DC R bit       209, 255         DCRT bit       161         default operating definition field       147         defact descriptor       xviii, 159, 160, 162, 163, 172, 174, 175         DEFECT LIST ERROR       121, 407
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer element       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBR       250, 251         DC bit       92-94         DCR bit       209, 255         DCRT bit       161         default operating definition field       147         default operating definition field       147         defect descriptor       xviii, 159, 160, 162, 163, 172, 174, 175         DEFECT LIST ERROR IN GROWN LIST       121, 408
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       250, 251         DCR bit       209, 255         DCRT bit       161         default operating definition field       147, 175         DEFECT LIST ERROR       121, 161, 408         DEFECT LIST ERROR IN GROWN LIST       121, 408
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       92-94         DCR bit       209, 255         DCRT bit       209, 255         DCRT bit       161         defact descriptor       xviii, 159, 160, 162, 163, 172, 174, 175         DEFECT LIST ERROR IN GROWN LIST       121, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         defect list format field       121, 408
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer element       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       106         DBR       209, 255         DCRT bit       292, 945         DCRT bit       161         defect descriptor       121, 161, 408         DEFECT LIST ERROR IN GROWN LIST       121, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         DeFECT LIST ERROR IN PRIMARY LIST       121, 408         defect list format field       160, 171, 172         defect list length field       160, 171, 172
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xxii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBB bit       106         DBR       292.94         DCR bit       209, 255         DCRT bit       147         defecult operating definition field       147         defect list FRROR       121, 161, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         DEFECT LIST NOT AVAILABLE       160, 171, 172
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       92-94         DCR bit       209, 255         DCRT bit       161         default operating definition field       147         defect descriptor       xviii, 159, 160, 162, 163, 172, 174, 175         DEFECT LIST ERROR IN GROWN LIST       121, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         defect list length field       160, 171, 172         defect list length field       160, 171, 172         defect list length field       160, 171, 172         defect list length field       162, 172, 176         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         DEFECT LIST NOT AVAILABLE       121, 408
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data transfer field       331         DBD bit       106         DBR       220, 251         DCR bit       209, 255         DCRT bit       161         defact descriptor       121, 161, 408         DEFECT LIST ERROR IN GROWN LIST       121, 407         defect list format field       160, 171, 172         defect list format field       162, 172, 174, 175         DEFECT LIST ERROR IN GROWN LIST       121, 408         DEFECT LIST NOT AVAILABLE       162, 172, 174, 175         DEFECT LIST NOT AVAILABLE       162, 172, 174, 108         DEFECT LIST NOT AVAILABLE       121, 408         DEFECT LIST NOT AVAILABLE       121, 408         DEFECT LIST NOT AVAILABLE       121, 408         DEFECT LIST NOT A
DATA IN phase       46, 58, 70, 73, 110, 170, 261, 275, 295, 306, 324, 331, 347, 400, 401         DATA OUT phase       46, 68, 70, 77, 89, 101, 102, 105, 116, 128, 159, 160, 259-261, 274, 275, 332, 333, 343, 349, 394, 400         DATA PATH FAILURE (SHOULD USE 40 NN)       121, 409         DATA PHASE ERROR       121, 409         DATA PROTECT       119, 155, 179, 185, 225, 277, 339         data release delay       34, 36, 47         DATA SYNCHRONIZATION MARK ERROR       121, 407         data transfer disconnect control       xviii, 359, 360, 364, 366, 368, 375, 385-387, 389         data type qualifier field       331         DBD bit       92-94         DCR bit       209, 255         DCRT bit       161         default operating definition field       147         defect descriptor       xviii, 159, 160, 162, 163, 172, 174, 175         DEFECT LIST ERROR IN GROWN LIST       121, 408         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         defect list length field       160, 171, 172         defect list length field       160, 171, 172         defect list length field       160, 171, 172         defect list length field       162, 172, 176         DEFECT LIST ERROR IN PRIMARY LIST       121, 408         DEFECT LIST NOT AVAILABLE       121, 408

-

							• • •		xvi	I, <b>8</b> 6
demand read retention priority field										
deskew delay					34-	37, 4	3, 44	, 47,	400,	403
destination count										
destination logical block address field										
device off-line										
device-specific parameter					ox, xxi,	137,	246,	256,	263,	308
DevOfL bit										
DIAGNOSTIC FAILURE ON COMPONENT NN	I (80H-FF	Ή)							121,	409
diagnostic parameters	7, 70	, 125, 129,	130, 192	, 246, 263	, 275,	307,	334,	355,	383,	396
direct-access devices xviii, xxix, 6, 90, 115	, 135, 139	9, 150-152,	154, 157	, 192, 194	-196, 2	206, 2	214, 2	217,	218, 3	280,
						-			338,	
disable block descriptors										106
disable certification										161
disable correction									209,	255
disable page out									152,	169
disable pre-fetch transfer length field										198
disable primary										161
disable queuing										141
disable save										
disable saving parameters										
disable transfer on error										
disable update										
DISCONNECT xviii, 3, 5, 36, 39, 45, 47, 4										
		, 249, 264, 3								
disconnect time limit field		, <u> </u>	_, , , <u>_</u> , _,		,			,		143
Disconnect-Reconnect Page		xviii.	57.140	142 196	249	264 3	309 3	335	357	397
disconnection delay										
displacement field								•••	182,	183
displacement field		•••••	 	•••••	• • • • • • • • • • • •	 	· · · ·	•••	182, 128,	183 129
displacement field	•••••	· · · · · · · · · · · ·	 	•••••	· · · · · ·	 	· · · · ·		182, 128, 152,	183 129 169
displacement field	· · · · · · · · ·	• • • • • • • • • • • • • • • • • • •	· · · · · · · · ·	•••••	• • • • • • • • • • • •	· · · · ·	· · · · ·	195,	182, 128, 152, 308,	183 129 169 356
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · ·	· · · · ·	 195,	182, 128, 152, 308,	183 129 169 356 161
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · ·	· · · · ·	195, 	182, 128, 152, 308, 	183 129 169 356 161 141
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · ·	· · · · ·	 195, 	182, 128, 152, 308,  80,	183 129 169 356 161 141 200
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · ·	· · · · · · · · · · · · · · · · · · ·	195, 	182, 128, 152, 308,  80,  200,	183 129 169 356 161 141 200 215
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	195,  	182, 128, 152, 308,  80,  200, 103,	183 129 169 356 161 141 200 215 132
displacement field	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·	· · · · · · · · · · · · · · · · · · ·		· · · · · · · · · · · · · · · · · · ·		· · · · · · · · · · · · · · · · · · ·	195,   101,	182, 128, 152, 308,  80,  200, 103, 	183 129 169 356 161 141 200 215 132 161
displacement field						· · · · · · · · · · · · · · · · · · ·		195,   101, 	182, 128, 152, 308,  80,  200, 103,  408,	183 129 169 356 161 141 200 215 132 161 410
displacement field						· · · · · · · · · · · · · · · · · · ·		195,  101,  406-	182, 128, 152, 308,  80,  200, 103,  408, 209,	183 129 169 356 161 141 200 215 132 161 410 255
displacement field					. 121-		· · · · · · · · · · · · · · · · · · ·	195,  195,  101,  406-	182, 128, 152, 308,  80,  200, 103,  408, 209, 132,	183 129 169 356 161 141 200 215 132 161 410 255 133
displacement field					. 121-		385,	195,   101,  406- 	182, 128, 152, 308,  80,  200, 103,  408, 209, 132, 	183         129         169         356         161         141         200         215         161         410         255         133         141
displacement field					. 121-		385,	195,  195,  101,  406-  308,	182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350,	183 129 169 356 161 141 200 215 132 161 410 255 133 141 356
displacement field					. 121-	124,	385,		182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352-	183 129 169 356 161 141 200 215 132 161 410 255 133 141 356 354
displacement field					. 121-	124,	385,		182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352- 	183 129 169 356 161 141 200 215 132 161 255 133 141 356 354 141
displacement field					. 121-		385,	 195,  101,  406-  308, 	182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  352, 352,  250,	183 129 169 356 161 141 200 215 132 161 255 354 141 356 354 141 252
displacement field					. 121-		385,	 195,  101,  406-  308, 	182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352- 250, 216,	183 129 169 356 161 141 200 215 132 161 410 255 354 141 255 354 122 255
displacement field					. 121-		385,		182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352, 250, 216, 2267,	183 129 169 356 161 141 200 215 132 161 410 255 354 141 255 354 141 2255 409
displacement field					. 121-		385,		182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 2267, xxii,	183 129 169 356 161 141 200 215 132 161 410 255 133 141 255 133 141 255 354 141 255 354 141 255 354 141 255 354 141 255 354 141 255 356 161 356 161 356 161 356 161 356 161 161 356 161 161 356 161 161 356 161 161 356 161 161 205 161 205 161 161 205 161 161 205 163 161 205 161 161 205 163 161 205 163 161 205 163 161 205 163 161 205 163 161 205 163 161 205 163 164 165 165 165 165 165 165 165 165 165 165
displacement field					. 121-			   195,  195,  101,  406-  308,  209, 226,  382.	182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 267, xxii, 386,	183 129 169 356 161 141 200 215 132 161 410 255 133 141 356 141 255 354 141 255 354 141 255 354 141 255 387
displacement field					. 121-				182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 250, 352, 352, 352, 352, 352, 352, 352, 352	183 129 169 356 161 141 200 215 132 161 410 255 133 141 255 133 141 255 354 141 255 354 141 255 354 141 255 386 387 381
displacement field					. 121-				182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 267, xxii, 386, 378, 	183         129         356         161         2215         132         161         2255         133         141         255         141         255         3341         2255         4386         3871
displacement field					. 121- 				182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 267, xxii, 386, 378, 377,	183           129           356           161           2215           132           161           2255           133           141           255           133           141           255           3354           2255           4386           3381           3380
displacement field			xxii, 361		, 121- , 121- , 372-3 , 378-3				182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 267, xxii, 386, 378, 377, 3412,	183 129 169 356 161 141 2215 132 161 255 3141 2255 133 141 2255 9 387 381 3780 415
displacement field download microcode DPO bit DPOFUA bit DPOFUA bit DQue bit drive step pulse width field drive step rate field DSP bit DSP bit dt DTE bit DU bit EAENP bit EBC EBP EECA bit EEG EER bit electronic vertical forms unit Element Address field element descriptor length field element descriptors element type code field			xxii, 361		, 121- , 121- , 372-5 , 368-3				182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 250, 352,  352, 352, 352, 352, 352, 352, 352, 352,	183 129 169 356 161 141 2215 132 161 255 3141 2255 133 141 2255 9 387 381 3780 415 3841 2255 9 3871 3780 415 37780 415 37780 410 415 37780 415 37780 415 37780 415 37780 410 415 37780 415 37780 415 37780 410 410 410 410 410 410 410 410 410 41
displacement field			xxii, 361		, 121- , 121- , 372-3 , 368-3		385, 385, 208, 2 124, 2 377, 3 368, 3 373, 3		182, 128, 152, 308,  80,  200, 103,  408, 209, 132,  350, 352,  250, 216, 250, 377, 386, 378, 377, 377, 350, 350, 377, 350, 350, 350, 377, 350, 350, 350, 350, 377, 350, 350, 350, 350, 377, 350, 350, 350, 350, 350, 377, 350, 350, 350, 350, 350, 377, 350, 350, 350, 350, 377, 350, 350, 350, 350, 377, 350, 350, 350, 377, 350, 350, 377, 350, 350, 377, 377, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 350, 377, 350, 377, 350, 377, 350, 377, 350, 350, 377, 350, 377, 350, 350, 377, 350, 377, 350, 350, 377, 350, 377, 350, 377, 350, 377, 350, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 377, 350, 350, 350, 377, 350, 350, 350, 350, 350, 377, 350, 350, 350, 350, 350, 350, 350, 350	183         129         3561         1410         2132         1610         2533         1410         2533         1410         2533         1410         2553         3541         2255         3687         33815         33815         3365

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

enable EOD generation						141
enable threshold comparisonenable vital product data						
end of partition						
END OF USER AREA ENCOUNTERED ON THIS TRACK .						
END-OF-DATA DETECTED						
END-OF-DATA NOT FOUND						
end-of-medium						
END-OF-PARTITION/MEDIUM DETECTED						
end-of-tapeending boundary field						
ending F field						
ending index field						
ending M field						
ending S field						
ending track field						292
EOD defined field						
EOM bit			,	, .		
EOP						
EOT						
EQUAL 37, 43, 45, 54, 63, 65, 74, 105, 120, 133, 138 213-215, 232, 234, 278, 283, 287, 289, 291-29						
ERA						
erase all						
erase by-pass						
ERASE command						
ERASE FAILURE						•
ERASE(10) command						
ERASE(12) command						xxi, 342
error AEN permission						
Error Counter Pages						
ERROR LOG OVERFLOW						
	• • • • • • • •		• • • • • •		• • • • • • •	121, 407
ETC bit						
EVFUEVFU format start character field						
EVFU format stop character field						
EVPD bit						
except 27, 34, 39, 46-48, 56, 61, 72, 74, 75, 79, 88, 95						
	158, 16	0. 235. 2	36. 283.	285, 286	. 306. 372	-375, 405
EXCESSIVE WRITE ERRORS	· · · · · · · · · ·			· · · · · · · · ·	,,	121, 406
EXCHANGE MEDIUM command						xxii, 364
exclusive access						
ExEnab						
export enable						
extended contingent allegiance						
extent		• • • • • • •	xi)	x, 72, 151	, 153, 158	, 175-180
extent bit						
extent list length field	• • • • • • • • •	• • • • • • •	• • • • • •	• • • • • • • •		178
FAILED TO SENSE BOTTOM-OF-FORM	•••••	••••	••••	• • • • • • •	•••••	121, 409
fast assertion period						
fast cable skew delay						
fast deskew delay						
fast hold time						

fast negation period		
fast synchronous transfer option		
FDP		253
field pointer field		116
filemark	56, 406,	407
filemark bit	. 114	241
FILEMARK DETECTED		
FILEMARK OR SETMARK NOT FOUND		
filled data buffer field		
first block location field		
first data transfer element address field		
first element address reported field		
first import export element address field		387
first record offset field		
first storage element address field		
fixed bit		
fixed data partitions		
flag bit		
Flexible Disk Page		
FmtData bit		
FOCUS SERVO FAILURE		
font identification field		
forced unit access		
form slew options field		
FORMAT command xx, 121, 25	59, 267,	408
FORMAT COMMAND FAILED		
format data		
Format Device Page	54, 196,	202
format of logical blocks addresses per second field		310
format options valid		161
format type field		259
format type field	 03-205,	259 276
format type field	 03-205,	259 276 161
format type field FORMAT UNIT command	03-205,	259 276 161 169
format type field FORMAT UNIT command	03-205, 	259 276 161 169 372
format type field	03-205, 	259 276 161 169 372 227
format type field	 03-205,    	259 276 161 169 372 227 347
format type field	 03-205,       	259 276 161 169 372 227 347 410
format type field FORMAT UNIT command		259 276 161 169 372 227 347 410 323
format type field FORMAT UNIT command		259 276 161 169 372 227 347 410 323 393
format type field FORMAT UNIT command	 03-205,       	259 276 161 169 372 227 347 410 323 393 394
format type field FORMAT UNIT command		259 276 161 169 372 227 347 410 323 393 394 327
format type field FORMAT UNIT command		259 276 161 169 372 227 347 410 323 393 393 394 327 172
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247,
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400
format type field       FORMAT UNIT command       xviii, 108, 117, 151, 154, 158-161, 171, 172, 174, 179, 192, 2         FOV bit       FUA bit       full bit       gap size field         gap size field       generation address field       generation address field         GET DATA BUFFER STATUS command       12         GET MESSAGE(10) command       x         GET WINDOW command       x         GET WINDOW command       x         GUist bit       262, 264, 32         group code       69, 7         grown defect list       122, 159, 161, 171, 17	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400 408
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400 408 408
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400 408 408 205
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400 408 408 205 339
format type field	 03-205,  	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201
format type field	 03-205,  	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201 0, 82
format type field FORMAT UNIT command	 03-205,       	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201 0, 82 200
format type field FORMAT UNIT command		259 276 161 169 372 227 347 410 323 393 394 327 172 247, 378 400 408 408 205 339 201 , 82 200 201
format type field	 03-205,       	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201 0, 82 201 403
format type field FORMAT UNIT command	 03-205,   	259 276 161 169 372 227 347 410 323 394 327 172 247, 378 400 408 408 205 339 201 0, 82 201 0, 82 201 403 399

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

i/e 385
I/O process . 3-5, 39, 40, 45, 49, 51, 52, 55-58, 60-62, 64, 71-75, 77, 79-82, 99, 113, 117, 122, 141, 215, 399, 406
1/O PROCESS TERMINATED
I T 4, 54, 55, 57, 58, 60, 61, 70, 73, 75, 76, 78, 79, 81, 104, 112, 113, 141, 237
<u>T</u> L
I T L Q 4, 55, 58, 60, 61, 75, 79, 81
ITB
<u>1</u> T x
<u> </u>
ID CRC OR ECC ERROR
ID Valid bit
IDENTIFY . xvi, 4, 6, 48, 49, 52-55, 57, 58, 61, 70, 73, 75, 78, 79, 81, 84, 88, 95, 97, 118, 119, 122, 150, 155, 161,
177, 253, 254, 379, 400, 409
IDP 253
IGNORE WIDE RESIDUE xvi, 52, 58
ILI bit
ILLEGAL FUNCTION (SHOULD USE 20 00, 24 00, OR 26 00) 122, 408
ILLEGAL MODE FOR THIS TRACK
ILLEGAL REQUEST 57, 67, 71, 75, 76, 92, 93, 95, 96, 100-105, 107, 108, 110, 111, 116, 119, 126, 128, 130, 131,
133, 134, 139, 143, 154, 159, 161, 164, 170, 173, 176, 178, 179, 182, 186, 190-192, 212, 213, 225, 228,
230, 240, 242, 261, 267, 268, 277, 286, 289, 291-293, 305, 312, 329, 336, 339, 341, 351, 364-366,
378-380, 382, 385-387
image composition field
Immed bit
immediate
ImpExp
Implemented Operating Definition Page
import enable
import export xxii, 359, 360, 364, 366, 368, 374, 375, 385-387, 389
import export element
IMPORT OR EXPORT ELEMENT ACCESSED
inactivity timer multiplier
INCOMPATIBLE MEDIUM INSTALLED
INCOMPLETE BLOCK READ
incorrect length indicator
InEnab
information field
235-237, 240-245, 277, 286, 339, 340, 371-375
Information Page
initial connection
initialization pattern
initialization pattern descriptor
initialization pattern length field
INITIALIZE ELEMENT STATUS command
INITIALIZE ELEMENT STATUS Command
INITIATOR DETECTED ERROR
INITIATOR DETECTED ERROR MESSAGE RECEIVED
initiator-defined partitions
INQUIRY command
INQUIRY DATA HAS CHANGED
interleave field
INTERMEDIATE Status
INTERNAL TARGET FAILURE
Inv1 bit
Inv2 bit

INVALID BITS IN IDENTIFY MESSAGE
INVALID COMBINATION OF WINDOWS SPECIFIED
INVALID COMMAND OPERATION CODE 122, 408
INVALID ELEMENT ADDRESS
INVALID FIELD IN CDB
INVALID FIELD IN PARAMETER LIST 92, 93, 102, 103, 105, 122, 130, 131, 133, 134, 139, 159, 161, 164, 192,
110VALID FIELD IN FARAMETER LIST 92, 93, 102, 103, 103, 122, 130, 131, 100, 104, 109, 104, 192, 212, 312, 408
INVALID MESSAGE ERROR 122, 409
invert
Invert bit
IP bit
IP modifier field
L-EC UNCORRECTABLE ERROR
LAMP FAILURE
landing zone cylinder field
last block location field
Last n Error Events Page
latest bit
line slew options field
link bit
LINKED COMMAND COMPLETE
LINKED COMMAND COMPLETE (WITH FLAG)
list parameter
load bit
load eject
LOAD UNLOAD command xix, 228, 256
LOCATE command
lock
lock bit
LOCK UNLOCK CACHE command
LoEj bit
LOG COUNTER AT MAXIMUM 122, 133, 410
LOG EXCEPTION
LOG LIST CODES EXHAUSTED 122, 133, 136, 410
Log Parameters 7, 70, 101-104, 122, 126, 131, 132, 135, 194, 246, 263, 275, 307, 334, 355, 384, 396, 408
LOG PARAMETERS CHANGED
LOG SELECT command
LOG SENSE command xvii, 101, 103, 131-133, 136
logical block 4, 7, 48, 68-70, 74, 81, 91-93, 114, 115, 122, 139, 150-152, 154-156, 158, 162-166, 168-170,
172-175, 178, 179, 181, 182-184, 186-194, 198, 204, 207, 210-213, 216, 222-225, 229, 231, 233, 234, 236,
276, 277, 280, 282, 283, 285, 286, 287, 289, 290, 293-297, 300, 306, 308, 310, 318-320, 338-344, 346-354,
270, 277, 200, 202, 200, 203, 200, 207, 203, 230, 230-237, 000, 000, 000, 010, 010-020, 000-044, 040-004, 358, 408
logical block address 7, 68-70, 91-93, 115, 122, 150, 151, 154, 155, 164-166, 168-170, 172-175, 178, 179, 181,
183, 184, 186-193, 207, 210, 211, 212, 225, 229, 233, 276, 277, 282, 283, 285-287, 289, 290, 293-297,
300, 306, 310, 319, 338-344, 346, 347, 348-354, 408
LOGICAL BLOCK ADDRESS OUT OF RANGE 122, 408
logical block data
logical blocks per second of audio playback field
logical or physical notch
logical record length field
logical unit xxx, 4-6, 49, 54-57, 60, 61, 68, 70, 72-79, 81, 83-89, 91-93, 95-99, 101-104, 106, 109, 112, 113,
117-119, 122, 125, 126, 127, 134, 137, 139, 144, 145, 148, 149, 153, 158, 165-171, 173-181, 183-191, 196,
202-207, 215, 227-240, 242-245, 251-254, 257, 259-262, 271, 273, 274, 288-290, 292-297, 305, 310, 323,
325, 329, 331-333, 341, 342, 344-354, 360, 364-368, 375, 376, 378, 379, 381, 390, 393-395, 406, 408, 409
LOGICAL UNIT COMMUNICATION FAILURE

LOGICAL UNIT DOES NOT RESPOND TO SELECTION
LOGICAL UNIT FAILED SELF-CONFIGURATION
LOGICAL UNIT HAS NOT SELF-CONFIGURED YET
LOGICAL UNIT IS IN PROCESS OF BECOMING READY
LOGICAL UNIT NOT READY, CAUSE NOT REPORTABLE
LOGICAL UNIT NOT READY, FORMAT IN PROGRESS 122, 406
LOGICAL UNIT NOT READY, INITIALIZING COMMAND REQUIRED
LOGICAL UNIT NOT READY, MANUAL INTERVENTION REQUIRED 122, 406
LOGICAL UNIT NOT SUPPORTED
logical unit number 4, 5, 54, 57, 68, 70, 84, 86, 88, 89, 95, 96, 101, 103, 104, 106, 109, 112, 125-127, 158
165-169, 171, 173-175, 177, 180, 181, 183-191, 227-230, 232, 233, 235-240, 242-244, 257, 259-262, 273
274, 288-290, 292-294, 296, 297, 305, 323, 325, 329, 331-333, 341, 342, 344-354, 360, 364-368, 375, 376,
378, 379, 381, 393, 394, 395
long bit
LP bit
LP bit
LU Valid bit
mandatory xxix, 4, 6, 52, 54, 60, 67, 70, 85, 114, 115, 125, 157, 158, 160, 176, 177, 179, 180, 221, 226, 240
258, 273, 278, 287, 322, 340, 363, 392, 399, 412-415
maximum additional partitions field
maximum burst size field
maximum generation address field
maximum line length field
maximum number of notches field
maximum pre-fetch ceiling field
maximum pre-fetch field
maximum volume sequence number
MCVal
Measurement Units Page
Measurement Units Page
MECHANICAL POSITIONING ERROR 122, 407
MEDIA LOAD OR EJECT FAILED 122, 410
MEDIUM DESTINATION ELEMENT FULL 122, 409
MEDIUM ERROR . xviii, 116, 119, 134, 136, 155, 161, 171, 175, 194, 223, 225, 231, 241, 242, 244, 263, 275, 277,
286, 307, 313-317, 329, 330, 334, 339, 350, 384, 397
MEDIUM FORMAT CORRUPTED 122, 408
medium format recognition field
MEDIUM NOT PRESENT
Medium Partition Page
MEDIUM REMOVAL PREVENTED
medium rotation rate field
MEDIUM SCAN command
MEDIUM SOURCE ELEMENT EMPTY
medium transport element
medium transport element address field
medium type
medium types supported
Medium Types Supported Page
medium-changer devices
MESSAGE ERROR
MESSAGE IN phase
MESSAGE OUT phase
MESSAGE PARITY ERROR
MESSAGE REJECT
MF bit
MICROCODE HAS BEEN CHANGED
minimum pre-fetch field

minimum volume sequence number	383
MISCOMPARE	
MISCOMPARE DURING VERIFY OPERATION	122, 408
MISCORRECTED ERROR	122, 407
MO bit	
mode field	284, 296
mode parameter header xviii, 105, 107, 137, 194, 195, 243-246, 256, 263, 307, 308, 335, 355, 356,	384 307
Mode Parameters 7, 70, 83, 104, 105, 107, 108, 117, 122, 137-140, 151, 176, 179, 194, 196, 216, 230,	
246, 263, 286, 289, 290, 292-294, 307, 321, 331, 333, 335, 350, 355, 384,	
MODE PARAMETERS CHANGED 104	
MODE SELECT(10) command xvii,	, 106, 109
MODE SENSE(10) command xvii, 106,	107, 109
MODIFY DATA POINTER	
motor off delay field	
motor on	
motor on delay field	
MOVE MEDIUM command xxii, 362	
MSF	
mt	385
MULTIPLE PERIPHERAL DEVICES SELECTED	122, 406
MULTIPLE READ ERRORS	
multiplication factor	197
ND bit	
negation period	
nexus	
NO ADDITIONAL SENSE INFORMATION	126, 406
NO CURRENT AUDIO STATUS TO RETURN	299, 406
NO DEFECT SPARE LOCATION AVAILABLE	
NO GAP FOUND	
NO INDEX/SECTOR SIGNAL	
NO OPERATION	
NO SEEK COMPLETE	
NO SENSE	
NO WRITE CURRENT	
Non-Medium Error Page	384, 397
Not Bus	375. 376
NOT READY 76, 108, 117, 119, 122-124, 126, 127, 151, 158, 218, 228, 248, 271, 285, 289, 291-293,	321, 390.
	408, 409
NOT READY TO READY TRANSITION (MEDIUM MAY HAVE CHANGED)	
not this bus	
Notch and Partition Page	•
notched drive	
number of blocks field	186, 191
number of blocks in buffer field	234
number of blocks requested field	343. 344
number of blocks to scan field	,
number of bytes in buffer field	,
number of cylinders field	
number of data transfer elements field	
number of elements available field	
number of F units per S unit field	
number of heads field	200, 214
number of import export elements field	
number of medium transport elements field	
number of records field	
number of S units per M unit field	
number of storage elements field	387

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

ł

OBJECT POSITION command xxi, 329
offset boundary field
operation code xvii, 67-70, 86, 88, 89, 95, 96, 101, 103, 104, 106, 109, 112, 122, 125-127, 158, 165-169, 171,
173-175, 177, 180, 181, 183-191, 227-230, 232, 233, 235-239, 242-244, 259-262, 273, 274, 288-290,
292-297, 305, 323, 325, 329, 331, 332, 333, 341, 342, 344-354, 364-368, 376, 378, 379, 381, 393-395, 408
OPERATOR MEDIUM REMOVAL REQUEST
OPERATOR REQUEST OR STATE CHANGE INPUT (UNSPECIFIED)
OPERATOR REQUEST OR STATE CHANGE INFOT (UNSPECIFIED)
OPERATOR SELECTED WRITE PROTECT
optical memory devices
Optical Memory Page
ORDERED QUEUE TAG
OUT OF FOCUS
output port channel selection
OVERLAPPED COMMANDS ATTEMPTED
OVERWRITE ERROR ON UPDATE IN PLACE
pacing protocol field
pacing protocol lield
padding type field
page code field
page code field
page control
page length field
pages notched field
pages noticined lield
PAPER JAM
Parallel Printer Interface Page       264         parameter code field       xviii, 132, 134
parameter code reset
parameter data length field
parameter list length
PARAMETER LIST LENGTH ERROR
parameter list length field
PARAMETER NOT SUPPORTED
parameter pointer control
parameter rounding
parameter value field
PARAMETER VALUE INVALID
PARAMETERS CHANGED
parameters savable 139, 196, 199, 203, 206, 208, 214, 216, 264, 266, 269, 309, 311, 312, 318, 336, 358, 385,
parameters savable 103, 130, 133, 200, 200, 200, 214, 210, 204, 200, 203, 003, 011, 012, 010, 000, 000, 000, 386, 388
parity select field
parity selection field
partial medium indicator
partial results acceptable
partition field
partition size descriptor
partition size field
partition size unit of measure
pattern field
pattern length field
pattern type field
PAUSE RESUME command
PCR bit
PER bit
Peripheral Device Page

peripheral device type field
PERIPHERAL DEVICE WRITE FAULT
PERIPHERAL DEVICE WRITE FAULT
peripheral qualifier field
PF bit
physical block data
pin 1 field
pin 34 field
pin 4 field
PIPC
PLAY AUDIO MSF command
PLAY AUDIO TRACK INDEX command
PLAY AUDIO(10) command
PLAY AUDIO(12) command
PList bit
PMI bit
POSITION ERROR RELATED TO TIMING 123, 405
position function field
POSITION PAST BEGINNING OF MEDIUM 123, 409
POSITION PAST END OF MEDIUM
POSITION TO ELEMENT command xxii, 367
POSITIONING ERROR DETECTED BY READ OF MEDIUM
post error
POWER ON, RESET, OR BUS DEVICE RESET OCCURRED
POWER-ON OR SELF-TEST FAILURE (SHOULD USE 40 NN)
power-on to selection time
PPC bit
PRA
PRE-FETCH command
prevent
PREVENT ALLOW MEDIUM REMOVAL command
prevent bit
primary defect list
PRIMARY DEFECT LIST NOT FOUND
primary volume tag
primary volume tag information field
PRINT command
printer devices xx, xxix, 114, 115, 257, 258, 261, 263, 264, 269
Printer Options Page
priority field
product identification field
product serial number field
progress indication field
PS bit 105, 107, 139, 161, 196, 199, 203, 206, 208, 214, 216, 264, 266, 269, 309, 311, 312, 318, 336, 358, 385,
386, 388
PSUM
PVolTag
QErr bit
queue algorithm modifier field
queue error management
QUEUE FULL status
queue tag
queued I/O process
RAENP bit
RAM FAILURE (SHOULD USE 40 NN) 123, 409
RANDOM POSITIONING ERROR
RAREA bit
RBO

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

RC bit
RCD bit
READ BLOCK LIMITS command
READ BUFFER command
read cache disable
READ CAPACITY command
READ CD-ROM CAPACITY command
read continuous
READ DEFECT DATA(10) command
READ DEFECT DATA(12) command
READ ELEMENT STATUS command
read exclusive
READ GENERATION command
READ HEADER command
read inhibit
READ LONG command
READ PAST BEGINNING OF MEDIUM
READ PAST END OF MEDIUM 123, 409
READ POSITION command
READ RETRIES EXHAUSTED 123, 407
READ REVERSE command
read shared
READ SUB-CHANNEL command xxi, 283, 297
READ TOC command xxi, 281, 305
READ(10) command
READ(12) command xxi, 344
Read-Write Error Recovery Page xix, xx, 189, 196, 207, 216, 225, 250, 254, 357
ready AEN permission
REASSIGN BLOCKS command
RECEIVE command
RECEIVE DIAGNOSTIC RESULTS command
reconnect xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397
reconnect xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397 RECORD NOT FOUND
reconnect xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397 RECORD NOT FOUND
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REVRITE       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA USING PREVIOUS SECTOR ID       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REVRITE       123, 407         RECOVERED DATA - RECOMMEND REVRITE       123, 407         RECOVERED DATA - RECOMMEND REVRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REVITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH L-EC       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH HEROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH LEC       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH HEROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407 <tr< td=""></tr<>
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA VITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH HEROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - AATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECT
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NOERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NOSITIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NOSITIVE HEAD OFFSET       1
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH LEC       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH CRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH LERC       123, 407         RECOVERED DATA WITH LEC       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407 </td
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH RETRIES       123, 407         RECOVERED DAT
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO FINES       123, 407         RECOVERED DATA WITH RETRIES       123, 407         RECOVERED DATA WITH RETRIES       123, 407         RECOVERED DATA WITH RETRIES AND/OR CIRC APPLIED       123, 407         RECOVERED DATA WITH RETRIES AND/OR CIRC AP
reconnect       xviii, 4, 41, 56-59, 61, 75, 77, 79, 135, 140, 142, 196, 249, 264, 271, 309, 335, 357, 390, 391, 397         RECORD NOT FOUND       123, 407         RECORDED ENTITY NOT FOUND       123, 407         recover buffer order       251         RECOVER BUFFERED DATA command       xix, xx, 236, 251, 260, 262         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - DATA AUTO-REALLOCATED       123, 407         RECOVERED DATA - RECOMMEND REASSIGNMENT       123, 407         RECOVERED DATA - RECOMMEND REWRITE       123, 407         RECOVERED DATA WITH CIRC       123, 407         RECOVERED DATA WITH ERROR CORRECTION & RETRIES APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NEGATIVE HEAD OFFSET       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH NO ERROR CORRECTION APPLIED       123, 407         RECOVERED DATA WITH RETRIES       123, 407         RECOVERED DAT

RelAdr bit	
	ł
RELEASE command	
RELEASE RECOVERY	
RELEASE UNIT command xix, 237, 238	
removable	
report early-warning	I
report log exception condition	•
report setmarks	į
report updated block read	
RÉPOSITION ERROR	
REQUEST SENSE command xvii, 39, 64, 75-77, 83, 85, 87, 112-114, 117, 146, 158, 181, 182, 271, 285, 321	
343. 344. 391	
request to send	
REQUEST VOLUME ELEMENT ADDRESS command	
RESELECTION phase	
RESERVATION CONFLICT status	
reservation identification field	
reservation type field	
RESERVE command	
RESERVE UNIT command	
reserved area	
reset condition 3, 32, 36, 39, 45, 47-50, 56, 62-64, 66, 71, 75, 78, 83, 87, 99, 103, 104, 107, 108, 167, 177-179	
238, 248, 379, 380	
reset hold time	
reset to selection time	
response data format field	
RESTORE POINTERS	
resume bit	
retain bit	
CAO	
reverse scan direction	
REW	
REW       .231, 241-243, 245, 250-252, 256         REWIND command       .xix, 76, 221, 239         REZERO UNIT command       .xix, 154, 180         RIBBON, INK, OR TONER FAILURE       .123, 408         RIF	
REW	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 238         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 408         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       386         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       386         ROUNDED PARAMETER       76, 123, 406         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       358	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       386         ROUNDED PARAMETER       76, 123, 406         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       358	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 408         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       358         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 73         save implemented       147	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 326         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 406         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       352         Save implemented       352         save parameters       101, 103, 205	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 402         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       368         SAVE DATA POINTER       369, 207         RUBR       358         save bit       352         Save implemented       49, 51, 52, 56, 61, 62, 76         save parameters       101, 103, 205         Savimp bit       101, 103, 205	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 402         Rigid Disk Drive Geometry Page       xix, 154, 180         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       86         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 75         save implemented       147         save parameters       101, 103, 205         Saving bit       101, 103, 205         Saving bit       108, 123, 405	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 408         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 134, 136, 140         RMB bit       98, 205         rotate bit       98, 205         rotate bit       326, 328         ROUNDED PARAMETER       76, 123, 409         RPL       123, 214, 215, 410         RSD       342, 343         RSMk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       358         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 73         save implemented       147         save parameters       101, 103, 205         Savimp bit       147         SAVING PARAMETERS NOT SUPPORTED       108, 123, 433	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 406         RIF       326, 328         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 14C         RMB bit       98, 205         rotate bit       98, 205         rotate bit       326, 328         ROUNDED PARAMETER       76, 123, 406         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       352         save bit       86         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 75         save implemented       147         save parameters       101, 103, 205         Savimp bit       101, 103, 205         SAVING PARAMETERS NOT SUPPORTED       108, 123, 406         SCAN command       xxi, 276, 323, 332, 399, 342-344         SCAN HEAD POSITIONING ERROR       123, 412, 412	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 76, 221, 239         REZERO UNIT command       xix, 76, 221, 239         RIBBON, INK, OR TONER FAILURE       123, 408         RIF       326, 322         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 408         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       368         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 73         save implemented       147         save implemented       147         SAVING PARAMETERS NOT SUPPORTED       108, 123, 408         SCAN command       xxi, 276, 323, 332, 339, 342, 344         SCAN HEAD POSITIONING ERROR       123, 410         Scanner devices       xxi, x320-322, 334, 335, 337	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 154, 180         RIBBON, INK, OR TONER FAILURE       123, 400         RIF       326, 326         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       386         ROUNDED PARAMETER       76, 123, 400         RPL       123, 214, 215, 410         RSD       382         RSMk       94, 114, 231, 236, 240-242, 250, 251         RTS       386         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 76         save bit       382         Save parameters       101, 103, 205         Save parameters       102, 32, 339, 342-344         SCAN command       xxi, 276, 323, 332, 339, 342-344         SCAN HEAD POSITIONING ERROR       123, 402         SCAN HEAD POSITIONING ERROR       123, 412         Scanner devices       xxi, xix, 320-322, 334, 335, 337         SCSI ID       5, 30, 33, 36, 40, 41, 77, 360, 361, 399, 400	
REW       231, 241-243, 245, 250-252, 256         REWIND command       xix, 76, 221, 239         REZERO UNIT command       xix, 76, 221, 239         REZERO UNIT command       xix, 76, 221, 239         RIBBON, INK, OR TONER FAILURE       123, 408         RIF       326, 322         Rigid Disk Drive Geometry Page       xix, 214         RLEC bit       133, 134, 136, 140         RMB bit       98, 205         rotate bit       388         ROUNDED PARAMETER       76, 123, 408         RPL       123, 214, 215, 410         RPL       123, 214, 215, 410         RSD       342, 343         RSmk       94, 114, 231, 236, 240-242, 250, 251         RTS       269, 270         RUBR       358         save bit       368         SAVE DATA POINTER       49, 51, 52, 56, 61, 62, 73         save implemented       147         save implemented       147         SAVING PARAMETERS NOT SUPPORTED       108, 123, 408         SCAN command       xxi, 276, 323, 332, 339, 342, 344         SCAN HEAD POSITIONING ERROR       123, 410         Scanner devices       xxi, x320-322, 334, 335, 337	

434 Copyright American National Standards Institute Provided by IHS under license with ANSI No reproduction or networking permitted without license from IHS

Order Number: W1916815 Sold to:STERNE KESSLER GOLDSTEIN & AMP; [178857100001] - LFIELDS@SKGF.COM, Not for Resale,2016-08-03 20:34:04 UTC

SCSI Pointers
SCSI TO HOST SYSTEM INTERFACE FAILURE 123, 410
SCSI-2
SCTE
SDP
search argument descriptor
search argument length field
sectors per track field
SEEK(10) command
segment descriptor
segment number field
select data compression algorithm field
select data partitions
SELECT OR RESELECT FAILURE
selection abort time
SELECTION phase
selection time-out delay
self test
send action code field
SEND DIAGNOSTIC command
SEND MESSAGE(10) command xxii, 395
SEND MESSAGE(12) command
SEND VOLUME TAG command
sense key field
sense-key specific field
sense-key specific valid
SEQUENTIAL POSITIONING ERROR
sequential-access devices xix, xxix, 75, 90, 94, 95, 114, 115, 139, 218, 224, 226, 227, 246, 249
Serial Printer Interface Page
Serial Printer Interface Page
SET LIMITS(10) command
SET LIMITS(10) command         348           SET LIMITS(12) command         xxii, 348
SET LIMITS(10) command         348           SET LIMITS(12) command         xxii, 348           SET WINDOW command         xxi, 327, 333
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxi, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxi, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxi, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         SftRe bit       48, 99
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxi, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         SftRe bit       48, 99         SILI       230, 235, 236
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxi, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         SftRe bit       48, 99         SILI       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141
SET LIMITS(10) command
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxii, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         StRe bit       48, 99         SILI       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141         single bit       40, 325         SKSV bit       116, 117         SLEW FAILURE       124, 409         slew mode field       266         slew value field       261         SOCF       250-252         soft sector       204, 205         SOTC       289, 290, 292-294, 309, 310         source block length field       93         source storage element address field       373, 374         source valid       373, 374         SP bit       101, 103, 105, 108, 132
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxii, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         SftRe bit       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141         single bit       40, 325         SKSV bit       116, 117         SLEW FAILURE       124, 409         slew mode field       266         Slew value field       261         SOCF       250-252         soft sector       204, 205         SOTC       289, 290, 292-294, 309, 310         source block length field       93         source storage element address field       373, 374         SP bit       101, 103, 105, 108, 132
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxii, 348         SET WINDOW command       xxii, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         StRe bit       48, 99         SIL       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141         single bit       40, 325         SKSV bit       116, 117         SLEW FAILURE       124, 409         slew mode field       266         slew walue field       261         SOCF       220, 232, 236, 310         source block length field       261         SOCT       228, 290, 292-294, 309, 310         source block kaddress field       93         source storage element address field       373, 374         source valid       373         SP bit       101, 103, 105, 108, 132         SPACE command       xx, 247
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxii, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         StRe bit       48, 99         SILI       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141         single bit       40, 325         SKSV bit       116, 117         SLEW FAILURE       124, 409         slew mode field       266         slew value field       261         SOCF       250-252         soft sector       204, 205         SOTC       289, 290, 292-294, 309, 310         source block length field       93         source storage element address field       373, 374         source valid       373, 374         source valid       373, 374         spanned data       181
SET LIMITS(10) command       348         SET LIMITS(12) command       xxii, 348         SET WINDOW command       xxii, 348         SET WINDOW command       xxii, 327, 333         SETMARK DETECTED       124, 231, 236, 240, 241, 406         SEW       243, 245, 250-252         StRe bit       48, 99         SIL       230, 235, 236         SIMPLE QUEUE TAG       52, 58, 60, 61, 72, 79, 81, 140, 141         single bit       40, 325         SKSV bit       116, 117         SLEW FAILURE       124, 409         slew mode field       266         slew walue field       261         SOCF       220, 232, 236, 310         source block length field       261         SOCT       228, 290, 292-294, 309, 310         source block kaddress field       93         source storage element address field       373, 374         source valid       373         SP bit       101, 103, 105, 108, 132         SPACE command       xx, 247

SPINDLES SYNCHRONIZED 124, 410
SpnDat bit
SSEC bit
SSN bit
st
start . xix, 3, 51, 76, 100, 126, 150, 151, 153, 155, 157, 181, 183, 185, 200, 266, 267, 278, 287-289, 292, 293, 306,
320, 340, 361, 412
start bit
start sector number
starting boundary field
starting F field
starting index field
starting M field
starting S field
starting track field
status xvii, xxi, xxii, xxix, 3, 5, 30, 32, 33, 36, 39, 42, 43, 45-51, 55-59, 61, 64, 67, 71-73, 75-83, 85, 88, 90-93, 95,
96, 100, 101-105, 107, 108, 110, 111, 113, 116-119, 122, 123, 125, 126, 128, 130, 131, 133, 134, 136, 139,
143, 151, 153, 154, 158, 159, 161, 162, 164, 166, 169-173, 175-182, 185-187, 189-192, 197, 200, 204, 205,
208-213, 215, 218, 223, 225, 227-231, 235-245, 247, 251, 255, 260-262, 264, 267, 268, 271, 275, 276,
285-289, 291-293, 298, 299, 302, 303, 305, 310, 312-317, 321-324, 329-331, 333, 336, 339, 341, 343, 347,
350-352, 354, 356-358, 361, 362, 363-366, 368-373, 377-381, 387, 390, 400, 406, 410, 412, 413, 415
STATUS phase
step count truncate enable
step pulse per cylinder
stop bit length field
stop format
stop on consecutive filemarks 251
stop on track crossing
STOP PRINT command xx, 262
storage element xxii, 359, 361, 364, 366, 368, 372-375, 385-387, 389
STPF bit
stream selection field
sub Q bit 297, 298
sub-channel data format field
sub-channel data header
sub-channel data length field
SubQ 297
supplied format field
Supported Diagnostic Pages
Supported Log Pages
supported page list field
Supported Vital Product Data Pages xviii, 145, 148
suppress incorrect length indicator
SURF bit
surface
SValid
SYNCHRONIZE BUFFER command xx, 262, 268
SYNCHRONIZE CACHE command xix, 154, 185, 186
SYNCHRONOUS DATA TRANSFER ERROR 124, 408
SYNCHRONOUS DATA TRANSFER REQUEST xvii, 52, 54, 62, 77
SYSTEM RESOURCE FAILURE 124, 410
TAPE LENGTH ERROR
TAPE OR ELECTRONIC VERTICAL FORMS UNIT NOT READY 124, 409
TAPE POSITION ERROR AT BEGINNING-OF-MEDIUM 124, 409
TAPE POSITION ERROR AT END-OF-MEDIUM 124, 409
target certification list
TARGET OPERATING CONDITIONS HAVE CHANGED 124, 409

į. Į

target routine	4 5 54-57 60 75 78 79 84 974
target save disable	
TB bit	208, 255
TCVal	
TERMINATE I/O PROCESS	
TEST UNIT READY command	
third party	
third party reservation	
THRESHOLD CONDITION MET	
threshold field	
threshold met criteria	
THRESHOLD PARAMETERS NOT SUPPORTED	124, 408
TOO MANY WINDOWS SPECIFIED	
track code valid	
TRACK FOLLOWING ERROR	
track number field	
track relative CD-ROM address field	
track skew factor field	
TRACKING SERVO FAILURE	
tracks per zone field	
transfer block	
transfer length 51, 64, 68-70, 128, 139, 166, 168, 169, 173, 187-190	0, 196, 198, 225, 226, 230, 231, 235-237,
243-245, 256, 259, 260, 261, 267, 274, 286, 289, 290, 293, 294	4 310 325 331-333 341 342 344 348
	352-354, 394, 395
transfer period	35, 37, 43, 45, 62, 63, 403
Translate Address Page - RECEIVE DIAGNOSTIC	xix, 192, 193
Translate Address Page - SEND DIAGNOSTIC	xix. 192
translate format field	
translated address field	
transport element address field	
transport geometry descriptor	
transport geometry descriptor	360, 386         388         200         101, 132         141         124, 410
transport geometry descriptor	360, 386         388         200         101, 132         141         124, 410         124, 410
transport geometry descriptor	360, 386         388         200         101, 132         141         124, 410         124, 410
transport geometry descriptor	360, 386         388         200         101, 132         141         124, 410         124, 410         35, 5, 45, 47, 48, 54, 57, 71, 112, 117
transport geometry descriptor	360, 386         388         200         101, 132         141         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77
transport geometry descriptor	360, 386         388         200         101, 132         101, 132         141         124, 410         124, 410         35, 45, 47, 48, 54, 57, 71, 112, 117         77         139, 141, 154, 176, 178, 215, 225, 237,
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133,	360, 386         388         200         101, 132         101, 132         141         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission	360, 386         388         200         101, 132         101, 132         141         124, 410         124, 410         35, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission	360, 386         388         200         101, 132         101, 132         141         124, 410         124, 410         35, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         xviii, 145, 149
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         xviii, 145, 149         125
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         , 139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         xviii, 145, 149         125         124, 410
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         121         125         124, 410         125         121         125         124, 410         125         124, 410         125         124, 410         124, 410         124, 410
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         124, 410         125         124, 410         125         124, 410         125         124, 410         124, 410         124, 410         124, 410         124, 410
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         3, 5, 45, 47, 48, 54, 57, 71, 112, 117         77         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         124, 410         125         124, 410         125         124, 410         125         124, 410         124, 410         124, 410         124, 410         124, 410
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page Unit OfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         124, 410         125         124, 410         124, 155, 223, 225, 277, 286, 339, 407         124, 407         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line UNIT Serial Number Page Unit Off-line UNIT ATPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         124, 410         125         124, 410         124, 155, 223, 225, 277, 286, 339, 407         124, 407         124, 407         124, 407         124, 407         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         135, 45, 47, 48, 54, 57, 71, 112, 117         77         739, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         124, 155, 223, 225, 277, 286, 339, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET UPDATE BLOCK command	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         124, 410         125         124, 155, 223, 225, 277, 286, 339, 407         124, 410         124, 407 </td
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, 144, 144, 144, 144, 144, 144, 144	360, 386         388         200         101, 132         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         125         124, 410         124, 410         124, 410         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET UPDATE BLOCK command	360, 386         388         200         101, 132         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         125         124, 410         124, 410         124, 410         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNRECOVERED READ ERROR UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET UPDATE BLOCK command UPDATED BLOCK READ VCBP	360, 386         388         200         101, 132         101, 132         124, 410         124, 410         124, 410         124, 410         135, 45, 47, 48, 54, 57, 71, 112, 117         77         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         124, 155, 223, 225, 277, 286, 339, 407         124, 407         12
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected reselection UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNLOAD TAPE FAILURE UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET UPDATE BLOCK command UPDATED BLOCK READ VCBP VCBS	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         124, 155, 223, 225, 277, 286, 339, 407         124, 407
transport geometry descriptor true ready TSD bit UAAENP bit UNABLE TO ACQUIRE VIDEO UNABLE TO RECOVER TABLE-OF-CONTENTS unexpected disconnect unexpected disconnect UNIT ATTENTION 49, 56, 75-77, 80, 83, 87, 96, 102, 104, 119, 129, 133, unit attention AEN permission unit off-line Unit Serial Number Page UnitOfL bit UNRECOVERED READ ERROR UNRECOVERED READ ERROR UNRECOVERED READ ERROR - AUTO REALLOCATE FAILED UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REASSIGNMENT UNRECOVERED READ ERROR - RECOMMEND REWRITE THE DATA UNSUCCESSFUL SOFT RESET UPDATE BLOCK command UPDATED BLOCK READ VCBP	360, 386         388         200         101, 132         111, 132         124, 410         124, 410         124, 410         124, 410         124, 410         124, 410         139, 141, 154, 176, 178, 215, 225, 237, 248, 277, 286, 339, 380         141         125         141         125         124, 410         125         124, 410         124, 410         124, 407

verify correction span field			21
Verify Error Recovery Page	xix. 189	. 196. 215	. 216. 309. 35
verify recovery time limit field	,	,,	21
verify retry count field		•••••	200-211 21
	•••••		0E4 0E0 0E
VERIFY(10) command		. XXII, 350	, 351, 353, 35
VERIFY(12) command	• • • • • • • •		. XXII, 351, 35
vertical forms unit		124	1, 265-267, 40
VES			
VFU			
VFU control bit polarity			
VFU control bit select			
VFU extended skip			
VIDEO ACQUISITION ERROR			
Vital Product Data Parameters			
VolTag			
vollag	• • • • • • •		. 300, 370, 37
volume identification template field			382, 38
VOLUME OVERFLOW	• • • • • • • •	. 120, 225	o, 243-245, 25
volume sequence number field		• • • • • • •	
volume tag xxii, 36	61-363, 36	8, 371-377	7, 381-383, 41
wait bit			
WBS			342, 34
WCE bit			19
WIDE DATA TRANSFER REQUEST			
window length field			
window width field			
WP bit			
WRITE AND VERIFY(10) command	• • • • • • •		195, 247, 55
WHITE AND VERIFY (10) command			. XXII, 353, 35
WRITE AND VERIFY(12) command			
WRITE APPEND ERROR			
WRITE APPEND POSITION ERROR			
WRITE BUFFER command			
write cache enable			
WRITE ERROR xix, xx, 115, 124, 189, 196, 207, 216, 223,	225, 226	, 250, 254	, 255, 357, 40
WRITE ERROR - AUTO REALLOCATION FAILED			124, 40
WRITE ERROR RECOVERED WITH AUTO REALLOCATION			
write exclusive			
WRITE FILEMARKS command			
write inhibit			
WRITE LONG command			
write precompensation field	• • • • • • •		. 200, 201, 21
write protect		. 76, 123	, 195, 247, 41
WRITE PROTECTED 124, 155, 195,			
write retention priority field			19
WRITE SAME command			xix, 19
write setmark			
WRITE(10) command			
WRITE(12) command			
written block search			
WSmk			
X-axis resolution field			
X-axis upper left field			
Y-axis resolution field			
Y-axis upper left field	• • • • • • •		

į i

••

-

•

٠

•