



McGraw-Hill Series on
Computer Communications

ADSL and DSL Technologies

Online Video and Audio

Broadband Internet Access

Interactive Multimedia

J. Ranade, Series Editor

Walter Goralski, Hill Associates, Inc.

Library of Congress Cataloging-in-Publication Data

Goralski, Walter

ADSL and DSL technologies / Walter Goralski.

p. cm.

Includes index.

ISBN 0-07-024679-3

1. Telephone switching systems, Electronic. 2. Digital communications. 3. Telecommunication—Standards. I. Title. TK6397.G65 1998

621.387—dc21

98-5178

CIP

McGraw-Hill



A Division of The McGraw-Hill Companies

Copyright © 1998 by The McGraw-Hill Companies, Inc. All rights reserved. Printed in the United States of America. Except as permitted under the United States Copyright Act of 1976, no part of this publication may be reproduced or distributed in any form or by any means, or stored in a data base or retrieval system, without the prior written permission of the publisher.

5 6 7 8 9 0 DOC/DOC 9 0 3 2 1 0 9

ISBN 0-07-024679-3

The sponsoring editor for this book was Steven Elliot and the production supervisor was Sherri Souffrance. It was set in Century Schoolbook by Douglas & Gayle, Limited.

Printed and bound by R. R. Donnelley & Sons Company.

McGraw-Hill books are available at special quantity discounts to use as premiums and sales promotions, or for use in corporate training programs. For more information, please write to Director of Special Sales, McGraw-Hill, 11 West 19th Street, New York, NY 10011. Or contact your local bookstore.

Information contained in this work has been obtained by The McGraw-Hill Companies, Inc. ("McGraw-Hill") from sources believed to be reliable. However, neither McGraw-Hill nor its authors guarantees the accuracy or completeness of any information published herein and neither McGraw-Hill nor its authors shall be responsible for any errors, omissions, or damages arising out of use of this information. This work is published with the understanding that McGraw-Hill and its authors are supplying information but are not attempting to render engineering or other professional services. If such services are required, the assistance of an appropriate professional should be sought.



This book is printed on recycled, acid-free paper containing a minimum of 50% recycled de-inked fiber.

multiple QAM examples. If the four different signal types are combined with $A_1 \sin(F_c) + A_2 \cos(F_c)$ signal types. This is done in all modems (see Figure 8-1). A sample "constellation diagram" is shown in Figure 8-2. Such diagrams have been used for many years.

12 different phase angles and two different sine components (a total of 24 different signals, in this case) are used. The greater (or fewer) the number of phase angles and sine components, the more constellation points and the more different signals that can be distinguished.

For example, digital video information is converted into 4-bit nibbles. Each nibble is modulated with QAM/CAP with 16 different phase angles and amplitudes for the

modulator, which is the modulator actually com-

ial
bits)

combines the appropriate amplitudes of the sine and cosine of the carrier frequency, thus creating the phase and amplitude shifts associated with the correct constellation point. Finally, the signal is filtered to assure that it does not interfere with other channels. Note that the resulting signal contains substantial energy at the carrier frequency; this should not be surprising.

DMT for ADSL

ADSL devices (the ATU-C and ATU-R) have been built that use QAM, CAP, and DMT technology as line codes. However, the official standard line code for ADSL is DMT, as defined by the American National Standards Institute ANSI T1.413 standard in 1995 for ADSL. Although DMT is often said to be "newer" than CAP or QAM, DMT was actually invented years ago by Bell Labs. DMT was never implemented until recently for many reasons, not the least of which was that CAP and QAM were sufficient for all telecommunications purposes common at the time.

DMT works by first dividing the entire bandwidth range on the formerly analog passband limited local loop into a large number of equally spaced subchannels. Technically, they are called *subcarriers*, but many people still call them subchannels. Above the preserved baseband analog signaling range, this bandwidth usually extends to 1.1 MHz. The entire 1.1 MHz bandwidth is divided into 256 subchannels, starting at 0 Hz. Each subchannel occupies 4.3125 kHz, giving a total bandwidth of 1.104 MHz on the loop. Some of the subchannels are special, and others are not used at all. For example, channel #64 at 276 kHz is reserved for a pilot signal.

Most DMT systems use only 250 or 249 subchannels for information. The lower subchannels, #1 through #6 in most cases, are reserved for 4 kHz passband analog voice. Because 6 times 4.3125 Hz is 25.875 kHz, it is common to see 25 kHz as the starting point for ADSL services. Note that a wide *guardband* is used between the analog voice and the DMT signals. In addition, the signal loss at the upper subchannels, such as #250 and above, is so great that it is difficult to use them for information transfer on long loop at all.

There are 32 upstream channels, usually starting at channel #7, and 250 downstream channels, which gives ADSL its distinct asymmetric bandwidth. Each of the subchannels is 4.3125 kHz wide, of course, and only when echo cancellation is used are there actually 250 downstream

subchannels. When only FDM is used for echo control, there are typically 32 upstream channels and only 218 or less downstream channels because they no longer overlap. The upstream channels occupy the lower end of the spectrum for two reasons. First, the signal attenuation is less here, and customer transmitters are typically lower-powered than local exchange transmitters, which is a concern. Second, there is more noise at the local exchange with the possibility of crosstalk, so it only makes sense to use the lower portions of the frequency range for the upstream signals.

When ADSL devices that employ DMT are activated, each of the subchannels is "tested" by the end devices for attenuation. In actual practice, the "testing" is a complex kind of handshaking procedure, and the parameter used is gain (the reciprocal of the attenuation). The noise present in each of the subchannels is measured as well.

Not all of the subchannels are used for information transfer, as mentioned above. Some are reserved for network management and performance measurement functions. For instance, in the downstream direction, only 249 of the 256 subchannels available downstream are typically used for information transfer.

Usually, each of the numerous subchannels employs its own coding technique based on QAM. This may strike some as odd, given the fervor that vendors have when seeking to distinguish CAP/QAM and DMT. Nevertheless, there obviously is at some of QAM in DMT. The real attraction of DMT is not so much that it is different than CAP and QAM, but rather that based on DMT's performance monitoring, some subchannels will carry more bits per baud than others. The total throughput is the sum of all the QAM bits sent on all the active subchannels (some may be completely "turned off").

Moreover, all of the subchannels are constantly monitored for performance and errors. The speed of an individual subchannel or group of subchannels can actually vary, giving DMT a granularity of 32 kbps. In other words, a DMT device might function at 768 kbps or 736 kbps (that is, 32 kbps less), depending on operational and environmental conditions. Just by way of comparison, CAP devices usually offer 340 kbps granularity (768 kbps or 428 kbps), but pure QAM can offer granularity as fine as 1 bps, which means that there is nothing that technically limits CAP/QAM to one level of granularity but not another. In fact, some vendors of CAP-based ADSL equipment have claimed 32 kbps granularity, and even RADSL capabilities, for their latest products. It should be noted that these CAP RADSL products modify their spectrum when the rate changes, and now become a real issue to manage with regard to spectral compatibility.

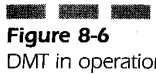


Figure 8-6
DMT in operation


are typically
nals because
lower end of
is less here,
an local ex-
nore noise at
makes sense
ream signals.
h of the sub-
tual practice,
nd the para-
noise present

fer, as men-
t and perfor-
am direction,
ypically used

own coding
en the fervor
d DMT. Nev-
al attraction
√, but rather
hannels will
is the sum of
may be com-

d for perfor-
group of sub-
bps. In other
s (that is, 32
ditions. Just
granularity
as fine as 1
s CAP/QAM
dors of CAP-
y, and even
e noted that
en the rate
d to spectral

Figure 8-6
DMT in operation

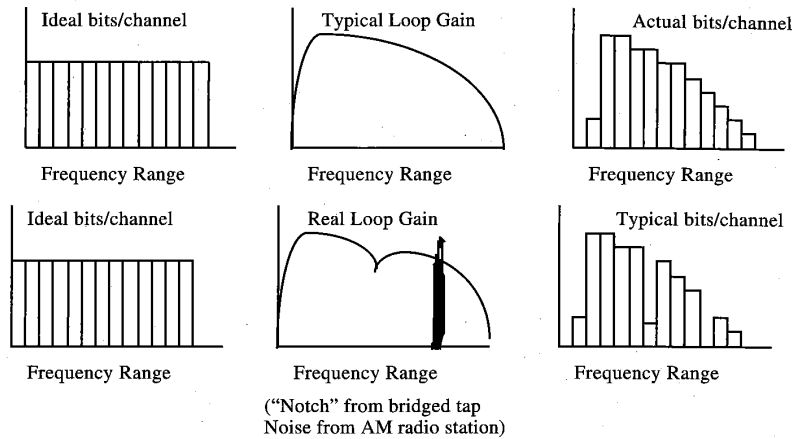

Experts generally concede that finer granularity is a benefit that can maximize user acceptance and deployment situations.

Discrete Multitone (DMT) Operation

Figure 8-6 shows discrete multitone technology in operation in an ADSL device on a typical local loop. The figure actually has two parts. The upper shows a kind of ideal situation, such as that found in a straight run of 24 gauge copper wire less than 18,000 feet without a lot of outside noise (good luck finding one of those). The only real attenuation effects come from the distances and frequencies involved. The lower part of the figure shows a typical local loop in the real world.

Consider the design ideal first. Across the frequency range, on the left, there exists a targeted maximum number of bits per second per subcarrier (channel) that the device would like to send and receive. However, the middle figure shows the situation on a typical loop. The gain (the reciprocal of the attenuation) is better or worse depending on frequency. At higher frequencies, distance effects dominate; at lower frequencies, impulse noise and crosstalk dominate. This leaves a broad middle range (about 25 kHz to 1.1 MHz) for signals, with the gain slowly dropping off with increasing frequency.