

# The Network Encyclopedia

[Home](#)
[What is Networking](#)
[A to Z](#)
[History of Networking](#)
[Webmasters](#)

You Are Here » [Home](#) » [P](#) » [packet switching in The Network Encyclopedia](#)

## packet switching

Definition of packet switching in The Network Encyclopedia.

### packet switching

The process by which a networking or telecommunications device accepts a packet and switches it to a telecommunications device that will take it closer to its destination. Packet switching allows data to be sent over the telecommunications network in short bursts or "packets" that contain sequence numbers so that they can be reassembled at the destination. Wide area network (WAN) devices called switches route packets from one point on a packet-switched network to another. Data within the same communication session might be routed over several different paths, depending on factors such as traffic congestion and switch availability.

Packet switching is the transmission method used for most computer networks because the data transported by these networks is fundamentally bursty in character and can tolerate latency (due to lost or dropped packets). In other words, the transmission bandwidth needed varies greatly in time, from relatively low traffic because of background services such as name resolution services, to periods of high bandwidth usage during activities such as file transfer. This contrasts with voice or video communication, in which a steady stream of information must be transmitted in order to maintain transmission quality and in which latency must remain minimized to preserve intelligibility.

The Internet is the prime example of a packet-switched network based on the TCP/IP protocol suite. A series of routers located at various points on the Internet's backbone forward each packet received on the basis of destination address until the packet reaches its ultimate destination. TCP/IP is considered a connectionless packet-switching service because Transmission Control Protocol (TCP) connections are not kept open after data transmission is complete.

X.25 public data networks are another form of packet-switching service, in which packets (or more properly, frames) formatted with the High-level Data Link Control (HDLC) protocol are routed between different X.25 end stations using packet switches maintained by X.25 service providers. Unlike TCP/IP, X.25 is considered a connection-oriented packet-switching protocol because it is possible to establish permanent virtual circuits (PVCs) that keep the logical connection open even when no data is being sent. However, X.25 can be configured for connectionless communication by using switched virtual circuits (SVCs). An X.25 packet-switched network typically has a higher and more predictable latency (about 0.6 seconds between end stations) than a TCP/IP internetwork. This is primarily because X.25 packet switches use a store-and-forward mechanism to buffer data for transmission bursts, which introduces additional latency in communication. In addition, X.25 uses error checking between each node on the transmission path, while TCP/IP uses only end-to-end error checking.

Frame relay (also called fast packet switching) is another connection-oriented packet-switching service that gives better performance than X.25. It does this by switching packets immediately instead of using the store-and-forward mechanism of X.25 networks. Frame relay also eliminates flow control and error checking to speed up transmission. This is possible because frame relay networks use modern digital telephone lines, which are intrinsically much more reliable than the older analog phone lines on which much of the X.25 public network still depends. Frame relay supports only connection-oriented PVCs for its underlying switching architecture.

Finally, Asynchronous Transfer Mode (ATM) is another packet-switching service in which small fixed-length packets called cells are switched between points on a network.

NOTE



### Featured

- ▶ [DHCP Maintenance Guide](#)
- ▶ [RAID](#)
  - ▶ [RAID 0](#)
  - ▶ [RAID 1](#)
  - ▶ [RAID 5](#)
- ▶ [Migrating Apache to IIS](#)
  - ▶ [Migrating with the IIS Tool](#)
  - ▶ [Migrating web sites manually](#)
  - ▶ [Configuring IIS Properties](#)
- ▶ [Changes to the Metabase properties](#)



Tu e 457 outras pessoas gostam disto. 457 pessoas gostam disto. Regista-te para veres



### Disruptive Innovation


The term is used in business and technology literature to describe innovations that improve a product or service in ways that the market does not expect, typically first by designing for a different set of consumers in a new market and later by lowering prices in the existing market.

[Continue Reading »](#)

Packet switching is different from circuit switching, in which switches are configured in a fixed state for the duration of the session so that the route the data takes is fixed. A network that is circuit-switched requires a dedicated switched communication path for each communication even if its full bandwidth is not being used. In packet switching, bandwidth can be used when available for more efficient transmission. Circuit switching is generally used in telephone systems, while packet switching is used for computer networks. Digital cellular phone services are generally also circuit-switched, but Personal Communications Services (PCS) cellular systems are gradually being migrated to packet-switched networks for greater efficiency in data transmission.

Another difference between packet switching and circuit switching is that circuits must first be established before any data is sent, and this generally involves a certain amount of setup time. During this process, the request for a circuit connection must pass through the circuit-switched network, resources must be reserved for the connection, and a signal must be returned to the initiating station when the circuit is established and data transmission can begin. Circuit-switched networks are thus useful only when the duration of the data transmission is much longer than the setup time involved in establishing the circuit. With packet switching, data can be sent at the start of transmission, which is better suited to the bursty, irregular nature of short network transmissions over a computer network or WAN link.

See also  
[packet-switching services](#)

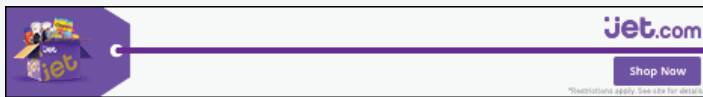

### Link to this page

You are welcome to link to this page, or to any other page from this website. Please, feel free to copy the html code below and past it to any place in your site or blog.

```
<a href="http://www.thenetworkencyclopedia.com/entry/packet-switching/">packet switching in The Network Encyclopedia</a>
```

Left Click to select, then right Click and Copy the Html Code!

For other webmaster tools [click here](#) »  
To add this page to your favorites [click here](#) »

### Links

### Manufacturers

- [Cisco Systems](#)
- [HP \(3COM\)](#)
- [D-Link](#)
- [Dell](#)
- [ZyXEL](#)



### Technology Trends

- [Cloud](#)
- [Virtualization](#)
- [IPv6](#)
- [Open Network Environment](#)